


# PHILIPS MAGNAVOX

## AZ 1110 Family CD Radio Cassette Recorder



Owner's Manual  
Mode d'emploi  
Instructivo de manejo

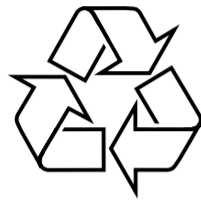

PHILIPS CONSUMER ELECTRONICS COMPANY  
A Division of Philips Electronics North America Corporation  
Knoxville, Tennessee 37914-1810, U.S.A.

Printed in Hong Kong

TcExt/CvB/747

Warranty Registration Card today to ensure you receive all the benefits you're entitled to.

- Once your Philips Magnavox purchase is registered, you're eligible to receive all the privileges of owning a Philips Magnavox product.
- So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

Warranty Verification	Owner Confirmation	Model Registration
Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your Philips Magnavox warranty.	Your completed Warranty Registration Card serves as verification of ownership. In the event of product theft or loss.	Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

Know these *safety symbols*



For Customer Use: Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. \_\_\_\_\_  
Serial No. \_\_\_\_\_

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

### SAFETY

**WARNING**  
To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION**  
Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10

### SAFETY INSTRUCTIONS - Read before operating equipment

- Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
- Retain Instructions** - The safety and operating instructions should be retained for future reference.
- Read Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
- Follow Instructions** - All operating and use instructions should be followed.
- Water and Moisture** - The appliance should not be used near water - for example near a bathtub, washbowl, kitchen sink, laundry tub, in a wet basement or near a swimming pool, etc.
- Cars and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
- Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug or similar surface that may block the ventilation openings, or placed in a built-in installation such as a cabinet, case or cabinet that may impede the flow of air through the ventilation openings.
- Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
- Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
- Grounding or Polarization** - Precautions should be taken so that the grounding or polarization of an appliance is not defeated.
- Power Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
- Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
- Power Lines** - An outdoor antenna should be located away from power lines.
- Nonuse Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
- Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
- Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power-supply cord or the plug has been damaged or frayed.
  - B. Objects have fallen, or liquid has spilled into the appliance, or
  - C. The appliance has been exposed to rain or moisture, or
  - D. The appliance does not operate normally or exhibits a marked change in performance.
  - E. The appliance has been dropped, or the enclosure damaged.
- Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

918 EL 4562-1

### POWER SUPPLY

**BATTERIES** (see [1])  
Whenever convenient, use the power supply if you want to conserve battery life. Make sure you remove the power plug from the set and wall outlet before inserting batteries.

- Batteries (optional)**
- Open the battery compartment and insert as shown six batteries, type R20, or D-cells.
  - Replace the compartment door, making sure the batteries are firmly and correctly in place.
  - Remove the batteries if exhausted or if they will not be used again for a long period.

The incorrect use of batteries can cause electrolyte leakage and will corrode the compartment or cause the batteries to burst. Therefore:

- Do not mix battery types, e.g. alkaline with zinc carbonate.
- When inserting new batteries, replace all batteries at the same time.
- Remove the batteries if the set is not to be used for a long time.

**Note:** The battery supply is switched off when the set is connected to the AC power supply.

### AC POWER

- Check if the power voltage as shown on the type plate (on the bottom of the set) corresponds to your local power voltage. If it does not, consult your dealer or service organisation.
- If your set is equipped with a voltage selector, adjust it so that it matches with the local power voltage.
- Connect the power cord to the AC MAINS outlet and the wall outlet.
- To switch off the AC power supply completely, pull the power plug out of the wall outlet.

**Environmental information**

All redundant packaging material has been omitted. We have done our utmost to make the packaging easily separable into three main materials: cardboard (box), expandable polystyrene (buffer) and polyethylene (bags, protective foam sheet).

**Your set consists of materials which can be recycled if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.**

Both the model and production numbers can be found on the bottom of the set.

### CASSETTE RECORDER

#### CASSETTE PLAYBACK

- Set the source selector to TAPE.
- Press STOP\*OPEN **⏏** to open the cassette holder.
- Insert a recorded cassette.
- Press PLAY **▶** and playback will start.
- Adjust the sound using the VOLUME, and DBB controls.
- For brief interruptions, press PAUSE **⏸**. Press PAUSE **⏸** again to resume playback.
- By pressing **⏮** or **⏭**, just winding of the tape is possible in both directions.
- To stop playback, press STOP\*OPEN **⏏**.
  - The keys are automatically released at the end of the tape.

#### RECORDING FROM THE RADIO

- Set the source selector to RADIO.
- Tune to the desired radio station using the TUNING knob.
- Press STOP\*OPEN **⏏** to open the cassette holder.
- Insert a blank cassette.
- Press RECORD **Ⓚ** to start recording.
- For brief interruptions, press PAUSE **⏸**. To resume recording, press PAUSE **⏸** again.
- To stop, press STOP\*OPEN **⏏**.

#### CD SYNCHRO START RECORDING

- Set the source selector to CD.
- Insert a CD and if desired, program track numbers.
- Press STOP\*OPEN **⏏** to open the cassette holder.
- Insert a blank cassette.
- Press RECORD **Ⓚ** to start recording.
  - Playing of the CD program starts automatically from the beginning of the program. It is not necessary to start the CD player separately.
- For brief interruptions, press PAUSE **⏸**. To resume recording, press PAUSE **⏸** again.
- To stop, press STOP\*OPEN **⏏**.


#### CASSETTE RECORDING (see [6] / [7])

**General information on cassette recording**

- Recording is permissible insofar as copyright or other rights of third parties are not infringed.
- This deck is not suited for recording on CIRCUM (IEC II) or METAL (IEC IV) type cassettes. For recording you should use NORMAL type cassettes (IEC I) on which the tabs have not been broken.
- The recording level is set automatically. Altering the VOLUME control or DBB switch will not affect the recording in progress.
- No recording will take place during the first 7 seconds, when the leader tape passes the recorder heads.
- To prevent the accidental erasure of a recording, keep the cassette side to be safeguarded in front of you and break out the left tab. Recording on this side is no longer possible.

#### To select and record a particular passage within a track

- Press SEARCH **⏮** or **⏭** to select a passage.
- Put the CD player in PAUSE **⏸** position at the selected passage.
  - Recording will start from this exact point when you press RECORD **Ⓚ**.

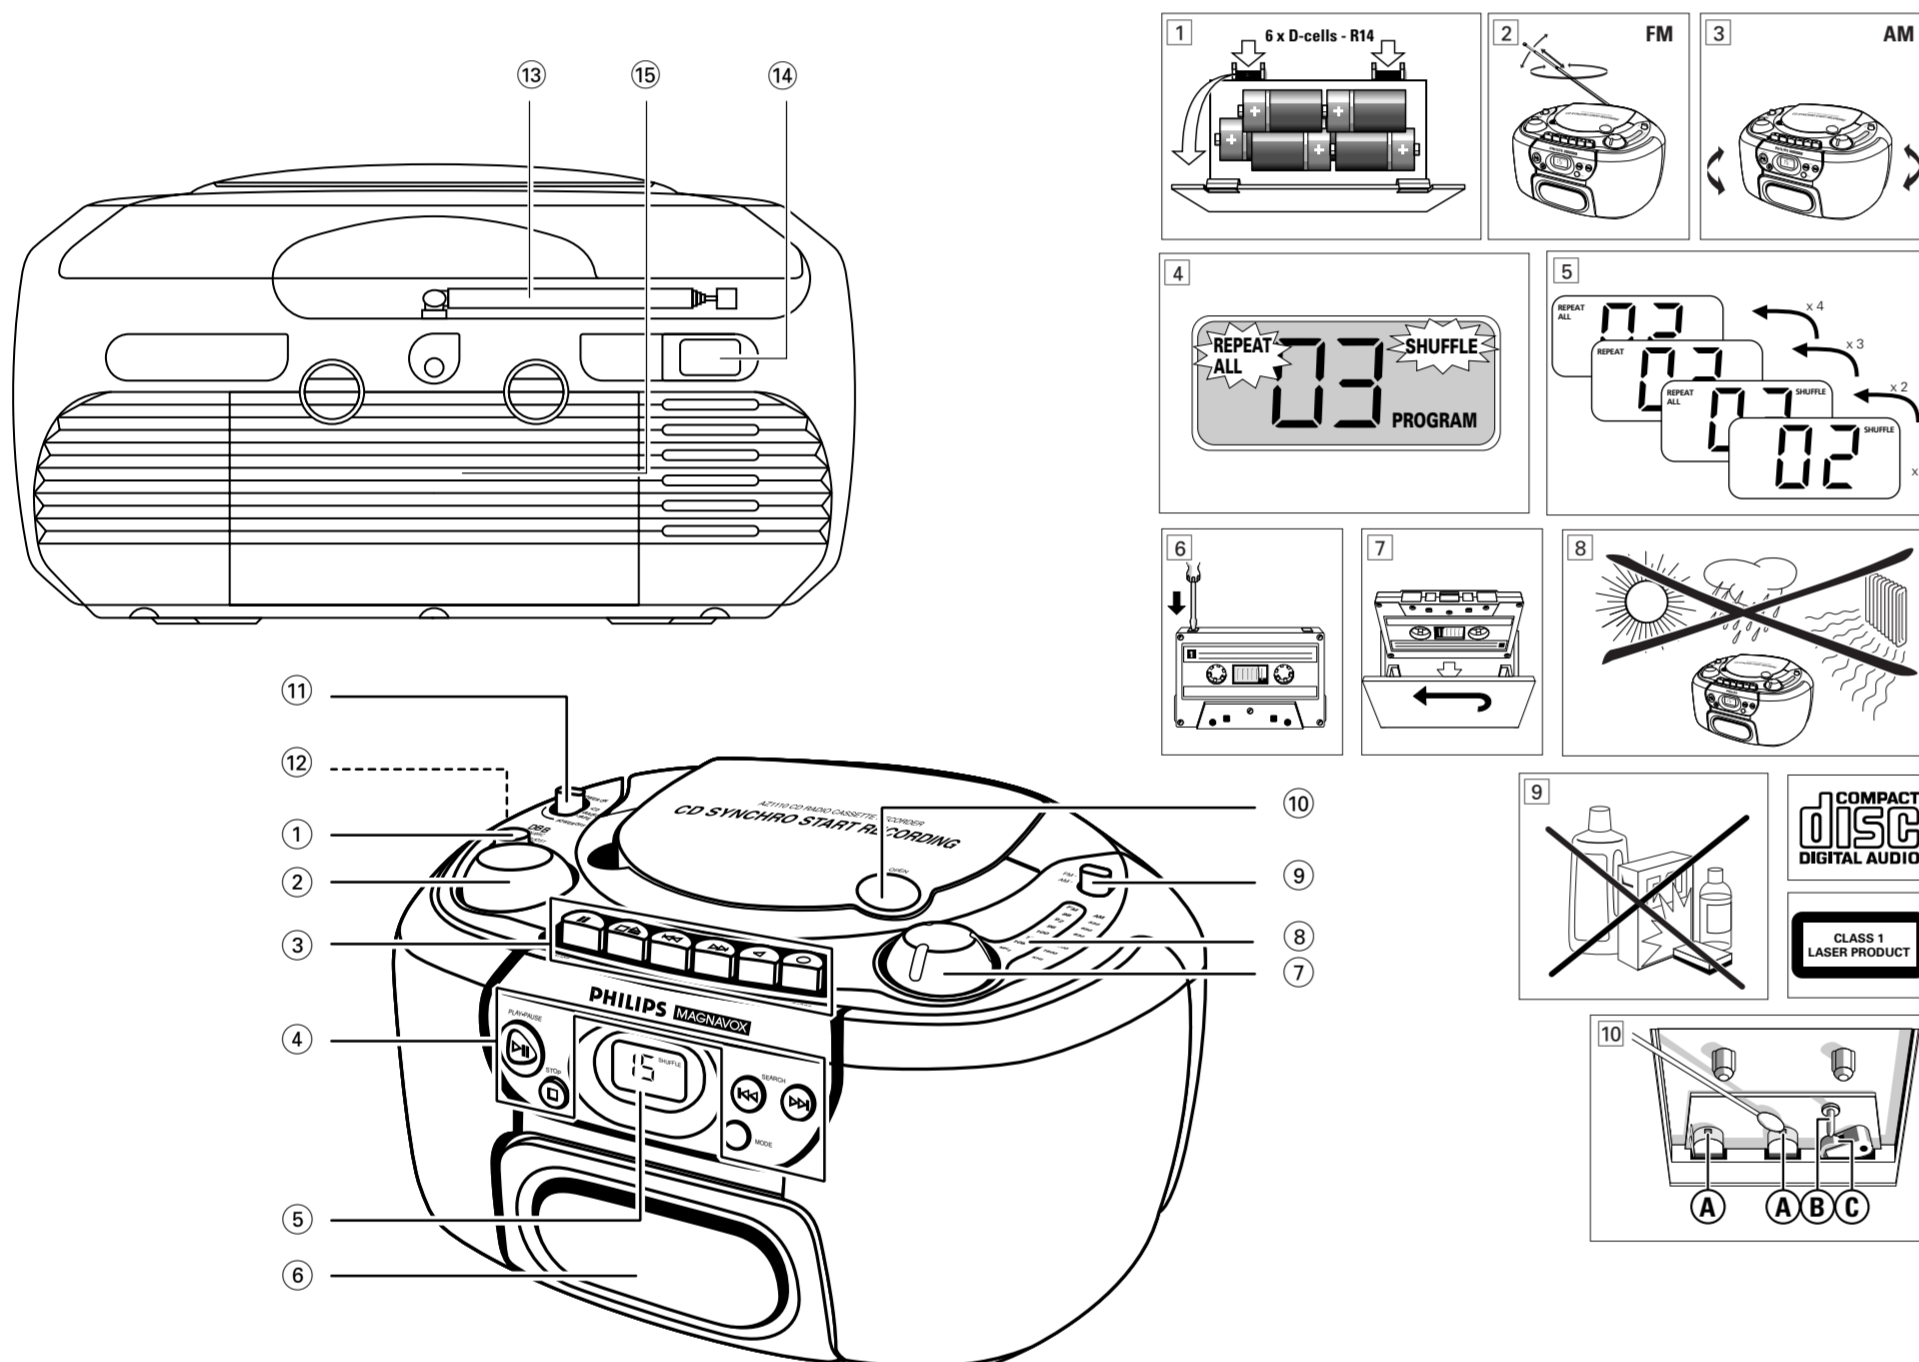

### English Français Español

- 1 **DBB** (Dynamic Bass Boost) - to increase the bass level
- 2 **VOLUME** - to adjust the volume level
- 3 **Cassette keys**
- 4 **PAUSE** **⏸** - to interrupt playback
- 5 **STOP\*OPEN** **⏏** **▶** - to stop playback and open the cassette compartment
- 6 **SEARCH** **⏮** **▶** - to fast forward the tape
- 7 **SEARCH** **⏭** - to fast rewind the tape
- 8 **PLAY** **▶** - to start playback
- 9 **RECORD** **Ⓚ** - to start recording
- 10 **CD buttons**
- 11 **PLAY\*PAUSE** **⏸** **▶** - to start or interrupt CD playback
- 12 **STOP** **⏏** - to stop playback
- 13 **SEARCH** **⏮** **▶** - to skip or search a passage or a track
- 14 **MODE** - to select a different playback mode (e.g. SHUFFLE or REPEAT and to program track numbers
- 15 **CD display** - to indicate CD functions
- 16 **Cassette compartment**
- 17 **TUNING** - to tune to radio stations
- 18 **Tuning dial pointer**
- 19 **Band selector** - to select the wave band (FM-AM)
- 20 **OPEN** - to open the CD door
- 21 **Power selector** - POWER ON/OFF switch and to select the sound source: CD - RADIO - TAPE
- 22 - 3.5 mm headphone socket

pour amplifier les fréquences basses pour régler le niveau sonore

**Touches de la platine cassette**  
pour interrompre la lecture pour sélectionner la bande de longueur d'ondes (FM-AM) pour ouvrir le compartiment de disque pour sélectionner le mode de lecture différent (par ex. SHUFFLE ou REPEAT) et pour programmer les numéros de plages pour démontrer la lecture pour démontrer l'enregistrement

**Touches du lecteur de CD**  
pour démontrer ou interrompre la lecture du CD pour interrompre la lecture pour sauter ou rechercher un passage ou une plage spécifique pour sélectionner un mode de lecture différent, par exemple, SHUFFLE ou REPEAT et pour programmer les numéros de plages

pour indiquer les fonctions de CD

**Compartiment à cassette**  
pour sélectionner les stations radio

**Indicateur de syntonisation**  
pour sélectionner la bande de longueur d'ondes (FM-AM)

pour ouvrir le compartiment de disque

interrupteur de POWER ON/OFF (pagado/encendido) y selector de la fuente de sonido: CD - TUNER (sintonización) - TAPE (cinta)

zócalo de auricular de 3,5 mm

Refuerzo dinámico de tonos bajos) - para reforzar los tonos bajos para ajustar el volumen

**Teclas del cassette**  
para interrumpir la reproducción para parar la reproducción y abrir el compartimiento del cassette para avanzar rápido de la cinta para avanzar rápido de la cinta para iniciar la reproducción para iniciar la grabación

**Botones de CD (discos compacto)**  
para iniciar o interrumpir la reproducción del CD para parar la reproducción para buscar o saltar a una parte o a una pista particular para seleccionar un modo de reproducción distinto, por ejemplo, SHUFFLE (mezcla) o REPEAT (repetir) y programar números de pista

para iniciar las funciones de CD

**Compartimento del cassette**  
para sintonizar emisoras de radio

**Placa de sintonización**  
para seleccionar la banda de onda (FM-AM)

interruptor de POWER ON/OFF (pagado/encendido) y selector de la fuente de sonido: CD - TUNER (sintonización) - TAPE (cinta)

zócalo de auricular de 3,5 mm

**BACK PANEL**

- 1 **Telescopic antenna** - to improve FM reception
- 2 **AC MAINS** - for power cord
- 3 **Battery door** - to open the battery compartment

**PANNEAU ARRIÈRE**  
pour améliorer la réception en modulation de fréquence pour régler le branchement sur secteur pour ouvrir le compartiment à piles

**PANEL TRASERO**  
para mejorar la recepción de FM enchufe para el cable de la red eléctrica para abrir el compartimiento de la batería

### LIMITED WARRANTY

**PHILIPS MAGNAVOX PORTABLE COMPACT DISC**  
One Year Free Exchange  
This product may be carried in for an exchange.

**WHO IS COVERED?**  
Warranty coverage begins the day you buy your product. For one year thereafter a defective or improper product will be replaced with a new, renewed or comparable product at no charge to you. A replacement product is provided only to the original warranty period. When the warranty on the original product expires, the warranty on the replacement product also expires.

**WHAT IS EXCLUDED?**  
Your warranty does not cover:  
• labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.  
• product repair and/or part replacements because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.  
• reception problems caused by signal conditions or cord or antenna systems outside the unit.  
• a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.  
• incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, unrecovered material, whether copyrighted or not copyrighted.)  
• a product that is used for commercial or institutional purposes.

**WHERE IS EXCHANGE AVAILABLE?**  
You may exchange the product in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide a replacement product (although there may be a delay if the appropriate product is not readily available).

**BEFORE REQUESTING EXCHANGE...**  
Please check your owner's manual before requesting an exchange. Adjustments of the controls discussed there may save you a trip.

### CD PLAYER

**SEARCH** **⏮** or **⏭**  
**Selecting a different track during playback**  
- You can jump to the next track by pressing SEARCH **⏮** or **⏭**. If you want to skip more than one track, press SEARCH **⏮** or **⏭** more than once until the display shows the desired track number.
- If you want to repeat the running track from the beginning, press SEARCH **⏮** once. If you want to repeat one of the previous tracks, press SEARCH **⏮** more than once until the display shows the desired track number.
- Starting with a particular track**  
1. In the STOP position you can select a desired track using the SEARCH **⏮** or **⏭** button.
- 2. Press PLAY\*PAUSE **⏸** to start playback.
- Searching for a passage within a track**  
You can search for a passage within a track. The CD is played at low volume and at high speed, however, the sound is still recognizable.  
1. Keep the SEARCH **⏮** or **⏭** button pressed during playback, and release the button as soon as you recognize the desired passage.  
- Normal CD playback will resume from this point.
- SHUFFLE/REPEAT** (see [3])  
The MODE button allows you to select four different modes which can also be combined with PROGRAM. The modes can be selected or changed during playback and will flash for 2 seconds before playing your selected mode.  
1. During playback only, press MODE until the desired function appears on the display.  
**SHUFFLE** - Tracks are played in random order.  
**REPEAT ALL SHUFFLE** - Continuous playback of tracks in random order.  
**REPEAT** - Continuous playback of the current track.  
**REPEAT ALL** - Repeats the entire CD.  
- During playback you can use SEARCH **⏮** or **SEARCH** **⏭** to skip tracks.
- PROGRAMMING TRACK NUMBERS**  
You may store at most 20 tracks in the memory in the desired sequence.  
You may store any track more than once.
- Programming track numbers**  
1. In the STOP position select the desired track using SEARCH **⏮** or SEARCH **⏭** until the display shows the desired track number.  
2. Store the desired track by pressing MODE **Ⓚ** once. - The display shows F and PROGRAM followed by your selected track number.  
3. Select and store all desired tracks of a CD in this way.
- Checking a program**  
1. To review the set program, in the stop position press and hold MODE for more than 2 seconds. - The display will show the track numbers you have selected in sequence.  
2. To start playback of the program, press PLAY\*PAUSE **⏸**.  
- Playback starts with the first track of the program. After the last track, playback stops and the display shows the CD's total number of tracks.
- Erasing a program**  
You can erase the contents of the memory by: - opening the CD door, - setting the source selector to the TAPE or RADIO position, - pressing STOP twice during playback/in the stop position.

### TROUBLESHOOTING

If a fault occurs, first check the points listed below before taking the set for repair.  
If you are unable to remedy a problem by following these hints, consult your dealer or service center.  
**WARNING:** Under no circumstances should you try to repair the set yourself, as this would invalidate the warranty.

PROBLEM	POSSIBLE CAUSE	REMEDY
<b>Set does not react to operation of any control.</b>	- Electrostatic discharge.	• Switch off the set, disconnect the power plug and reconnect after a few seconds.
<b>Display does not function properly.</b>	- Electrostatic discharge.	• Switch off the set, disconnect the power plug and reconnect after a few seconds.
<b>No sound.</b>	- VOLUME is not adjusted. - Headphones are connected. - Batteries are exhausted. - Batteries are incorrectly inserted. - Power cord is not securely connected.	• Adjust the VOLUME. • Disconnect headphones. • Insert new batteries. • Insert the batteries correctly. • Connect the power cord properly.
<b>Bad sound.</b>	- Batteries are exhausted.	• Replace batteries.
<b>Severe radio hum or noise.</b>	- Set too close to TV, VCR or computer.	• Increase the distance.
<b>Poor radio reception.</b>	- Weak radio signal.	• The FM: aim and extend the telescopic antenna for best reception. (see [2]) • AM: rotate the entire set (see [3]).
<b>Poor cassette sound quality.</b>	- Dust and dirt on the heads, capstan or pressure roller. - Use incompatible cassette tapes (METAL or CHROME).	• Clean the heads etc., see Maintenance. • Only use NORMAL (IEC I) for recording.
<b>Recording does not work.</b>	- Cassette tab(s) may be broken out.	• Apply a piece of adhesive tape over the missing tab space.
<b>CD playback does not work.</b>	- CD is badly scratched or dirty. - No CD inserted. - CD inserted upside down. - Laser lens is steamed up.	• Replace or clean the CD, see Maintenance. • Insert CD with printed side facing up. • Wait until lens has acclimatized.
<b>The CD skips tracks.</b>	- CD is damaged or dirty. - PROGRAM/SHUFFLE is active.	• Replace or clean the CD. • Switch off the PROGRAM/SHUFFLE function.

Remplacez votre carte d'engagement de garantie pour assurer de recevoir tous les avantages auxquels vous avez droit.

- Dés que l'achat de votre appareil Philips Magnavox est enregistré, vous avez droit à tous les avantages dont bénéficient les possesseurs des produits Philips Magnavox.
- Remplacez et renvoyez votre carte d'engagement de garantie jointe à votre appareil sans tarder. Vous bénéficiez de ces avantages importants.

Vérification de garantie de 10 jours pour confirmer votre droit à une protection maximum selon les termes et les conditions de votre garantie Philips Magnavox.

Confirmation de possession de garantie pour que vous possédiez l'appareil en cas de vol ou de perte du produit.

Enregistrement du modèle. Renvoiez votre carte d'enregistrement de garantie des renseignements pour assurer de recevoir toutes les informations, les offres et les bonus auxquels vous avez droit en tant que consommateur de modèle.

Connaissiez ces symboles de sécurité. Ce pictogramme indique un risque de choc électrique.

Attention! Ce pictogramme indique un risque de choc électrique. Pour la sécurité de chacun, nous vous prions de ne pas retirer le boîtier de ce produit.

Canada. Cet appareil numérique n'émet pas de bruits radio-électriques dépassant les limites applicables aux appareils numériques de Classe 2 prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

Conseils de Sécurité - À lire avant de faire le montage. Ce produit est conçu et fabriqué en conformité avec des normes strictes de sécurité.

ALIMENTATION

Écoutez d'une cassette. Régler le sélecteur de fonction sur TAPE. Appuyer sur STOP/OPEN pour ouvrir le compartiment de la cassette.

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

Connaissiez ces symboles de sécurité. Ce pictogramme indique un risque de choc électrique.

MAGNETOPHONE

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

MAGNETOPHONE

Écoutez d'une cassette. Régler le sélecteur de fonction sur TAPE. Appuyer sur STOP/OPEN pour ouvrir le compartiment de la cassette.

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

MAGNETOPHONE

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

Enregistrement à partir de la radio. Régler le sélecteur sur TUNER. Choisir la station désirée à l'aide du bouton TUNING.

Envie hoy su Tarjeta de Registro de la Garantía para recibir todas las ventajas correspondientes.

- Una vez que se registre la compra de su aparato Philips Magnavox, Ud. tiene derecho a todos los ventajas correspondientes al dueño de un producto Philips Magnavox.
- Si desea llenar y devolver en seguida la Tarjeta de Registro de la Garantía empacada con su aparato. Saque provecho de estas ventajas importantes.

Verificación de la garantía. Registre su producto dentro de 10 días para confirmar su derecho a máxima protección bajo los términos y condiciones de la garantía de Philips Magnavox.

Confirmación de posesión de garantía. Renvoiez votre carte d'enregistrement de garantie des renseignements pour assurer de recevoir toutes les informations, les offres et les bonus auxquels vous avez droit en tant que consommateur de modèle.

Registro del modelo. Renvoiez votre carte d'enregistrement de garantie des renseignements pour assurer de recevoir toutes les informations, les offres et les bonus auxquels vous avez droit en tant que consommateur de modèle.

Conozca estos símbolos de seguridad. Este símbolo del "rayo" indica que algún material no aislado dentro de su unidad podría resultar en una sacudida eléctrica.

Envie hoy su Tarjeta de Registro de la Garantía para recibir todas las ventajas correspondientes.

Una vez que se registre la compra de su aparato Philips Magnavox, Ud. tiene derecho a todos los ventajas correspondientes al dueño de un producto Philips Magnavox.

Si desea llenar y devolver en seguida la Tarjeta de Registro de la Garantía empacada con su aparato. Saque provecho de estas ventajas importantes.

Verificación de la garantía. Registre su producto dentro de 10 días para confirmar su derecho a máxima protección bajo los términos y condiciones de la garantía de Philips Magnavox.

Conseils de Sécurité - À lire avant de faire le montage. Ce produit est conçu et fabriqué en conformité avec des normes strictes de sécurité.

FUENTE DE ENERGIA

Placas (véase 2). Verifique que el voltaje que se indica en la placa de energía se ajuste con el voltaje que se indica en la placa de energía que se requiere para el aparato.

Para usar el cliente: Escriba abajo el número de serie que se encuentra en el panel posterior. Guarde esta información para el futuro.

Conozca estos símbolos de seguridad. Este símbolo del "rayo" indica que algún material no aislado dentro de su unidad podría resultar en una sacudida eléctrica.

FUENTE DE ENERGIA

Placas (véase 2). Verifique que el voltaje que se indica en la placa de energía se ajuste con el voltaje que se indica en la placa de energía que se requiere para el aparato.

Para usar el cliente: Escriba abajo el número de serie que se encuentra en el panel posterior. Guarde esta información para el futuro.

Conozca estos símbolos de seguridad. Este símbolo del "rayo" indica que algún material no aislado dentro de su unidad podría resultar en una sacudida eléctrica.

REPRODUCTOR DE CD MAGNETOFONO DE CASSETTES

Reproducción de cassettes. Cambie el selector de función en TAPE. Pulse el selector de fuente en la posición TAPE/OFF.

Reproducción de cassettes. Cambie el selector de función en TAPE. Pulse el selector de fuente en la posición TAPE/OFF.

Reproducción de cassettes. Cambie el selector de función en TAPE. Pulse el selector de fuente en la posición TAPE/OFF.

REPRODUCTOR DE CD

Operación general. Para encender el aparato, use el selector de fuente en la posición TAPE/OFF.

Operación general. Para encender el aparato, use el selector de fuente en la posición TAPE/OFF.

Operación general. Para encender el aparato, use el selector de fuente en la posición TAPE/OFF.

GARANTIA LIMITADA

LECTEUR A DISQUE COMPACT PORTABLE PHILIPS MAGNAVOX. Exchange gratuite pendant un an. Veuillez consulter le manuel d'instructions avant d'essayer un produit.

LECTEUR CD

LECTEUR CD. Recherche d'un passage particulier dans un morceau. Il est possible de rechercher un passage particulier dans un morceau.

DÉPISTAGE DES PANNES

DÉPISTAGE DES PANNES. Si un défaut se manifeste, vérifiez tout d'abord les points suivants avant d'apporter la chaîne à réparer.

GARANTIA LIMITADA

TOCADISCOS DE CD PORTAL Philips MAGNAVOX. Cambio gratis por un año. Se necesita presentarse en persona con este producto para cambiarlo.

REPRODUCTOR DE CD

REPRODUCTOR DE CD. Selección una pista diferente durante la reproducción. Pulse el selector de fuente en la posición TAPE/OFF.

SOLUCIÓN DE PROBLEMAS

SOLUCIÓN DE PROBLEMAS. Si se produjera alguna anomalía, compruebe primero los puntos mencionados a continuación antes de llevar el aparato al taller de reparaciones.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>