 
 


3 Enjoy

Inserting discs

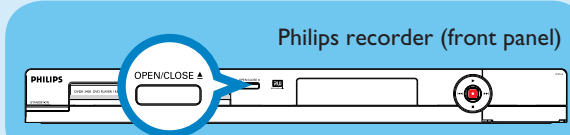

- 1 Press **OPEN/CLOSE** on the front of the recorder.

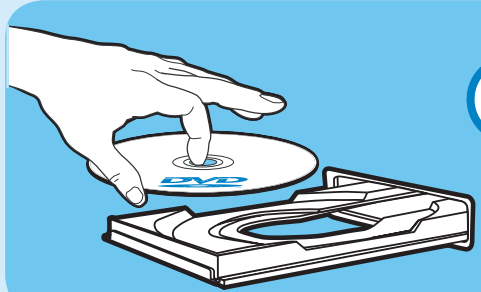

- 2 Place a DVD disc in the tray with the label facing up.
- 3 Press **OPEN/CLOSE** on the front of the recorder again.

Playback

- 1 Press **up** or **down** to scroll through the list of options or titles.
- 2 Press **PLAY** on the title you want to play.
- 3 To stop press **STOP** .
- 4 Press **DISC MENU** to go back.

Recording

- 1 For recording, place a blank DVD±RW or DVD±R disc in the tray with the label facing up and close the tray.

Recording (continued)

- 2 Press **REC SOURCE** repeatedly to select the source to record from.

Note This helps to select whether you want to record from the tuner or from any device connected through audio/video input connectors.

- 3 Press **REC MODE** repeatedly to select the record mode.

Note Choose from recording at high quality - HQ (available recording time is 1 hour), standard play - SP (2 hours), extended play - EP (4 hours) and super long play - SLP (6 hours).

- 4 Use **up** / **down** keys to scroll the channels, or press **0** **0** **-9** **9** to select the channel that you want to record.

- 5 Press **REC** to start recording, press **REC** again to automatically record 30 minutes.

Note Every time you press **REC** , an additional 30 minutes is added to the recording time.

- 6 To end recording, press **STOP** . 'Update' will be displayed on the recorder.

- 7 To playback the recording, press **DISC MENU** , select the title and press **PLAY** .

Discs for recording

Type	Record	Playback	Edit
DVD+RW	✓	✓	✓
DVD+R	✓	✓	✓
DVD-RW	✓	✓	✓
DVD-R	✓	✓	✓

Need help?

User Manual

See the user manual that came with your Philips recorder.

Hotline

Call 1-888-PHILIPS (1-888-744-5477) for our operators.

Online

Go to www.philips.com/usasupport.



2006 © Philips Consumer Electronics
A Division of Philips Electronics North
America Corp
P.O. Box. 671 539 Marietta, GA 30006 0026
All rights reserved.

 
Printed in China
12 NC 3139 245 20932

Quick Start Guide




- 1 Connect
- 2 Set up
- 3 Enjoy


What's in the box?

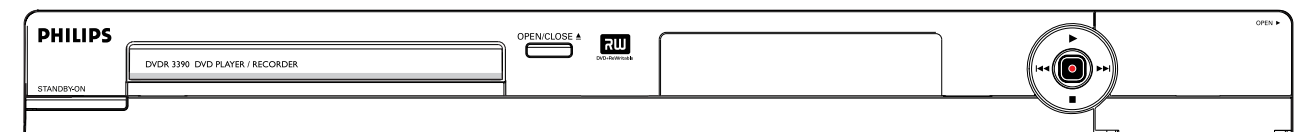


DVD Player/ Recorder

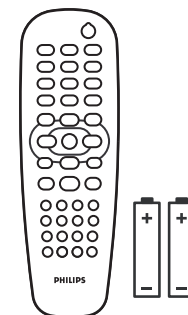 


Remote Control and 2 batteries

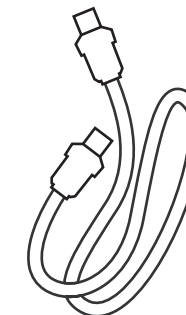 

RF Coaxial Cable

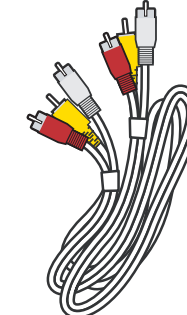 

Audio/Video Cable

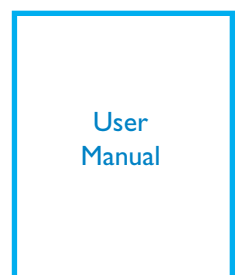 


User Manual



1 Connect


Start with the 'Basic Connection.'
If you have a Cable Box or Satellite Receiver, follow the instructions for 'Connection with a Cable Box or Satellite Receiver'.

 Basic Connection

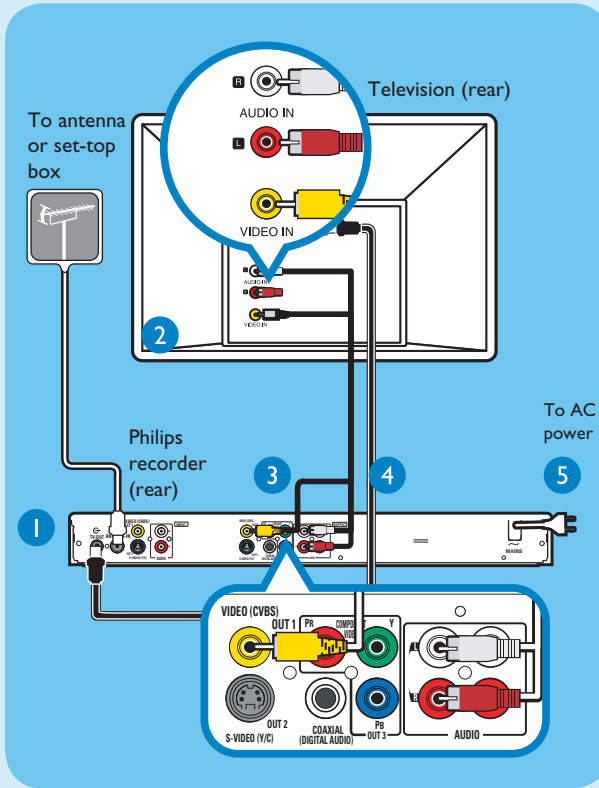

- 1 Before connecting, unplug the antenna cable that is currently connected to your TV.
- 2 Connect the antenna cable to the **ANTENNA-IN** jack on the recorder.
- 3 Use the supplied RF coaxial cable to connect the **TV-OUT** jack on this recorder to the Antenna In jack on the TV.
- 4 Use the supplied audio/video cable (yellow plug) to connect the **VIDEO (CVBS) -OUT 1** jack on this recorder to the VIDEO IN jack on the TV.
- 5 Use the supplied audio/video cable (red/ white plugs) to connect the **AUDIO OUTPUT** jacks on this recorder to the AUDIO IN jacks on the TV.
- 6 Connect the power cable from the recorder to an AC power outlet.

 Connection with a Cable Box or Satellite Receiver

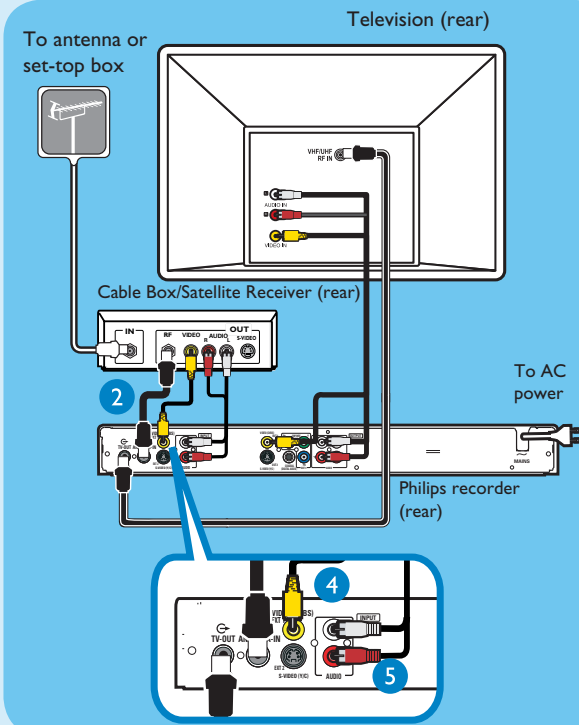


- 1 Keep the existing antenna connection from the Antenna TV signal to the Cable Box/ Satellite Receiver.
- 2 Use an antenna cable to connect the **ANTENNA-IN** jack on the recorder to the RF OUT jack on the Cable Box/Satellite Receiver.
- 3 Follow steps 3 to 5 under 'Basic Connections' before you proceed to step 4 below.

Note The antenna connection may be different depending on the Satellite Receiver/Cable Box. Refer to its user manual for proper antenna connection.
- 4 Use a yellow video cable (not supplied) to connect the **VIDEO (CVBS) EXT 1** jack on this recorder to the VIDEO OUT jack on the Cable Box/ Satellite Receiver.
- 5 Use another red and white audio cable (not supplied) to connect the **AUDIO INPUT** jacks on this recorder to the AUDIO OUT jacks on the Cable Box/ Satellite Receiver.

For additional connection diagrams, see the accompanying User Manual.

2 Set up

 A Select the video input channel on your TV



- 1 Press **STANDBY-ON** on the recorder.
- 2 Turn on the TV.

Note If connected to your VCR, make sure it is switched off or in standby mode before proceeding.

- 3 Press **SYSTEM MENU**.
- 4 Select the TV's video input channel that corresponds to the jacks connecting the recorder to the TV.

Note Video Input selection varies for different brands/models of TVs. Consult the user manual that came with your TV if none of the below is successful.

 
- Press channel 2 on your TV. Then press the channel down button to locate the video input channel. (This channel is usually located between the lowest and highest TV channels.)
- OR, for some TVs, there may be a button on the TV's remote control that accesses the video input channel labeled SOURCE, AV or SELECT.
- OR, select the Video Input Channel from the TV's on-screen menu system.



Note Consult your TV manufacturer if none of the above is successful.

B Initial Installation

- 1 Press **SYSTEM MENU** on the remote control.

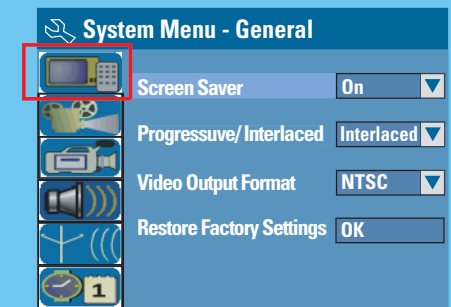

Note Use up / down keys to toggle through the options. Select an item by pressing right. To confirm a setting, press OK.

2 Setup and install TV channels.

- Highlight and press right. Select { **Tuner Input Source** } and press OK.
 - { **Cable** } if the recorder is connected directly to the cable signal or through set-top box.
 - { **Air** } if the recorder is connected directly to an indoor or outdoor antenna.

Note Press OK to confirm your selection.

- Select { **Channel Search** } and press OK on the remote control to start automatic TV channel search.

Note If using a cable box/ satellite receiver, you may only pick up one channel. Leave the recorder on this channel and change channels at the cable box or satellite receiver.

3 Select the language.

- Highlight and press right.
 - selects TV On-Screen Display language.
 - selects default Disc Menu language.
 - selects default subtitle language.
 - selects default audio language.

4 Select the date and time.

- Highlight and press right. Use the **numeric keypad** 0 -9 to input the date/time, then press OK to confirm.

- 5 Press **SYSTEM MENU** to exit.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>