

Register your product and get support at
www.philips.com/welcome

CD145



EN Digital Cordless Telephone

⚠ Warning

Use only rechargeable batteries.
Never use any other battery
type than the one delivered
with the product or
recommended by Philips:
risk of explosion.

PHILIPS

Table of contents

| | | |
|----------|---|-----------|
| 1 | Important | 3 |
| 1.1 | Safety information | 3 |
| 1.2 | Power requirements | 3 |
| 1.3 | Conformity | 4 |
| 1.4 | Recycling and disposal | 4 |
| 1.5 | Using GAP standard compliance | 5 |
| 1.6 | Electric, Magnetic and Electromagnetic Fields ("EMF") | 6 |
| 2 | Your phone | 7 |
| 2.1 | What's in the box | 7 |
| 2.2 | Overview of the phone | 8 |
| 3 | Getting started | 12 |
| 3.1 | Connect the base station | 12 |
| 3.2 | Install rechargeable batteries | 13 |
| 3.3 | Place the handset on the charging cradle | 13 |
| 3.4 | Configure your phone | 13 |
| 3.5 | Register your handset | 16 |
| 4 | Using your phone | 16 |
| 4.1 | Make a call | 16 |
| 4.2 | Answer a call | 17 |
| 4.3 | End a call | 17 |
| 4.4 | Recall | 18 |
| 4.5 | How to use the intercom | 18 |
| 4.6 | How to find a handset | 20 |

| | | |
|----------|---|-----------|
| 5 | Use more of your phone | 21 |
| 5.1 | Call in progress | 21 |
| 5.2 | Phonebook | 21 |
| 5.3 | Call log | 22 |
| 5.4 | Redial list | 23 |
| 5.5 | Settings | 23 |
| 6 | Answering machine | 28 |
| 6.1 | How to turn on the answering machine | 28 |
| 6.2 | How to turn off the answering machine | 28 |
| 6.3 | How to set answer delay | 28 |
| 6.4 | How to record your outgoing message | 28 |
| 6.5 | How to play outgoing message | 29 |
| 6.6 | How to delete outgoing message | 29 |
| 6.7 | How to select the default outgoing message | 29 |
| 6.8 | How to play incoming messages | 30 |
| 6.9 | How to delete all incoming messages | 31 |
| 6.10 | How to screen an incoming call | 31 |
| 6.11 | How to remotely access your answering machine | 31 |
| 6.12 | How to change the remote PIN | 32 |
| 7 | Default settings | 33 |
| 8 | Frequently asked questions | 34 |

1 Important

Take time to read this user manual before you use your CD145. It contains important information and notes regarding your phone.

1.1 Safety information

This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.

To avoid damage or malfunction:

- Do not allow the product to come into contact with liquid.
- Do not open it as you could be exposed to high voltages.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.

- Active mobile phones in the vicinity may cause interference.
- Do not use the product in places where there are explosive hazards.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.

1.2 Power requirements

- This product requires an electrical supply of 220-240 volts AC. In case of power failure, the communication can be lost.
- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

Warning

- Do not allow the charging contacts or the battery to come into contact with metal objects.

- Never use any other battery than the one delivered with the product or recommended by Philips: risk of explosion.
- Always use the cables provided with the product.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.

1.3 Conformity

We, Philips declare that the product is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on www.p4c.philips.com.

1.4 Recycling and disposal

Disposal instructions for old products:

The WEEE directive (Waste Electrical and Electronic Equipment Directive; 2002/96/EC) has been put in place to ensure that products are recycled using best available treatment, recovery and recycling techniques to ensure human health and high environmental protection. Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.

Inform yourself about the local separate collection system for electrical and electronic products marked by this symbol.



Use one of the following disposal options:

- Dispose of the complete product (including its cables, plugs and accessories) in the designated WEEE collection facilities.
- If you purchase a replacement product, hand your complete old product back to the retailer. He should accept it as required by the WEEE directive.


Disposal instructions for batteries:




Batteries should not be disposed of with general household waste.

Packaging information:

Philips has marked the packaging with standard symbols designed to promote the recycling and appropriate disposal of your eventual waste.

 A financial contribution has been paid to the associated national recovery & recycling system.

 The labeled packaging material is recyclable.

1.5 Using GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their mark. Your CD140/145 handset and base station are GAP compliant, which means the minimum guaranteed functions are: register a handset, take the line, receive a call and dial. The advanced features may not be available if you use another handset than a CD140/145 with your base station.

To register and use your CD140/145 handsets with a GAP standard base station of a different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in Section 3.5.

To register a handset of another make to the CD140/145 base station, place the base station into registration mode (Section 3.5), then follow the procedure in the manufacturer's instructions.

1.6 Electric, Magnetic and Electromagnetic Fields ("EMF")

- 1** Philips Royal Electronics manufactures and sells many consumers oriented products, which usually, as with any electronic apparatus, have the ability to emit and receive electromagnetic signals.
- 2** One of Philips' leading Business Principles is to take all necessary health and safety precautions for

our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

- 3** Philips is committed to develop, produce and market products that cause no adverse health effects.
- 4** Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.
- 5** Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

2 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

2.1 What's in the box



Telephone handset



Base station



Power supply unit



Line cord



2xAAA Rechargeable
batteries



Quick start guide



User Manual



Warranty card


Note

The line adaptor may not be attached to the line cord. You may find the line adaptor in the box. In that case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

In multihandset packs, you will find one or more additional handsets, chargers with power supply units and additional rechargeable batteries.

2.2 Overview of the phone

2.2.1 Handset

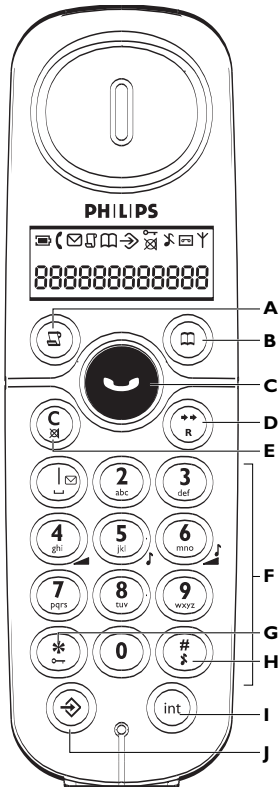

A Call Log key

In idle mode: Press to access the call log list

B Phonebook key

In idle mode: Press to access the phonebook

C Talk key

In idle mode: Press to answer when there is an incoming call

In idle mode: Press to make a call

During a call: Press to end a call

D Redial/Flash key

In idle mode: Press to access the redial list

In predial mode: Press to insert a flash

Note

The first digit cannot be a flash during predialling.

E Clear/Back/Mute key

In editing mode/predialling mode: Short press to delete one character/digit

In editing mode/predialling mode: Long press to delete all the characters/digits

In phonebook review/call log review/redial list review mode: Press to exit to idle mode

In phone setting mode: Press to exit to previous level

During call connection: Press to mute the microphone

F Alphanumeric keypad

G Star key

In idle mode: Short press to insert a *

In idle mode: Long press to activate or deactivate keypad lock

H Hash key

In idle/dialling mode: Short press to insert a #

In idle mode: Long press to mute the ringer

In dialling mode: Long press to enter a pause

I Call Transfer / Intercom / Conference

In idle mode: Short press to initiate an intercom call

During external call connection:
Short press to initiate an internal call or switch call between an internal call and an external call








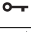




Long press to initiate a conference call with an external call and another internal call

J Program key


In idle mode: Press to enter into the phone setting mode

In phone setting mode (except editing mode): Press to confirm and save the settings

2.2.2 Display icons on the handset

| | |
|--|---|
|   | Indicate battery level. Display empty battery icon when the battery level is low, otherwise, full battery icon is displayed. |
|  | Display when the phone is in use. Blink during ringing. |
|  | Blink when new voicemail messages are received and not read yet |
|  | Display when browsing the call log. Blink when missed calls are received. |
|  | Display when browsing the phonebook |
|  | Display when the phone is in phone setting mode |
|  | Display when the keypad is locked |
|  | Display when the microphone is muted |
|  | Display when the ringer is turned off |
|  | Display when the telephone answering machine (TAM) is turned on. Blink when new TAM messages are received. |
|  | Display when the handset is registered and within the range of the base station. Blink when the handset is out of range or is searching for a base. |

2.2.3 Base station

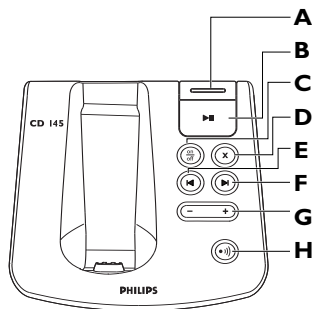

A Event LED

OFF: Answering machine system is turned off

ON: Answering machine system is turned on

Normal blinking: New message received or incoming message is being recorded

Fast blinking: Message box is full

B Stop/Play key

Press to play the message (the first recorded message will be played first)

Press to stop message playback

C Answering machine ON/OFF key

Press to turn on or off the

answering machine.

D Delete key

Delete current message during message playback.

Long press to delete all the messages when answering machine system is in standby mode

Note

Unread message will not be deleted.

E Backward key

Press to go back to previous message

F Forward key

Skip to next message during message playback

G + / - key

Increase (+) or decrease (-) speaker volume during message playback

H Page key

Press to page the handset

Press and hold for three seconds to start registration procedure

3 Getting started

3.1 Connect the base station

⚠ Caution

Avoid placing the base station too close to large metal objects such as filing cabinets, radiators or electrical appliances. This can impair the range and sound quality. Buildings with thick internal and external walls may impair transmission of signals to and from the base.


⚠ Warning

Power is applied when the power adaptor is plugged into the unit and connected to the electricity socket. The only way to power down the unit is to unplug the power adaptor from the electricity socket. Therefore, ensure that the electricity socket is easily accessible.


The power adaptor and the telephone line cord have to be connected correctly, as incorrect connection could damage the unit.

Always use the telephone line cord supplied with the unit. Otherwise, you may not get a dial tone.


- 1 Insert the plug of the power cord into the socket at the bottom of the base station.

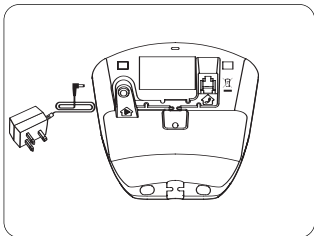

- 2 Insert the plug of the line cord into the socket at the bottom of the base station.

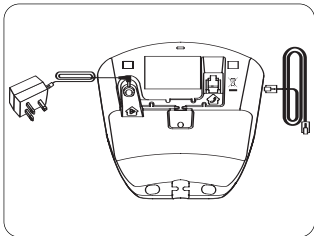

- 3 Connect the other end of the line cord to the telephone line socket and the other end of the power cable to the electricity socket.

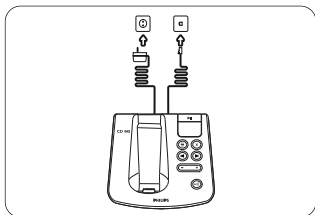


Note

The line adaptor may not be attached to the line cord. In this case, you have to connect the line adaptor to the line cord first before plugging the line cord to the line socket.

3.2 Install rechargeable batteries

Your CD145 is supplied with two rechargeable batteries. Before using the handset, install the batteries into the handset and fully charge them up.

- 1 Slide out the battery cover

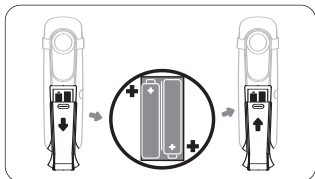

- 2 Place the batteries as


indicated in the battery compartment and replace the battery cover.

3.3 Place the handset on the charging cradle

Note

Charge the handset for at least 24 hours before using it for the first time.

When the battery is fully charged, the talk time of your CD145 is approximately 12 hours and the standby time is approximately 120 hours.




- 1 Place the handset on the charging cradle of the base station.
- 2 When the handset is fully charged,  is displayed.

3.4 Configure your phone

Before using your CD145, you need to configure it according to the country of use.

Depending on your country, country selection screen may not appear. In that case, you do not need to select the country code to configure your phone. After charging it for a few minutes, the country code selection screen appears.

Follow these steps to configure your phone:

- 1** Press 
 - Only the country codes available in the product will appear on the screen.
- 2** Press  repeatedly to scroll to your desired country code. (See the country setting table for reference).
- 3** Press  for validation
 - Your phone is configured according to your selected country code and back to idle screen.

Country setting table

| Code | Country | Default outgoing message language | *Outgoing message language available |
|------|-------------|-----------------------------------|--------------------------------------|
| 01 | Germany | German | 1 – German |
| 02 | Austria | German | 2 – Turkish |
| 03 | Turkey | Turkish | |
| 04 | UK | English | 1 - English |
| 05 | Ireland | English | |
| 06 | France | French | 1 – French |
| 07 | Italy | Italian | 2 – Italian |
| 08 | Portugal | Portuguese | 3 – Portuguese |
| 09 | Greece | Greek | 4 – Greek |
| 10 | Spain | Spanish | 5 – Spanish |
| 11-1 | Switzerland | English | 1 – French |
| 11-2 | Switzerland | | 2 – German |
| 11-3 | Switzerland | | 3 – Italian |
| 12 | France | | 4 – English |
| 13 | Netherlands | English | 1 – Dutch |
| 14-1 | Belgium | | 2 – French |
| 14-2 | Belgium | | 3 – German |
| | | | 4 – English |

* By default, the outgoing message language 1 is displayed, see Section 6.7 on how to access other available outgoing message languages.

| Code | Country | Default outgoing message language | *Outgoing message language available |
|------|-------------|-----------------------------------|--|
| 15 | Sweden | English | 1 – Swedish 2 – Norwegian 3 – Finnish 4 – Danish 5 – English |
| 16 | Norway | | |
| 17 | Finland | | |
| 18 | Denmark | | |
| 21 | Romania | English | 1 – Romanian 2 – Polish 3 – Czech 4 – Hungarian 5 – English |
| 22 | Poland | | |
| 23 | Czech | | |
| 24 | Hungary | | |
| 25 | Slovakia | | |
| 26 | Slovenia | | |
| 27 | Croatia | | |
| 28 | Bulgaria | | |
| 29 | Serbia | | |
| 30 | Singapore | English | 1 – English |
| 31 | Indonesia | | |
| 32 | Malaysia | | |
| 35 | Australia | | |
| 36 | New Zealand | | |
| 39 | Brazil | English | 1 – Brazilian 2 – Spanish 3 – English |
| 40 | Mexico | | |




* By default, the outgoing message language 1 is displayed, see Section 6.7 on how to access other available outgoing message languages.

Note

Once the country is selected, the default line settings for the selected country will be applied to your phone automatically.


Tip

If you chose the country in use wrongly or would like to change the country after the first configuration, you can

press , , enter 4-digit PIN code (default PIN is 0000) and press  in idle mode to its default settings. The handset will go back to country code selection screen and you can select the country code again. If country selection is not needed, the handset will go back to idle screen after reset.


3.5 Register your handset

You will need to register your new handset or if you wish to register the handset to a different base unit. You can register up to four handsets on a single base station.

Before entering the 4-digit PIN, press  on the base unit for around three seconds when the base is in standby mode.

1 Press ,  on the handset.

2 Enter the default or existing 4-digit PIN code. (Default PIN is 0000)

3 Press  to start registration

4 "--Sub--" will be displayed on the screen


Note

If the PIN code you entered is incorrect, a long beep is emitted from the handset and the phone returns to standby mode.


4 Using your phone

4.1 Make a call

4.1.1 Predialling




- 1** Enter the phone number (maximum 24 digits)
- 2** Press 
 - *The call is initiated.*

4.1.2 Direct dialling

- 1** Press  to take the line
- 2** Enter the phone number
 - *The call is initiated.*

4.1.3 Call from the call log


This feature is available if you have subscribed the Caller Line Identification service (CLI) with your network provider.


- 1** Press  to show the latest call log entry
- 2** Press  repeatedly to scroll through the list of unanswered calls to select your desired unanswered call
- 3** Press  to dial the selected number


Note

The oldest entry will be deleted when the memory is full.


4.1.4 Call from the phonebook


- 1 Press  and the first number in the phonebook displays

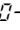The number stored in memory location 0 will be displayed if a number has been stored in this location before, otherwise, only memory location number  will be displayed.

- 2 Press  repeatedly until the desired phone number displays


Tip

For numbers stored in location numbers 0 to 9, you can enter the phonebook location number directly to access your desired phone number. For numbers stored in memory locations 10 to 19, press  repeatedly to access.

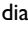- 3 Press  to dial the selected number



 - *The call is initiated.*

4.1.5 Call from the redial list

- 1 Press 
 - *The display shows the last number dialled.*

Note


The handset stores the last five numbers dialled.

- 2 Press  repeatedly to show the other last numbers dialled
 - 3 Press  to dial the selected number
-

4.1.6 Call timer

The call timer shows the duration of your current call when you hang up your phone. It is shown in minutes and seconds format (MM-SS).

4.2 Answer a call

When the phone rings, press .

- *The call is initiated.*

4.3 End a call

Press  during a call connection

- *The call ends.*

OR

Put the handset on to the base station

- *The call ends.*

4.4 Recall




To use this feature, you have to subscribe the service with your local service provider.

You can use the recall function to make or receive a second call. The operations mentioned in Section 4.4.1 and 4.4.2 may be varied by countries and local service providers.

Consult the details of recall operation of this service from your local service provider.




4.4.1 How to make a second call

During a call:

- 1 Press  to put the current call on hold
 - You will hear the dialling tone.
- 2 Enter the number of the second call and it will be dialled out.
- 3 When the second call is answered, you can press  and  to toggle between the two calls.

4.4.2 How to answer a second call

To use this feature, you have to subscribe the service with your local service provider. If another call comes in during a call, you will hear a short beep periodically:

- 1 Press  to answer the second call
 - The first call is being hold automatically.
- 2 Press  and  to toggle the call connection between the first caller and the second caller



Note

If you have subscribed the Caller ID service, the caller ID of your callers will appear on the display.

4.5 How to use the intercom

This feature is only available when there are at least two registered handsets. It allows you to make internal calls, transfer external calls from one handset to another handset and make conference calls.

4.5.1 How to make an internal call



- 1 Press 
 - 2 Press the handset number that you want to talk with
 - 3 Press  on the called handset
- *The intercom is established.*

Note


If the called handset is busy, a busy tone will be emitted from the calling handset.


4.5.2 How to transfer an external call to another handset

During an external call:

- 1 Press 
 - 2 Press the handset number that you want to talk with
- *The called handset will ring if it is available, press  on the called handset to start intercom and the external call will be put on hold automatically.*

Note




You can press  to switch the call between the internal call and the external call.

- 3 Press  to transfer the external call on the calling handset
- *The calling handset transfers the external call to the called handset.*



4.5.3 How to make a 3-way conference call

The conference call feature allows one external call to be shared with two handsets (in intercom). The three parties can share the conversation and no network subscription is required.

During an external call:

- 1 Press 
 - 2 Press the handset number that you want to talk with and the called handset rings if it is available
 - 3 Press  on the called handset to establish the call connection with the calling handset
 - 4 Press and hold  on the calling handset
- *The conference call is initiated.*


During the conference call:



- 1** Press  to put the external call on hold and go back to internal call
 - *The external call is put on hold automatically.*
- 2** Press and hold  to establish the conference call again

Note

Any handset hangs up during a conference call will leave the other handset still in connection with the external call.

4.6 How to find a handset

You can locate the handset by pressing  on the base station.




All the handsets registered to the base will produce the paging tone and you can stop the paging by pressing  on the handset or  on the base again.

5 Use more of your phone

5.1 Call in progress





5.1.1 Mute/Unmute microphone

During a call:

- 1 Press 
 - The microphone is turned off and  is shown on the display.
 - 2 Press  again to turn on the microphone
-

5.1.2 How to adjust earpiece volume

During a call:





- 1 Press 
- 2 The current earpiece volume level is displayed
- 3 Press ,  or  to select your desired earpiece volume level
 - The phone will go back to call connection screen.

5.2 Phonebook


You can store up to 20 phonebook entries into 20 different memory locations in your handset. Each phone number can have a maximum of 24 digits. If you have more than one handset, each handset has its own phonebook.

5.2.1 How to store a number in the phonebook

In idle mode:



- 1 Press 
- 2 Press 
- 3 Press  repeatedly to select your desired memory location number
- 4 Enter the phone number
- 5 Press  to save the number
 - The number is saved in the selected memory location.

Note

If the memory location is occupied, the number stored in this location will be displayed. You can press  to edit the phone number.

5.2.2 How to access the phonebook





In idle mode:

- 1 Press  to access the phonebook
 - *Number stored in the memory location 0 will be displayed if a number has been stored in this location before.*
- 2 Press  repeatedly to review other phonebook entries



Tip


To access numbers stored in memory locations from 0 to 9, you can directly press the memory location numbers to review the stored phone numbers.

5.2.3 How to edit the phonebook entry or delete a number





- 1 Press 
- 2 Press 
- 3 Press  repeatedly until the desired number displays
- 4 Press  to delete a digit one by one

Tip


You can press and hold  to delete the whole number, then press  to delete the phonebook entry and the phone will go back to idle screen.

- 5 Edit the number
- 6 Press  to confirm
 - *The selected memory location content is updated.*

5.2.4 How to delete the entire phonebook

- 1 Press 
- 2 Press 
- 3 Press 
- 4 Press 
- *All the phonebook entries are deleted.*

5.3 Call log


This feature is available if you have subscribed the Caller Line Identification service (CLI) with your network provider. Your phone can store up to 10 unanswered calls.  will blink to remind you of any unanswered calls received. If you have subscribed to Caller Line

Identification (CLI), and provided that the identity of the caller is not withheld, the number of the caller will be displayed. The unanswered calls are displayed in chronological order with the most recent unanswered call at the top of the list.

Warning

Call back from the call list may not work for all received numbers.


5.3.1 How to access the call log

- 1 Press  to access the call log directly

 - *The latest unanswered call is displayed.*

Note

If the call log is empty, “-----” will display.

- 2 Press  repeatedly to review other unanswered calls

5.3.2 How to delete the entire call log

- 1 Press 
- 2 Press 
- 3 Press 
- 4 Press 

- *All the entries in the call log are deleted.*



5.4 Redial list

Your phone can store the last five numbers your have dialled. Only the first 24 digits of each number are stored.

Warning




Call back from the call list may not work for all received numbers.

5.4.1 How to access the redial list

- 1 Press 
 - *The latest last number dialled is displayed.*
- 2 Press  repeatedly to review other dialled numbers






5.5 Settings

5.5.1 How to set the time

- 1 Press 
- 2 Press 
- 3 Enter the time (HH-MM) in 24-hour format
- 4 Press  to save the settings






5.5.2 How to set the ring melody

Your phone comes with 10 different ring melodies.



- 1 Press 
- 2 Press 
 - The current ring melody is played.
- 3 Press one of the digit keys from  through  to select your desired ring melody
- 4 Press  to save the settings

5.5.3 How to set the ring volume

Three ring volume levels are available for your selection.







- 1 Press 
- 2 Press 
 - The current ring volume level is played and displayed.
- 3 Press one of the digit keys from  through  to select your desired ring volume level
- 4 Press  to save the settings

Tip





You can press and hold  to turn off the ringer.  will display.

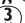5.5.4 How to set the earpiece volume

Three earpiece volume levels are available for your selection.

- 1 Press 
- 2 Press 
 - The current earpiece volume level is displayed.
- 3 Press  (low),  (medium) or  (high) to select your desired earpiece volume level
- 4 Press  to save the settings


5.5.5 How to activate/deactivate the keypad lock





- 1 Press and hold 
 -  is displayed if keypad lock is activated.
- 2 Press and hold  again to deactivate the keypad lock
 -  will be disappeared if keypad lock is deactivated.

Tip

You can also deactivate the keypad lock by removing and replacing the batteries of the handset.


5.5.6 How to select recall time

Recall time is the time delay by which the line will be disconnected after you press . The default value of recall time preset in your CD145 should be the best suited for your country network. You do not need to change it.

- 1 Press .
- 2 Press .
- 3 Press one of the digit keys from  through  to select the recall time



Note



Number of available recall time options vary by different countries.


- 4 Press  to save the settings.

5.5.7 How to select dial mode




This dial mode setting is country dependent. Pulse mode may not be available in some countries.

- 1 Press .
 - 2 Press .
- *The current settings are displayed.*

- 3 Press  for pulse mode or  for tone mode





- 4 Press  to save the settings.

5.5.8 How to turn on/turn off the key tone

- 1 Press .
 - 2 If the key beep is turned on before, press  to turn off the key tone
 - 3 Press .
- *The keypresses thereafter will not be heard.*

5.5.9 How to set the auto prefix

The maximum length of an auto prefix number is 10 digits. Once the number is set, it will be automatically inserted at the beginning of each number that will be dialled.






- 1 Press , .
- 2 Enter the detect digit where length of detect digit cannot be more than five digits
- 3 Press .
- 4 Enter the auto prefix number
- 5 Press  to save the settings

5.5.10 How to change the master PIN

The master PIN is a 4-digit PIN for handset registration and reset of your phone. Default master PIN is 0000. This PIN is also used to protect the settings of your handset. Your handset will prompt you whenever the PIN is required.

Note

The default product PIN code is preset to 0000. If you change this PIN code, keep the PIN details in a safe place where you have easy access to them. Do not lose the PIN code.


- 1 Press 
- 2 Press 
- 3 Enter the default / current 4-digit PIN code (0 to 9)
- 4 Press 
- 5 Enter the new 4-digit PIN
- 6 Press 
- 7 Enter the new 4-digit PIN again to reconfirm
- 8 Press  to save the settings.




- *The new PIN is saved.*

Note


If an incorrect PIN is entered, a long beep is emitted and the phone will return to idle mode.

5.5.11 How to program voice mailbox number

Some network service providers offer voice mailbox services. Contact your network provider for more information about this feature. You can set your voice mailbox number in  directly.

- 1 Press 
- 2 Press 
- 3 Enter the phone number of your network voice mailbox
- 4 Press  to save the settings

5.5.12 How to access your voice mail number

- 1 Press and hold  to dial out to your voice mailbox number.

5.5.13 How to restore to default settings

You can reset your phone to the default settings (see Section 7) at any time. After a reset, all your personal settings and call log entries will be deleted, but your phonebook remains unchanged.

1 Press 

2 Press 

3 Enter your 4-digit PIN


4 Press 


- *Your phone is reset to its default settings.*

6 Answering machine


Your CD145 features a telephone answering machine that records unanswered calls when it is activated. The LED on the base station will light steadily when the answering machine is on. You can store up to 99 incoming messages within the maximum recording time of approximately 15 minutes including outgoing messages.


6.1 How to turn on the answering machine

- 1 Press  on the base station to turn on the answering machine

 -  *displays on the screen.*








6.2 How to turn off the answering machine

- 1 Press  on the base station to turn off the answering machine

 -  *disappears on the screen.*

6.3 How to set answer delay

You can set the number of rings before the answering machine answers and starts playing your greeting message. You can set the answering machine to answer after three to eight rings or toll saver. The default ring delay is 6 rings.

- 1 Press  and 
- 2 Press 
 - *The current setting is displayed.*
- 3 Press one of the digit keys from  (3 rings) to  (8 rings) or  (toll saver) to choose your desired answer delay
- 4 Press  to save the settings

6.4 How to record your outgoing message

The answering machine announces the outgoing message when it answers the call. Your phone comes with one predefined outgoing messages per language. You can also record your own outgoing message. When you record your own outgoing message, it will be

used when the answering machine answers the call.


1 Press  and 

2 Press 

Start recording your own outgoing message after a beep tone.

Note

The maximum length of the greeting message is 60 seconds.

3 Press  to stop and save your recording at any time

- *Your recorded outgoing message will be played back through the earpiece automatically.*

Note



If your outgoing message is deleted, the default outgoing message will be used automatically.

6.5 How to play outgoing message

1 Press  and 

2 Press 


- *Your outgoing message will be played back through the earpiece.*

3 Press  or  to stop the outgoing message playback

6.6 How to delete outgoing message

1 Press  and 

2 Press 

3 Press  to confirm
The previously recorded outgoing message is deleted and a short beep will be emitted.


6.7 How to select the default outgoing message

1 Press  and 

2 Press 

- *The current setting is displayed.*






3 Enter your choice to select different languages (see the country setting table on Section 3.4)

4 Press  to save the settings.


6.8 How to play incoming messages

The LED on the base station will blink when there are new messages. It will stop blinking after all the new messages are heard. New incoming messages

will be played back in the sequence they are recorded. A tone will be emitted after each message. Old messages can be played back only when all new messages are heard. The LED will blink faster when the message memory is full.


| Buttons on the base station | Description |
|---|--|
|  | Press to play the message or stop the message playback |
|  | Press to skip the current message and play the next message |
|  | Press to go back to previous message if it is pressed within one second of current message playback Press to replay current message if it is pressed after one second of current message playback |
|  | Increase (+) or decrease (-) speaker volume during message playback |
|  | Press to delete the current message playback Press and hold for two seconds to delete all old messages in idle mode |

Note

When there is an incoming call during message playback, the playback will stop immediately. You can press  to pick up the call.

6.9 How to delete all incoming messages


In idle mode:


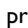
- 1 Press and hold  for two seconds to delete all old messages.

Note

New messages that have not been heard cannot be deleted.

6.10 How to screen an incoming call

You can listen through the speaker while your answering machine takes a call. This lets you identify the caller and decide whether to take the call or not. Once you press  to pick up the call, the recording will stop automatically.

Five speaker volume levels are available. In idle mode, press  repeatedly to adjust the speaker volume to the lowest level to turn off the call screening. You can press  to increase the speaker volume to turn on the call screening.

6.11 How to remotely access your answering machine

This feature lets you check your messages, or otherwise operate your answering machine by calling the answering machine and entering a remote access code on a tone dialling phone.

You can activate the remote access control feature by:

- 1 Place a call from an external phone to your CD145
- 2 When the answering machine answers the call and starts playing the outgoing message, press #
- 3 Enter the 4-digit remote access PIN (default remote access PIN is 0000)

Note

If the PIN is correct, recorded messages would be playback automatically.

However, if the PIN is incorrect, an error tone would be heard, you can retry to enter the remote access PIN again.

If there are new messages, all the new messages will be played immediately and then

old message would be played back after a long beep.







- 4 Press the following keys to carry out the desired function

| Keys | Description |
|------|--|
| 1 | Skip to the previous message |
| 2 | Play the message |
| 3 | Skip to the next message |
| 6 | Delete the playing message |
| 7 | Turn on the answering machine |
| 8 | Stop message playback |
| 9 | Turn off the answering machine |
| # | Enter the remote access code if the answering machine is on and outgoing message is playing. |

Note

If the answering machine is off, the phone will enter into the remote access mode after 10 rings. User can then enter the 4-digit remote access PIN (default is 0000) to activate the remote access feature.

6.12 How to change the remote PIN

- 1 Press 
 - 2 Press , 
 - 3 Enter the default/current 4-digit remote access PIN (default remote access PIN is 0000.)
 - 4 Press 
 - 5 Enter your new remote access PIN
 - 6 Press 
 - 7 Enter your new remote access PIN again to reconfirm
 - 8 Press  to save the settings
- *The new remote access PIN is saved.*

Note

The remote access PIN is different from the master PIN.

7 Default settings

| Items | Default values |
|-----------------------------------|-----------------------|
| Earpiece volume | Level 2 |
| Ring melody | Melody 1 |
| Ring volume | Level 3 |
| Key tone | ON |
| Recall time | Country dependent |
| Dial mode | Country dependent |
| Master PIN | 0000 |
| Redial list | Empty |
| Call log | Empty |
| Phonebook memory | Remain unchanged |
| Answering machine | ON |
| Answer mode | Answer & Record |
| Ring delay | 6 rings |
| Message tone | OFF |
| Remote access PIN | 0000 |
| Base speaker volume | 03 |
| Personal outgoing message | Empty |
| Default outgoing message language | Country dependent |
| Answering machine memory | Empty |

8 Frequently asked questions

www.philips.com/support

In this chapter you will find the most frequently asked questions and answers about your phone.

Connection

The handset does not switch on!

- Charge the battery: Put the handset on charger. After a few moments the phone will switch on
- Check the charger connections
- Use only the SUPPLIED RECHARGEABLE BATTERIES

The phone does not work at all.

- Make sure that the adaptor and the phone cord are connected properly

-
- Check that the batteries are fully charged and installed properly
 - This phone does not work during power failure

Communication is lost during a call!

- Charge the SUPPLIED RECHARGEABLE BATTERIES
- Move closer to the base station

Poor audio quality

- Move closer to the base station
- Move the base station at least one metre away from any electrical appliances

No dialling tone

- Check the connections. Reset the phone: unplug and plug back in the mains

- Charge the batteries for at least 24 hours
- Move closer to the base station
- Use the line cable provided
- Connect the line adaptor (when needed) to the line cord

The is blinking.

- Move closer to the base station
- Check battery level
- Register the handset to the base station

The appears.

- Replace the batteries with new ones (use only rechargeable batteries)

Set-up

Caller ID does not work properly.

- Check with your local phone company that the CID service is subscribed to
- Let the phone ring at least once before answering

The Call Waiting call cannot be answered.


- Check with your local phone company and select the correct recall duration

The handset displays nothing, but only the is blinking.


- Try again by disconnecting and connecting the base station power supply and follow the procedure to register a handset (see Section 3.5)
- Remove and place back the handset batteries

Sound

Handset does not ring!

- Increase the volume
- Make sure that the adaptor and the phone cord are connected properly
- Move the handset closer to the base unit
- Make sure the handset ringer is turned on ( is not displayed on the LCD)

Caller does not hear me!

- Microphone may be muted:
During a call, press 

Noise interference on your radio or television

- Move the power adaptor or base station as far away as possible

Product behaviour


Caller Line Identification (CLI) service does not work

- Check your subscription with your network operator

A phonebook entry cannot be stored

- Delete an entry to free memory

The handset is unable to register

- Make sure that  has been pressed for three seconds
- Each base can only register up to four handsets.
- Each handset can only be registered to one base.

I forget my PIN

- 1 Press 
- 2 Press 
- 3 Press **##**793**

- Your phone will reset to its default settings and you can get the default PIN of 0000. Phonebook records will not be erased.

Answering Machine

The answering machine does not record calls.

- Make sure the answering machine is connected to the power adaptor, and the power adaptor is plugged into mains supply which is switched on.
- Check to see if the answering machine is memory full. If so, delete some or all messages.
- Try switching off the power at the main socket, and then turn it on again after 1 minute.

Unable to perform remote operation

- Make sure you entered the correct remote access code
- Use a touch-tone phone

Note

If the above solutions do not help, remove the power from both the handset and the base. Wait for 1 minute and try again.



© 2007 Koninklijke Philips Electronics N.V.

All rights reserved.

Reproduction in whole or in part is prohibited without
the written consent of the copyright owner.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>