Listen to messages recorded on the answering machine (for CD365 only)

- Start/Stop playback: Press play/stop.
- Adjust the volume: Press + / .
- Skip backward:

During message playback, press I to play the message from the beginning. During the first second of the current message, press I to play the previous message.

- Skip forward: Press 🕨 to skip to the next message.
- Delete the current message: Press erase.

Note

• For more information, see the Telephone answering machine section in the user manual.

Troubleshooting

No dialing tone

• Check your phone connections. The handset is out of range. Move it closer to the base station.

The signal icon flashes.

• The handset is out of range. Move it closer to the base station. If the handset displays **[UNREGISTERED]**, register the handset.

The caller ID does not display.

• The service is not activated. Check with your service provider. The caller's information is withheld or unavailable. For more information, see the User Manual.

Welcome to Philips

Register your product at www.philips.com/welcome

Need help?

User Manual

Refer to the User Manual that came with your new phone.

Online help

www.philips.com/support

© 2009 Koninklijke Philips Electronics N.V. All rights reserved. Reproduction in whole or in part is prohibited without the written consent of the copyright owner. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.



Register your product and get support at www.philips.com/welcome

CD360 CD365




Quick Start Guide

DHILIDS





What's in the box

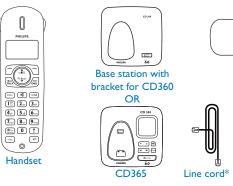



Power supply

Nelcome

0

PHILIP

Ouick Start Guide

j 8-



Warrantv

Note

• In some countries, you have to connect the line adaptor to the line cord, then plug the line cord to the line socket.


Guarantee

• In multi-handset packs, there are additional handsets and chargers with power supply units.

Caution

• Use only the supplied batteries and adaptor


Connect Connect the base station

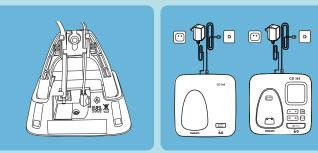

Connect the output plug of the power socket to the bottom of the base station. Connect the power socket to a standard wall outlet.

Connect the telephone line cord to the phone socket at the bottom of the base station and the wall phone socket.



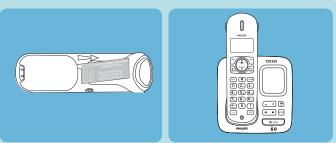

- The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.
- 2 Place the handset on the base station to power up.

Note: Charge the batteries for 24 hours before first use.

Download from WWW.Somanuals.com. All Manuals Search And Download.

Enjoy

Make a call

- Press take and dial the phone number; or 1
- Dial the phone number and press the to dial out the call. 2

Answer a call

When the phone rings, press that or **u** to answer the call. End a call

Press END.

Adjust the earpiece volume Press or vito adjust the volume during a call.

Set the handset's ringtone

- 1 Press menu.
- 2 Select [PERSONAL SET] > [HANDSET TONES] > [RING TONES], then press **[OK]** to confirm.
- 3 Select a ringtone, then press [OK] to confirm.
 - → The setting is saved.

Add a record

- Press menu.
- Select [PHONEBOOK] > [NEW ENTRY], then press [OK] 2 to confirm.
- Enter the name then press **[OK]** to confirm. 3
- Enter the number, then press **[OK]** to confirm.

Call from the phonebook

- Press 👻 to access the phonebook. 1
- Select a contact in the phonebook list. 2
- 3 Press tak to make the call.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com