

Welcome

Quick start guide



1

Connect

2

Install

3


Enjoy

PHILIPS


What's in the box




Handset

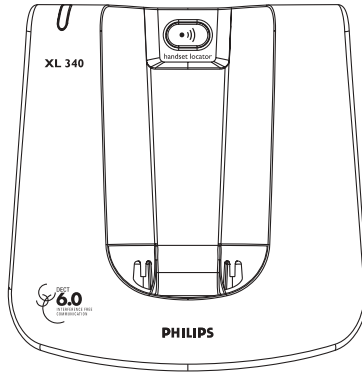


Base station

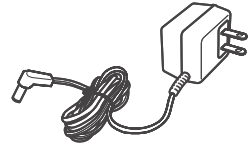


Power adaptor for base

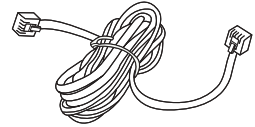


Line cord*

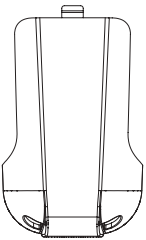


Battery door

 


2 Ni-MH rechargeable AAA batteries 750 mAh

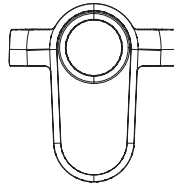

Belt clip

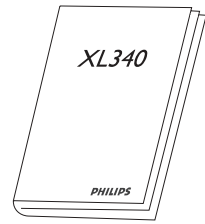

User manual

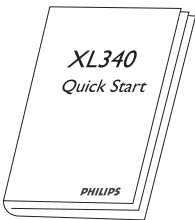

Quick start guide



Guarantee

*You may find in the box the line adaptor delivered separately from the line cord. In this case, please plug first this line adapter onto the line cord before connecting it to the line socket.

Make sure you have all these items in the box. For missing item(s), contact your dealer.

In multi-handset packs, you will find additional handsets, chargers, power supplies, and batteries.




Warning :

Always use the cables and batteries provided in the box.

1

Connect

A Connect the base station

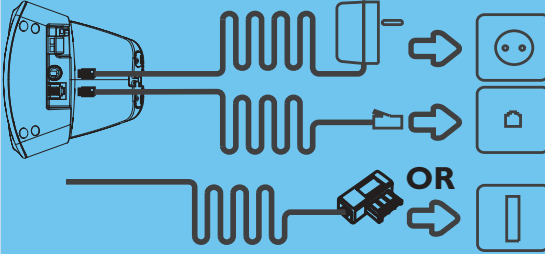


- Insert the plug of the power cord into the socket on the bottom of the base station.
- Insert the plug of the line cord into the socket on the bottom of the base station.
- Plug the power supply unit into your power outlet.
- Plug the line cord into the line socket.

2

Install

Always use rechargeable batteries.


A Insert batteries

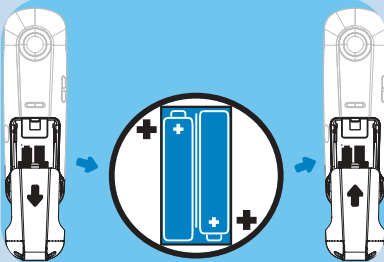

- Place the two rechargeable batteries (included) into the battery compartment.
- Slide the battery door firmly into place.

Only use rechargeable batteries

B Charge handset for 24 hours

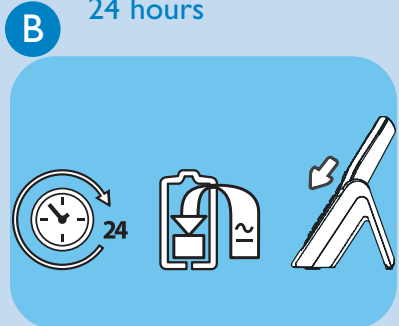


If the batteries are completely exhausted, the handset will not be able to power-on immediately. Handset may get warm during initial charge. This is normal.

3

Enjoy


Make a call

Press  and dial the number.



Answer a call

Press .

TIP :You can predial the number before seizing the line.

During a call, press  to turn on and off the handset loudspeaker.



Adjust the audio volume while on line

Press  or  to increase or decrease the audio volume.





End a call


Press .

Set the handset ring melody in standby mode


 

1. Press and hold  until you see the current melody name.
2. Select the desired melody by pressing digit keys 0 to 9.
3. Press  to confirm.

Change the ringing volume in standby mode

1. Press and hold  until you see the current melody name.
2. Press  or  to increase or decrease the volume level.
3. Press  to confirm.

If the ringing volume level is set to **OFF**,  appears.

Save a name and a number in a direct access memory


 

1. Enter the number in standby mode.
2. Press and hold one of the direct memory keys  or 
or .
3. Enter the name.
4. Press and hold the same memory key to save the name.

Save a name and a number in an extra memory

1. Enter the number in standby mode.
2. Press and hold one of the digit keys (1 to 9).
3. Enter the name.
4. Press and hold the same digit key to save the name.

To insert a pause press and hold , **P** is shown.

View phonebook memory


Press one of the direct memory keys  or  or 

OR

press and hold one of the digit keys (1 to 9).

The name and number will be shown.

Call from phonebook memory

Press  while viewing a memory. The saved number is dialed.

If the number is longer than 12 digits, only the last 12 digits are shown on display.

Troubleshooting

For detailed overview see user manual.

Problem

- No dial tone.
- Poor audio quality.
- No symbol on the display.
- The handset does not charge.
- Caller ID does not display.

Tip

- Check the connections.
- Use the line cord provided in the box.
- Try to place the base station at least one metre away from any electrical appliances.
- Make sure the product is plugged.
- Charge the batteries.
- Check base/charger connections.
- Check that the batteries are inserted correctly.
- Caller ID service may not be activated. Check with your service provider.

Need help?

User manual

See the user manual that came with your XL340.

Online help

www.philips.com/support

© 2007 Koninklijke Philips Electronics N.V.
All rights reserved.

Reproduction in whole or in part is prohibited without the written consent of the copyright owner.

Document order number: 3111 285 33951

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>