Quick Start Guide



What's in the Box?

You should find these items upon opening the box.



















Step A Connect

Tibs

- See the User Manual for other TV connection options.
- For connecting to a Progressive Scan TV, refer to the user manual for proper connections and detailed setup.
- In case of wireless connection failure between the main set and subwoofer, see the User Manual for manual pairing ("Installation - Step 1: Connecting speakers - Connecting the wireless subwoofer").

0_

Connect the speaker cables.

2

Connect the FM antenna.



Connect the A/V cord to a TV.




Connect the power cords of the system and TV.



Power on both the main set and subwoofer.

→ Wireless connection will set up automatically.

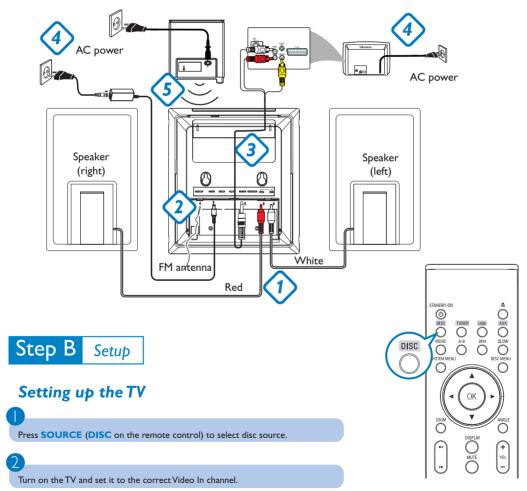



Setting the clock



remote) to set the minutes.

In standby mode, press and hold **CLOCK** on the remote control.

When the hour digits flash, press **VOLUME-/+** (**VOL+/-** on the remote control) to set the hours.

Press CLOCK again and the minute digits flash. Then press VOLUME-/+ (VOL+/- on the


Press CLOCK again to confirm the time setting.


Setting DVD menu options


IMPORTANT!

If the progressive scan feature is activated but the connected TV does not support progressive signals or the cables are not connected accordingly, see the user manual for proper progressive scan setup or deactivate the progressive scan feature as below:

- 1) Turn off your TV progressive scan mode or turn on to interlaced mode.
- 2) Press SYSTEM MENU on the remote to exit the system menu and then DISC and "1" to exit progressive scan.

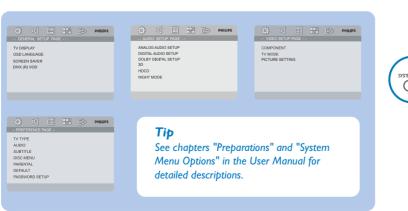

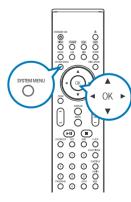

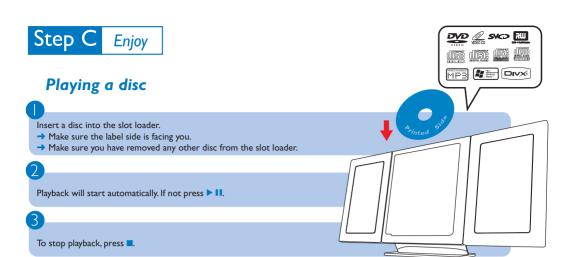

Programming and tuning to radio stations

- Press SOURCE (TUNER on the remote control) to select tuner source.
- Press PROGRAM for more than two seconds to program all available stations in order of waveband.
- Press PRESET | ✓ / ▶ | until the desired preset station is displayed.

Playing a USB mass storage device

With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- Insert the USB device's USB plug into the socket **> on the set.
- Press SOURCE once or more to select USB (or USB on the remote control).
- Play the USB's audio files as you do with the albums/tracks on a CD,



IMPORTANT! Slide down to expose some

expose some buttons and jacks on the front panel!



Tip

Detailed playback features and additional functions are described in the accompany owner's manual.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com