


1 Connect

Before connecting

Select the most suitable connection (A or B) based on the type of device you have and your home set up.


You can also refer to the accompanying User Manual for other possible connections.

A Connecting Recorder and TV with antenna only

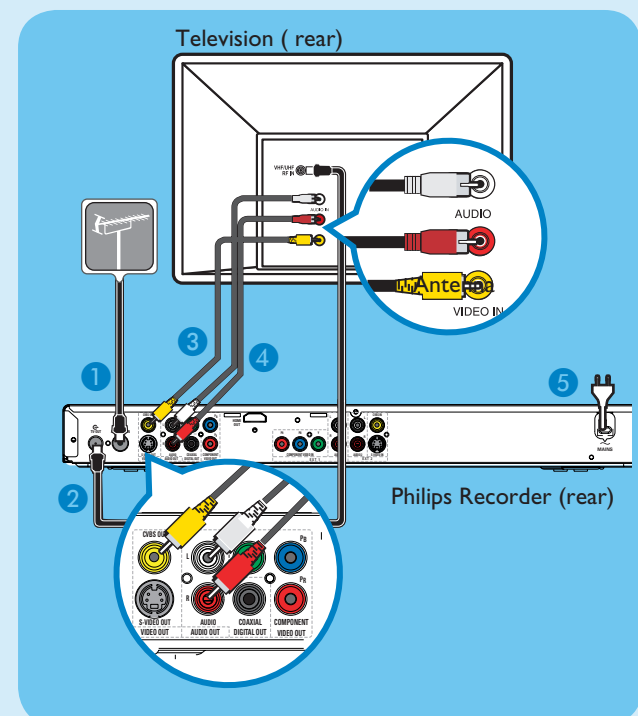

- 1 Unplug the existing antenna cable from your TV and connect it to the **ANTENNA IN** socket on this recorder.
- 2 Connect an RF antenna cable (supplied) from the **TV-OUT** socket on this recorder to the Antenna In socket on the TV.
- 3 Connect a composite cable (supplied) from the **CVBS OUT** socket on this recorder to the video input socket on your TV.
- 4 Connect an audio cables (supplied) from the **AUDIO OUT** sockets on this recorder to the audio input sockets on your TV.
- 5 Plug in the power cable from the recorder to an AC power outlet.

B Connecting Recorder and TV with Cable TV or Satellite Receiver

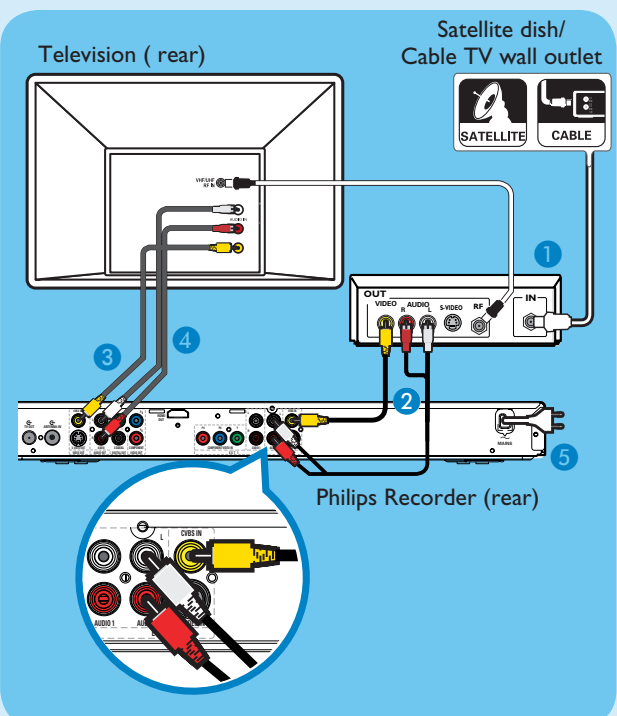


- 1 Keep the existing antenna connection from the Cable Box/Satellite Receiver to your TV.
- 2 Connect the **CVBS IN** and **AUDIO IN** sockets on the recorder to the corresponding video and audio output sockets on the Cable Box/Satellite Receiver.
 - Alternatively, you may use **COMPONENT VIDEO** or **S-VIDEO** connection.
- 3 Connect a composite cable (supplied) from the **CVBS OUT** socket on this recorder to the video input socket on your TV.
- 4 Connect an audio cables (supplied) from the **AUDIO OUT** sockets on this recorder to the audio input sockets on your TV.
- 5 Plug in the power cable from the recorder to an AC power outlet.

2 Set up

A Finding the viewing channel

- 1 Press **STANDBY-ON** on the recorder.
- 2 Turn on the TV. You should see the installation menu.

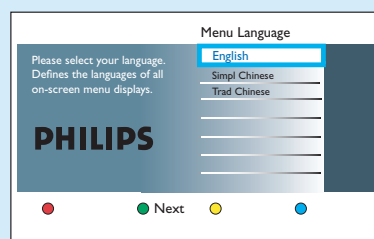


- 3 In case you don't see the recorder's setting menu, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, - button) until you see the menu. This is the correct viewing channel for the recorder.


B Start initial installation

Use the recorder's remote control and follow the on-screen instructions to complete the installation.

- 1 Select the desired language for this recorder's on-screen menu display and press the **Green** button to continue.

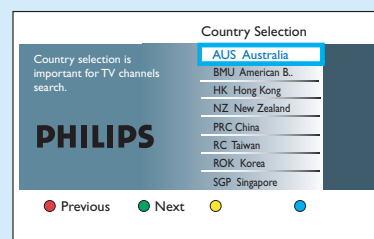


- 2 Select the country you live and press the **Green** button to continue.

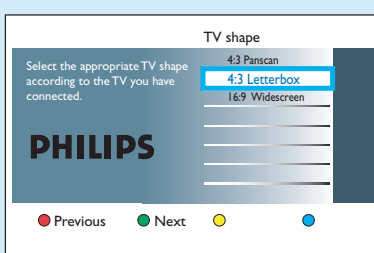


- 3 Select the appropriate TV shape in the way you want the wide-screen movies to be displayed and press the **Green** button to continue.


- 4 Press **OK** to start automatic analogue channel search.

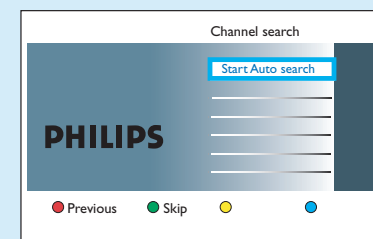


- 5 Once complete, press the **Green** button to continue.

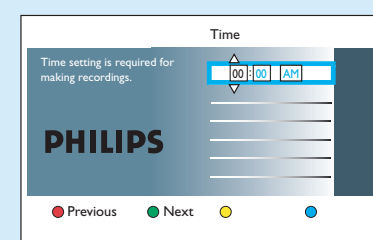

- 6 Enter the correct time in the entry field and press **OK** to confirm.

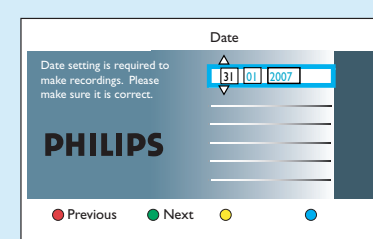

- 7 Enter the correct date in the entry field and press **OK** to confirm.

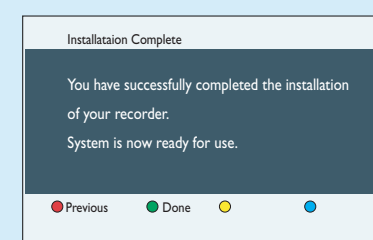


- 8 The installation is completed now, press the **Green** button to close the menu.

3 Enjoy

About the Time Shift Buffer (TSB)

Once you turn on the recorder, the selected TV programme will be stored in a temporary hard disk storage called Time Shift Buffer 'TSB'. The 'TSB' can store up to 6 hours of programmes temporarily.

Press **INFO** to display the Time Shift video bar.

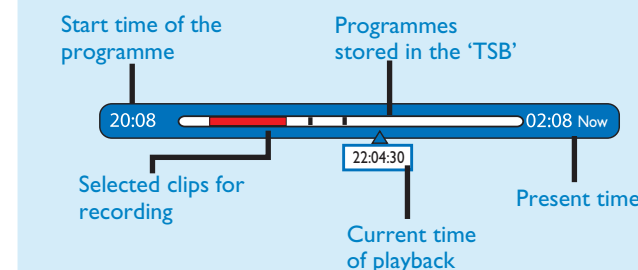

Notes:


- The contents in the time shift video bar will be cleared when you press **STANDBY ON**.
- The blue LED on the recorder will be lit up when the Time Shift Buffer is active or when you playback a recording from the hard disk drive.

Watch TV – Pause live TV

Your Philips Recorder allows you to control the TV programme. You can **PAUSE** it as if you were in control of the live broadcast.

- 1 Turn on your recorder to the live TV mode and press **P +/-** to select a TV programme.
- 2 Press **PAUSE LIVE TV** to suspend it.
- 3 Press **PAUSE LIVE TV** again to continue.
- 4 To return to live broadcast, press **LIVE TV**.

Colour Softkeys function

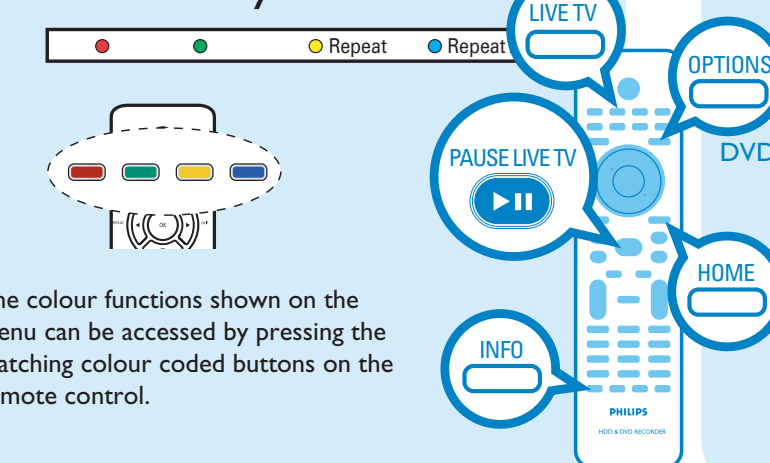

The colour functions shown on the menu can be accessed by pressing the matching colour coded buttons on the remote control.

About the internal hard disk drive

This recorder's hard disk drive can be used as a Media Jukebox, allowing you to store and playback your TV programmes, videos, music and photos files.

Press **HOME** on the remote control to access your contents stored in the { Hard Disk }.

Select a record mode

Select an appropriate recording mode is important as it determines the picture quality and recording time to the hard disk.

- 1 Before recording, press **OPTIONS** on the remote control.
- 2 Select { **Settings** } in the menu and press **OK**.
- 3 Move to { **Recording** } and press **right**.
- 4 Move to { **Record mode** } and press **right**.
- 5 Select a record mode and press **OK** to confirm.

DVDR3570H

Record Mode	Hours of recordings can be stored on the HDD or an empty DVD recordable disc.		
	HDD (160 GB)	DVD+R/ DVD+RW	DVD+R Double Layer
HQ (high quality)	23	1	1 hr 55 mins
SP (standard play)	45	2	3 hrs 40 mins
SPP (standard play plus)	56	2.5	4 hrs 35 mins
LP (long play)	68	3	5 hrs 30 mins
EP (extended play)	90	4	7 hrs 20 mins
SLP (super long play)	135	6	11 hrs 5 mins
SEP (super extended play)	180	8	14 hrs 45 mins

DVDR3590H

Record Mode	Hours of recordings can be stored on the HDD or an empty DVD recordable disc.		
	HDD (250GB)	DVD+R/ DVD+RW	DVD+R Double Layer
HQ (high quality)	40	1	1 hr 55 mins
SP (standard play)	77	2	3 hrs 40 mins
SPP (standard play plus)	96	2.5	4 hrs 35 mins
LP (long play)	115	3	5 hrs 30 mins
EP (extended play)	153	4	7 hrs 20 mins
SLP (super long play)	230	6	11 hrs 5 mins
SEP (super extended play)	300	8	14 hrs 45 mins

DVDR5590H

Record Mode	Hours of recordings can be stored on the HDD or an empty DVD recordable disc.		
	HDD (500GB)	DVD+R/ DVD+RW	DVD+R Double Layer
HQ (high quality)	86	1	1 hr 55 mins
SP (standard play)	165	2	3 hrs 40 mins
SPP (standard play plus)	206	2.5	4 hrs 35 mins
LP (long play)	248	3	5 hrs 30 mins
EP (extended play)	330	4	7 hrs 20 mins
SLP (super long play)	496	6	11 hrs 5 mins
SEP (super extended play)	661	8	14 hrs 45 mins

3 Enjoy

Record to hard disk


A Record current TV programme

- 1 Press **REC** to start recording. It can record up to 6 hours.

Note To set the recording time length, press **REC** repeatedly to extend the recording time in 30-minute increments, up to 6 hours.

- 2 To stop the recording before the scheduled time, press **STOP**.

B Mark a specific segment in the Time Shift Buffer for recording

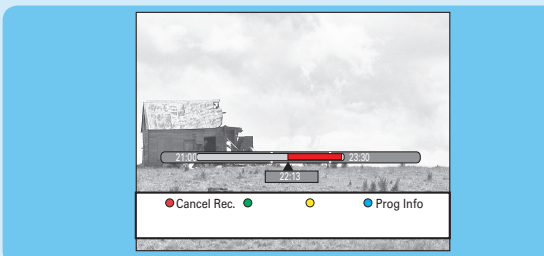


- 1 Press **left** or **right** to search for the scene where you want to record.
- 2 Press **REC** to start recording from here.

Note Pressing the **Red** button will cancel the recording.

- 3 Press **right** to search for the scene to end the recording, then press **STOP**.

Note The title will be marked in red and the recording will only take effect when you turn off the recorder.

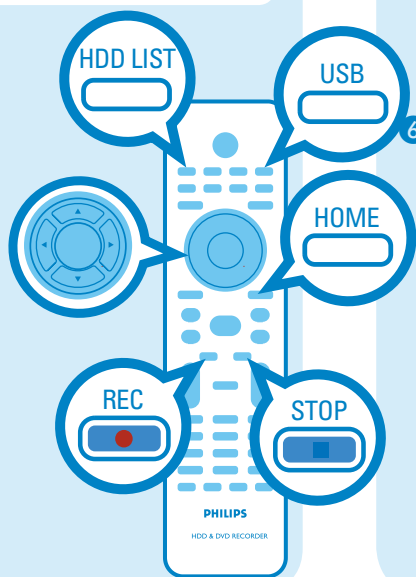

Copy TV programmes or files

A Copy TV programmes from hard disk

 
- 1 Insert a recordable DVD into the recorder.
- 2 Press **HDD LIST** on the remote control.
- 3 Select a title to copy and press the **Green** button on the remote control for { **Copy** }.
- 4 The making disc copy information appears. Press the **Green** button again to start copying.

Note It is not possible to copy the TV recordings to USB device.

B Copy files from USB

You can only copy the data files (MP3, WMA, DivX and JPEG) from your USB device to the recorder's hard disk drive or recordable DVD.

- 1 Insert your USB device to the USB port at the front panel of the recorder.
- 2 Press **USB** on the remote control to view the content menu.
- 3 Use **left**, **right**, **up**, **down** keys to reach the file you want to copy.
- 4 Press the **Green** button on the remote control for { **Copy** }.



- 5 Select the destination for copying and press **OK** to confirm.


Note If select { To Disc }, insert an empty recordable DVD into the recorder.

- 6 Press **OK** again to start copying.

C Copy files from Disc

Copy prohibited contents cannot be copied to this recorder.


- 1 Insert a CD/DVD into the recorder.
- 2 Press **HOME** and select { **Disc Tray** }.
- 3 Use **left**, **right**, **up**, **down** keys to reach the title/file you want to copy.
- 4 Press the **Green** button on the remote control for { **Copy** }.

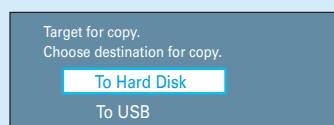

- 5 Select the destination for copying and press **OK** to confirm.

Note Only data files are able to copy to USB device.


- 6 Press **OK** again to start copying.

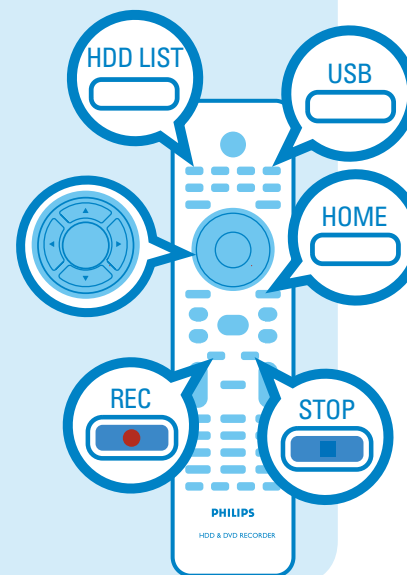

Start playback

A Playback from hard disk

- 1 Press **HOME**.

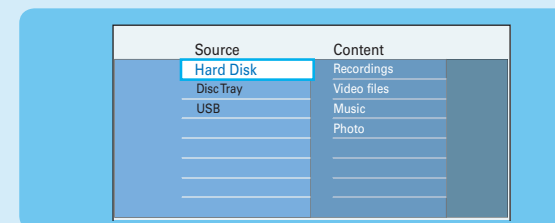

- 2 Select { **Hard Disk** } and press **right**.
- 3 Select the contents type and press **right**.
- 4 Use **left**, **right**, **up**, **down** keys to reach the title/file you want to play and press **Play/Pause** to start playback.

B Playback from disc

- 1 Hold down **STOP** until the disc tray opens. Load a disc and close the disc tray.
- 2 Press **HOME** and select { **Disc Tray** }.
- 3 Use **left**, **right**, **up**, **down** keys to reach the title/file you want to play and press **Play/Pause** to start playback.

C Playback from USB device

- 1 Insert the USB device to the USB port.
- 2 Press **USB** to show the contents list.
- 3 Select the contents type and press **right**.
- 4 Select a data file (MP3, WMA, DivX and JPEG) and press **Play/Pause** to start playback.

Register your product and get support at
www.philips.com/welcome

DVDR3570H
DVDR3590H
DVDR5590H




- 1 Connect
- 2 Set up
- 3 Enjoy

Quick Start Guide


What's in the box?




Hard Disk/ DVD Recorder

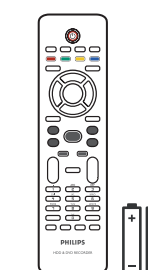


Remote Control and 2 batteries

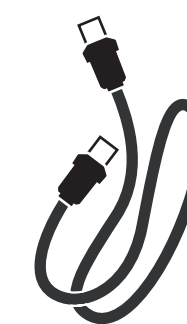

RF antenna cable (connect between recorder and TV)

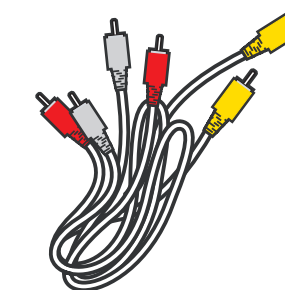

Audio/Video cables

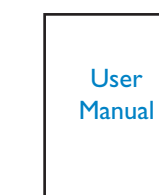

User Manual

Need help?

User Manual

See the user manual that came with your Philips Recorder

Online

Register your product and get support at www.philips.com/welcome



2007 © Koninklijke Philips N.V.
All rights reserved.
12 NC 3139 245 27483
www.philips.com

PHILIPS

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>