





DVP3050V



PHILIPS

 There are many ways to connect your new DVD/VCR to your Television and other equipment. This Quick-Use Guide shows the easiest, most common connection. Higher quality connections are explained in the accompanying owner's manual and will provide better sound or picture if your TV and/or audio system is compatible.

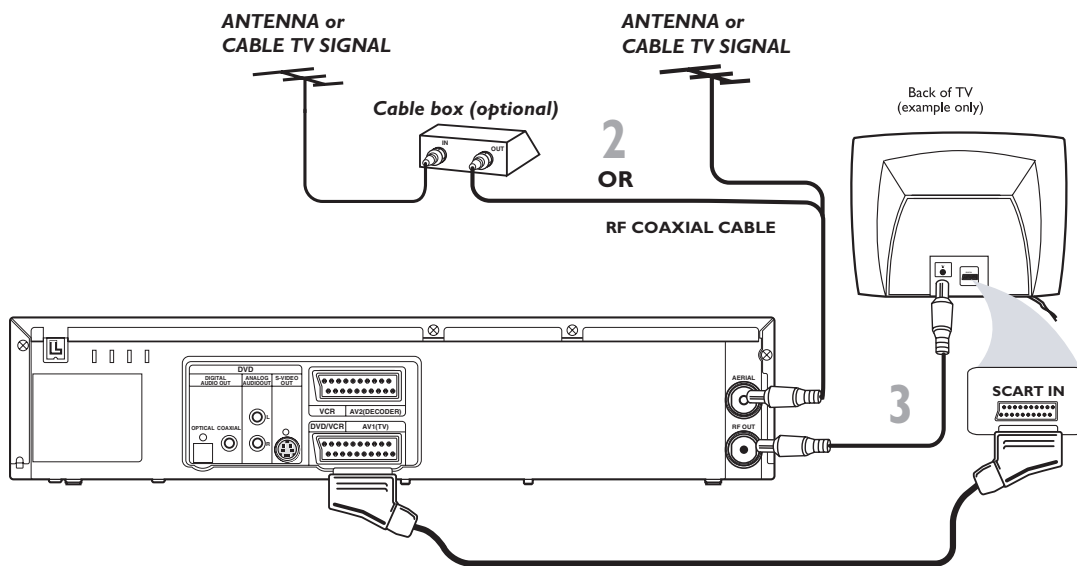


- 1** Disconnect all equipment from the power outlets. Connect the equipment to the power outlets only after you have finished hooking up everything. Never make or change connections with equipment connected to the power outlet.
- 2** If you do not have a Cable Box, simply connect your Antenna or Cable TV signal directly to the AERIAL jack on the rear of the DVD/VCR.
If you do have a Cable Box (or Satellite Receiver), first connect the Cable TV (or Satellite) signal to the IN jack on the Cable Box/Satellite Receiver. Then, use an RF coaxial cable (like the one supplied) to connect the OUT jack of the Cable Box/satellite Receiver to the AERIAL jack on the DVD/VCR.
- 3** Connect the supplied black RF coaxial cable to the DVD/VCR's RF-OUT jack and to your TV's ANTENNA IN jack. The TV's ANTENNA IN jack may be labelled 75-ohm, TV IN, or RF IN. Check your TV manual for details.
- 4** Plug the power cords of the DVD/VCR, TV and Cable Box (if applicable) to a power outlet.
- 5** Turn on the TV power. Set the TV to a video channel. (See the accompanying DVD/VCR owner's manual for details.)
- 6** Press **STANDBY-ON**  on the DVD/VCR or its remote to turn on the DVD/VCR. The first time you turn on the DVD/VCR, you should complete the VCR setup. See the other side of this Quick-Use Guide for details.

8239 300 38921
1VMN20587
H9924RD*****


Quick-Use Guide (cont'd)

Setting Up the VCR the First Time

 - 1 Turn on the TV and set it to a video channel.
- 2 Press **STANDBY-ON** to turn on the DVD/VCR. The following display will appear.

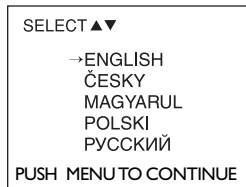


 
- 3 Press **▲** or **▼** to select the desired language.
- 4 Press **DISC/VCR MENU** on the remote control and then press **P+** to confirm. The Auto Tuning starts.
- 5 Press **STATUS/EXIT** to save the settings.

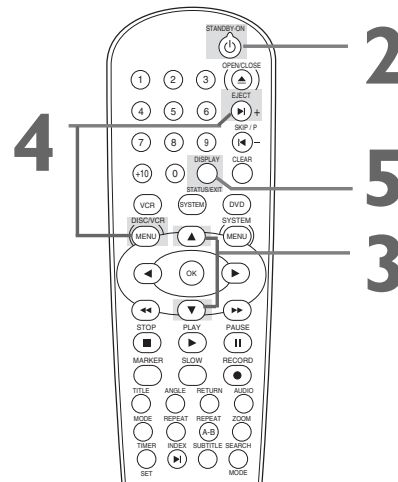

Playing a Disc

- 1 With the TV and DVD/VCR on, press **DVD** to put the DVD/VCR in the DVD mode.
- 2 Press **OPEN/CLOSE ▲** to open the disc tray. Put a disc in the tray with the label facing up and the shiny side facing down.
- 3 Press **PLAY ►** to close the disc tray. Playback starts automatically. If not, press **PLAY ►** again. If a DVD disc menu appears, use **▲▼◀▶**, **OK** or the numerical key pads to select features or start playback. Follow the instructions in the menu.
- 4 To stop playing a disc, press **STOP ■**.

  DVD Mode
Before using the remote control for DVD features, press the **DVD** button on the remote. The DVD/VCR must be in DVD mode. The DVD light will appear on the front of the DVD/VCR.

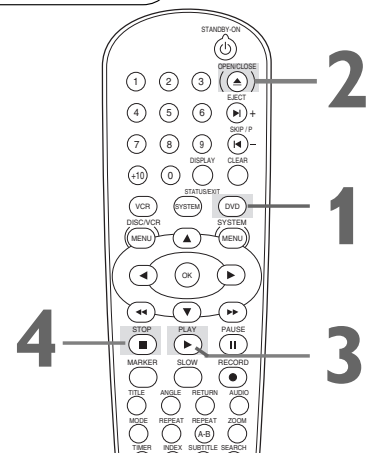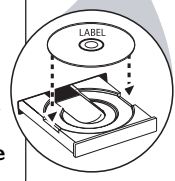

Playable Discs

The DVD Player of the DVD/VCR will play the following discs.



DVD is a trademark of DVD Format/Logo Licensing Corporation.

Windows Media is a trademark of Microsoft Corporation.

DVDs must have a Region Code of ALL regions or Region 5.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>