




3 Enjoy




Quick Start Guide

Start playback

A From a disc

- 1 Press **DVD** on the remote control.
- 2 Press **OPEN/CLOSE** , load a disc and close the disc tray.
- 3 Press **PLAY/PAUSE**  to start playback.
- 4 To stop playback, press **STOP** .


B From a VHS tape


- 1 Press **VCR** on the remote control.
- 2 Insert a pre-record VHS tape into the tape deck. Press **REW**  to rewind the tape if necessary to the beginning of the recording.
- 3 Press **PLAY/PAUSE**  to start playback.
- 4 To stop playback, press **STOP** .


Record mode (picture quality)	Hours of recording that can be stored on a 4.7GB disc	VHS tape
HQ (high quality)	1	Select between SP and LP mode.
SP (standard play)	2	
SPP (standard play plus)	2.5	
LP (long play)	3	
EP (extended play)	4	
SLP (super long play)	6	

Start recording


A Record to DVD or VCR

 
- 1 Press **DVD** to record to a recordable DVD. Or, press **VCR** to record to a VHS tape.
- 2 Load in a blank recordable DVD to the disc tray or a VHS tape to the tape deck.
- 3 Press **SOURCE** repeatedly to select the source to record from (eg, TUNER, CAM1, DV, EXT1 or EXT2).
- **To record a TV programme**, use **P+/-** on the remote control to select a programme channel.
- 4 Press **REC MODE** repeatedly to select a desired recording mode (refer to the Record Mode table).
- 5 Press **REC**  to start recording.



Note To set the recording time, press  repeatedly to extend the recording time in 30-minute increments. The recording will stop automatically at the designated end time.


- **If record from an external device**, press **PLAY** on the device to start playback.
- 6 To stop the recording, press **STOP** .

B Dubbing (DVD ↔ VCR)

- 1 Press **DVD** to dub from DVD to VCR. Or, press **VCR** to dub from VCR to DVD.
- 2 Get ready the appropriate disc and VHS tape in the recorder.
- 3 Press **DIRECT DUBBING** .




- 4 Select the desired recording mode, then move to **OK** in the menu and press  on the remote control to start dubbing.
- 5 To stop the dubbing, press **STOP** .

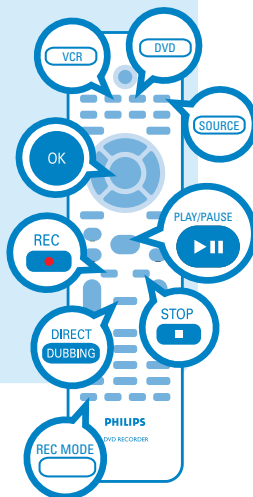


- 1 Connect
- 2 Set up
- 3 Enjoy


What's in the box?

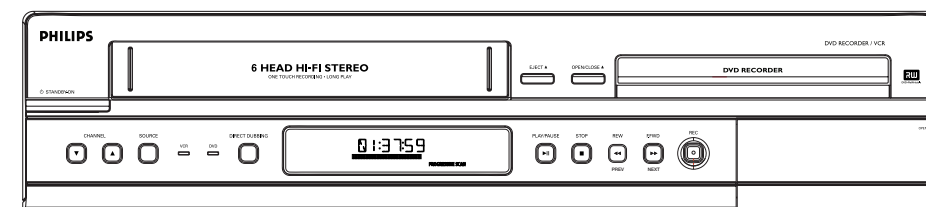


DVD Recorder / VCR

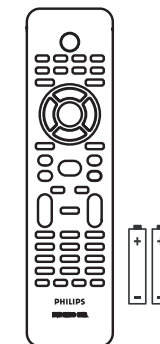

Remote Control and 2 batteries

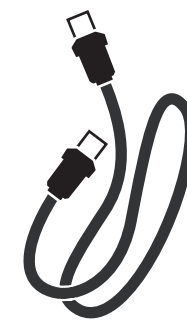

RF Coaxial Cable

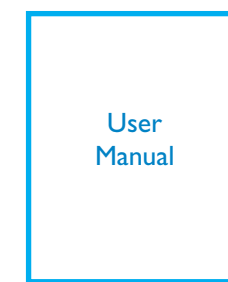

User Manual

Need help?

User Manual

See the user manual that came with your Philips recorder.

Online

go to www.philips.com/support.



2006 © Koninklijke Philips N.V.
All rights reserved.
12 NC 3139 245 22172




1 Connect

Basic Connection

Before Connecting

Select one of the following basic connections (**A** or **B**) according to the type of connecting devices you have.

If your TV is currently connected to a VCR, you have to unplug all the connections from your VCR and TV. Your new Philips Recorder replaces the VCR for your recording needs.

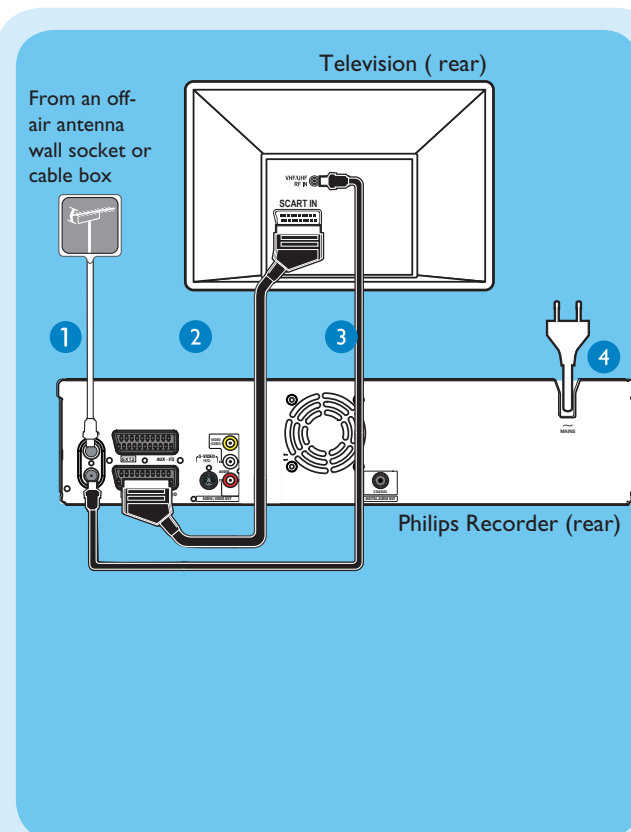


Option A

Use this connection if you are connecting the antenna cable directly from the antenna wall socket or from a Cable Box without a Scart output socket.

- 1 Unplug the antenna cable that is currently connected to your TV and plug in the antenna cable to the **ANTENNA** socket on this recorder.
- 2 Use the supplied RF coaxial cable to connect the **TV** socket on this recorder to the Antenna In socket on the TV.
- 3 Use a scart cable (not supplied) to connect the **EXT1 TO TV-I/O** socket on this recorder to the Scart input socket on your TV.
- 4 Plug in the power cable from the recorder to an AC power outlet.

Note See the accompanying user manual for other possible connections (e.g. Composite Video, S-VIDEO).

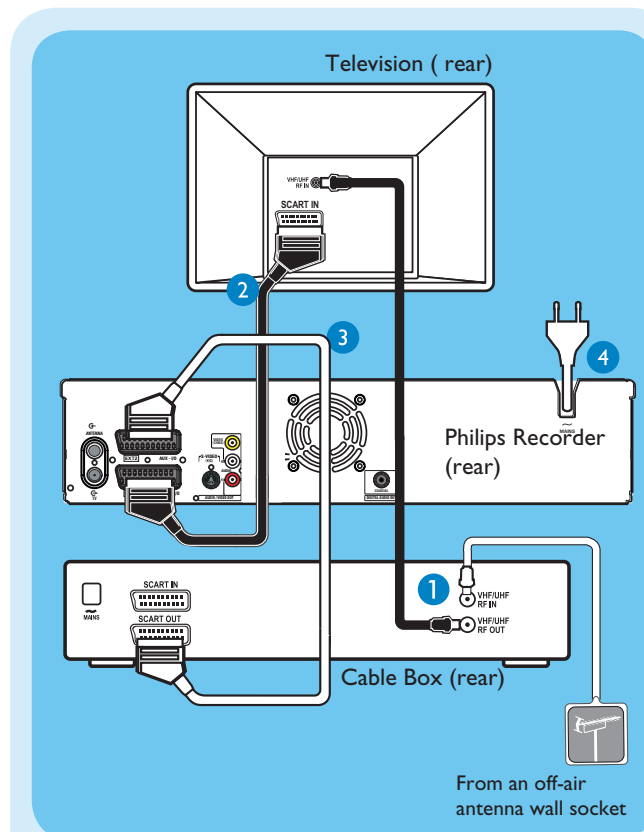

Option B

Use this connection if your current antenna cable is connecting through a Cable Box with Scart output socket.

- 1 Keep the existing antenna connection from the Cable box to your TV.
- 2 Use a scart cable (not supplied) to connect the **EXT1 TO TV-I/O** socket on this recorder to the Scart input socket on your TV.
- 3 Use another scart cable to connect the **EXT2 AUX-I/O** socket on this recorder to the Scart output socket on the Cable Box.
- 4 Plug in the power cable from the recorder to an AC power outlet.

2 Set up

A Finding the viewing channel


- 1 Press **STANDBY-ON** on the recorder.
- 2 Turn on the TV and other connected devices (e.g. Cable Box, Satellite Receiver).
- 3 If your TV does not switch to the correct viewing channel, press the Channel Down button (or AV, SELECT, \square button) on the TV's remote control repeatedly until you see the blue DVD background screen. This is the correct viewing channel for the recorder.



B Start basic setup

Use the recorder's remote control and follow the on-screen instructions to complete the installation.


- 1 Press **SETUP** on the remote control.

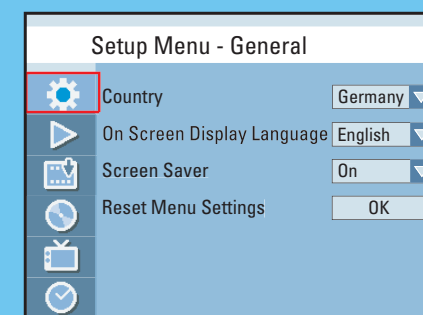

Note Use up \blacktriangle and down \blacktriangledown keys to toggle through the options. Select an item by pressing right \blacktriangleright . To confirm a setting, press **OK**.


- 2 **Select the country of your residence.**
Highlight Country and press **right**.
Select { **Country** } and press **OK** to confirm your selection.
- 3 **Select the recorder's menu display language.**
Remain in Country mode, select { **On Screen Display Language** } and press **right**.
Select the desired language option and press **OK** to confirm your selection.

- 4 **Setup and install TV channels.**
Highlight Channel Search and press **right**.
Select { **Channel Search** } and press **OK** to start automatic TV channel search.

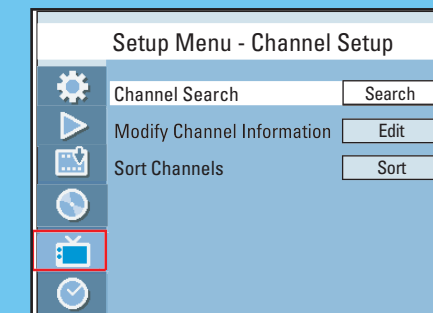


Note This process may take several minutes. Once complete, the total number of channels found and stored appears on the TV.

- 5 **Set the date and time.**
Highlight Date/Time and press **right**.
Select { **Date (dd/mm/yy)** } or { **Time (hh/mm/ss)** } and press **OK**. Use the **numeric keypad 0-9** to input the date/time, then press **OK** to confirm.

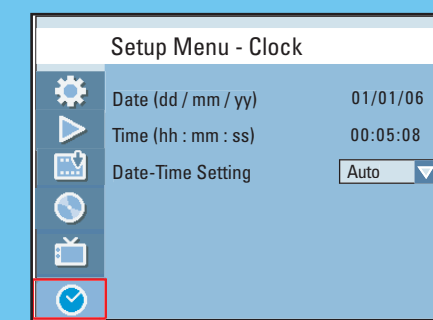

Note The settings will be updated according to the broadcast channel information of preset Programme Number 1.

- 6 Press **SETUP** to exit.

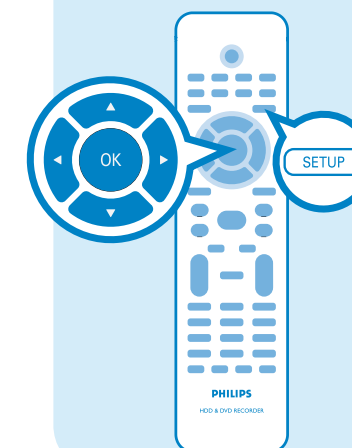

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>