 







# 3 Enjoy

## Start playback


### A From a disc

 - 1 Press **DVD** on the remote control.
- 2 Press **OPEN/CLOSE** , load a disc and close the disc tray.
- 3 Press **PLAY/PAUSE**  to start playback.
- 4 To stop playback, press **STOP** .

### B From a VHS tape


- 1 Press **VCR** on the remote control.
- 2 Insert a pre-record VHS tape into the tape deck. Press **REW**  to rewind the tape if necessary to the beginning of the recording.
- 3 Press **PLAY/PAUSE**  to start playback.
- 4 To stop playback, press **STOP** .


Record mode (picture quality)	Hours of recording that can be stored on a 4.7GB disc	VHS tape
HQ (high quality)	1	Select between SP and LP mode.
SP (standard play)	2	
SPP (standard play plus)	2.5	
LP (long play)	3	
EP (extended play)	4	
SLP (super long play)	6	

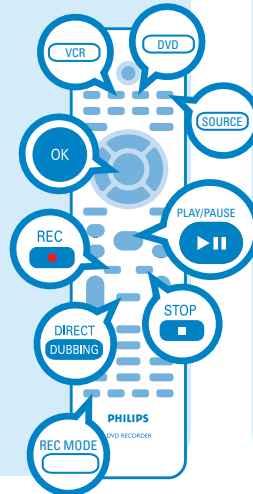 


## Start recording

### A Record to DVD or VCR

 
- 1 Press **DVD** to record to a recordable DVD. OR, press **VCR** to record to a VHS tape.
- 2 Load in a blank recordable DVD to the disc tray or a VHS tape to the tape deck.
- 3 Press **SOURCE** repeatedly to select the source to record from (eg, TUNER, CAM1, DV, EXT1 or EXT2).
- **To record a TV programme**, use **P +/-** on the remote control to select a programme channel.
- 4 Press **REC MODE** repeatedly to select a desired recording mode (refer to the Record Mode table).
- 5 Press **REC**  to start recording.


**Note** To set the recording time, press **REC**  repeatedly to extend the recording time in 30 minute increments. The recording will stop automatically at the designated end time.

- **To record from an external device**, press **PLAY** on the device to start playback.
- 6 To stop the recording, press **STOP** .

### B Dubbing (VCR ↔ DVD)

- 1 Press **VCR** to dub from VCR to DVD. OR, press **DVD** to dub from DVD to VCR.
- 2 Load in a blank recordable DVD to the disc tray or a VHS tape to the tape deck.
- 3 Press **DIRECT DUBBING**.

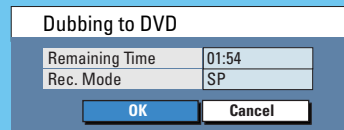

- 4 Select the desired recording mode, then move to **OK** in the menu and press **OK** on the remote control to start dubbing.
- 5 To stop the dubbing, press **STOP** .

## Need help?

### User Manual

See the user manual that came with your Philips recorder.

### Online

Go to [www.philips.com/support](http://www.philips.com/support).



2007 © Koninklijke Philips N.V.  
All rights reserved.

12 NC 3139 245 26222

DVD Recorder / VCR


DVDR3510V  
DVDR3512V

# Quick Start Guide




- 1 Connect
- 2 Set up
- 3 Enjoy

 
## What's in the box?

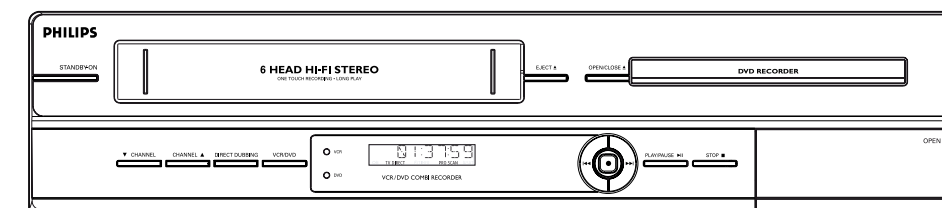


DVD Recorder / VCR

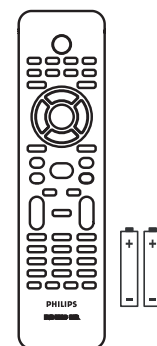 

Remote Control and 2 batteries

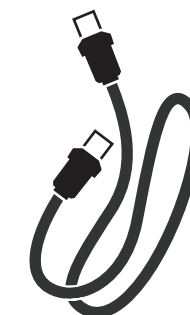 

RF Coaxial Cable

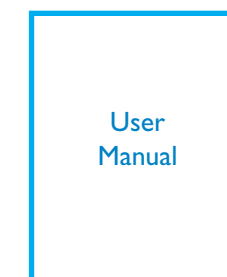 

User Manual

# PHILIPS

 
# 1 Connect

## Basic Connection

### Before Connecting

Select one of the following basic connections ( **A** or **B** ) according to the type of connecting devices you have.

If your TV is currently connected to a VCR, you have to unplug all the connections from your VCR and TV. Your new Philips Recorder replaces the VCR for your recording needs.

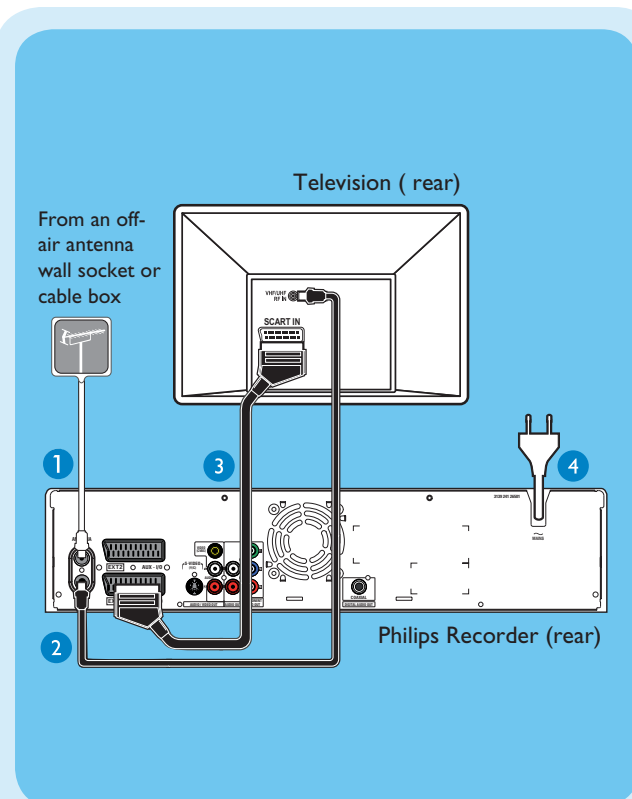


### Option A

Use this connection if you are connecting the antenna cable directly from the antenna wall socket or from a Cable Box without a Scart output socket.

- 1 Unplug the antenna cable that is currently connected to your TV and plug in the antenna cable to the **ANTENNA** socket on this recorder.
- 2 Connect the supplied RF coaxial cable from the **TV** socket on this recorder to the Antenna In socket on the TV.
- 3 Connect a scart cable (not supplied) from the **EXT1 TO TV-I/O** socket on this recorder to the Scart input socket on your TV.
- 4 Plug in the power cable from the recorder to an AC power outlet.

 **Note** See the accompanying user manual for other possible connections (e.g. Composite Video, Component Video, S-VIDEO).

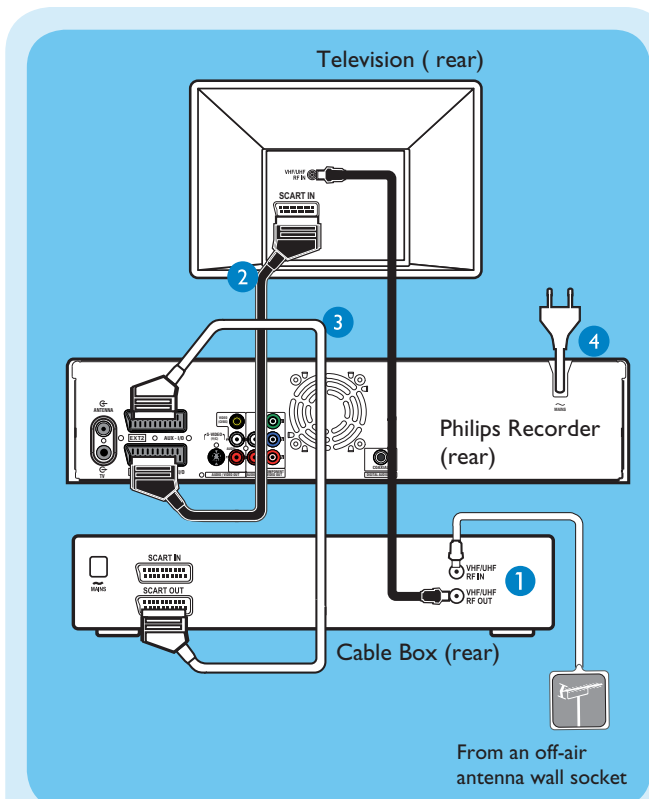

### Option B

Use this connection if your current antenna cable is connecting through a Cable Box with Scart output socket.

- 1 Keep the existing antenna connection from the Cable box to your TV.
- 2 Connect a scart cable (not supplied) from the **EXT1 TO TV-I/O** socket on this recorder to the Scart input socket on your TV.
- 3 Connect another scart cable from the **EXT2 AUX-I/O** socket on this recorder to the Scart output socket on the Cable Box.
- 4 Plug in the power cable from the recorder to an AC power outlet.

# 2 Set up

## A Finding the viewing channel

 
- 1 Press **STANDBY-ON** on the recorder.
- 2 Turn on the TV and other connected devices (e.g. Cable Box, Satellite Receiver).
- 3 If your TV does not switch to the correct viewing channel, press the Channel Down button (or AV, SELECT, - button) on the TV's remote control repeatedly until you see the blue DVD background screen. This is the correct viewing channel for the recorder.



## B Start basic setup


Use the recorder's remote control and follow the on-screen instructions to complete the installation.

- 1 Press **SETUP** on the remote control.

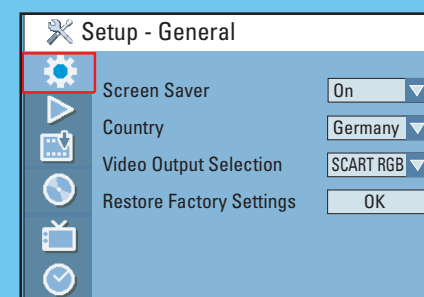


**Note** Use up ▲ and down ▼ keys to toggle through the options. Select an item by pressing right ►. To confirm a setting, press **OK**.

 - 2 **Select the country of your residence.** Highlight and press right ►. Select { **Country** } and press **OK** to confirm your selection.
- 3 **Select the recorder's menu display language.** Highlight and press right ►. Select { **On Screen Display Language** } and press right ►. Select the desired language option and press **OK** to confirm your selection.

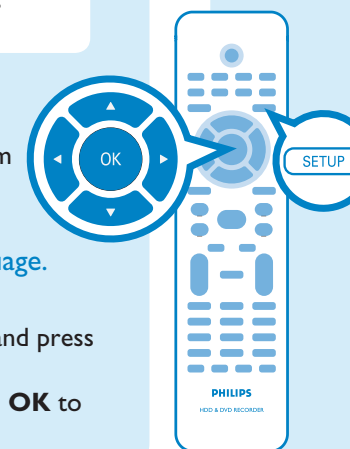


 - 4 **Setup and install TV channels.** Highlight and press right ►. Select { **Channel Search** } and press **OK** to start automatic TV channel search.

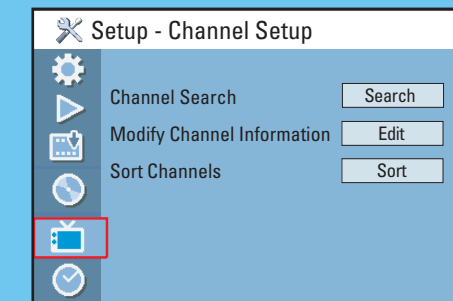

**Note** This process may take several minutes. Once complete, the total number of channels found and stored appears on the TV.

 - 5 **Set the date and time.** Highlight and press right ►. Select { **Date (dd/mm/yy)** } or { **Time (hh:mm:ss)** } and press **OK**. Use the **numeric keypad 0-9** to input the date/time, then press **OK** to confirm.

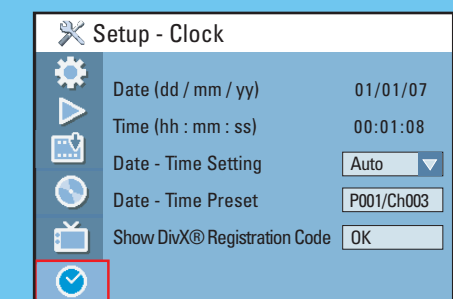

**Note** The settings will be updated according to the broadcast channel information of preset Programme Number 1.

- 6 Press **SETUP** to exit.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>