

Press **▲/▼/▶/◀** and **OK** to set the time/date, and then press **OK** to confirm.

Tip

When the reminder alerts, you can press **▶/◀** to stop the reminder. To stop the function, press the same button twice.

Turn on/off a reminder

In the main menu, select **[Setup]** and then press **OK** to confirm. Select **[Event Reminder]**, and then select **[On/Off]**. Press **▶/◀** to select **[On/Off]** and then press **OK** to confirm.

Select **[Set]**, and then press **OK** to confirm. **[On]** to set the reminder on, and then press **OK** to confirm. **[Off]** to set the reminder off, select **[Off]** and then press **OK** to confirm.

Tip
 • **Weekday:** Monday 00:00 to Friday 23:59
 • **Weekend:** Saturday 00:00 to Sunday 23:59.

Note

Ensure that you set the current time and date of the PhotoFrame before you set the auto on/off function.

In the main menu, select **[Setup]** and then press **OK** to confirm. Select **[Smart power]**, and then press **OK** to confirm. Select **[Set time]**, and then press **OK** to confirm.

Frequently asked questions

Is the LCD screen touch-enabled?

The LCD screen is not touch-enabled. Use the buttons on the back to control the PhotoFrame.

Will the LCD be damaged, if I keep showing the same photo for a long time?

No. The PhotoFrame can display the same photo continuously for 72 hours without any damage to the LCD screen.

Why does my PhotoFrame not show some of my photos?

The PhotoFrame supports only JPEG photos. Ensure that these JPEG photos are not damaged.

Why does the PhotoFrame not go into auto-off status after I set it?

Ensure that you set the current time, auto-off time, and auto-on time correctly. The PhotoFrame automatically turns off its display exactly at the auto-off time. If the PhotoFrame is not turned off for the day, it starts to enter auto-off status at the specified time from the next day.

The PhotoFrame is ON but the PhotoFrame does not respond anymore.

Ensure that the PhotoFrame is turned on. Then, use a pin to trigger the **RESET** button located on the back to restore the system.

PhotoFrame


SFZ2017
 SFZ2027
 SFZ2047



Quick start guide

- 1** Get started
- 2** Play
- 3** Setup

What's in the box

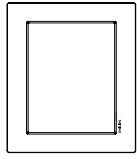

PhotoFrame



Pen



CD-ROM

AC-DC power adaptor

CD-ROM (Digital User Manual)



Quick Start Guide



(For SFZ2047)
 Extra silver frame with design



© Royal Philips Electronics N.V. 2009

All rights reserved.

Specifications are subject to change without notice. Trademarks are the property of Koninklijke Philips Electronics N.V. or their respective owners.

OSG_V2.0

Printed in China

Register your product and get support at www.philips.com/welcome

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>