

Advantage

Rechargeable Cordless Razor



SHAVING LOTION



561X

Rechargeable Cordless Razor



PHILIPS

IMPORTANT SAFETY INSTRUCTIONS

When using an electric razor, basic precautions should always be followed, including the following: Read all instructions before using this appliance.

DANGER

To reduce the risk of electric shock:

- 1. Do not reach for a razor that has fallen into water. Unplug immediately.
- 2. Do not use razor corded while bathing or in a shower.
- 3. Do not place or store razor while plugged in where it can fall or be pulled into a tub or sink. Do not place or drop razor while plugged in, into water or other liquid.
- Always unplug this razor from the electrical outlet immediately after using, except when razor is (re)charging.
- 5. Unplug this razor before cleaning.
- When <u>discarding</u> razor, unplug razor and remove rechargeable batteries. See enclosed sheet for instructions.

WARNING

To reduce the risk of burns, fire, electric shock, or injury to persons:

- Close supervision is necessary when this razor is used by, on, or near children or invalids.
- Use this razor for its intended household use as described in this manual. Do not use attachments not recommended by Philips Electronics North America Corporation.
- Never operate this razor if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or if razor with cord has been dropped into water. Return the razor to an Authorized Norelco Service Location for examination and repair.
- 4. Keep the cord away from heated surfaces.
- 5. Never drop or insert any object into any opening.
- 6. Do not charge razor or plug in razor outdoors or

- operate where aerosol (spray) products are being used or where oxygen is being administered.
- Do not use this razor with a damaged or broken comb, as facial injury may occur.
- Always attach plug to razor first, then into outlet.
 Be certain that plug is inserted firmly into razor up to mark indicated on plug. To disconnect, turn razor off, then remove plug from outlet.
- To prevent possible damage to the cord, do not wrap cord around the razor.
- 10. Never store razor in direct sunlight or store in pouch at a temperature above 140°F.
- 11. Razor is water-safe and can be rinsed under running tap water. Do not submerge razor in water.

SAVE THESE INSTRUCTIONS

IMPORTANT RAZOR INFORMATION

Your Norelco Advantage Razor features a special compartment for cartridges containing Nivea for Men shaving lotion. This unique lotion is applied to your skin while you're shaving to offer you the most comfortable, smoothest shaving experience ever from Norelco. This continuous moisturizing prepares the skin, sets up your beard and ensures that the razor moves smoothly over the skin, offering optimal skin contact.

- Before using the razor for the first time or if razor has not been used for a month or more, razor must be charged for a full 8 hours. A full charge will give up to 30 minutes of shaving time.
- IMPOŘTANT: To insure optimum battery performance, razor should be run until battery completely discharges twice a year.
- Clean razor after every use following Maintenance instructions.

IMPORTANT BATTERY DISPOSAL INFORMATION

When discarding your razor:
THIS NORELCO RAZOR CONTAINS
RECHARGEABLE NICKEL-CADMIUM BATTERIES
WHICH MUST BE RECYCLED OR DISPOSED OF
PROPERLY.

Refer to enclosed instruction sheet for directions on removing rechargeable batteries.

CAUTION:

- Batteries should be removed only when razor is to be discarded.
- Make sure razor is unplugged <u>before</u> dismantling for battery removal.
- All servicing or battery replacement should be performed by an Authorized Norelco Service Location only.

Norelco

60 - DAY MONEY-BACK GUARANTEE

To enjoy the closest and most comfortable shave from your new Norelco Men's Razor, the razor should be used <u>exclusively</u> for 2 weeks. This allows your hair and skin enough time to adapt to the Norelco Shaving System. If, after that period of time, you are not fully satisfied with your Norelco Men's Razor, send the product back and we'll refund you the full purchase price.

The razor must be shipped prepaid by insured mail, insurance prepaid, and have the sales slip, indicating purchase price and the date of purchase, enclosed. The razor must be postmarked no later than 60 days after the date of purchase. Norelco reserves the right to verify the purchase price of the razor and limit refunds not to exceed suggested retail price.

Send dated sales slip, your complete name and address as indicated below, and the razor, prepaid to:

Norelco Consumer Products Company A Division of Philips Electronics North America Corporation P.O. Box 1116 Skokie, IL 60076


Please allow 4-6 weeks for delivery of check. (Please Print)


NameAddress
City
StateZip
Telephone No. ()
REASON FOR RETURNING:

Table of Contents

FEATURES	2 - 3
INDICATIONS	4
CHARGING	4
INSERTING LOTION CARTRIDGE	5 - 6
SHAVING	6 - 7
CLEANING	7 - 10
ASSISTANCE	11
ACCESSORIES	11
BATTERY REMOVAL	11
WARRANTY	Back Cove

FEATURES

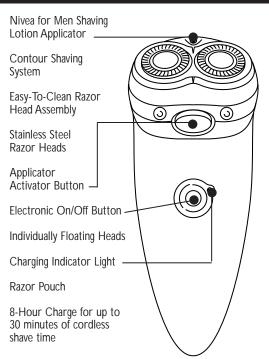

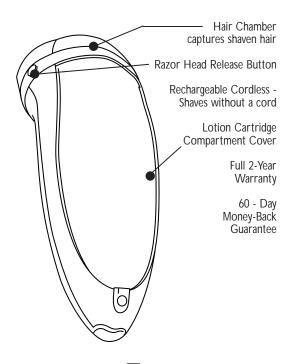

How the Norelco Lift and Cut® Patented Shaving System Makes Close Comfortable:



4. 5.

4. **INDICATIONS** ► LED Charging Indicator Light The green LED Charging Indicator Light will light up to indicate razor is (re)charging. **CHARGING** ► Battery performance is best if you recharge only when the batteries are (almost) completely empty. ► Charging or recharging at temperatures below 40°F or higher than 95°F adversely affects lifetime of batteries. ► Continuously recharging will reduce life of batteries. ▶ If razor has not been used for at least 1 month, razor must be recharged for a full 8 hours. ▶ Do not charge razor in pouch.

- Connect cord to razor. Plug into any 110V to 220V AC outlet. Use only the cord provided.
 - An adaptor plug may be necessary for cord usage in some foreign countries.



2 First time charging and recharging after non-use for 1 month or more requires a full 8 hours for up to 30 minutes of cordless shave time.

INSERTING LOTION CARTRIDGE ▶ First Use 1 Take one cartridge from the box. CONNECTOR 2 Remove the supplied connector out of the plastic bag. Push it into the plastic cap of cartridge until you hear it "click" into place. 3 Slide down latch and lift back cover off razor. 4 Slide the cartridge, with the connector in place, into position in razor. The connector should slide into the recess area with hole located at the top of razor. The white round dot on the connector must face down towards the razor. Replace back cover on razor and press it down into position until it snaps shut. ► Replacing Used Cartridge 1 Slide down latch and lift back cover off razor. 2 Remove the empty cartridge from the razor and pull out the connector DO NOT discard the connector.

3 Rinse out the cartridge compartment with hot water before replacing cartridge. Water from the tap should be on a hot setting but be careful to test water first so as not to burn or scald hands. Air dry razor thoroughly. Insert the connector into the new cartridge. Push connector into the plastic cap of cartridge until you hear it "click" into position. 5 Slide the new cartridge, with connector in place, into razor. 6 Replace back cover of razor back into position until it snaps shut. Use only Norelco Advantage Nivea for Men Shaving Lotion Cartridges, Model HQ150, with your Norelco Advantage Razor. **SHAVING** Use your new razor exclusively for 2 weeks to fully enjoy the performance and comfort of a Norelco shave.* * Stick with it! If you alternate shaving methods during the adjustment period, it may make it more difficult to adapt to the Norelco shaving system. Your Norelco Advantage Razor features a special compartment for cartridges containing Nivea for Men Shaving Lotion. This unique lotion is applied to your skin while you're shaving to offer you the most comfortable, smoothest shaving experience ever from Norelco. This continuous moisturizing prepares the skin, sets up your beard and ensures that the razor moves smoothly over the skin, offering optimal skin contact. Remove Protective Razor Head Cap. Turn razor ON.

6.



- 2 Hold the razor against the skin and press the yellow pump button located under razor heads on front side of razor to dispense shaving lotion. Once a sufficient amount of lotion has pumped out, move the razor heads quickly over the skin.
- 3 Shave against the direction of beard growth using quick, straight and circular motions.
- 4 You may use this shaving system on either wet or dry skin. The shaving lotion provides immediate hydrating action and lessens drag or pull against skin.
- Easy does it. Gently press the razor to your skin so the floating heads can follow the contours of your face.
- Turn razor OFF when finished shaving.
- 7 After shaving, you may rinse and dry your skin. Flip open Razor Head Assembly and clean heads and hair chamber by running under hot water.
- 8 You may leave the cartridge in place in your razor if you plan on using razor regularly. When you will not be using your razor for an extended period of time, it is recommended that you remove the cartridge and clean the razor following maintenance instructions before storing.

CLEANING


- ► Always switch Razor OFF and unplug before cleaning.
- ► Always store Razor with Protective Razor Head Cap on razor heads
- Never clean, remove or replace head assembly while motor is ON.

- Do not apply pressure to combs. Do not touch razor heads with hard objects as this may dent or damage precision-made slotted combs.
- Do not use razor if combs are damaged or broken. Facial injury may occur.
- ▶ Power Cord is not waterproof. Do not let cord get wet and do not immerse cord in water.
- ▶ After Each Use
- 1 Switch Razor OFF.
- Press the Razor Head Release Button located on side of Razor.



8.

- Flip open the Razor Head Assembly and clean the razor heads and hair chamber by running under hot water. Water from the tap should be on a hot setting BUT BE CAREFUL TO TEST WATER FIRST SO AS NOT TO BURN OR SCALD HANDS.
- 4 Close the Razor Head Assembly and shake off excess water.
- Open Razor Head Assembly again and leave open to air dry.

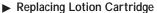

- Slide down latch and lift back cover off razor. Remove empty cartridge from razor and pull out the connector. Insert the connector into a new cartridge. The connector is secured when you hear it "click" into place.
- 2 Rinse out razor cartridge compartment with hot water. Shake off excess water and slide new cartridge with connector into the Razor. Close back cover.
- ► Every 2 Months: Razor Heads
 For consistently close and comfortable shaves, razor
 heads should be cleaned in a degreasing liquid or
 alcohol and then lubricated.
- 1 Turn razor OFF.
- Press the Razor Head Release Button located on right side of razor.
- Remove the Razor Head Assembly and clean the razor heads and hair chamber by running under hot water. Be sure water is not too hot so as to cause burns or scalding.



4 While holding Razor Head Assembly in one hand, squeeze S-formation in center of retainer plate and lift out frame.



Remove one cutter/comb at a time, out of frame.

IMPORTANT: Do NOT interchange the cutters and combs. They are a matched set and if interchanged may adversely affect shaving performance until cutters reseat themselves. Therefore, remove, clean and replace each set individually.



6 Cutter should be held as shown and brushed in an upward motion. Clean razor comb with long bristles of brush in a circular motion.

For consistently close and comfortable shaves, razor heads should be cleaned and lubricated every 4 weeks.

Clean heads in a degreasing liquid or alcohol.



While holding Razor Head Assembly in one hand, gently place one cutter/comb back into Assembly.

9 Repeat procedure for other cutting head.



10 Replace frame back into Razor Head Assembly. Press S-formation until plate clicks into place.

11 Press Razor Head Assembly back on razor housing.

12 Lubricate heads by spreading Norelco Razor Lubricant, model AL80, or one drop of mineral oil over floating heads with your finger.

ASSISTANCE

► For assistance or the Authorized Norelco Service Location nearest you, call toll free:

1-800-243-3050 or visit our website: www.norelco.com

► Authorized Norelco Service Location information is available 24 hours a day, 7 days a week.

ACCESSORIES

► It is recommended that you replace your razor heads once a year.

► HQ156/2 Advantage Replacement Heads: The self-sharpening rotary blades in your Norelco razor are precision-made to give closer shaves. When they finally do need replacing, specify only Norelco brand replacement cutters and combs, model HQ156/2.

► DO NOT USE shaver sharpeners as this will damage your blades and lifters and will adversely affect the shaving performance.

► Nivea for Men Shaving Lotion Replacement Cartridges

Advantage Nivea for Men Shaving Lotion Cartridges, 5 to a box, model HQ150.

Razor Lubricant: Norelco Razor Lubricant, model AL80.

BATTERY REMOVAL

- Batteries should be removed only when razor is to be discarded.
- Turn razor off and unplug before dismantling for battery removal.
- ► All servicing or battery replacement should be performed by an Authorized Norelco Service Location only.
- Refer to Battery Removal instruction sheet for directions on removing the rechargeable battery.

FULL TWO YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Norelco Product, Model 561X (except cutters and combs) against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge.

IMPORTANT: This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage." Use of unauthorized replacement parts will void this warranty.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE. NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply take or ship the product postage prepaid to the nearest Authorized Norelco Service Location. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

* Read enclosed instructions carefully.

Manufactured for:

Norelco Consumer Products Company A Division of Philips Electronics North America Corporation 1010 Washington Blvd., Stamford, CT 06912-0015





This symbol on the product's nameplate means it is listed by Underwriters' Laboratories, Inc.

Norelco, Lift and Cut and are Registered Trademarks of Philips Electronics North America Corporation.



and Advantage are Trademarks of Philips Electronics North America Corporation.

Nivea for Men is a Registered Trademark of Beiersdorf AG. PHILIPS and Philips Shield are Registered Trademarks of Koninklijke Philips Electronics N.V.

© 1999 Philips Electronics North America Corporation. All Rights Reserved.



Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com