

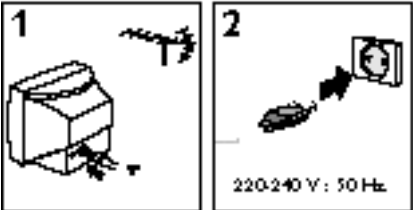 
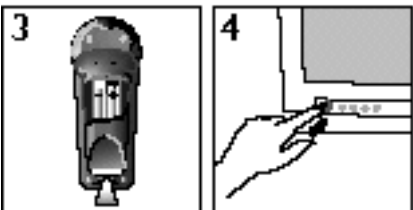 

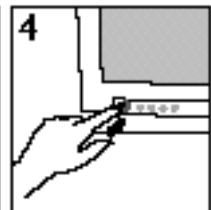 


tv

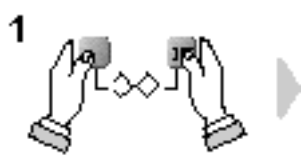 





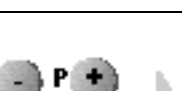 

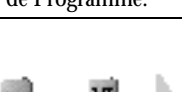 



PHILIPS

Installation





 


 





 

 











Action :	Résultat. Commentaire.
 <p>1</p>	<p>1 Les téléviseurs à petite taille d'écran sont équipés d'une antenne d'intérieur. Dans certaines conditions, la réception peut être difficile. Vous pouvez l'améliorer en faisant tourner et en variant l'angle d'antenne. Si la réception reste médiocre, il faut utiliser une antenne extérieure.</p>
 <p>220-240 V : 50 Hz</p>	<p>2 Branchez le cordon d'alimentation sur le secteur (220-240 V / 50 Hz).</p>
 <p>3</p>	<p>3 Utilisez les 2 piles de type LR03 fournies et veillez à bien respecter les polarités.</p>
 <p>4</p>	<p>4 Pour allumer le téléviseur, appuyez sur la touche marche-arrêt. Si le téléviseur reste en veille : appuyez sur les touches \ominus P \oplus de la télécommande.</p>

Recherche des chaînes

Appuyez sur la (les) touche(s):	Vous obtenez :
<p>1</p> 	<p>Le menu INSTALLATION s'affiche à l'écran.</p> 
<p>2</p>  <p>Choisissez le Système.</p>	<p><i>Disponible uniquement sur certaines versions</i> Appuyez plusieurs fois pour obtenir : FRANCE (SECAM L L') ou EUROPE (PAL BG, SECAM BG).</p> 
<p>3</p>  <p>Recherchez les chaînes.</p>	<p>L'indication SEARCHING (recherche) apparaît, la barre de recherche défile. Dès qu'un programme est trouvé, le numéro clignote.</p> 
<p>4</p>  <p>Choisissez le N° de Programme.</p>	<p>Entrez le numéro de programme souhaité.</p> <p><i>Attention: Il n'est pas possible d'utiliser le numéro de programme 0.</i></p> 
<p>5</p> 	<p>L'indication STORED (méorisé) apparaît, le programme est mémorisé. Recommencez les étapes 3 à 5 pour chaque programme à mémoriser.</p> 

➔ Pour **quitter** le menu INSTALLATION appuyez **deux fois** sur .

Utilisation de la télécommande

Appuyez sur :	Vous obtenez :
 Veille	Le téléviseur s'éteint, le voyant reste allumé en rouge. Pour remettre le téléviseur en marche, appuyez sur  P  .
 Sélection des programmes	Le numéro s'affiche à l'écran, le programme inférieur (-) ou supérieur (+) est sélectionné.
 Touches numériques	Le numéro s'affiche, le programme est sélectionné. Pour un programme à 2 chiffres, il faut ajouter le deuxième chiffre avant que le trait ne disparaisse.
 Volume	Le volume sonore est modifié.
 Coupure son	Supprime ou rétablit le son.
 Menu	En appuyant plusieurs fois vous accédez aux réglages:  (volume),  (balance),  (lumière),  (contraste),  (couleur) et  (arrêt programmé).
 Réglage du menu	Modifie le menu sélectionné. Pour la fonction arrêt programmé () , vous devez ajuster la durée au bout de laquelle le téléviseur passera automatiquement en veille (de 0 à 90 minutes).
 Mémorisation des réglages	D'abord affichez un menu :  ,  ,  ,  , ou  , puis appuyez sur les deux touches   . L'indication STORED (mémorisé) apparaît. L'ensemble des réglages du menu est mémorisé, sauf l'arrêt programmé.
 Préférences Personnelles	Les réglages mémorisés sont rappelés.
 In fo d'écran	Pour afficher ou effacer le numéro de programme et le temps restant de l'arrêt programmé.
 Mode Son	En appuyant plusieurs fois, vous pouvez forcer le son STEREO en MONO ou accéder au choix du langage I ou II (émissions bilingues).

Autres Fonctions

• Télétexte

Appel télétexte.

Appuyez sur  pour appeler/quitter le télétexte.

 

Un sommaire apparaît avec la liste des rubriques auxquelles vous pouvez accéder.

Si la chaîne ne diffuse pas le télétexte, l'écran reste noir.

Sélection d'une page.

Composez le numéro de page désiré avec les touches numérotées de 0 à 9 (toujours 3 chiffres).


Le numéro s'affiche en haut à gauche, le compteur tourne puis la page est affichée.

Vous pouvez également sélectionner la page inférieure ou supérieure avec les touches  P .


Si le compteur continue de tourner ou si l'indication P?.. apparaît, la page n'est pas disponible.

Arrêt de l'alternance des sous-pages.

 
Certaines pages contiennent des sous-pages qui se succèdent automatiquement.

Appuyez sur  pour arrêter / reprendre l'alternance.

Agrandissement de page.

Appuyez plusieurs fois sur  pour agrandir la page.

Informations cachées.

Appuyez sur  pour faire apparaître ou disparaître les informations cachées (jeux, etc).

• Touches du téléviseur


Le téléviseur possède 3 ou 4 touches (selon les modèles, elles peuvent se situer sous un volet).

Versions 3 touches: une touche Menu et les touches - et + pour sélectionner les programmes ou régler les menus.

Versions 4 touches: 2 touches VOLUME - et + et 2 touches PROGRAM - et +.

 
 
• Raccordements d'autres appareils

Utilisez la prise péritélévision située à l'arrière.


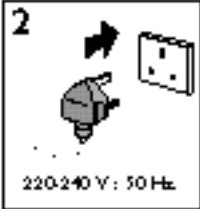 

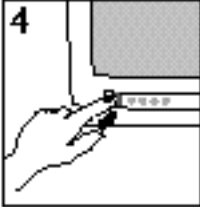 
Pour reproduire l'image des appareils connectés, appuyez sur la touche  (AV apparaît à l'écran).

• Casque

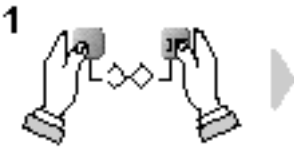 









La prise casque se trouve en face avant du téléviseur (selon les modèles, elle peut se situer sous un volet).

Lorsque le casque est connecté le son du téléviseur est automatiquement coupé. Utilisez les touches   de la télécommande pour régler le volume.

Installation


 


 












 
 

 





Action :	Result. Comments.
	<p>1 Small-screen TV sets are supplied with an indoor antenna, which under certain reception conditions may not be acceptable. You may be able to improve reception by rotating the antenna or if reception remains poor the use of an external antenna.</p>
	<p>2 Plug your television into the mains supply (220-240 V / 50 Hz).</p>
	<p>3 Insert the two LR03 type batteries (supplied) making sure that they are the right way round.</p>
	<p>4 To switch on the TV set, press the on/off button. If the TV set remains in standby mode : press the \ominus P \oplus keys on the remote control.</p>

Channel search

Press key(s) :	Result :
<p>1</p> 	<p>The INSTALLATION menu appears on the screen.</p> 
<p>2</p>  <p>System selection.</p>	<p><i>Option only available on certain versions.</i> Press key until required system appears : FRANCE (SECAM L L') or EUROPE (PAL BG, SECAM BG).</p> 
<p>3</p>  <p>Channel search.</p>	<p>SEARCHING appears, the search bar shows progress. When a programme is found, the number flashes.</p> 
<p>4</p>  <p>Choose the Programme Number.</p>	<p>Enter the programme number you want.</p> <p><i>Note: Programme number 0 cannot be used.</i></p> 
<p>5</p> 	<p>STORED appears, the programme is stored. Repeat steps 3 to 5 to store each programme.</p> 

➔ To leave the **INSTALLATION** menu press **MENU** twice.

 
Using the remote control

Press :	Result :
 Standby	The TV set switches off, the light is red. To turn on the TV set, press the  P  keys.
 Programme selection	The number is displayed on the screen, the previous (-) or next (+) programme is selected.
 Numbered keys	The number is displayed, the programme is selected. For a 2-digit number, the second digit must be added before the line disappears.
 Volume	Volume is changed.
 Mute	Switches sound on or off.
 Menu	By pressing the menu button several times the following items can be adjusted:  (volume),  (balance),  (brightness),  (contrast),  (colour) and  (sleeptimer).
 Menu adjustment	This modifies the menu item selected. Using the sleeptimer function () you can adjust the time after which the TV set will automatically switch into standby mode (up to 90 minutes).
 Storing of adjustments	Firstly, display a menu :  ,  ,  ,  , or  , then press the two  keys. STORED appears. All menu adjustments are stored, except for the sleeptimer.
 Personal preferences	Recall your stored adjustments.
 Screen info	To turn on or off the display of the programme number and remaining time on the timer.
 Sound mode	Alternates between STEREO and MONO or language I and II for bilingual programmes.

 
 
 
 
Other functions

• Teletext

Teletext request.

Press  to turn teletext on or off. A main index appears with the list of items to which you have access.
If the channel does not have teletext, the screen remains black.


Selecting a page.

Enter the number of the page you wish to consult using the numbered keys  to  (always three digits). The page number appears in the top left-hand corner, the counter searches then the page is displayed. You may also select the previous and next page using the  P  keys.

If the counter continues searching or if P?.. appears, the page is not available.

Stopping the sequence of sub-pages.


Certain pages contain sub-pages which follow on automatically.

Press  to stop / resume the sequence.

Enlarging a page.

Press  several times to enlarge the page.

Hidden information.

Press  to reveal hidden information (in games, etc.). Pressing the button a second time will again hide the information.

 
• TV set keys

The TV set has 3 or 4 keys (on some models these are located behind a flap).

 
Versions with 3 keys: A Menu key and - and + keys to select programs and adjust menus.

Versions with 4 keys: two VOLUME - and + keys and two PROGRAM - and + keys.

• Connecting other appliances

Use the euroconnector socket located at the back of the set. To reproduce the picture from connected appliances, press the  key (AV appears on the screen).

• Headphones

The headphone socket is on the front of the TV set (depending on version, it may be concealed by a cover). When the headphones are connected, the sound from the TV set is muted. Use the  key on the remote control to adjust the volume.

Conseils

Installation : Pour prévenir toute situation dangereuse et tout défaut de fonctionnement, ne rien poser sur le téléviseur et laisser un espace libre d'au moins 5 cm. autour de l'appareil.

Mauvaise ou absence d'image : La proximité de montagnes ou de hauts immeubles peut être la cause d'images dédoublées, d'échos ou d'ombres. Dans ce cas, modifiez l'orientation de l'antenne. Avez vous correctement connecté l'antenne ?

Veille : Pour économiser de l'énergie et préserver un qualité optimale de l'image (grâce à la démagnétisation du tube), il est conseillé d'éteindre le téléviseur avec la touche marche-arrêt située à l'avant du téléviseur.

Directives pour le recyclage : Les piles livrées avec l'appareil ne contiennent ni mercure ni cadmium nickel, dans un soucis de préserver l'environnement. Veillez à ne pas jeter vos piles usagées mais à utiliser les moyens de recyclage mis à votre disposition (consultez votre revendeur).

Votre téléviseur utilise des matériaux réutilisables ou qui peuvent être recyclés. Pour minimiser les déchets dans l'environnement, des entreprises spécialisées récupèrent les appareils usagés pour les démonter et concentrer les matières réutilisables.

En cas de panne, n'essayez jamais de réparer vous même le téléviseur, mais consultez le service après vente.

Tips

Installation : To avoid any dangerous situations and operating faults, do not place anything on the TV set and leave a space of at least 5 cm around the appliance.

Poor picture quality: The proximity of mountains or high buildings may be responsible for ghost pictures, echoes or shadows. If this is the case, change the orientation of the antenna.

Have you remembered to connect the aerial socket ?

Standby : To save energy and preserve optimum picture quality (by demagnetising the tube), you are advised to switch off your TV set using the on/off button at the front of the TV set.

Recycling directive : To minimise harm to the environment, the batteries supplied with the appliance do not contain mercury or nickel cadmium. When disposing of batteries, if possible use recycling means available to you (contact your dealer).

Your TV set makes use of reusable and recyclable materials. To minimise harm to the environment, specialist companies will recover used TV sets for dismantling and collection of reusable materials.

In the event of a breakdown, under no circumstances attempt to repair the TV set yourself, contact your dealer.

Information for users in the UK (Not applicable outside the UK)

Positioning the TV

For the best results, choose a position where light does not fall directly on the screen, and at some distance away from radiators or other sources of heat. Leave a space of at least 5 cm all around the TV for ventilation, making sure that curtains, cupboards etc. cannot obstruct the air flow through the ventilation apertures. The TV is intended for use in a domestic environment only and should never be operated or stored in excessively hot or humid atmospheres.

General Points

Please take note of the section 'General Information' at the end of the English section in this booklet.

Interference

The Department of Trade and Industry operates a Radio Interference Investigation Service to help TV licence holders improve reception of BBC and IBA programmes where they are being spoilt by interference. If your dealer cannot help, ask at a main Post Office for the booklet "How to Improve Television and Radio Reception".

Mains connection

Before connecting the TV to the mains, check that the mains supply voltage corresponds to the voltage printed on the type plate on the rear panel of the TV. If the mains voltage is different, consult your dealer.

Important

This apparatus is fitted with an approved moulded 13 Amp plug.

To change a fuse in this type of plug proceed as follows:

1. Remove fuse cover and fuse.
2. Fit new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.
3. Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and appropriate plug fitted in its place. If the mains plug contains a fuse, this should have a value of 5A.

If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

Note : The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

How to connect a plug

The wires in the mains lead are coloured in accordance with the following code : BLUE - "NEUTRAL" ("N")
BROWN - "LIVE" ("L")

1. The BLUE wire must be connected to the terminal which is marked with the letter "N" or coloured BLACK.
2. The BROWN wire must be connected to the terminal which is marked with the letter "L" or coloured RED.
3. Do not connect either wires to the earth terminal in the plug which is marked by the letter "E" or by the safety earth symbol I or coloured green or green-and-yellow. Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

Connecting the aerial

The aerial should be connected to the socket marked g at the back of the set. An inferior aerial is likely to result in a poor, perhaps unstable picture with ghost images and lack of contrast. Make-shift loft or set-top aerials are often inadequate. Your dealer will know from experience the most suitable type for your locality.

Should you wish to use the set in conjunction with other equipment, which connects to the aerial socket such as TV games, or a video camera it is recommended that these be connected via a combiner unit to avoid repeated connection and disconnection of the aerial plug.

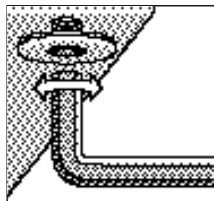 
Loop aerial (if provided)

The loop aerial packed with the set will give satisfactory reception under good signal conditions. Fit the aerial bracket and lead by pushing the peg into the square hole in the backcover until it latches in place. Attach the ends of the loop to the mounting studs on the bracket and fit and tighten the knurled nuts. Then insert the plug on the lead into the aerial socket.

Fitting the stand (if provided)

Use only the stand provided with the set, making sure that the fixings are properly tightened. A diagram showing how to assemble the stand is packed in the castor bag. Never use a make-shift stand, or legs fixed with woodscrews.

In some models only, in order to fit the stand it may be necessary to remove the feet with the key provided (see illustration).



To fit the stand remove the feet on the TV using the key supplied (see illustration).



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>