

iL01-2K3



Instruction for Use

Let's make things better.



PHILIPS

TABLE OF CONTENTS

Introduction

Safety Information/Useful Tips	3
Before Calling Service	4

Basic Installation/Functions

Hooking Up Your TV (Basic Connection).....	5
Use/Care of Remote Control	5
Back Connectors	6
Remote Controls	7

TV Installation

Activating TV Setup Menu	8
TV Setup Main Menu	9
TV Setup Sub-menus	10
TV Installation Menu	11
TV Setup Sub-menus (cont'd).....	12

Other Features

Alarm	18
Low Battery Check	18
Teletext	18

Note : Specification in this manual is subjected to change without notification.



Recycling Directive – To minimise harm to the environment, the batteries supplied with the TV set do not contain mercury or nickel cadmium. If possible, when disposing of batteries, use recycling means available to you.

Your TV set uses materials which are reusable or which can be recycled. To minimise the amount of waste in the environment, specialist companies recover used sets for dismantling and collection of reusable materials (contact your dealer).

SAFETY INFORMATION AND USEFUL TIPS

SAFETY INFORMATION

- + Disconnect mains plug when :
 - the red light below the TV screen is flashing continuously.
 - a bright white line is displayed across the screen.
 - cleaning the TV screen. Never use abrasive cleaning agents. Use a slightly damp chamois leather or soft cloth.
 - there is a lightning storm.
 - the set is left unattended for a prolonged period of time.
- + No naked flame sources, such as lighted candles, should be placed on top of the TV or in the vicinity.
- + Do not place your TV set under direct sunlight or heat.
- + Leave at least 5 cm around each side of TV set for ventilation to avoid over-heating.
- + Avoid placing your set where it is likely to be exposed to rain or water (e.g. near the window).
- + No objects filled with liquids should be placed on top the TV so as to avoid dripping or splashing of liquids on the set.

USEFUL TIPS

- + Do not leave your set on standby mode for a prolonged period of time. Switch off set to allow it to be demagnetised. A demagnetised set supports good picture quality.
- + Do not shift or move the set around when it is switched on. Unevenness in colour in some parts of the screen may occur.
- + Never attempt to repair a defective TV yourself. Always consult a skilled service personnel.

BEFORE CALLING SERVICE


Below is a list of frequently occurred symptoms. Before you call for service, make these simple checks. Some of these symptoms can easily be rectified if you know what to do.

Symptom

What you should do


Colour patch (unevenness)	<ul style="list-style-type: none">• Switch off the TV by the mains power button. Wait for 20 minutes before switching on again.• Check the TV is not placed too near speakers or magnetic objects.
No power	<ul style="list-style-type: none">• Check the TV's AC power cord is plugged into the mains socket. If there is still no power, disconnect plug. Wait for 60 seconds and re-insert plug. Switch on the TV again.
No picture	<ul style="list-style-type: none">• Check the antenna connection at the rear of the TV.• Possible TV station problem. Try another channel.
Good picture but no sound	<ul style="list-style-type: none">• Try increasing the volume.• Check that the sound is not muted. If it is muted, press the Mute button on the remote control to restore sound.
Good sound but poor colour or no picture	<ul style="list-style-type: none">• Try increasing the contrast and brightness setting.
Snowish picture and noise	<ul style="list-style-type: none">• Check antenna connection at the rear of the TV.
Horizontal dotted lines	<ul style="list-style-type: none">• Possible electrical interference e.g. hairdryer, vacuum cleaner, etc. Switch off appliances.
Double images or "Ghost" images	<ul style="list-style-type: none">• Possible poor positioning of antenna. Using a highly directional antenna may improve reception.
TV not responding to remote control handset	<ul style="list-style-type: none">• Check life span of batteries of remote control handset.• Aim remote control handset directly at remote control sensor lens on the TV.

HOOKING UP YOUR TV (BASIC CONNECTION)

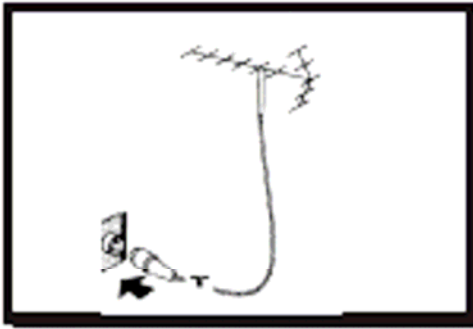


ANTENNA CONNECTION

- Connect the aerial plug to the antenna socket **T** on the backcover.

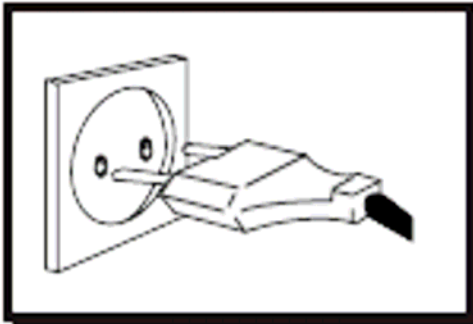

MAINS CONNECTION


- For correct mains voltage, refer to type sticker at the rear of the TV set.
- Consult your dealer if mains supply is different.

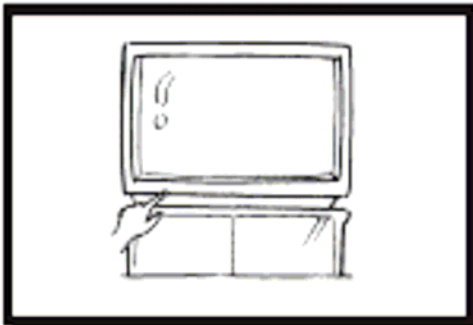

SWITCHING ON THE SET

- Press the main power button to switch on/off the TV.
If the set is on standby (indicator is red), press the Power button on the remote control to switch on the set.

USE/CARE OF REMOTE CONTROL

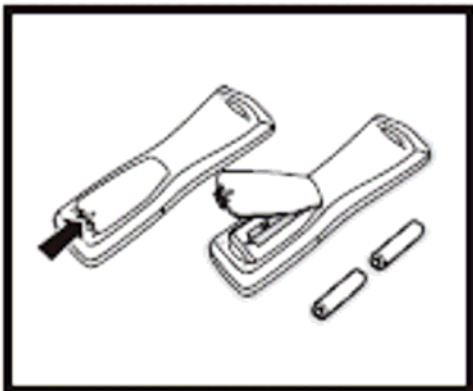

To load the supplied batteries into the remote control :


- Remove the battery compartment lid at the back of the remote control.
- Insert the correct type of batteries into the compartment.
- Ensure the (+) and (-) ends of the batteries are placed in the right position.
- Reattach the battery compartment lid.

Note

Always remove the batteries from the remote control handset if handset is not used for a long period. This can help prevent damage to handset from possible battery leakage.

BACK CONNECTORS

- * **WARNING - RISK OF ELECTRIC SHOCK. DO NOT REMOVE THIS COVER.**
 - **DO NOT CONNECT TELEPHONE CABLE TO SMART PLUG (RJ12) CONNECTOR.**

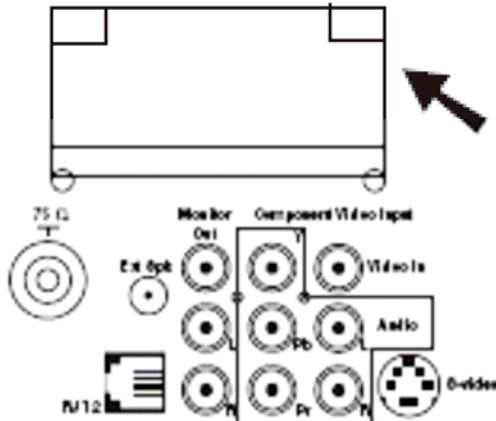


Smart Card slot

For "Y" models

Note:


1. Do not connect Video In and S-Video concurrently.
2. When a Smart Card with Audio/Video and S-Video inputs are installed into the Smart Card slot, the inputs on the Smart Card cannot be connected concurrently with the Video In or S-Video and Audio L/R In of the TV set or vice versa. In this case, you can only use either the inputs on the Smart Card or TV set.

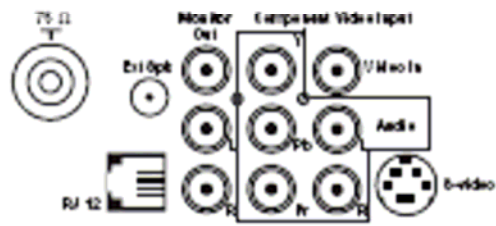

For "R" models

Note:


Do not connect Video In and S-Video concurrently.

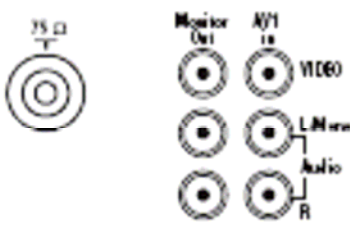


For "Z" models

REMOTE CONTROLS


Three types of remote controls could be used for setup purpose:

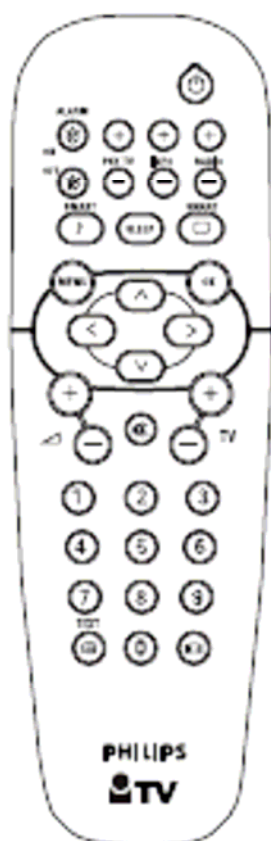

RC2886
(RC19335018/01)

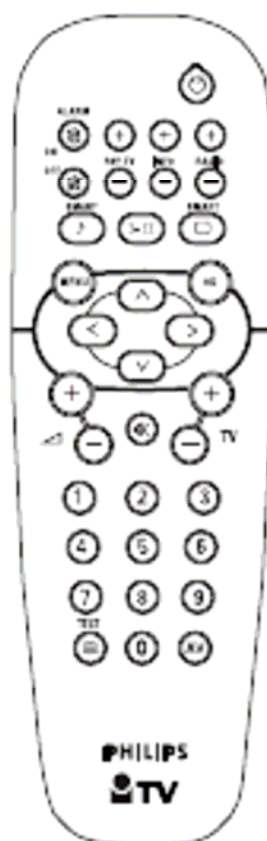

RC2887
(RC19335025/01)

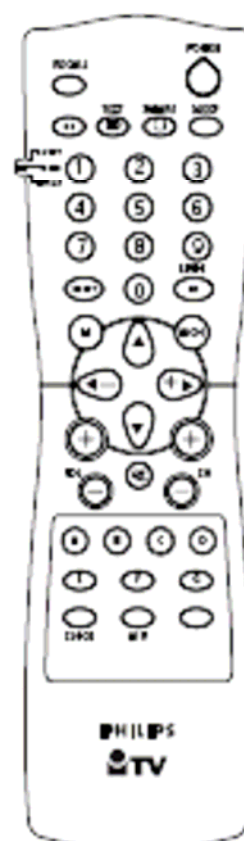

RC2573GR
(optional)


For the purpose of explanation, RC2886/RC2887 is used. Remote control RC2573GR is optional and can be purchased separately. Refer to its accompanying guide "RC2573GR Remote Control Instructions" for details of its operation.

ACTIVATING TV SETUP MENU

WITH REMOTE CONTROL RC2886/RC2887

(only when SECURITY in the TV SETUP menu is set to LOW).

To activate TV Setup menu.

- 1 Select a channel number.
- 2 Key in 3 1 9 7 5 3.
- 3 Press .

The above sequence should be done within 20 seconds and TV SETUP menu will appear.

WITH REMOTE CONTROL RC2573GR

(only in TV Commercial mode)

Part A: To check TV's mode.

- 1 Set the remote control selectable switch to SETUP.
- 2 Press RECALL key and the TV Status menu will appear.
- 3 Check line 10 of the menu to see if the TV is in the Commercial or Consumer mode.
- 4 If the TV is in the Commercial mode, then proceed to Part B to activate the TV Setup menu. Otherwise, go to Part C to change the TV mode to Commercial.

Part B: To activate TV Setup menu.

- 1 Press the RECALL key to clear the menu.
- 2 Press the M key to activate the TV Setup menu.

Part C: To select Commercial mode, if the TV is in Consumer mode (or to select Consumer mode, if the TV is in Commercial mode).

- 1 Press the RECALL key to clear the menu.
- 2 Press 0 2 4 9 9 5.
- 3 Press M key and the TV Mode menu appears.
- 4 Press + or - key to select Commercial mode.
- 5 Highlight **STORE** and press the ► key to store the change. TV will then go to standby mode.
- 6 Press any numeric key to switch on the TV again and follow the procedure in Part B, step 2 to activate the TV Setup menu.

 

 

 
 
 
 
 

 

 

 
 

TV SETUP MAIN MENU

Below shows the structure of the menu items

TV SETUP		
★ LANGUAGE	ENGLISH	
NO. OF CHANNELS	▶	
★ INSTALLATION	▶	
★ CLOCK SETUP	▶	
★ BRIGHTNESS		30
★ COLOUR		33
★ CONTRAST		49
★ SHARPNESS		58
★ TINT		49 (only for NTSC signal)
★ ROTATION		0 (only for 29HT model)
★ SCAVEN	YES	(only for 29HT model)
HS OFFSET		0 (only for SmartCard-Y models)
VSH OFFSET		0 (only for SmartCard-Y models)
VA OFFSET		0 (only for SmartCard-Y models)
★ FORCED MONO	NO	(only for stereo models)
★ BALANCE		0
★ TREBLE		58
★ BASS		49
★ AVL	NO	
AUDIO OUT VOLUME		31
★ SPATIAL	YES	(only for stereo models)
★ ULTRA BASS	YES	(only for stereo models)
★ AUDIO I/II	STEREO	(only for stereo models)
★ SLEEPTIMER	OFF	
VOLUME FIXED	NO	
VOLUME BAR	YES	
MIN VOLUME		0
MAX VOLUME		33
SWITCH ON VOLUME		33
★ BUZZER VOLUME		15 (only for specific models)
SWITCH ON CHANNEL	TV 1	
POWER ON	STANDARD	
★ LNA	OFF	(only for specific models)
STEP TUNING	NO	
DIGIT TIMEOUT	3.0 SEC	
BLANKING TIME	960MS	(only for specific models)
CHANNEL DISPLAY	ALL	
KEYBOARD LOCK	NO	
FREE PROTECTED	NO	
ESP	10HR	
INTERFACE	NO	(only for SmartConnect/SmartCard-R/Y models)
AUDIO/VIDEO MUTE	OFF	
★ AUDIO/VIDEO OUT MUTE	NO	
MONITOR OUT RF	NO	
WELCOME MESSAGE	▶	
CHANNEL GUIDE	NO	
REMINDER	NO	
TELETEXT ACCESS	YES	(only for models with Teletext feature)
SECURITY	LOW	

Note: *denotes item which appears in both the Commercial and Consumer mode depending on specific models.

Only 8 items will be displayed at one time.

- 1) To see more items, press the  () key on the remote control. To alter any item on the menu, highlight it with the  () key and execute with the  () or  () key.
- 2) To highlight any item in a menu, press either the  () or  () key to move the coloured bar until it rest on the item.
- 3) To select options or to execute an item in the menu, press the  () or  () key.
- 4) To exit, press the  key.

TV SETUP SUB-MENUS

LANGUAGE

When you first enter the TV SETUP menu, LANGUAGE is highlighted. You may select other languages available with the \odot (\leftarrow) or \odot (\rightarrow) key.

NO. OF CHANNELS

Show the number of channels under each category type. Enter the TV SETUP menu and highlight NO. OF CHANNELS.

TV SETUP	
LANGUAGE	ENGLISH
NO. OF CHANNELS	▶
INSTALLATION	▶
CLOCK SETUP	▶
BRIGHTNESS	30
COLOUR	33
CONTRAST	49
SHARPNESS	58

Note: Use the \odot (\leftarrow) or \odot (\rightarrow) key to select its sub menu.

NO. OF CHANNELS	
TV	35
PAYTV	5
INFO	5
RADIO	5
STORE	▶

Highlight the item you wish to change. Edit with the digit keys. To store changes in the memory, highlight STORE and confirm with the \odot (\rightarrow) key. The total number of channels cannot exceed 125. After storing is completed, TV will go into standby mode.

TV INSTALLATION (for countries other than Philippines)





Highlight INSTALLATION in the TV SETUP menu and enter its sub menu with the \odot (\leftarrow) or \odot (\rightarrow) key. Installation menu via local control is not available in Consumer/Commercial modes.

INSTALLATION	
+ INPUT	FRONT END
COLOUR STANDARD	AUTO*
SOUND STANDARD	AUTO*
AUTO STORE	▶
MANUAL SEARCH CHANNEL	175 MHZ ▶ TV 1
STORE	▶
FINE TUNE	
PROTECTION	NO
LABEL	▶
TELETEXT LANGUAGE	W (only for models with Teletext feature)
VIDEO BLANK	NO
AUDIO MUTE	NO

Note:
+ only for commercial mode.
* TV system dependant

TV INSTALLATION MENU



INPUT

This menu item selects the input source to be assigned per channel. The selectable sources are FRONT END, AV1, AV2, AV3, CVI, AV2YC or AV3YC (dependent on model). To select press the  () or  () key.


 
COLOUR STANDARD/SOUND STANDARD (not available for single system TV)

Selects the colour and sound system of transmission.





AUTO STORE

When this is activated, the TV will start at the lowest valid frequency to search for a signal. Highlight AUTO STORE and press the  () key to start. The word SEARCHING is displayed indicating that the process is in progress. When a valid station is found, the next available channel number is assigned to it. The word will disappear once the process is completed.





MANUAL SEARCH

This item could be used if you wish to search for signal station by station or if you wish to key in the frequency directly with the digit keys on the remote control. Highlight MANUAL SEARCH and press the  () key to start searching. Once a station is found, the TV will stop searching for you to proceed to the next item.





CHANNEL

Press the  () or  () key to select the type of channel:- TV, PAYTV, INFO, CVI, AV3YC or RADIO. Then key in the channel number with the digit keys. (Not applicable if AV3YC or CVI are selected)

STORE



Press the  () or  () key to store any changes you have done.
Note: Each change in a channel needs to be stored individually.

FINE TUNE










Press the  () or  () key to fine tune the displayed frequency.

PROTECTION

Used to lock each channel individually. To lock, select YES. In normal operation, if user tries to access this channel, the picture and sound are muted. Teletext cannot be activated and the "LOCKED" message will be displayed for 3 seconds.

Note: To unlock protection for all channels at one time, go to FREE PROTECTED in TV SETUP menu and press the  () key to execute.

LABEL

Input a maximum of 8 characters for the channel's label. Press the  () key to start the first character input or to go to the next character and the  () key to go to previous character. To input characters, press the  () or  () key to select from the list:- A to Z, 0 to 9, ., -, +, /, :, =, ?, ;, <, >, @ or space. To edit, go into the character's space and re-input. To exit, press the  key.

TELETEXT LANGUAGE (only for models with Teletext feature)

This option allows toggling between different Teletext languages. W for Western English or A for Arabic. The default selection is W. For models without Teletext feature, selection of W or A has no effect.

VIDEO BLANK

To blank out picture of the channel, select YES.

AUDIO MUTE



To switch off the sound of the channel, select YES.

TV SETUP SUB-MENUS (CON'TD)

CLOCK SETUP

To set time for display on the top right hand corner. Highlight **CLOCK SETUP**.

TV SETUP	
LANGUAGE	ENGLISH
NO. OF CHANNELS	▶
INSTALLATION	▶
CLOCK SETUP	▶
BRIGHTNESS	30
COLOUR	33
CONTRAST	49
SHARPNESS	58

Press the  () key to enter clock setup menu.

Use digit keys to key in desired time, starting from hour then minutes. For single digit, key in 0 follow by the digit.

To display time, highlight **DISPLAY** and select YES.






TV SETUP	
DISPLAY	YES
TIME SETTING	12:10
TELETEXT TIME DOWNLOAD	NO <i>(only for models with Teletext feature)</i>

CLOCK SETUP VIA TELETEXT TIME DOWNLOAD (will only work for models with Teletext feature only)

 Alternatively, if there are channels broadcasting teletext, you could download the teletext time to your clock. In this way the displayed time will follow that of Teletext transmission.

Highlight **TELETEXT TIME DOWNLOAD** and select YES.


TV SETUP	
DISPLAY	YES
TIME SETTING	00:00
TELETEXT TIME DOWNLOAD	YES
DOWNLOAD CHANNEL	TV 5
TIME OFFSET	0

Highlight **DOWNLOAD CHANNEL** and select a teletext transmission channel number with the digit keys. If there is a difference in the time zone from the teletext time, highlight **TIME OFFSET** and using the  () or  () key enter the difference in time. To display the time, highlight **DISPLAY** and select YES. To exit, press the  key.

Note: The downloaded time will only take effect the next time you switch on the TV.

TV SETUP SUB-MENUS...CON'TD

BRIGHTNESS/COLOUR/CONTRAST/SHARPNESS/TINT

Enter the TV SETUP menu and highlight accordingly. Preset the TV by adjusting the brightness, colour, contrast, sharpness or tint (applicable for NTSC signal only) of the picture. All these 5 items are also accessible to users via the  key for personal settings.





ROTATION (only for 29HT model)

Adjust the tilt effect of the picture on screen.

SCAVEM (only for 29HT model)

Scan Velocity Modulation feature produces sharper and crispier picture. However, this feature may cause text display to be too sharp, hence more difficult to read. Thus, the option to select YES to activate the feature or NO to deactivate the feature is provided.





HS/VSH/VA OFFSET (only for SmartCard-Y models)

HS (Horizontal Shift), VSH (Vertical Shift) and VA (Vertical Amplitude) Offset items are for the purpose of display orientation adjustment that may be needed for video signals generated by smart cards. However, depending on the specific smart card design for RGB insertion, the adjustment range for some parameters may be limited or in some cases, some parameters may have no effect at all. Press the  () or  () key to adjust.





FORCED MONO (available in stereo sets only)

Switch this on to force stereo mode to mono.

BALANCE (for stereo signal)

Balances the sound output from the TV's speakers. Use the  () or  () key to adjust.




 
TREBLE/BASS (for stereo signal)

Adjust the treble or bass of sound output. Use the  () or  () key to adjust.

AVL (AUTO VOLUME LEVeller)

This feature if switched on, will automatically adjust any sudden changes in the TV's volume to a preset level.

AUDIO OUT VOLUME

Set the volume for the external audio output connector. Use the  () or  () key to adjust.





SPATIAL (for Stereo models only)

This option toggles the TV's sound spatializer feature ON or OFF. If turned ON, the TV sound will have a surround-sound theatre effect.





ULTRA BASS (for Stereo models only)

This option toggles the Ultra BASS feature ON or OFF. If turned ON, the TV sound will have stronger bass effects.

AUDIO I/II (only for Stereo models)

This menu item is to enable the switching from Stereo or Nicam Stereo to Mono, or to choose between Dual I or Dual II in case of bilingual transmission. When the sound mode is switched to Mono, the indication is displayed in red. Press the  () or  () key to select the required audio mode.

SLEEP TIMER

This menu item is to select an automatic period for the TV to switch to Standby when the TV does not receive any commands from the user. This is a useful feature for energy saving if hotel guests have left the room with the TV still in On mode. The available periods are 15 mins, 30 mins, 45 mins, 60 mins, 90 mins, 120 mins, 180 mins, 240 mins and OFF. Press the  () or  () key to select the required period.

VOLUME FIXED




 
Sets a fixed volume level everytime the TV is switched on. The selections are:

- NO – volume level set in SWITCH ON VOLUME in the TV Setup menu.
- YES – volume remain fixed at the SWITCH ON VOLUME level and cannot be adjusted.




 
VOLUME BAR

To display volume bar when adjusting volume, select YES. To hide bar, select NO.




 
MIN VOLUME

Sets the limit for the minimum volume of the TV. Use the  () or  () key to adjust.

MAX VOLUME

Sets the limit for the maximum volume of the TV. Use the  () or  () key to adjust.




 
SWITCH ON VOLUME

Sets the TV's switch on volume. Use the  () or  () key to adjust.

BUZZER VOLUME (only for specific models)

Sets the volume of the TV's internal buzzer. The buzzer is used as part of the TV's wake up alarm function (if activated)

SWITCH ON CHANNEL

Sets the TV's switch on channel. Use the  () or  () key to select the type of channel. Key in the channel number with the digit keys. If STANDARD is selected, upon switching on, the TV will select the last viewed channel.

POWER ON

Select **STANDARD**, **STANDBY**, **FORCED** or **ON** mode. The different modes are as explained below:

STANDARD: TV will be automatically switched to the last status (**STANDBY** or **ON**) whenever the mains power is turned **ON** or resumed after a power interruption.

STANDBY: TV will be automatically switched to **STANDBY** (even if the last status was **ON**) whenever the mains power is turned **ON** or resumed after a power interruption.

FORCED: TV will be automatically switched to **ON** whenever the mains power is turned **ON** or resumed after a power interruption. Note that the remote control **STANDBY** key will no longer function when TV is set to this mode.

ON: Similar function as "FORCED" but the remote control **STANDBY** key function is enabled when TV is set to this mode.

LNA (LOW NOISE AMPLIFIER) (only for specific models)

Select **OFF**, **ON** or **AUTO**. If **ON** is selected, the LNA feature in the TV set will always be applied to incoming signals. If set to **AUTO**, the TV set will first analyze incoming signals and apply the LNA feature if necessary. By default, the LNA setting is **OFF**.

STEP TUNING

For calling up or changing channels. When this feature is switched **YES**, the TV will respond immediately to the change of channel upon keying in the first digit. If this feature is switched **NO**, one has to either wait for a few seconds after keying in the first digit or complete keying in 2 digits before TV changes channel.

Note: When an external set-top box is connected to the RJ12 port for IR link, choose either **YES/NO** for optimum channel switching performance.

DIGIT TIMEOUT

Selects the digit entry timeout period via digit key entry from 1.0 SEC to 9.9 SEC. This allows the response time between the 1st digit entry and the 2nd digit entry to be adjusted when 2-digit entry is needed.

BLANKING TIME (only for specific models)

Sets the blanking interval between the switching of channels. The recommended default setting is 900 to 960ms.

CHANNEL DISPLAY

Selects the ways of displaying the information for a channel. The options are: **ALL** (display the number and label of a channel), **NONE** (do not display any information), **NUMBER** (display only the number of a channel) and **LABEL** (display only the label of a channel).

KEYBOARD LOCK

To lock TV control keys, select **YES**. To unlock, select **NO**.

FREE PROTECTED

Remove **PROTECTION** features for all channels set under **TV SETUP** menu. All channels are not protected when select **YES**.

ESP (ENERGY SAVING PROGRAMMABLE)

This feature selects a time when the TV will automatically turn off. The TV must remain on continuously during the period of time you select. If the power is switched off, the ESP timer will be re-initialised. Highlight **ESP**, then key in the required time with the digit keys. Select 0 if you do not wish to use this feature. If sleeptimer is selected, it would have priority over ESP time.

INTERFACE (for SmartConnect/SmartCard-R/Y models only)

Enables the communication of the TV with the DCM when YES is selected. This is specifically applicable to the Interactive System TV, providing the interactivity feature between a DCM card of the Service Provider and the dedicated System TV.

AUDIO/VIDEO MUTE

To blank the screen when no signal is received. Select OFF (no blanking), BLACK (blank the screen black) or BLUE (blank the screen blue).


AUDIO/VIDEO OUT MUTE


Disables all output from the TV to the external Audio and Video output connectors if YES is selected. The default setting is NO.

MONITOR OUT RF

Select YES to switch all output from the TV to the external Audio/Video output connectors to the same as the input RF signal. Select NO to switch all output from the TV to the external Audio/Video output connectors to the same source as what is displayed on the TV. The default setting is NO.







WELCOME MESSAGE

This item is used to create, edit or delete a welcoming message. You can input up to 2 lines, with a maximum of 20 characters (inclusive of space) per line. Highlight WELCOME MESSAGE in the TV SETUP menu and enter its sub menu by pressing .


Note: During creating, editing or deleting a message, you may wish to move from LINE 1 to LINE 2 or vice versa. Press the key  to exit from the present line. Highlight the new line and proceed.

MESSAGE	
DISPLAY	OFF
LINE 1	▶
LINE 2	▶
CLEAR	▶

 
 
 
 
 
 
TO CREATE MESSAGE WITH LINE 1:

Highlight LINE 1 with the  key. Press the  key to begin. The cursor will appear in the first character position. To input characters, press the  or  key to select from the list: A to Z, 0 to 9, ., -, *, /, :, =, ?, ;, <, >, @ or space. Press the  key to go to the next character position or the  key to go to the previous character position.


TO EXIT LINE 1:

Press the  key.

 
 
 
 
TO CREATE MESSAGE WITH LINE 2:

Highlight LINE 2 with the  key. Press the  key to begin. The cursor will appear in the first character position. To input characters, press the  or  key to select from the list: A to Z, 0 to 9, ., -, *, /, :, =, ?, ;, <, >, @ or space. Press the  key to go to the next character position or the  key to go to the previous character position.



TO EXIT LINE 2:

Press the  key.

TO EDIT MESSAGE:

Highlight the message line that you wish to delete. Press the  key to begin. Move the cursor to the character position that you wish to edit. Press the  or  key to select a new character from the list. Exit with the  key after you have finished.

 
TO DELETE ENTIRE MESSAGE:

Highlight CLEAR and press the  or  key.

 
 
TO SWITCH ON/OFF MESSAGE:

Highlight DISPLAY and select YES to display message the next time the TV is switched on or NO to not display message.

TO EXIT FROM MESSAGE MENU:


 

 
 
 
 
Press the  key.

CHINESE WELCOME MESSAGE

This option is only available when the Language option is set to Chinese. This option allows a fixed welcome message in Chinese to be displayed with or without the English welcome message. Highlight 留言(中文) and use the  or  key to turn On or Off the Chinese welcome message.

留言	
显示	关
第1行	▶
第2行	▶
消除	▶
留言(中文)	关

CHANNEL GUIDE

Select YES to see list of channel that has been programmed. For users to see the list, press the  key to enter user's menu. Highlight CHANNEL GUIDE and press the  or  key to enter it. Press the  or  key to select a channel. To enter the channel, press the  or  key.

REMINDER

Select YES if a permanent display of the channel number and label on the top of the screen is desired.

TELETEXT ACCESS (for models with Teletext feature only)

Select **YES** to enable the Teletext feature or **NO** to disable the Teletext feature. For models without Teletext feature, selection of **YES** or **NO** has no effect.


SECURITY

Select **HIGH** and only remote control RC2573GR can be used to enter TV Setup menu.

OTHER FEATURES


ALARM

The Alarm feature will require the time to be set correctly according to the **CLOCK SETUP** procedure in page 12.


To set the alarm, press the  key to enter the **ALARM** menu as shown below. If the time has not been previously set, the "NOT AVAILABLE" message will appear on the TV screen.

	12:30
ALARM	
ALARM TIME	--:--
ALARM STATUS	OFF

Use the remote control numeric keys to enter the desired **ALARM TIME**. Once the time has been entered, the **ALARM STATUS** will change to **ON**. Any key on the remote control can be used to cut off the alarm buzzer.

To deactivate the alarm, press the  key on the remote control.

LOW BATTERY CHECK


Press the  key for approximately 5 seconds. The following appears:






```
SERVICE
1  REMOTE BATTERY  OK
```

If battery is low, the word **LOW** will appear in place of **OK**.

It is an indication that you need to replace the batteries in the remote control.

TELETEXT (for models with Teletext feature only)

To enter Teletext mode, press the  key.

Function	RC2886/RC2887 keys
Page up	 TV
Page down	 TV
Select a page	Digit
Direct access to a subject	
To select Teletext subpage	 (<) or  (>)

This page is intentionally left blank



3139 125 36861

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>