

Register your product and get support at
www.philips.com/welcome


HP4997/15



EN User manual

PHILIPS

Download from Www.Somanuals.com. All Manuals Search And Download.

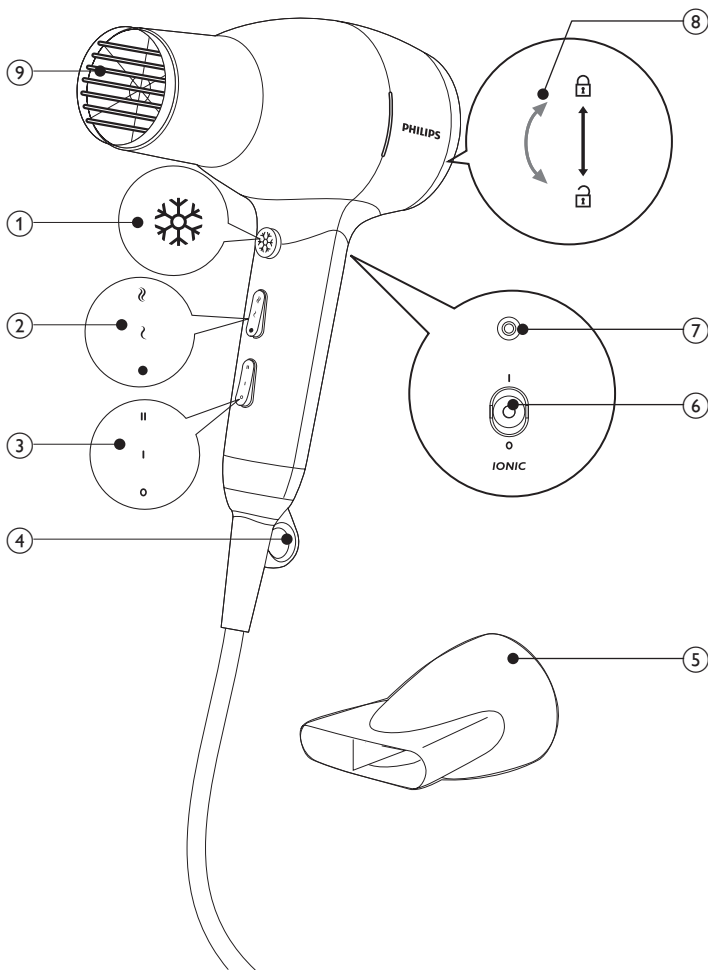

1 Important

Read this user manual carefully before you use the appliance and save it for future reference.

Warning

- Do not use this appliance near water. Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
- When you use the appliance in a bathroom, unplug it after use. The proximity of water presents a risk, even when the appliance is switched off.
- During use, care should be taken to ensure that the supply cord does not come into contact with water or drape in the sink.
- Do not insert any objects into the appliance to avoid electric shock.
- Check if the voltage indicated on the appliance corresponds to the local mains voltage before you connect the appliance.
- Check the condition of the mains cord regularly. Do not use the appliance if the plug, the mains cord or the appliance itself is damaged.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- **Polarized plug:** This appliance has a polarized plug (one blade is wider than the other). As a safety feature, this plug fits in a polarized outlet only one way. If the plug does not fit fully in the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to defeat this safety feature.



Caution

- For additional protection, we advise you to install a residual current device (RCD) in the electrical circuit that supplies the bathroom. This RCD must have a rated residual operating current not higher than 30mA. Ask your installer for advice.
- Never block the air grilles.
- The appliance has a safety function. If the appliance overheats, it switches off automatically. The appliance remains live. Unplug the appliance and let it cool down for a few minutes. Before you switch on the appliance again, check the grilles to make sure they are not blocked by fluff, hair, etc.
- Always switch off the appliance before you put it down, even if it is only for a moment.
- Always unplug the appliance after use.
- Do not wind the mains cord round the appliance.
- You may notice a characteristic odour when you use this hairdryer. This odour is caused by the ions that are generated and is not harmful to the human body.
- Do not use the appliance on artificial hair.
- This appliance is only intended for drying scalp hair.
- Do not use the appliance for any other purpose than described in this manual.
- Keep the hairdryer clean and free of dust, dirt and styling products such as mousse, spray and gel.
- Never use any accessories or parts from other manufacturers or that Philips does not specifically recommend. If you use such accessories or parts, your guarantee becomes invalid.

Electromagnetic fields (EMF)

This Philips appliance complies with all standards regarding electromagnetic fields (EMF). If handled properly and according to the instructions in this user manual, the appliance is safe to use based on scientific evidence available today.

2 Introduction

Congratulations on your purchase, and welcome to Philips! To fully benefit from the support that Philips offers, register your product at www.philips.com/welcome.

The Salon Proceramic AC Lite gives you the professional results in the comfort of your home. AC motor with long-life cycle provides powerful airflow for fast, professional drying results and the compact design and ultra light weight make the drying easy and comfortable. This hairdryer has also ionic breeze to condition, reduce frizz and static and make the hair more shiny, moisture rich and smooth.

3 Dry your hair

1 Connect the mains plug to a mains socket.

- You can use the appliance with or without the concentrator. Attach the concentrator (Fig. 5) onto the hairdryer (Fig. 9).

↳ The concentrator enables you to direct the airflow at the brush or comb with which you style your hair.

- To disconnect the concentrator, pull it off the hairdryer.

2 Adjust the airflow switch (Fig. 3) to **I** for drying short hair or styling hair, or **II** for ultra-quick drying.

- Adjust the temperature switch (Fig. 2) to ☺ for hot airflow, ☺ for warm airflow, or ● for cool airflow.

• Press the cool shot button (Fig. 1) and direct the cool airflow at your hair to fix your style and to add shine.

- To turn the ion function on or off, adjust the ion slide switch to **I** or **O** (Fig. 6).

↳ If the function is activated, the ion indicator light (Fig. 7) turns on.

↳ The function provides additional shine and reduces frizz and static electricity. It is particularly suitable for dry and almost-dry hair.

↳ When the function turns on, a special odor may be smelt. It is normal and caused by the ions which are generated.

3 Dry your hair by making brushing movements with the hairdryer at a small distance from your hair.

4 Cleaning

Never rinse the appliance with water.

1 Unplug the appliance.

2 Turn the air inlet grille anticlockwise (Fig. 8) and pull off the inlet grille to remove hairs and dust.

- To reattach the air inlet grille, connect it to the hairdryer and turn it clockwise until you hear a "click".

3 Clean the appliance with a dry cloth.

4 Clean the concentrator with a moist cloth or rinse it under the tap.

Download from [Www.Somanuals.com](http://www.Somanuals.com). All Manuals Search And Download.

5 Storage

Do not wind the mains cord round the appliance.

- 1 Unplug the appliance.
- 2 Put the appliance in a safe place and let it cool down.
- 3 You can also hang it with the hanging loop (Fig. 4).

6 Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If problems arise with your appliance and you cannot solve them with the information below, please contact the nearest Philips service centre or the Philips Consumer Care Centre in your country.

The appliance does not work at all.

- Make sure that the mains socket is live.
- If the appliance is overheated, unplug the appliance and cool it down. Before you switch on the appliance again, make sure that the grilles are not blocked by fluff or hair.
- Make sure that the mains voltage indicated on the type plate of the appliance corresponds to the local mains voltage.
- If the mains cord is damaged, you must have it replaced by Philips, a service centre authorised by Philips or similarly qualified persons in order to avoid a hazard.

7 Guarantee and service

If you need information or if you have a problem, please visit the Philips website at www.philips.com or contact the Philips Customer Care Centre in your country (you find its phone number in the worldwide guarantee leaflet).

FULL TWO-YEAR WARRANTY

Philips Electronics North America Corporation warrants each new Philips product, model HP4666/15/20 (except cord), against defects in materials or workmanship for a period of two years from the date of purchase, and agrees to repair or replace any defective product without charge. **IMPORTANT:** This warranty does not cover damage resulting from accident, misuse or abuse, lack of reasonable care, the affixing of any attachment not provided with the product or loss of parts or subjecting the product to any but the specified voltage.

PHILIPS ELECTRONICS NORTH AMERICA CORPORATION WILL NOT PAY FOR WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE AND WILL NOT REIMBURSE THE CONSUMER FOR DAMAGE RESULTING FROM WARRANTY SERVICE PERFORMED BY A NON-AUTHORIZED REPAIR SERVICE. NO RESPONSIBILITY IS ASSUMED FOR ANY SPECIAL, INCIDENTAL OR NON-CONSEQUENTIAL DAMAGES.

In order to obtain warranty service, simply go to www.philips.com or call 1-800-243-7884 for assistance. It is suggested that for your protection you return shipments of product by insured mail, insurance prepaid. Damage occurring during shipment is not covered by this warranty.

NOTE: No other warranty, written or oral, is authorized by Philips Electronics North America Corporation. This warranty gives you specific legal rights, and you may also have other rights that vary from state to state. Some states do not allow the exclusion or limitation of incidental or consequential damages, so the above exclusion and limitations may not apply to you.

Download from Www.Somanuals.com. All Manuals Search And Download.

Manufactured for:
Philips Domestic Appliances and Personal Care Company
A Division of Philips Electronics North America Corporation
1600 Summer Street - 5th floor Stamford, CT 06905-999



This symbol on the product's nameplate means it is listed by Underwriter's Laboratories, Inc.

PHILIPS and Philips Shield are Registered Trademarks of Koninklijke Philips Electronics NV.
©2009 Philips Electronics North America Corporation.

All rights reserved.

PHILIPS

GARANTIE DE REMBOURSEMENT DE 45 JOURS

Si votre appareil Philips ne vous donne pas entière satisfaction, renvoyez-le et nous vous rembourserons le prix d'achat en entier. **Les frais d'envoi assuré pour le renvoi de l'appareil doivent être prépayés (assurance prépayée) et l'original du coupon de caisse comprenant le prix et la date de l'achat doit être inclus dans l'envoi. Nous ne pouvons être tenus responsables pour les colis perdus.** L'appareil doit être envoyé au plus tard 45 jours après l'achat, le cachet de la poste faisant foi. Philips se réserve le droit de vérifier le prix d'achat de l'appareil et de limiter le remboursement au prix de détail suggéré.

Pour obtenir un formulaire d'autorisation de retour en vertu de la garantie de remboursement, composez le 1 800 243-7884.



© 2009 Koninklijke Philips Electronics N.V.

All rights reserved.

3140 035 20061



100% recycled paper
100% papier recyclé

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>