



3 Enjoy

Start disc playback


- 1 Press **▲** to open the disc tray.

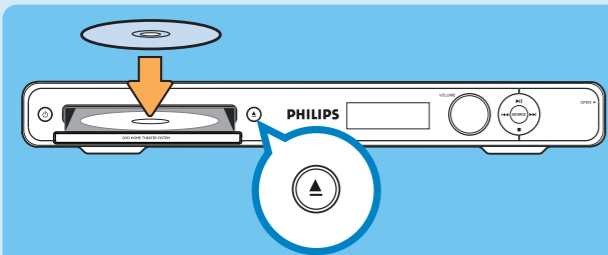

- 2 Place a disc with the disc label facing up.
- 3 Press **▲** to close the disc tray.
- 4 Playback starts automatically.
- 5 If the disc menu appears on the TV, use **◀▶▲▼** keys or the numeric keypad to select an option in the menu and press **OK** to start playback.
- 6 Press **■** to stop playback.

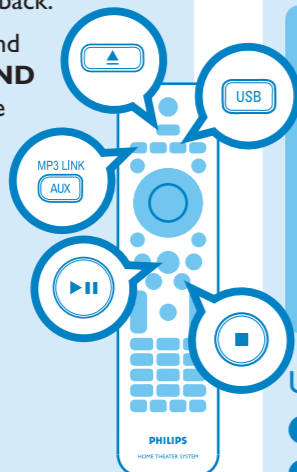


Playback other supported devices

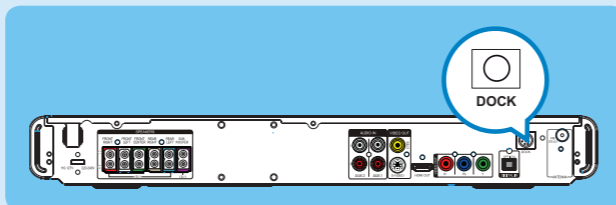

Apple iPod

- 1 Connect the docking station to the **DOCK** socket.
- 2 Dock your iPod in the docking station and adjust the support to fit it. Then turn on the iPod.
- 3 Press **DOCK** to switch to 'DOCK' mode.
- 4 Press **PLAY** on your iPod.

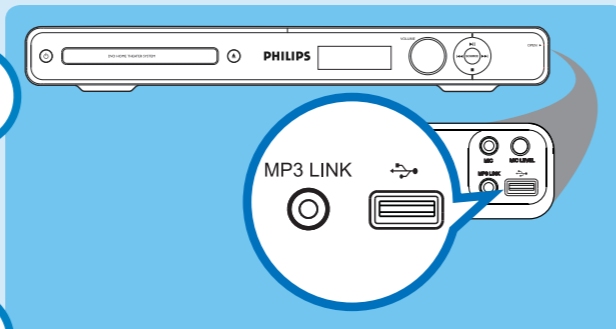

USB device

- 1 Connect your USB device to the **USB** socket.
- 2 Press **USB** to switch to 'USB' mode.
- 3 Press **▶||** to start playback.
- 4 To stop playback, press **DISC** to switch to 'DISC' mode. You can unplug your USB device now.

Other portable audio player

- 1 Use a 3.5mm stereo audio cable (not supplied) to connect the headphone output socket on your portable audio player to MP3 LINK socket.
- 2 Press **PLAY** on your portable audio player.
- 3 Press **AUX/DI (MP3 LINK)** repeatedly until 'MP3 LINK' is displayed to listen to the playback.

Register your product and get support at
www.philips.com/welcome


HTS3566D



- 1 Connect
- 2 Set up
- 3 Enjoy

Quick Start Guide

What's in the box?

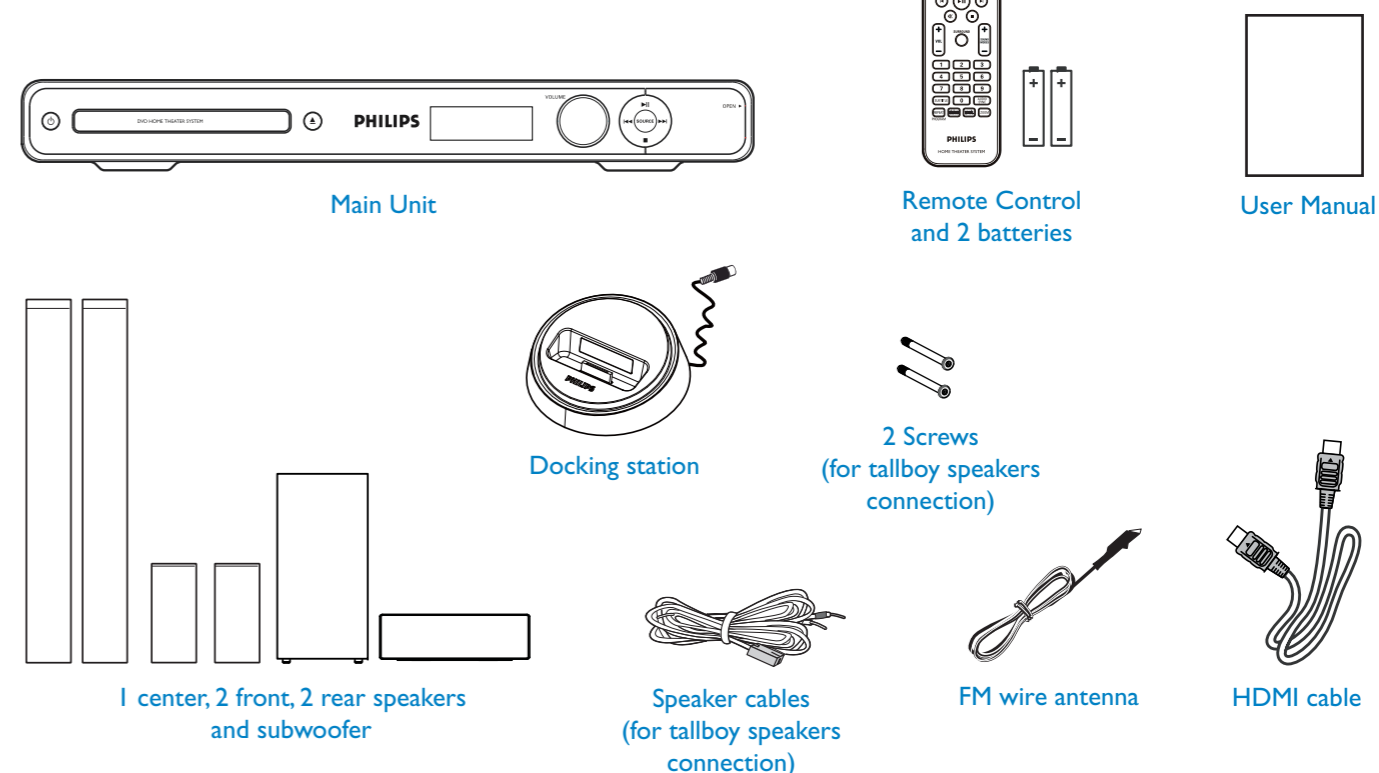

Need help?

User Manual

See the user manual that came with your Philips DVD Home Theatre System.




2008 © Koninklijke Philips N.V.
 All rights reserved
www.philips.com
 sgpjy_0842/78_1



1 Connect


A Placement

Proper speakers system placement is important to ensure optimum sound performance.

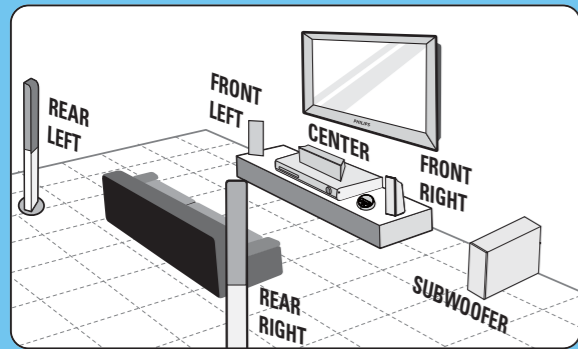

- 1 Place the centre speaker above or close to the TV.
- 2 Place the subwoofer on the floor, at least one metre away from the TV.
- 3 Place the front speakers at equal distances from the TV.
- 4 Place the rear speakers at normal listening ear level.


B Connect to TV

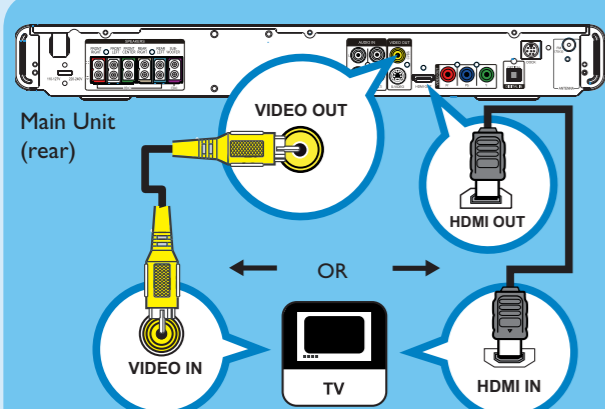

- If your TV supports HDMI, connect the HDMI cable (supplied) from the HDMI OUT socket to the HDMI IN socket on your TV. Or;
- Connect the composite video cable (not supplied) from the VIDEO OUT socket to the VIDEO IN socket on your TV.

Note HDMI connection does not support audio output from your TV to this unit, a separate audio connection is required.


C Assemble the tallboy speakers

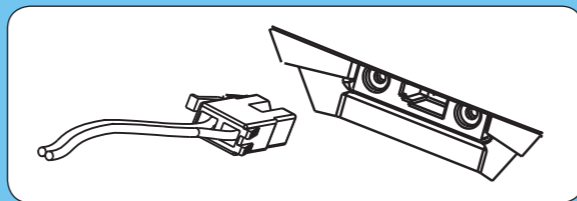

- 1 Connect the speaker cables to the matching colour sockets on the speakers (or speaker stands).
- 2 Place the stands upright and lock the speakers down into position.
- 3 Secure the position with screws (supplied).


D Connect the speakers and subwoofer

Connect the various coloured cables from the speakers and subwoofer to the same coloured sockets at the rear of the main unit.

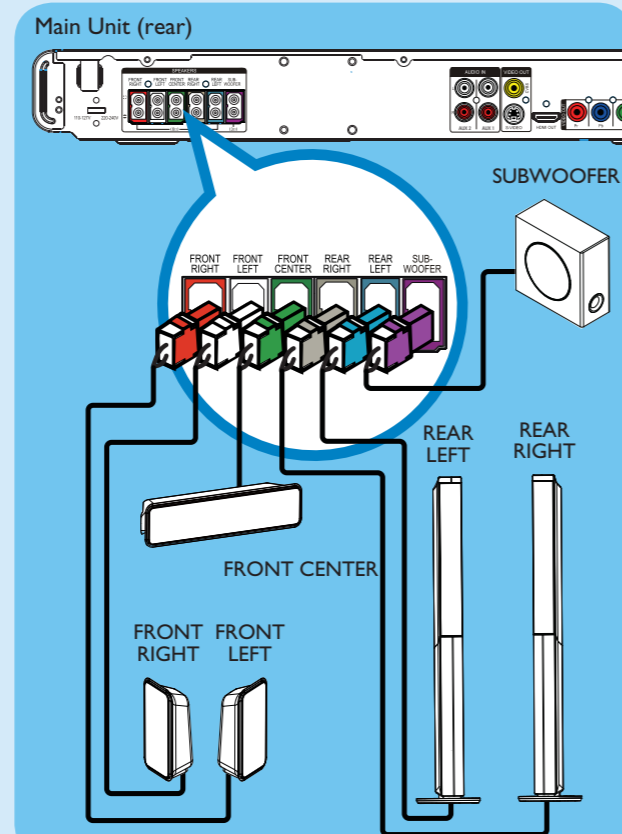

E Connect the radio antenna and power cable


Keep the antenna away from the electronic devices to prevent unwanted interference.

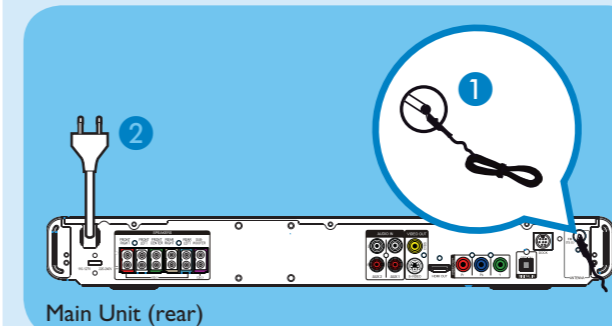

- 1 Connect the FM antenna (supplied) to the inner pin of the FM 75 socket. (For some models, it has been connected in the factory). Extend the wire for optimum reception.
- 2 Connect the power cable from the main unit to the AC power outlet.

F Connect audio output from TV (optional)

To hear the TV audio through this unit, use a red and white audio cables (not supplied) to connect the AUDIO IN-AUX1 or AUDIO IN-AUX2 sockets on the main unit to the AUDIO OUT sockets on your TV.

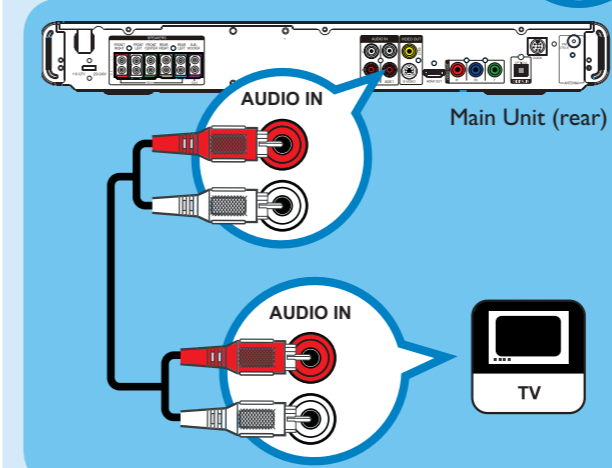


Note When watching the TV programmes, you can press **AUX/DI (MP3 LINK)** repeatedly on the remote control until 'AUX 1' or 'AUX 2' is displayed to get the sound output from the speakers.

2 Set up

A Finding the viewing channel


- 1 Press **Power** on the main unit to turn it on.
- 2 Turn on the TV. Use the TV's remote control to select the correct viewing channel.

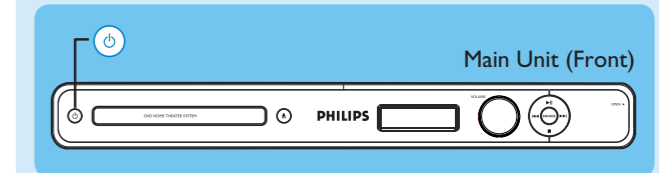

Note To search for the correct viewing channel, press the Channel Down button on the TV's remote control repeatedly (or AV, SELECT, **Channel Down** button) until you see the Video In channel.

B Select the display language on the screen

- 1 Press **OPTIONS**. The { **General Setup** } appears.
- 2 Press **Right Arrow**.

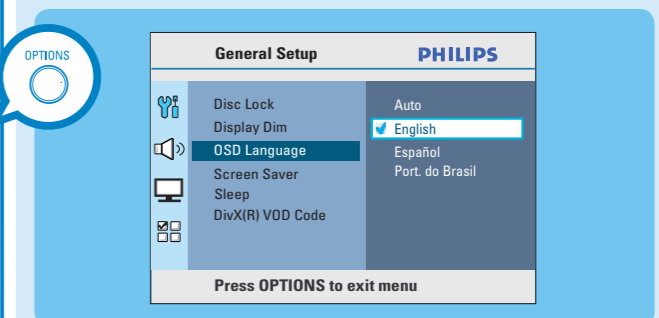

- 3 Use **Up/Down Arrow** keys to select { **OSD Language** } in the menu, then press **Right Arrow**.
- 4 Use **Up/Down Arrow** keys to select a language and press **OK** to confirm.
- 5 Press **OPTIONS** to exit.

Note The language set here is only for the menus that are shown on the TV while operating this Home Theatre system, not for the DVD disc menu.

There are various setup options (Audio Setup, Video Setup, Preferences) available on this Home Theatre System. Refer to the user manual for more information.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>