

Quick Start Guide



 
Step A *Connect*

Step B *Setup*

Step C *Enjoy*

What's in the Box?

You should find these items upon opening the box.

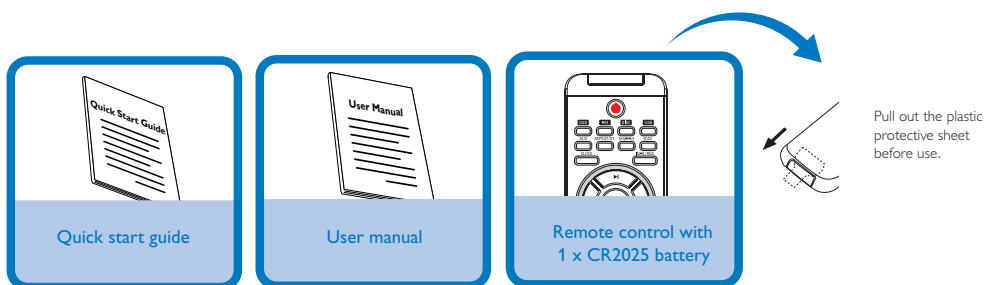

PHILIPS

Step A *Connect*

1

 
Connect the speaker cables.

2

Connect the power plug to AC power socket.

Tip

See the User Manual for how to connect other equipment to this system.

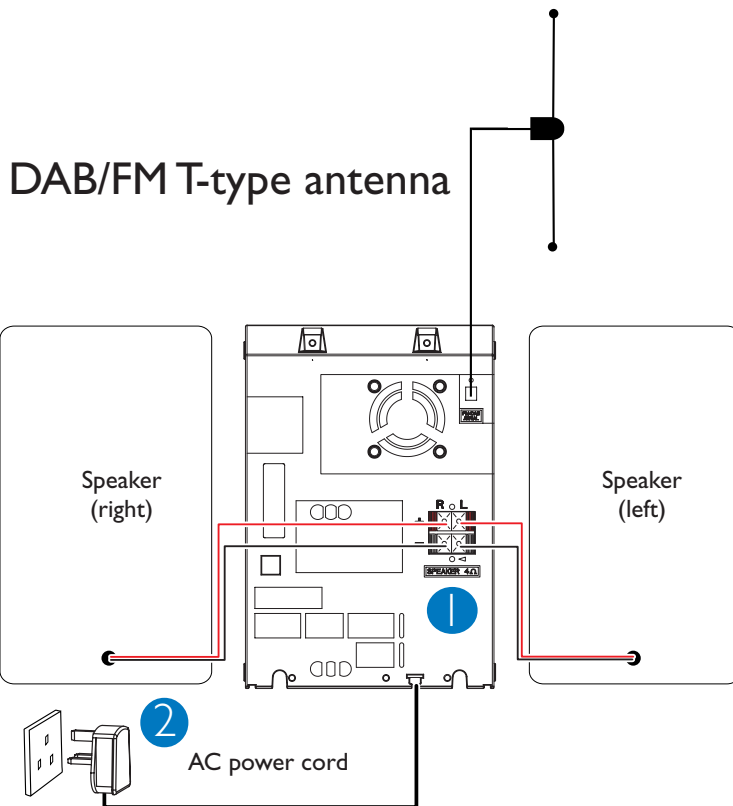


Step B Setup

Setting the clock

IMPORTANT!



 
– To set clock in the Eco Power mode, press and hold **ECO POWER/STANDBY-ON**  on the set for 3 seconds or more to switch to normal standby mode first before proceeding with the procedures below.

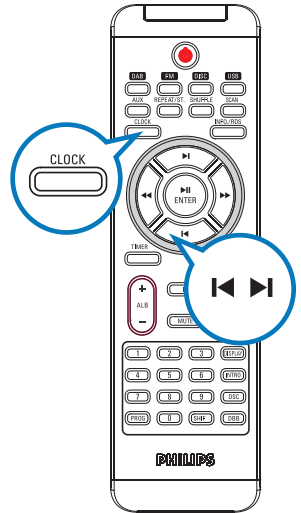- 1 In the standby mode, press and hold **CLOCK** on the remote control.
→ The clock digits for the hours continue to flash.
- 2 Adjust **VOLUME +/-** (or press **VOL +/-** on the remote control) to set the hours.
- 3 Press **CLOCK** to confirm.
→ The minute digits start flashing.
- 4 Adjust **VOLUME +/-** (or press **VOL +/-** on the remote control) to set the minutes.
- 5 Press **CLOCK** to confirm the time.






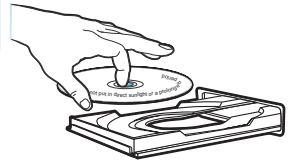 
Step C Enjoy

Notes for remote control:

- First select the source you wish to control by pressing one of the source select keys on the remote control (for example FM, DISC).
- Then select the desired function (for example , , ).


Playing a disc

- 1 Press **OPEN/CLOSE**  to open the disc tray and load in a disc, then press the same button again to close the disc tray.
→ Make sure the label side of the disc is facing up.
- 2 Press  to start playback.
- 3 To stop playback, press .



Playing a USB mass storage device

 
With the Hi-Fi system, you can use USB flash memory (USB 2.0 or USB1.1), USB flash players (USB 2.0 or USB1.1), memory cards (requires an additional card reader to work with this Hi-Fi system).

- 1 Insert the USB device's USB plug into the socket  on the set.
- 2 Press **SOURCE** once or more (or **USB** on the remote control) to select **USB**.
- 3 Play the USB's audio files as you do with the albums/tracks on a CD.

iPod playback via the USB port cannot be guaranteed.

Programming and tuning to FM radio stations

- 1 Press **SOURCE** repeatedly (or **FM** on the remote control) to select the tuner source.
- 2 Press **PROG** on the remote control for more than two seconds to program all available stations in order of waveband.
- 3 Press **ALBUM/PRESET** ▼ or ▲ (or ◀ / ▶) on the remote control until the desired preset station is displayed.

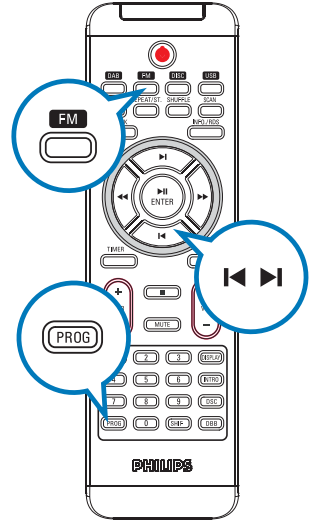

Tuning to DAB stations

- 1 Press **SOURCE** on the system to select DAB (or press **DAB** on the remote control) to start automatic search for available DAB stations.
- 2 Press **SCAN** to search for all band III frequencies.
- 3 At the completion of full scan, press **ALBUM/PRESET** ▼ or ▲ (or ◀ / ▶) on the remote control to select your desired DAB channels backward/forward.
- 4 Press **ENTER** / ▶ || to confirm and tune to your selected channel.

Tip

– See the User Manuals for detailed instructions on DAB operations.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>