

Specifications are subject to change without notice. Electronics N.V. or their respective owners.

Register your product and get support at www.philips.com/welcome

Docking Entertainment System DC290

### What's in the box



## Quick start guide

- 1 Connect
- 2 Setup
- 3 Enjoy













Remote control

 
MP3 link cable

User Manual **Ouick Start Guide** 

## 1 Connect



1 Connect the AC power cord to the wall outlet.





# 2 Setup

### A Set time and date

- 2 Press **OK/**▶**II** to select the 12/24 hour format
- 3 Press SET TIME/PROG to confirm.
  → The hour digits begin to blink.
- 4 Press I ✓ I to set the hour.
- 5 Press SET TIME/PROG to confirm.

  → The minute digits begin to blink.
- **6** Repeat steps 4-5 to set the minute, year, month, and day.

### B Set the alarm timer

You can set two alarms which go off at different time.

- 1 Ensure that you have set the clock correctly.
- 2 Press and hold ALM 1 or ALM 2 for 2 seconds.

# 2 Setup



# 3 Enjoy

- → [AL 1] or [AL 2] begin to blink.
- 3 Press SOURCE on the top panel to select an alarm sound source: iPod/ iPhone, FM tuner, or buzzer.
- 4 Press ALM 1 or ALM 2.
  - → The hour digits begin to blink.
- 5 Press I ✓ ▶ I repeatedly to set the hour.
- 6 Press ALM 1 or ALM 2 to confirm.

  → The minute digits begin to blink.
- 7 Repeat steps 5-6 to set the minute.
- 8 Repeat steps 5-6 to select whether to ring alarm the whole week, on weekdays, or at weekend.
- **9** Repeat steps 5-6 to set the alarm volume.

#### C) Tip

- If you set iPhone/iPod playlist as the sound source, you must create a playlist in iTunes called "PHILIPS" and import it to your iPhone/iPod
- If no playlist is created in the iPod/iPhone or there is no song in the playlist, the unit will wake to songs in the iPod/iPhone.

#### Activate and deactivate the alarm timer

- 1 Press **ALM 1** or **ALM 2** repeatedly to activate or deactivate the timer.
- If the timer is activated, [♣ AL 1] or [♣ AL2] is displayed.
- → If the timer is deactivated, [♣ AL1] or [♣ AL2] disappears.

#### Repeat alarm

- 1 When the alarm rings, press BRIGHTNESS/REP ALM.
- → The alarm repeats ringing minutes later.

#### Tip

→ You can press I I to adjust the interval to repeat alarm.

#### Stop alarm ring


- 1 When the alarm rings, press the corresponding **ALM 1** or **ALM 2**.
- → The alarm stops but the alarm settings remain.

### A Play from iPod/iPhone

1 Lift up the iPhone/iPod dock on the top panel.



2 Place the iPhone/iPod into the dock.

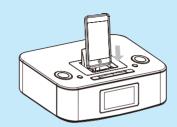

- 3 Press iPhone/iPod to select iPod/ iPhone source.
  - → The connected iPod/iPhone plays automatically.
  - To pause/resume play, press OK/►II.
  - To skip to a track, press I√▶I.
  - To search during play, press and hold ◀◀/▶▶, then release to resume normal play.
  - To go back to the previous iPod/iPhone menu, press
     MENU. To scroll through the menu. press | ◀/▶|.
  - To confirm a selection, press OK/►II.
    - If no key is pressed for more than 10 seconds, OK/►II acts back as the play/pause key.

### B Program and listen to radio stations

- In the tuner mode, press and hold **SET TIME/PROG** for more than 2 seconds to activate automatic program mode.
- → [AUTO] (auto) is displayed.
- All available stations are programmed in the order of waveband reception strength.
- → The first programmed radio station is broadcast automatically.
- 2 Press I → to select a preset number.

#### Tip

 Detailed functions and features are described in the user manual.

Download from Www.Somanuals.com, All Manuals Search And Download.

Free Manuals Download Website

http://myh66.com

http://usermanuals.us

http://www.somanuals.com

http://www.4manuals.cc

http://www.manual-lib.com

http://www.404manual.com

http://www.luxmanual.com

http://aubethermostatmanual.com

Golf course search by state

http://golfingnear.com

Email search by domain

http://emailbydomain.com

Auto manuals search

http://auto.somanuals.com

TV manuals search

http://tv.somanuals.com