



Register your product and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

Docking Entertainment System  
DCM580



## What's in the box



Main unit



MP3 link cable



Power cord



Remote control  
with battery



FM antenna



Quick start guide



 
User manual

## Quick start guide

- 1 Connect
- 2 Setup
- 3 Enjoy

### 1 Connect

#### A Remove the protective tab

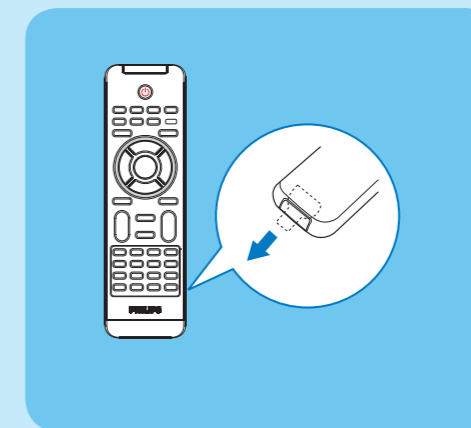


- 1 Remove the protective tab to activate the remote control battery.

© Royal Philips Electronics N.V. 2009  
All rights reserved.

Specifications are subject to change without notice.  
Trademarks are the property of Koninklijke Philips  
Electronics N.V. or their respective owners.

 Printed in China  
DCM580\_12\_QSG\_V1.0




100% recycled paper  
100% papier recycle

**PHILIPS**

 
EN

# 1 Connect

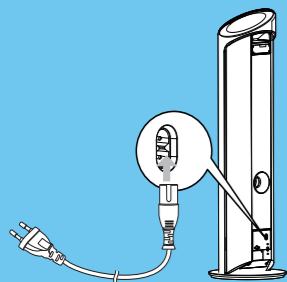

## B Connect power

 1 Connect the power cord to the **AC~MAINS** jack on the main unit.

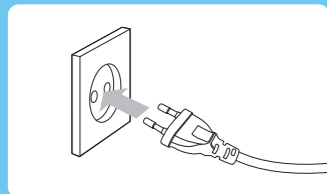

2 Connect the power plug to the wall outlet.


### \* Tip

 - See the User Manual for how to connect other equipment to this system.

# 2 Setup

## A Set the clock

- 1 In standby mode, press **PROG/CLOCK** on the remote control to activate the clock setting mode.  
↳ The 12 hour or 24 hour format is displayed.
- 2 Press **◀/▶** to select 12 hour or 24 hour format.
- 3 Press **PROG/CLOCK**.  
↳ The hour digits are displayed and begin to blink.
- 4 Press **◀/▶** to set the hour.

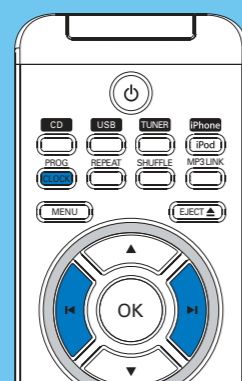

# 2 Setup

5 Press **PROG/CLOCK**.

↳ The minute digits are displayed and begin to blink.

 
6 Press **◀/▶** to set the minute.

7 Press **PROG/CLOCK** to confirm.

# 3 Enjoy

## A Play disc


- 1 Press **CD** to select the disc source.
- 2 Insert a disc into the disc compartment with the printed side facing right.  
↳ Play starts automatically.
  - To pause/resume play, press **▶||**.
  - To stop play, press **■**.

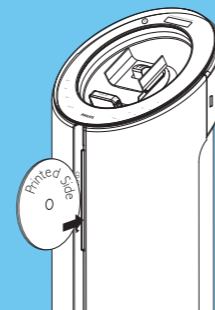

## B Play from USB

### Note

 
- Ensure that the USB device contains playable audio content.
- 1 Connect the USB device into the **USB** socket.
  - 2 Press **USB** to select the USB source.  
↳ The total number of tracks is displayed.  
↳ Play starts automatically.
  - 3 Press **▲/▼** to select a folder.
  - 4 Press **◀/▶** to select a file.

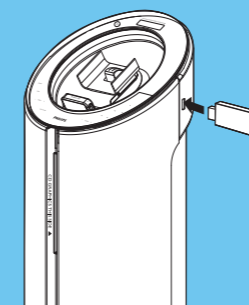

# 3 Enjoy

## C Program and tune to radio stations

 - 1 Press **TUNER** to select the tuner source.
- 2 Press and hold **PROG/CLOCK** for 2 seconds to activate automatic program mode.  
↳ [AUTO] (auto) is displayed.  
↳ All available stations are programmed in the order of waveband reception strength.
- 3 Press **▲/▼** to select a preset number.

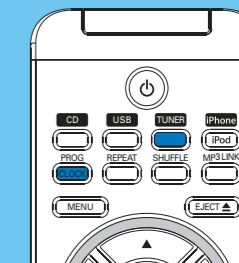


## D Play iPhone/iPod

- 1 Load the iPhone/iPod in the dock.
- 2 Press **iPhone/iPod** to select iPhone/iPod source.  
↳ The connected iPhone/iPod plays automatically.
  - To pause/resume play, press **▶||**.
  - To skip to a track, press **◀/▶**.
  - To search during play: press and hold **◀◀/▶▶**, then release to resume normal play.
  - To navigate the menu: press **MENU**, and press **▲/▼/◀/▶** to select, then press **OK** to confirm.

### \* Tip

 - Detailed features and additional functions are described in the user manual.

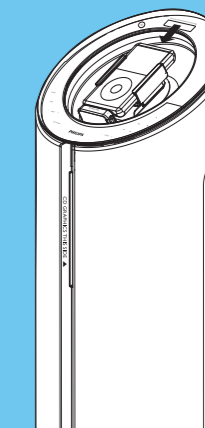

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>