

Instructions for use







Download from Www.Somanualssoon And Download.

TABLE OF CONTENTS

Table of Contents2
Safety/Precautions
Introduction
Getting Started
Battery Installation
Connecting the Clon99-BK Box4
Erasing Memory5
Reading Memory6
Programming (Writing) Memory to a TV7
Running a System Test8
Exiting the Menu System9
Programming with the On-Set Keyboard10
On-Screen Displays for Non-Global TV using the
Transmitter
On-Screen Displays for Non-Global TV using the On-Set
Keyboard12
Index

Optimum Performance of the Clon99-BK SmartLoader box is obtained by plugging it into an ITV set that is already turned on.

KNOW THESE SAFETY SYMBOLS



▲ This "bolt of lightning" indicates uninsulated material within your unit which may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

▲ The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

ATTENTION: Pour éviter les chocs électrques, introduire la lame la plus large de la fiche dams la borne correspondante de la prise et pousser jussssqu'au fond.

For Customer Use:

Enter below the Serial No. which is located on the product. Retain this information for future reference.

Model No

Serial No.

INTRODUCTION

Assembling and operating your Philips Clon99-BK SmartLoader is designed to be an easy process. The purpose is to allow you to more easily program a number of televisions using just a few simple steps.

The Clon99-BK SmartLoader replaces the RL-5180CK model. The Clon99-BK SmartLoader is compatible with all Philips SmartPort and ClonPort TV sets including Global 1999 models from the PL9XXX, PC9XXX, and PA9XXX series.

Please be sure that you have the following material before beginning any procedures with the Clon99-BK SmartLoader box.

- A television capable of sending and receiving Clon99-BK SmartLoader information on TV settings.
- One 9-volt battery (for the Clon99-BK SmartLoader).
- Remote Control RG4172BK (T374AH).
- Three AA batteries for the remote control.
- Cable (6-conductor included with the Clon99-BK SmartLoader)

Please thoroughly read all the procedures listed within this booklet before starting any process.

Clon99TM, SmartCardTM, SmartLoaderTM, SmartPortTM ClonPortTM are registered trademarks of the Philips Consumer Electronics Company. © 1999 Philips Consumer Electronics Company.

GETTING STARTED



CONNECTING THE CLON99-BK SMARTLOADER



ERASING MEMORY OR DATA

ERASE MEMORY

To read and save the television memory, it is first necessary to erase any currently saved data in the Clon99-BK SmartLoader. If the "Stored Memory Type" indicates no data is saved currently, you may bypass the ERASE MEMORY operation and move directly to the READ MEMORY operation.

(BEGIN)

- With the Clon99-BK SmartLoader on-screen display showing, press the POWER button on the remote control
- The Setup Menu will appear. Press the Number 4 button on the Remote Control to select the 4th option "Erase SmartLoader Memory."
- 3 The screen will ask "Erase?" Press the 0 button on the remote to confirm and begin the procedure.
- The screen will indicate "Memory Erased" when the data has been erased for the Clon99-BK SmartLoader.



READING MEMORY OR DATA

SLEEP

VOL

Α

RESET

CC

CH GDE

POWER

TV

GUEST

TV

SETUP

RECALL

СН

DCM)

SETH

A/CH

(MUTE)

READ MEMORY

Once the memory has been erased, the Clon99-BK SmartLoader is ready to read a television's memory. Follow the steps below to complete the procedure.

(BEGIN)

With the Clon99-BK SmartLoader on-screen display showing, press the POWER button on the remote control.

The Setup Menu will appear. Press the Number 1 button on the Remote Control to select the first option "Read TV."

The on-screen display will ask, "Read?" Press the 0 button to confirm and begin the Read procedure.

The on-screen menu will reading blocks of data on the bottom of the display.

• Once the "Read" procedure is complete, "Finished Reading Memory" will appear at the bottom of the display.

6 Disconnect the SmartLoader cable from the back of the TV to complete the "Read TV" operation or another Numbered button to choose a different option.





PROGRAMMING A TELEVISION'S INTERNAL MEMORY

WRITING TV MEMORY

After the Memory has been read from one television, the Clon99-BK SmartLoader is now ready to write the memory to other televisions. This memory can be written with or without certain settings. These settings include: Picture Adjustment, Minimum and Maximum Volume, and the On Volume settings.

(BEGIN)

- Plug one end of the cable into the jack provided on the SmartLoader. Then plug the other end into the jack provided on the back of the TV. The TV jack is next to the Antenna Input terminal.
- 2 Push the Slide Switch to the ON position on the SmartLoader. If the TV is currently off, it should turn on within 15 seconds.

Within 20 seconds, the SmartLoader on-screen display should appear on the TV screen. If the display does not appear, check connections and push the Slide Switch to the ON position again. If there is still no response from the SmartLoader, replace its 9-volt battery.

- Press the POWER button on the remote to display the Clon99-BK SmartLoader Setup Menu.
- With the Setup Menu visible, press the Number 2 button on the Remote Control to select the 2nd option "Write TV With Settings" or press the Number 3 button to select the third option "Write TV Without Settings."
- **6** The screen will ask "Write?" Press the 0 button on the remote to confirm and begin the procedure.
- The screen will indicate "Writing Block 24 of 63" while the Clon99-BK SmartLoader is downloading the data.
- The display will then read "Finished Writing Memory" when the procedure has been completed.



RUNNING A SYSTEM TEST

SYSTEM TEST

A System Test of the Clon99-BK SmartLoader can be preformed by following the steps below.

(BEGIN)

With the Clon99-BK SmartLoader on-screen display showing, press the POWER button on the remote control

The Setup Menu will appear. Press the Number 5 button on the Remote Control to select the 5th option "System Test."

3 The screen will ask "Test?" Press the 0 button on the remote to confirm and begin the procedure.

4 As the System Test proceeds, the display will prompt the user to press the Number 1 button or the A/CH button to continue or skip to the next part of the test.

When the display shows "Test Finished," press the Number 1 button to return to the Clon99-BK SmartLoader Setup Menu.

.



.

EXIT SMARTLOADER

When you have completed all the procedures you wish to preform, exiting the Clon99-BK SmartLoader and shutting down is simple.

BEGIN

- With the Clon99-BK SmartLoader on-screen display showing, press the POWER button on the remote control
- The Setup Menu will appear. Press the Number 6 button on the Remote Control to select the 6th option "Exit SmartLoader."
- The screen will ask "Exit?" Press the 0 button on the remote to confirm and begin the procedure.
- The Clon99-BK SmartLoader will display a screen that reads "Power Down Mode" then shut itself off.
- 5 When finished, unplug the Clon99-BK SmartLoader from the rear jack panel of the television.



PROGRAMMING A TELEVISION WITH THE ON-SET KEYBOARD

WRITING TV MEMORY with the On-Set Keyboard

After the Memory has been read from one television, the Clon99-BK SmartLoader is now ready to write the memory to other televisions. The following steps show how to download or "write" memory from one television to another using the On-Set Keyboard.

(BEGIN)

- Plug one end of the cable into the jack provided on the SmartLoader. Then plug the other end into the jack provided on the back of the TV. The TV jack is next to the Antenna Input terminal.
- Push the Slide Switch to the ON position on the SmartLoader. If the TV is currently off, it should turn on within 15 seconds.

Within 20 seconds, the SmartLoader on-screen display should appear on the TV screen. If the display does not appear, check connections and push the Slide Switch to the ON position again. If there is still no response from the SmartLoader, replace its 9-volt battery.

- 4 Press the POWER button on the front of the TV to display the Clon99-BK SmartLoader "Write TV" Menu.
- 5 Press the CH/UP button on the front of the TV to write the memory to the television.

6 The screen will ask "Press CH/UP to Confirm Write," "Press the CH/DN to Abort," or "Press the Power to Exit System." Press the CH/UP button to confirm and begin the procedure.

The screen will indicate "Writing Block XX of XX" while the Clon99-BK SmartLoader is downloading the data.

The display will then read "Finished Writing Memory" when the procedure has been completed.

Press the Power button on the front of the TV to EXIT the system.



CLON99-BK SMARTLOADER DISPLAYS USING PROGRAMMING TRANSMITTER FOR NON-GLOBAL TV



CLON99-BK SMARTLOADER DISPLAYS USING ON-SET KEYBOARD WITH NON-GLOBAL TV



INDEX

Battery Installation - Remote
Battery Installation - Clon99-BK SmartLoader
Connections
Erase Memory
Exiting the Menu
Introduction
On-Set TV Keyboard
On-Screen Displays for Non-Global TV with Transmitter
On-Screen Displays for Non-Global TV with On-Set Keyboard
Programming with On-Set Keyboard for Global TV10
Programming (Writing) Memory
Read Memory
Remote Control
Safety/Precautions
System Test
Table of Contents

Download from Www.Somanuals.com. All Manuals Search And Download.

Free Manuals Download Website <u>http://myh66.com</u> <u>http://usermanuals.us</u> <u>http://www.somanuals.com</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.cc</u> <u>http://www.4manuals.com</u> <u>http://www.404manual.com</u> <u>http://www.luxmanual.com</u> <u>http://aubethermostatmanual.com</u> Golf course search by state

http://golfingnear.com Email search by domain

http://emailbydomain.com Auto manuals search

http://auto.somanuals.com TV manuals search

http://tv.somanuals.com