


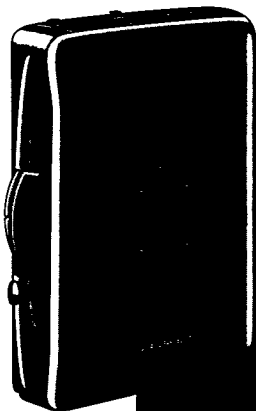

PHILIPS

AQ 6421 Stereo Cassette Player .





Guarantee and Service valid for Australia

The benefits given to the purchaser by this warranty are in addition to all other rights and remedies, which, under the Trade Practices Act or other Commonwealth or State law, the purchaser or owner has in respect of the product.

The Philips product carries the following warranties:

C-series HiFi-systems 12 months, Compact Disc Players: 12 months, Home Audio Systems: 6 months, Clock radios, portable radios, cassette recorders, cassette players and radio recorders: 90 days.

Any defect in materials or workmanship occurring within the specified period from the date of delivery, will be rectified free of charge by the retailer from whom this product was purchased.

Note: Please retain your purchase docket to assist prompt service.

Conditions of this warranty

1. All claims for warranty service must be made to the retailer from whom this product was purchased. All transport charges incurred in connection with warranty service or replacement will be paid by the purchaser.
2. These warranties do not cover batteries and extend only to defects in materials or workmanship occurring under normal use of the product where operated in accordance with our instructions.

**Philips Consumer Products Division,
Technology Park, Figtree Drive, Australia Centre,
Homebush 2140, New South Wales**

Guarantee and Service for New Zealand

Thank-you for purchasing this quality Philips product.

Philips New Zealand Ltd guarantees this product against defective components and faulty workmanship for a period of 12 months. Any defect in materials or workmanship occurring within 12 months from the date of purchase subject to the following conditions will be rectified free of charge by the retailer from whom this product was purchased.

Conditions

1. The product must have been purchased in New Zealand. As proof of purchase, retain the original sales docket indicating the date of purchase.
2. The guarantee applies only to faults caused by defective components, or faulty workmanship on the part of the manufacturer.
3. The guarantee does not cover failures caused by misuse, neglect, normal wear and tear, accidental breakage, use on the incorrect voltage, use contrary to operating instructions, or unauthorised modification to the product or repair by an unauthorised technician.
4. Reasonable evidence (in the form of a sales docket) must be supplied to indicate that the product was purchased no more than 12 months prior to the date of your claim.
5. In the event of a failure, Philips shall be under no liability for any injury, or any loss or damage caused to property or products other than the product under guarantee.

This guarantee does not prejudice your rights under common law and statute, and is in addition to the normal responsibilities of the retailer and Philips.

How to claim

Should your Philips product fail within the guarantee period, please return it to the retailer from whom it was purchased. In most cases the retailer will be able to satisfactorily repair or replace the product.

However, should the retailer not be able to conclude the matter satisfactorily, or if you have other difficulties claiming under this guarantee, please contact

The Guarantee Controller, Philips New Zealand Ltd.

✉ **P.O. Box 41.021 Auckland**

☎ **(09) 84 94 160**

fax ☎ **(09) 84 94 160**

SUPPLY

Batteries: Insert as indicated two alkaline batteries, type R6, UM3 or AA. Remove the batteries if exhausted or if they are not to be used for a long time.

Mains adaptor: Connect a mains adaptor to the 3V DC socket.

The adaptor must supply 3V DC $\ominus \rightarrow \ominus$, minuspole \ominus to the 1.3 mm centre pin of the 3.4 mm socket.

PLAYING BACK CASSETTES

- Connect headphones to \curvearrowright .
- Open the cassette holder and insert the cassette in it with the open part facing the buttons and the full reel on the right.
- To start playback, press \blacktriangleleft .
- Adjust the sound with VOLUME and DBB (bass).
- To stop, press STOP and the set is switched off.
- At the end of the tape the \blacktriangleleft button is automatically released and the set is switched off.

FAST WINDING

- Press \blacktriangleleft or \blacktriangleright . Press STOP to stop fast winding and also when the tape has reached it's end.

MAINTENANCE

- Clean the magnetic head after every 50 hours of operation or once a month by playing through a cleaning cassette.
- Do not expose the set and cassettes to rain, moisture, sand, or to excessive heat from e.g. heating equipment or in motor cars parked in the sun.

The model number is located on the base of the set and the serial number in the battery compartment

This product complies with the radio interference requirements of the European Community

USE YOUR HEAD WHEN USING HEADPHONES

Hearing safety

- Do not play your headphones at a high volume. Hearing experts advise that continuous use at high volume can permanently damage hearing.

Traffic safety

- Do not use headphones while driving a vehicle. It may create a traffic hazard and it is illegal in many countries. Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going on around you.

CONSEILS EN CAS D'UTILISATION D'UN CASQUE

Protection de l'ouïe

- Ne mettez pas l'appareil à son volume maximum. Les spécialistes de l'audition mettent en garde contre une écoute prolongée à volume élevé susceptible d'endommager l'ouïe de façon définitive.

Sécurité de la circulation

- N'utilisez pas le casque lorsque vous conduisez. Cela pourrait constituer un danger pour la circulation et est en outre interdit par la loi dans de nombreux pays. Même si votre casque est perméable aux bruits ambiants, ne portez pas le volume à un niveau tel qu'il vous empêcherait de percevoir ce qui vous entoure.


KOPFHÖRER JA - ABER MIT KÖPFCHEN

Sicherheit beim Hören

- Stellen Sie keine zu hohe Lautstärke ein. Fachleute raten von kontinuierlichem Musikhören mit hoher Lautstärke über einen längeren Zeitraum ab, da hierdurch das Gehör Schaden nehmen kann.

Sicherheit im Straßenverkehr

- Verwenden Sie den Kopfhörer nicht beim Fahren. Dies kann nicht nur die Sicherheit im Straßenverkehr beeinträchtigen, sondern ist außerdem in vielen Ländern verboten. Auch wenn Sie einen 'offenen' Kopfhörer benutzen, mit dem Sie Außengeräusche wahrnehmen können, sollten Sie die Lautstärke immer nur so hoch einstellen, daß Sie noch hören können, was um Sie herum vorgeht.

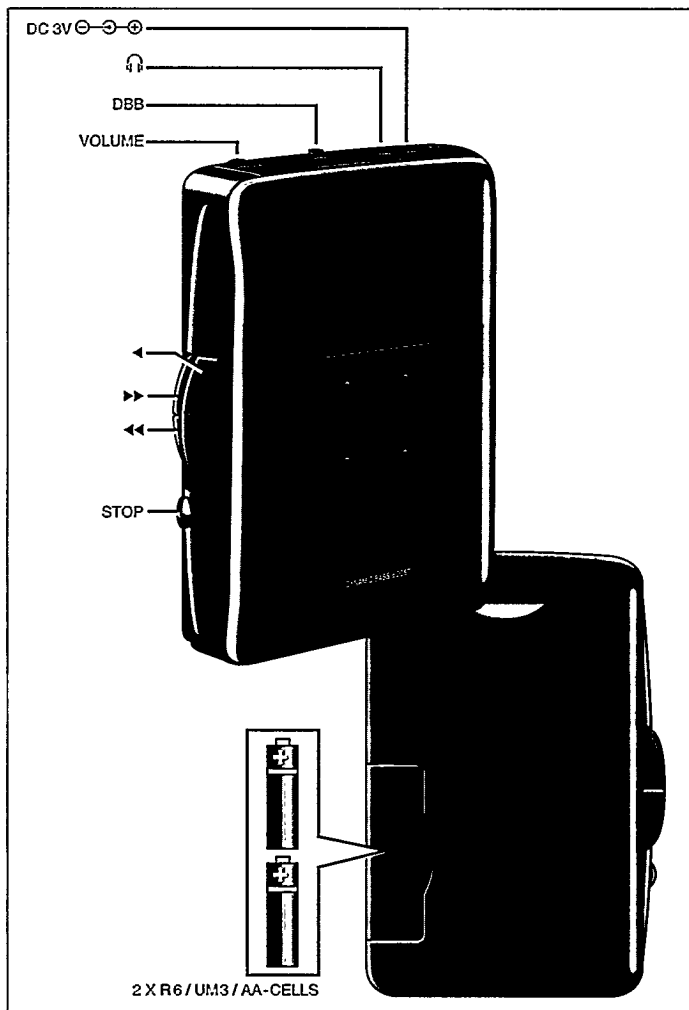

Declaración de conformidad con normas

El que suscribe, en nombre y representación de:
**ACTEAM Hong Kong, Division of Philips China
Hong Kong Group Company Limited.**

declara, bajo su propia responsabilidad, que el

equipo: **Tocacasetes estéreo**

fabricado por: **ACTEAM Hong Kong**

en: **Far East**

marca: **Philips**

modelo: **AQ6421**

objeto de esta declaración, cumple con la normativa siguiente: Reglamento
sobre Perturbaciones Radioeléctricas, Real Decreto 138/1989, Anexo V.

Hecho en: **Hong Kong, 01-06-1993**

Firma:



Nombre: **C.S. Lau**

Cargo: **Quality Assurance Manager**



Printed in Hong Kong

TC text/RR 0693/1

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>