

RD 5050/ND 5500 Portable Compact Disc Player



(MEX) Mexico **NOM**
 Es necesario que lea cuidadosamente
 su instructivo de manejo.

**NOM**

(DK) Danmark

Typeskiltet findes på undersiden af apparaten.

Dette produkt overholder kravene til radiointerferens af Europæisk Fælleskab.

Bemærk: Netafbryderen er sekundært indkoblet og afbryder ikke strømmen fra nettet. Den indbyggede netdel er derfor tilsluttet til lysnettet så længe netstikket sidder i stikkontakten.

Advarsel: Usynlig laserudstråling ved åbning når sikkerhedsafbrydere er ude af funktion. Undgå udsættelse for stråling.

(GB) English page 4 English
 Illustrations page 3

(F) Français page 13 Français
 Illustrations page 3

(D) Deutsch Seite 22 Deutsch
 Abbildungen Seite 3



(NL) Nederlands pagina 30 Nederlands
 Afbeeldingen pagina 3





(E) Español página 38 Español
 Ilustraciones página 3

(I) Italiano pagina 46 Italiano
 Illustrazioni pagina 3

**CLASS 1
 LASER PRODUCT**

      (N) Norge
 Typeskilt finnes på apparatens underside.
Observer: Nettbryteren er sekundært innkopleet.
 Den innebyggede nettdelen er derfor ikke frakopleet nettet så lenge apparatet er tilsluttet nettkontakten.

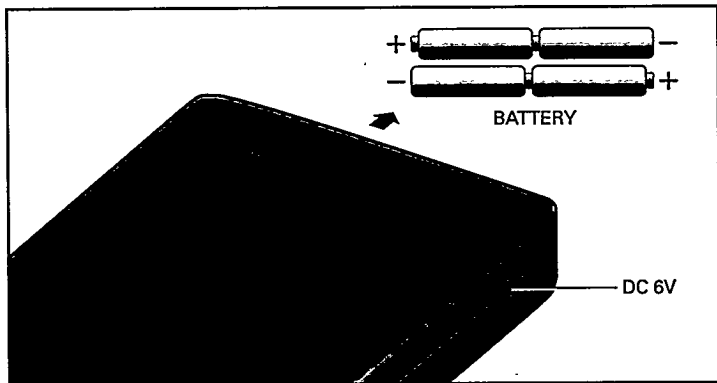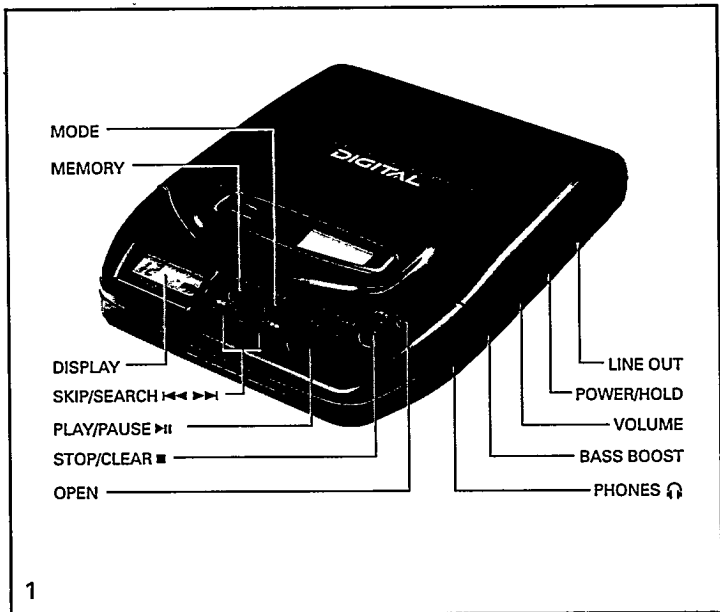

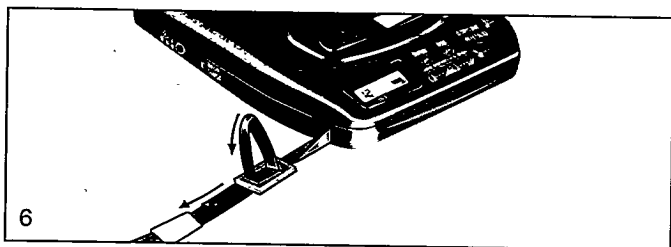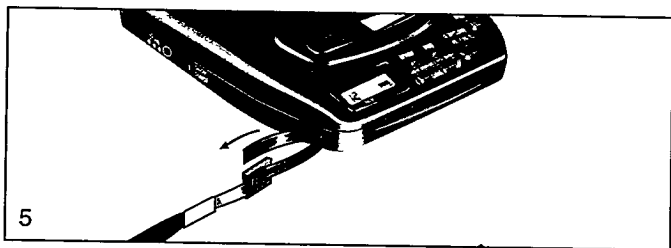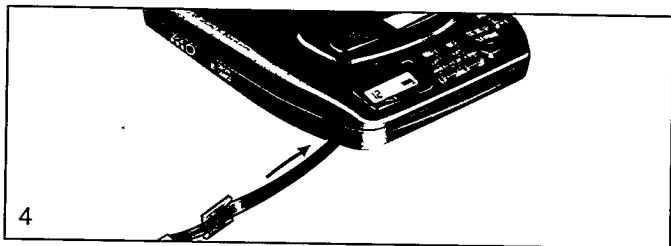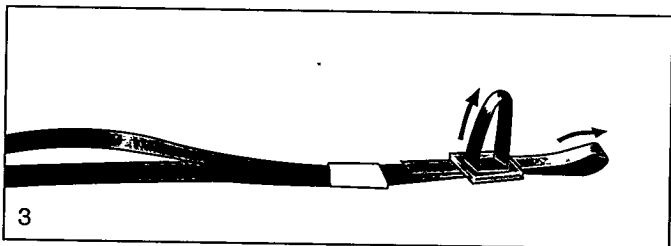

Controls

ACCESSORIES

 
Standard supplied

- High quality stereo headphones
- Connection cord
- AC/DC mains adaptor
- Carrying strap

CONTROLS

DISPLAY

display shows:

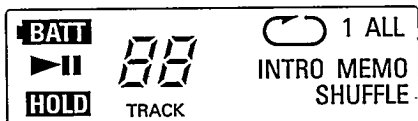

TRACK: the total number of tracks and during playback, the number of track being played

Battery condition:

BATT flashes: the batteries are weak

BATT lights up continuously: the battery voltage is too low

INTRO(scan) : "Introductory play" is activated

MEMO: the PROGRAM function is activated

↺ 1 ALL: REPEAT function is activated

SHUFFLE: Random play is activated

▶||: PLAY and PAUSE is activated

HOLD: activated (the CD player buttons are inoperative)

to make a program

- press briefly to jump to a previous ◀◀ or next ▶▶ track

- to search for a passage during playback

to activate/deactivate the "REPEAT" function, to start "Introductory Play" of a CD and to start random playback

to stop playback

to start and interrupt playback

to open the CD compartment

English

Français

Deutsch

Nederlands

Español

Italiano

MEMORY

SKIP/SEARCH ◀◀ ▶▶

MODE

STOP/CLEAR ■

PLAY/PAUSE ▶||

OPEN

PHONES Ω

connection for headphones (impedance minimum 30 ohms) or mini loudspeakers

POWER/HOLD

to switch the unit on or off/to switch the unit to 'HOLD' mode

VOLUME

to adjust the volume

BASS BOOST

to switch the Bass Boost on and off for extra bass for CD reproduction through your stereo system

LINE OUT

socket for external power supply 6 V/550 mA DC

DC 6V $\oplus \ominus$

BATTERY

Battery Compartment

POWER SUPPLY

Dry Cell Batteries

Open the battery door and insert as indicated four (preferably Alkaline) batteries, type R6, UM3 OR AA-cells. You may also use rechargeable Nickel-Cadmium batteries.

 
Remove the batteries if exhausted or if they are not to be used again for along period.

- If **BATT** flashes in the display, the batteries are weak.
- If **BATT** lights up continuously, the battery voltage is too low and the CD player will soon shut down.
- The battery supply is switched off when the 6 V DC socket is in use. When changing over the battery supply, pull out the plug from the 6 V DC sockets.
- To switch off the set, place the **POWER** selector to the **OFF** position.

Mains Adaptor

At home, you can use the mains adaptor, delivering 6V/550 mA Direct Current, $\oplus \ominus$, plus-pole \oplus to the centre pin.

- Connect the mains adaptor to the 6 V DC socket and the wall socket.
- Remove the mains adaptor from the wall socket when the CD player is not use.

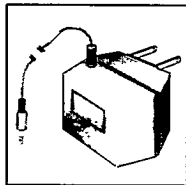

CONNECTIONS

 
Headphone socket PHONES

For headphones (or mini loudspeakers) with 3.5 mm plug.

LINE OUT socket

For CD reproduction at home through your stereo system (amplifier, receiver, recorder, etc.):

- Use the connection cord to connect the socket **LINE OUT** to the input sockets **LINE IN**, **AUX** or **CD IN** of the other set.
- Adjust the sound with the controls of the stereo system.

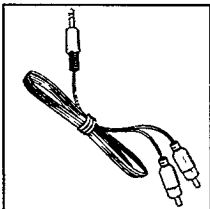

HOLD

When carrying the player with you, you can slide the **POWER** selector to the **HOLD** position. While playing a CD, the word **HOLD** appears on the display. The CD-player buttons are then inoperative. The playing of a CD will not be interrupted when a button is accidentally touched. For normal operation, slide back the **POWER** selector to its original position. The word **HOLD** disappears.

PLAYING A CD

- Ensure that the **HOLD** function is deactivated, otherwise the CD player buttons will not operate.
- Set the **POWER** selector to the **ON** position.
- Connect headphones to the **PHONES** Ω socket.
- Press **OPEN** to open the CD cover. Gently lift the cover
- Adjust the volume control to the minimum.
- Insert the CD, **printed side facing up** and close the cover. The CD-player scans the contents list of the disc. The display shows the number of tracks on the disc.
- Adjust the sound with the **VOLUME** control and for extra amplification of the bass set the **BASS BOOST** selector to the on position.
- Playback will start automatically and the display shows the corresponding track number.
- For brief interruptions, press **PLAY/PAUSE** $\triangleright \parallel$. The display shows **II**. To continue playback, press **PLAY/PAUSE** $\triangleright \parallel$ again.
- To stop playback, press **STOP/CLEAR** \square .
- The CD player also goes to position **STOP**:
 - when the end of the CD is reached;
 - when the CD cover is opened;
 - if the batteries are weak or if the power supply is interrupted in another way.
- Open the CD cover only if the CD player is in the **STOP** position.
- To switch off the set, slide the **POWER** selector to the **OFF** position.



Remarks

- If there is a CD in the unit, the CD will automatically start to play when the unit is switched on.
- If the batteries are exhausted, the CD player will not function normally, e.g. it will not start. Replace the batteries or use the mains adapter.
- If after pressing **PLAY/PAUSE** ▷||, the CD-player does not function, this means that the CD player cannot read the CD. Possible causes are:
 - You inserted the CD upside down;
 - The CD is badly scratched or dirty, see 'Maintenance'.
 - The lens ⊗ is steamed up, see 'Maintenance';
 - The batteries are exhausted.

◀◀ SKIP ▶▶

During playback:

▶▶ – go to the next title

- You can jump to the next title by briefly pressing **SKIP** ▶▶ once.
- If you want to skip more than one track, then briefly press **SKIP** ▶▶ more than once until the display shows the desired track number.

During playback:

◀◀ – go to the previous title

- If you want to repeat the current title from the beginning, briefly press **SKIP** ◀◀ once.
- If you want to repeat one of the previous titles, briefly **SKIP** ◀◀ more than once until the display shows the required track number.

In the STOP mode with a CD inserted

- You can select the title by pressing **SKIP** ◀◀ and ▶▶ briefly, once or more than once, until the display shows the desired track number.

◀◀ SEARCH ▶▶

Searching for a passage during playback

- During playback, hold ◀◀ **SEARCH** ▶▶ pressed down to search for the required passage.

Note:

This is an "AUDIBLE SEARCH".

The volume will automatically be reduced to a low level during search operation and will return to its normal level when the search button is released.

MODE (INTROSCAN/REPEAT/SHUFFLE)

- To repeat the current track in the CD continuously, press the **MODE** button once (X1): '1' appears on the display.
- To repeat the whole CD continuously, press the **MODE** button twice (X2): 'ALL' appears on the display.
- To start 'Introductory Play' of the CD, press the **MODE** button three times (X3): 'INTRO' appears on the display.
- To play all the tracks in a random order, press the **MODE** button four times: 'SHUFFLE' appears on the display.

PROGRAMMING

 
 
You can store up to twenty (20) CD tracks into the memory in the desired sequence in **STOP** mode or in **PLAY** mode.

- Ensure that the **HOLD** function is deactivated, otherwise the CD player buttons will not operate.
- Connect the headphones to the **PHONES** socket.
- Press **OPEN** to open the CD cover.
- Insert the CD, printed side facing up and close the cover.
The CD-player scans the contents list of the disc. The display shows the number of tracks on the disc.
- Playback will start automatically and you can start programming.
or
- Press **STOP/CLEAR** \square to stop playback or let the playback continue.
- Press **MEMORY**. **MEMO** flashes in the display.
- Select the track to be programmed by pressing the buttons \lll **SKIP/SEARCH** \ggg .
 - The selected track flashes in the display.
 - Press **MEMORY** again to store the track into the memory.
- Repeat this procedure to select other tracks that you wish to programme in the memory.
- Press **PLAY/PAUSE** $\triangleright \parallel$ to start the playback of the program.
 - 'MEMO' and \blacktriangleright appears on the display.
- Adjust the sound with the **VOLUME** control and for extra amplification of the bass set the **BASS BOOST** switch to the on position.
- To cancel the program, press the **STOP/CLEAR** \square button 2X (twice).

Maintenance

MAINTENANCE

- Avoid excessive heat (maximum 50° C), e.g. from the car heating or from direct sunlight e.g. when parking the sun.
- Do not expose the set, batteries or CD's to rain or moisture.
- Keep the set and the CD's away from sand.
- The mechanism of the CD player is fitted with self-lubricating bearings and therefore must not oiled or greased.
- Fingerprints, dust and dirt on the apparatus can removed using a soft, clean and slightly damp leather cloth.
Cleaning agents may damage the cabinet.
- The lens ⊗ should never be cleaned.
- The lens may steam up when the set is taken from a cold into a warm environment.
Playing a CD is then not possible.
Do not clean the lens, but let the set acclimatize for a while.
- Always pick up the CD by edge and put it back in its box immediately after use.
- To remove dirt from a CD, first breathe on the CD and wipe it off in a straight line from centre to edge using a soft, lint-free cloth.
The use of cleaning agents may damage the CD.

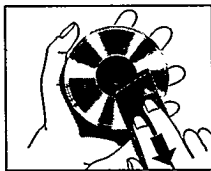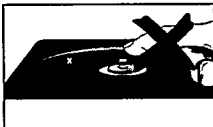

USE YOUR HEAD WHEN USING HEADPHONES

- **Hearing safety:** Do not play your headphones at a high volume. Hearing experts advise against continuous extended play. If you experience a ringing in your ears, reduce the volume or discontinue use.
- **Traffic safety:** Do not use headphones while driving a vehicle. It may create a traffic hazard and it is illegal in many countries.
Even if your headphones are an open-air type designed to let you hear outside sounds, do not turn up the volume so high that you cannot hear what is going around you.

This product complies with the radio interference requirements of the European Community.

The type plate is located on the base of the set.

TROUBLESHOOTING GUIDE

The following checks will assist in the correction of most problems which you may encounter with your unit.

Should any problem persist after you have made these checks, consult your nearest dealer or service facility.

No Power	
Symptom	Cause (and Remedy)
Batteries are exhausted	Replace batteries
Adaptor is not connected securely	Connect the adaptor
CD Operation (Cannot Function)	
CD is not inserted properly	Make sure that the CD is inserted, printed side facing up
CD door is not completely closed	Close the CD door
'Hold' function is activated	To cancel the HOLD function, slide the POWER selector to the original position
The lens ⊗ is steamed up	See 'Maintenance'
CD Operation (No Sound)	
No output from headphone	Adjust the volume knob
Headphone is not connected securely	Connect the headphone

RD5050
ND5500



Printed In Hong Kong

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>