


# MAGNAVOX

FW391C / 392C Mini Hifi System

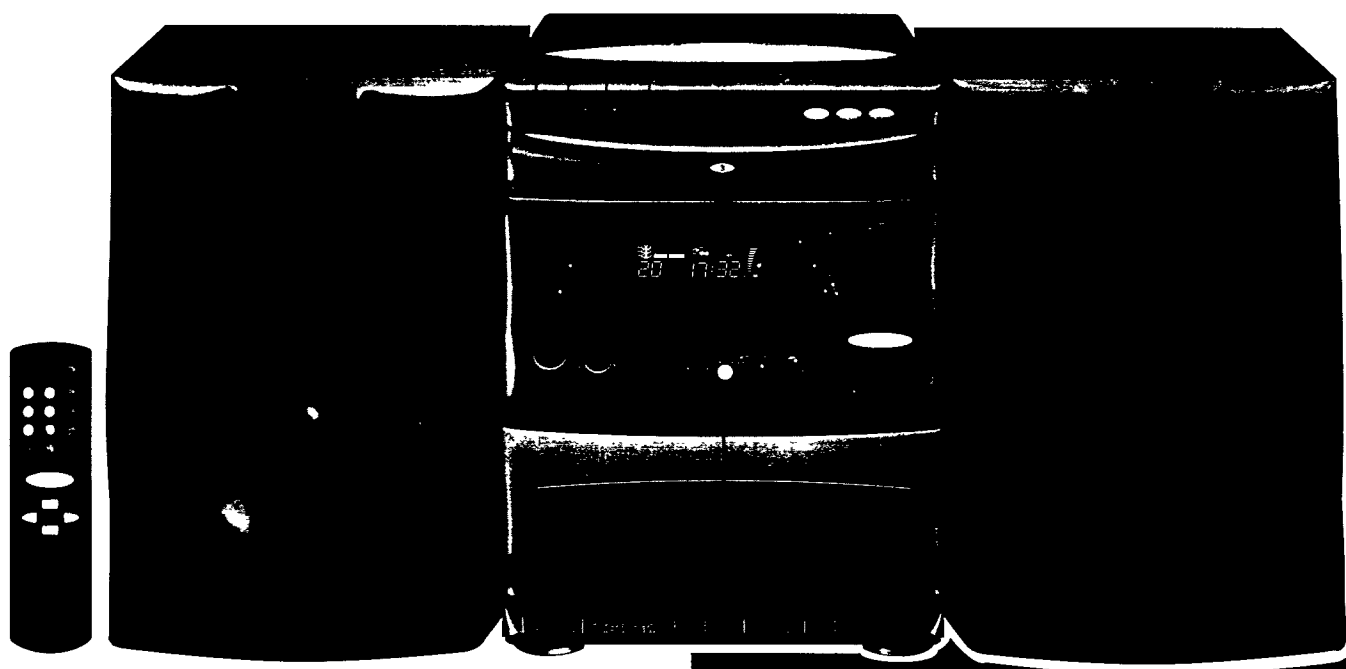

**Toll Free Help Line**  
Ligne d'assistance en service libre  
Linea de ayuda telefónica sin cargo

**800-531-0039**





# Return your Warranty Registration Card today to ensure you receive all the benefits you're entitled.

Once your MAGNAVOX purchase is registered, you're eligible to receive all the privileges of owning a MAGNAVOX product. So complete and return the Warranty Registration Card enclosed with your purchase at once. And take advantage of these important benefits.

## ■ Warranty Verification

Registering your product within 10 days confirms your right to maximum protection under the terms and conditions of your MAGNAVOX warranty.

## ■ Owner Confirmation

Your completed Warranty Registration Card serves as verification of ownership in the event of product theft or loss.

## ■ Model Registration

Returning your Warranty Registration Card right away guarantees you'll receive all the information and special offers which you qualify for as the owner of your model.

**HURRY!**  
Registration Needed Within 10 Days.

**MAGNAVOX**  
Smart.Very smart:

**Congratulations on your purchase, and welcome to the "family!"**

**Dear MAGNAVOX product owner:**

Thank you for your confidence in MAGNAVOX. You've selected one of the best-built, best-backed products available today. And we'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the MAGNAVOX "family," you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry.

What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

And most importantly you can count on our uncompromising commitment to your total satisfaction.

All of this is our way of saying welcome—and thanks for investing in a MAGNAVOX product.

Sincerely,



Robert Minkhorst  
President and Chief Executive Officer

**P.S. Remember, to get the most from your MAGNAVOX product, you must return your Warranty Registration Card within 10 days. So please mail it to us right now!**

### KNOW THESE SAFETY SYMBOLS.

	<b>CAUTION</b> RISK OF ELECTRIC SHOCK DO NOT OPEN	
CAUTION: To reduce the risk of electric shock, do not remove cover (or back). No user-serviceable parts inside. Refer servicing to qualified service personnel		

⚡ This "bolt of lightning" indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

⚠ The "exclamation point" calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems

**WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.**

**CAUTION:** To prevent electric shock, match wide blade of plug to wide slot, and fully insert.

**ATTENTION:** Pour éviter les chocs électriques, introduire la lame la plus large de la fiche dans la borne correspondante de la prise et pousser jusqu'au fond.


#### For Customer Use:

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference

Model No \_\_\_\_\_

Serial No. \_\_\_\_\_

## Addendum

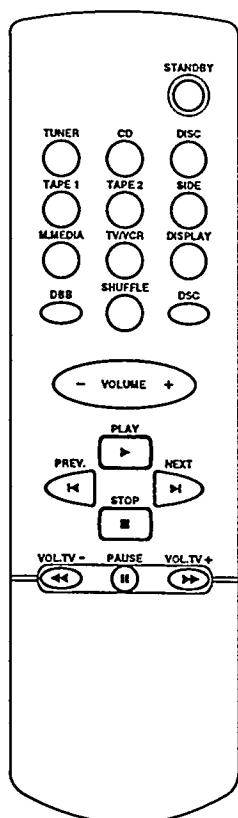

### Français

#### Fonctions de la télécommande

(uniquement pour le modèle FW391C)

- STANDBY** ..... pour commuter l'appareil en mode de veille.  
**TUNER** ..... pour sélectionner le mode syntoniseur.  
**CD** ..... pour sélectionner le mode CD.  
**DISC** ..... pour sélectionner le nouveau disque.  
**TAPE 1** ..... ne fonctionne pas sur ce modèle.  
**TAPE 2** ..... permet de sélectionner le mode cassette.  
**SIDE** ..... ne fonctionne pas sur ce modèle.  
**M. MEDIA** ..... ne fonctionne pas sur ce modèle.  
**TV/VCR** ..... pour sélectionner le mode téléviseur/  
 magnétoscope.  
**DISPLAY** ..... ne fonctionne pas sur ce modèle.  
**DBB** ..... permet d'activer et de neutraliser la  
 suramplification des fréquences graves.  
**SHUFFLE** ..... pour sélectionner au hasard les plages du CD.  
**DSC** ..... pour sélectionner le contrôle de son numérique:  
 OPTIMAL, JAZZ, CLASSIC, ROCK ou POP.  
**VOLUME +/-** ..... permet de régler le volume.  
**PLAY** ..... pour débuter la lecture en mode CD.  
**STOP** ..... pour arrêter la lecture en mode CD.  
**◀ PREV. / NEXT ▶**  
 pour TUNER ..... permet de choisir un émetteur présélectionné en  
 sens décroissant/croissant.  
 pour CD ..... permet de sélectionner la plage précédente/  
 suivante du CD.  
 pour TV/VCR ..... permet de sélectionner le canal précédent/  
 suivant.  
**PAUSE ||** ..... permet d'interrompre la lecture en mode CD.  
**◀◀ / ▶▶**  
 pour TUNER ..... permet de sélectionner une fréquence en sens  
 décroissant/croissant.  
 pour CD ..... permet de rechercher un passage spécifique.  
**TV VOLUME +/-** ..... permet de régler le volume du téléviseur  
 (code RC-5).

### English

#### Remote Control Functions (for model FW391C only).


- STANDBY** ..... to switch the unit to standby mode.  
**TUNER** ..... to select TUNER mode.  
**CD** ..... to select CD mode.  
**DISC** ..... to select desired disc.  
**TAPE 1** ..... not functional for this model.  
**TAPE 2** ..... to select TAPE mode.  
**SIDE** ..... not functional for this model.  
**M. MEDIA** ..... not functional for this model.  
**TV/VCR** ..... to select TV/VCR mode.  
**DISPLAY** ..... not functional for this model.  
**DBB** ..... to switch on and off dynamic bass boost.  
**SHUFFLE** ..... to play CD tracks at random.  
**DSC** ..... to select digital sound control: OPTIMAL, JAZZ,  
 CLASSIC, ROCK or POP.  
**VOLUME +/-** ..... to adjust the volume.  
**PLAY** ..... to start play in CD.  
**STOP** ..... to stop play in CD.  
**◀ PREV. / NEXT ▶**  
 for TUNER ..... to select a lower/higher tuner preset station.  
 for CD ..... to select previous/next CD track.  
 for TV/VCR ..... to select previous/next channel.  
**PAUSE ||** ..... to interrupt play in CD mode.  
**◀◀ / ▶▶**  
 for TUNER ..... to select a lower/higher frequency.  
 for CD ..... to search a particular passage.  
**TV VOLUME +/-** ..... to adjust the TV (RC 5 code) volume.

### Español

#### Funciones del mando a distancia (solo modelo FW391C).

- STANDBY** ..... para desconectar temporalmente la unidad (modo  
 de espera).  
**TUNER** ..... para seleccionar el modo TUNER (sintonizador).  
**CD** ..... para seleccionar el modo CD.  
**DISC** ..... para seleccionar el siguiente disco.  
**TAPE 1** ..... inoperativo en este modelo.  
**TAPE 2** ..... para seleccionar el modo TAPE  
**SIDE** ..... inoperativo en este modelo.  
**M. MEDIA** ..... inoperativo en este modelo.  
**TV/VCR** ..... para seleccionar el modo TV/VCR (TV/vídeo).  
**DISPLAY** ..... inoperativo en este modelo.  
**DBB** ..... para activar o desactivar el realce dinámico de  
 graves.  
**SHUFFLE** ..... para reproducir las pistas del CD en un orden  
 aleatorio.  
**DSC** ..... para seleccionar el control de sonido digital:  
 OPTIMAL, JAZZ, CLASSIC, ROCK o POP.  
**VOLUME +/-** ..... para ajustar el volumen.  
**PLAY** ..... para dar comienzo a la reproducción de CD.  
**STOP** ..... para detener la reproducción de CD.  
**◀ PREV. / NEXT ▶**  
 por TUNER ..... sintonizador selecciona una presintonía anterior o  
 posterior.  
 por CD ..... selecciona la pista anterior/posterior del disco.  
 por TV/VCR ..... selecciona el canal anterior/siguiente.  
**PAUSE ||** ..... para interrumpir la reproducción de CD.  
**◀◀ / ▶▶**  
 por TUNER ..... sintonizador selecciona una frecuencia superior/  
 inferior.  
 por CD ..... búsqueda de un fragmento concreto  
**TV VOLUME +/-** ..... para ajustar el volumen del TV (código RC-5).

## Addendum

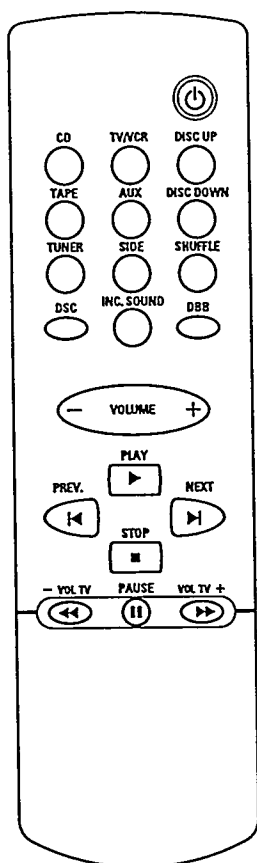

### Français

#### Fonctions de la télécommande

(uniquement pour le modèle FW392C)

- ⏻ ..... pour commuter l'appareil en mode de veille.
- CD ..... pour sélectionner le mode CD.
- TV/VCR ..... pour sélectionner le mode téléviseur/magnétoscope.
- DISC UP/DOWN ..... pour sélectionner le nouveau disque.
- TUNER ..... pour sélectionner le mode syntoniseur.
- AUX ..... pour sélectionner le mode externe.
- TAPE ..... permet de sélectionner le mode cassette.
- SIDE ..... ne fonctionne pas sur ce modèle.
- SHUFFLE ..... pour sélectionner au hasard les plages du CD.
- DSC ..... pour sélectionner le contrôle de son numérique: OPTIMAL, JAZZ, CLASSIC, ROCK ou POP.
- INCREDIBLE SOUND ... permet de mettre l'effet sonore "Surround" sous/hors tension.
- DBB ..... permet d'activer et de neutraliser la suramplification des fréquences graves.
- VOLUME +/- ..... permet de régler le volume.
- PLAY ..... pour débiter la lecture en mode CD.
- STOP ..... pour arrêter la lecture en mode CD.
- ◀ PREV. / NEXT ▶
  - pour TUNER ..... permet de choisir un émetteur présélectionné en sens décroissant/croissant.
  - pour CD ..... permet de sélectionner la plage précédente/suivante du CD.
  - pour TV/VCR ..... permet de sélectionner le canal précédent/suivant.
- PAUSE || ..... permet d'interrompre la lecture en mode CD.
- ◀◀ / ▶▶
  - pour TUNER ..... permet de sélectionner une fréquence en sens décroissant/croissant.
  - pour CD ..... permet de rechercher un passage spécifique.
- TV VOLUME +/- ..... permet de régler le volume du téléviseur (code RC-5).

### English


#### Remote Control Functions (for model FW392C only).

- ⏻ ..... to switch the unit to standby mode.
- CD ..... to select CD mode.
- TV/VCR ..... to select TV/VCR mode.
- DISC UP/DOWN ..... to select desired disc.
- TUNER ..... to select TUNER mode.
- AUX ..... to select external mode.
- TAPE ..... to select TAPE mode.
- SIDE ..... not functional for this model.
- SHUFFLE ..... to play CD tracks at random.
- DSC ..... to select digital sound control: OPTIMAL, JAZZ, CLASSIC, ROCK or POP.
- INCREDIBLE SOUND ... to switch on or off the surround sound effect.
- DBB ..... to switch on and off dynamic bass boost.
- VOLUME +/- ..... to adjust the volume.
- PLAY ..... to start play in CD.
- STOP ..... to stop play in CD.
- ◀ PREV. / NEXT ▶
  - for TUNER ..... to select a lower/higher tuner preset station.
  - for CD ..... to select previous/next CD track.
  - for TV/VCR ..... to select previous/next channel.
- PAUSE || ..... to interrupt play in CD mode.
- ◀◀ / ▶▶
  - for TUNER ..... to select a lower/higher frequency.
  - for CD ..... to search a particular passage.
- TV VOLUME +/- ..... to adjust the TV (RC 5 code) volume.

### Español

#### Funciones del mando a distancia (solo modelo FW392C).

- ⏻ ..... para desconectar temporalmente la unidad (modo de espera).
- CD ..... para seleccionar el modo CD.
- TV/VCR ..... para seleccionar el modo TV/VCR (TV/vídeo).
- DISC UP/DOWN ..... para seleccionar el siguiente disco.
- TUNER ..... para seleccionar el modo TUNER (sintonizador).
- AUX ..... para seleccionar el modo externo.
- TAPE ..... para seleccionar el modo TAPE
- SIDE ..... inoperativo en este modelo.
- SHUFFLE ..... para reproducir las pistas del CD en un orden aleatorio.
- DSC ..... para seleccionar el control de sonido digital: OPTIMAL, JAZZ, CLASSIC, ROCK o POP.
- INCREDIBLE SOUND para activar y desactivar el efecto de sonido envolvente.
- DBB ..... para activar o desactivar el realce dinámico de graves.
- VOLUME +/- ..... para ajustar el volumen.
- PLAY ..... para dar comienzo a la reproducción de CD.
- STOP ..... para detener la reproducción de CD.
- ◀ PREV. / NEXT ▶
  - por TUNER ..... sintonizador selecciona una presintonía anterior o posterior.
  - por CD ..... selecciona la pista anterior/posterior del disco.
  - por TV/VCR ..... selecciona el canal anterior/siguiente.
- PAUSE || ..... para interrumpir la reproducción de CD.
- ◀◀ / ▶▶
  - por TUNER ..... sintonizador selecciona una frecuencia superior/inferior.
  - por CD ..... búsqueda de un fragmento concreto
- TV VOLUME +/- ..... para ajustar el volumen del TV (código RC-5).

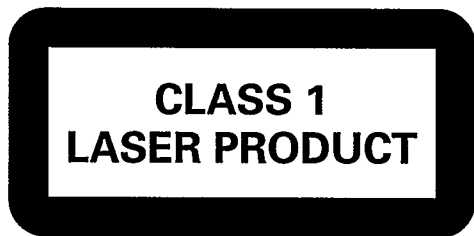

Safety .....	4	Operating the System .....	10	Timer Setting .....	16	English
Limited Warranty .....	5	Tuner .....	11	Maintenance .....	17	
General Information .....	6	Cassette Deck .....	12-13	Specifications .....	17	
Preparation .....	6-7	CD Changer .....	13-15	Troubleshooting .....	18	
Controls .....	8-9	Clock Setting .....	16			
Conseils de Sécurité .....	20	Utilisation de l'appareil .....	26	Réglage de la minuterie .....	32	Français
Garantie Limitée .....	21	Sintoniseur .....	27	Entretien .....	33	
Généralités .....	22	Platine Cassette .....	28-29	Caractéristiques Techniques .....	33	
Operations Prealables .....	22-23	Lecteur de Disques Compacts .....	29-31	Remèdes en cas de panne .....	34	
Commandes .....	24-25	Réglage de l'horloge .....	32			
Instrucciones Sobre Seguridad .....	36	Funcionamiento del sistema .....	42	Ajuste del Temporizador .....	48	Español
Garantía Limitada .....	37	Sintonizador .....	43	Mantenimiento .....	49	
Información General .....	38	Reproductor de Casete .....	44-45	Especificaciones .....	49	
Preparación .....	38-39	Reproductor de CD .....	45-47	Solución de Problemas .....	50	
Controles .....	40-41	Ajuste del Reloj .....	48			

	<b>CAUTION</b>	
<b>RISK OF ELECTRIC SHOCK DO NOT OPEN</b>		
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		

- This symbol warns the user that uninsulated voltage within the unit may have sufficient magnitude to cause electric shock. Therefore, it is dangerous to make any kind of contact with any inside part of this unit.
- This symbol alerts the user that important literature concerning the operation and maintenance of this unit has been included. Therefore, it should be read carefully in order to avoid any problems.

	<b>AVIS</b>	
<b>RISQUE DE CHOC ÉLECTRIQUES NE PAS OUVRIR</b>		
Attention: Afin de prévenir le risque de chocs électriques, ne pas retirer les vis. Toute réparation devrait être confiée à un personnel qualifié.		

- Ce symbole indique la présence d'une tension suffisamment élevée pour engendrer un risque de chocs électriques.
- Ce symbole indique que le manuel d'installation fourni avec l'appareil contient d'importantes recommandations quant au fonctionnement et à l'entretien de ce dernier.

	<b>AVISO</b>	
<b>RIESGO DE CHOQUE ELÉCTRICO NO ABRIR</b>		
Atención: Para reducir el riesgo de choque eléctrico, no quite la tapa (o el panel posterior). En su interior no hay piezas que el usuario pueda reparar. Para servicio dirijase a personal calificado.		

- Este símbolo tiene por finalidad advertir al usuario de la presencia de tensión peligrosa no aislada dentro de la caja del aparato, que puede ser lo suficientemente fuerte para constituir un peligro de choque eléctrico.
- Este símbolo sirve para advertir al usuario de la presencia de instrucciones de manejo y mantenimiento (servicio) importantes en el manual que acompaña al aparato.

**WARNING**  
To reduce the risk of fire or electric shock, do not expose this appliance to rain or moisture.

**CAUTION**  
Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure.

The set complies with the FCC-Rules, Part 15 and with 21 CFR 1040.10.

**Canada**  
This digital apparatus does not exceed the Class B limits for radio noise emissions from digital apparatus as set out in the Radio Interference Regulations of the Canadian Department of Communications.

**AVIS**  
Afin de réduire tout risque d'incendie ou de choc électrique, il ne faut pas exposer cet appareil à la pluie ou à l'humidité.

**ATTENTION**  
L'utilisation des commandes ou réglages ou le non-respect des procédures ci-incluses peuvent se traduire par une exposition dangereuse à l'irradiation.

L'appareil répond aux normes FCC, Part 15 et 21 CFR 1040.10.

**Canada**  
Cet appareil numérique n'émet pas de bruits radioélectriques dépassant les limites applicables aux appareils numériques de Class B prescrites dans le Règlement sur le Brouillage Radioélectrique édicté par le Ministère des Communications du Canada.

**AVISO**  
Para reducir el riesgo de fuego o choque eléctrico, no exponga el aparato a la lluvia o humedad.

**ATENCIÓN**  
El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

El aparato cumple las normas FCC, Parte 15 y 21 CFR 1040.10.


**Mexico**  
Es necesario que lea cuidadosamente su instructivo de manejo.


	<b>PRECAUCION - ADVERTENCIA</b>	
<b>NO ABRIR, RIESGO DE CHOQUE ELECTRICO</b>		
<b>ATENCION</b>		
VERIFIQUE QUE EL VOLTAJE DE ALIMENTACION SEA EL REQUERIDO PARA SU APARATO		
PARA EVITAR EL RIESGO DE CHOQUE ELECTRICO, NO quite LA TAPA; EN CASO DE REQUERIR SERVICIO, DIRIJASE AL PERSONAL AUTORIZADO DE PHILIPS.		

**NOM**
 
# SAFETY INSTRUCTIONS – Read before operating equipment

This product was designed and manufactured to meet strict quality and safety standards. There are, however, some installation and operation precautions which you should be particularly aware of.

1. **Read Instructions** - All the safety and operating instructions should be read before the appliance is operated.
2. **Retain Instructions** - The safety and operating instructions should be retained for future reference.
3. **Heed Warnings** - All warnings on the appliance and in the operating instructions should be adhered to.
4. **Follow Instructions** - All operating and use instructions should be followed.
5. **Water and Moisture** - The appliance should not be used near water - for example, near a bathtub, washbowl, kitchen sink, laundry tub or swimming pool, or in a wet basement.
6. **Carts and Stands** - The appliance should be used only with a cart or stand that is recommended by the manufacturer.
- 6A.  An appliance and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the appliance and cart combination to overturn.
7. **Wall or Ceiling Mounting** - The appliance should be mounted to a wall or ceiling only as recommended by the manufacturer.
8. **Ventilation** - The appliance should be situated so that its location or position does not interfere with its proper ventilation. For example, the appliance should not be situated on a bed, sofa, rug, or similar surface that may block the ventilation openings; or, placed in a built-in installation, such as a bookcase or cabinet that may impede the flow of air through the ventilation openings.
9. **Heat** - The appliance should be situated away from heat sources such as radiators, heat registers, stoves, or other appliances (including amplifiers) that produce heat.
10. **Power Sources** - The appliance should be connected to a power supply only of the type described in the operating instructions or as marked on the appliance.
11. **Grounding or Polarization** -




Precautions should be taken so that the grounding or polarization means of an appliance is not defeated.  
**Caution:** To prevent electric shock, match the wide blade of this plug to the wide slot and fully insert. Do not use this (polarized) plug with an extension cord, receptacle or other outlet unless the blades can be fully inserted to prevent blade exposure.

12. **Power Cord Protection** - Power supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords and plugs, convenience receptacles, and the point where they exit from the appliance.
13. **Cleaning** - The appliance should be cleaned only as recommended by the manufacturer.
14. **Power Lines** - An outdoor antenna should be located away from power lines.
15. **Outdoor Antenna Grounding** - If an outside antenna is connected to the receiver, be sure the antenna system is grounded so as to provide some protection against voltage surges and built up static charges. Section 810 of the National Electrical Code, ANSI/NFPA No. 70-1984, provides information with respect to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding connectors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure below.
16. **Nonuse Periods** - The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.
17. **Object and Liquid Entry** - Care should be taken so that objects do not fall and liquids are not spilled into the enclosure through openings.
18. **Damage Requiring Service** - The appliance should be serviced by qualified service personnel when:
  - A. The power supply cord or the plug has been damaged; or
  - B. Objects have fallen, or liquid has spilled into the appliance; or
  - C. The appliance has been exposed to rain; or
  - D. The appliance does not appear to operate normally or exhibits a marked change in performance; or
  - E. The appliance has been dropped, or the enclosure damaged.
19. **Servicing** - The user should not attempt to service the appliance beyond that described in the operating instructions. All other servicing should be referred to qualified service personnel.

### Note to the CATV system installer

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

### Example of Antenna Grounding as per NEC - National Electrical Code

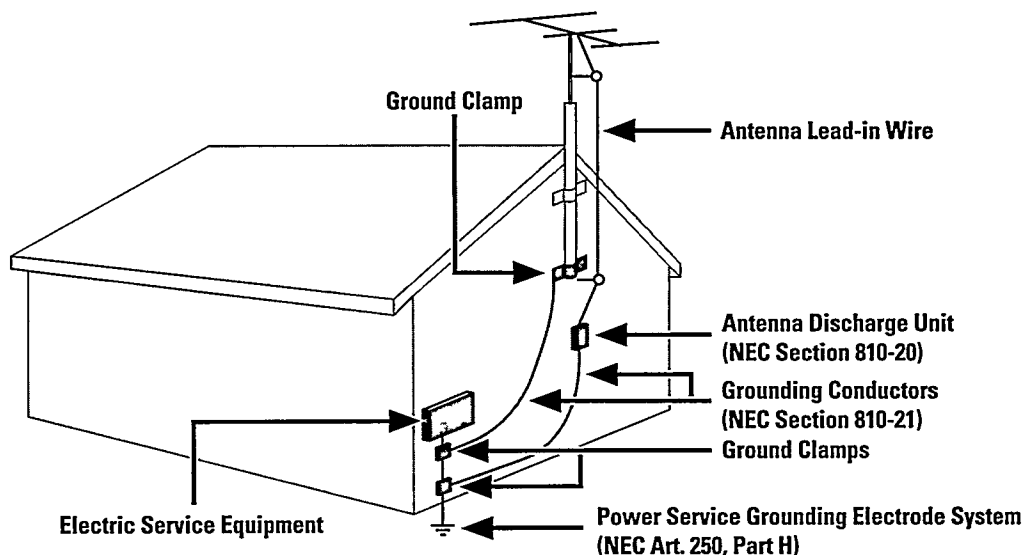

# LIMITED WARRANTY

## AUDIO SYSTEM

One Year Free Labor

One Year Free Service on Parts

This product must be carried in for repair.

### WHO IS COVERED?

You must have proof of purchase to receive warranty service. A sales receipt or other document showing that you purchased the product is considered proof of purchase.

### WHAT IS COVERED?

Warranty coverage begins the day you buy your product. For one year thereafter, all parts will be repaired or replaced, and labor is free. After one year from the day of purchase, you pay for the replacement or repair of all parts, and for all labor charges. All parts, including repaired and replaced parts, are covered only for the original warranty period. When the warranty on the product expires, the warranty on all replaced and repaired parts also expires.

### WHAT IS EXCLUDED?

Your warranty does not cover:

- labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- product repair and/or part replacement because of misuse, accident, unauthorized repair or other cause not within the control of Philips Consumer Electronics Company.
- reception problems caused by signal conditions or cable or antenna systems outside the unit.
- a product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- incidental or consequential damages resulting from the product. (Some states do not allow the exclusion of incidental or consequential damages, so the above exclusion may not apply to you. This includes, but is not limited to, prerecorded material, whether copyrighted or not copyrighted.)
- a product that is used for commercial or institutional purposes.

### WHERE IS SERVICE AVAILABLE?

Warranty service is available in all countries where the product is officially distributed by Philips Consumer Electronics Company. In countries where Philips Consumer Electronics Company does not distribute the product, the local Philips service organization will attempt to provide service (although there may be a delay if the appropriate spare parts and technical manual(s) are not readily available).

### MAKE SURE YOU KEEP...

Please keep your sales receipt or other document showing proof of purchase. Attach it to this owner's manual and keep both nearby. Also keep the original box and packing material in case you need to return your product.

### BEFORE REQUESTING SERVICE...

Please check your owner's manual before requesting service. Adjustments of the controls discussed there may save you a service call.

### TO GET WARRANTY SERVICE IN U.S.A., PUERTO RICO OR U.S. VIRGIN ISLANDS...

Take the product to a Philips factory service center (see enclosed list) or authorized service center for repair. When the product has been repaired, you must pick up the unit at the center. Centers may keep defective parts.

(In U.S.A., Puerto Rico and U.S. Virgin Islands, all implied warranties, including implied warranties of merchantability and fitness for a particular purpose, are limited in duration to the duration of this express warranty. But, because some states do not allow limitations on how long an implied warranty may last, this limitation may not apply to you.)

### TO GET WARRANTY SERVICE IN CANADA...

Take the product to a Philips consumer service center (listed below), self-servicing dealer or authorized service depot.

Philips Electronics Ltd.

601 Milner Avenue, Scarborough, Ontario, M1B 1M8

(416) 292-5161

4977 Levy Street, St. Laurent, Québec, H4R 2N9

(514) 956-0120

1741 Boundary Road, Vancouver, B.C., V5M 3Y7

(604) 294-3441

(In Canada, this warranty is given in lieu of all other warranties. No other warranties are expressed or implied, including any implied warranties of merchantability or fitness for a particular purpose. Philips is not liable under any circumstances for any direct, indirect, special, incidental or consequential damages, howsoever incurred, even if notified of the possibility of such damages.)

### REMEMBER...

Please record the model and serial numbers found on the product below. Also, please fill out and mail your warranty registration card promptly. It will be easier for us to notify you if necessary.

MODEL # \_\_\_\_\_

SERIAL # \_\_\_\_\_

*This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.*

Philips Service Company, P.O. Box 555, Jefferson City, Tennessee 37760, (423) 475-8869


## General Information

- The typeplate is located at the rear of the set.
  - Recording is permissible if copyright or other rights of third parties are not infringed.
- 1 All unnecessary packaging material has been omitted. We have done our utmost to make the packaging easy to separate into three mono-materials:
    - cardboard (box)
    - expandable polystyrene (buffer)
    - polyethylene (bags, protective foam sheet).
 Please observe the local regulations regarding the disposal of these packaging materials.
  - 2 Your set consists of materials which can be recycled and reused if disassembled by a specialized company. Please follow local regulations on recycling your old set.
  - 3 Do not dispose dead batteries with your household waste. Dispose batteries according to local regulations.
  - 4 Note: Switching off the standby mode overnight will save energy.

## Safety Information

- Before operating the system, check that the operating voltage indicated on the typeplate (or the voltage indication beside the voltage selector) of your system is identical with the voltage of your local power supply. If not, please consult your dealer. The type plate is located at the rear of your system.
- When the system is switched on, do not move it around.
- Place the system on a solid base (e.g. a cabinet).
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system.
- Do not expose the system to excessive moisture, rain, sand or heat sources.
- Under no circumstances should you repair the unit yourself, as this will invalidate the warranty!
- If the system is brought directly from a cold to a warm location, or is placed in a very damp room, moisture may condense on the lens of the CD unit inside the system. Should this occur, the CD player will not operate normally. Leave the power on for about one hour with no disc in the unit until normal playback is possible.
- Electrostatic discharge may cause unexpected problems. See whether these problems disappear if you unplug the AC power cord and plug it in again after a few seconds.
- **To disconnect the system from the power supply completely, remove the AC power plug from the wall socket.**

## Speakers

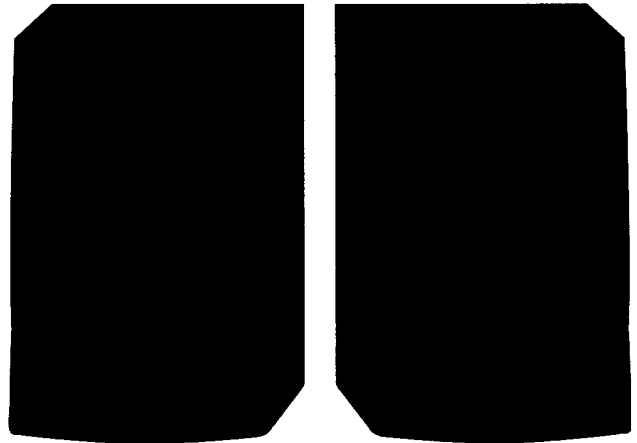


## Accessories (Supplied)

- Remote control transmitter
- Batteries (2 x AAA) for remote control transmitter
- AM loop antenna
- FM antenna wire
- AC power cord

## Inserting the batteries into the remote control

- Insert the batteries (Type R3 or AAA) into the remote control as shown in the battery compartment.

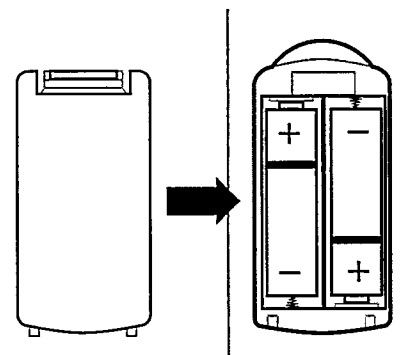

- To avoid damage from possible battery leakage, remove dead batteries or batteries that will not be used for a long time. For replacement use type R3 or AAA batteries.

## Rear Connection

### (A) AM Antenna Connection


Connect the supplied loop antenna to the AM ANTENNA terminal. Adjust the position of the AM loop antenna for the best reception.

### (B) FM Wire Antenna Connection

Connect the supplied FM wire antenna to the FM 300  $\Omega$  terminal. Adjust the position of the FM antenna for the best reception.



## Rear Connection

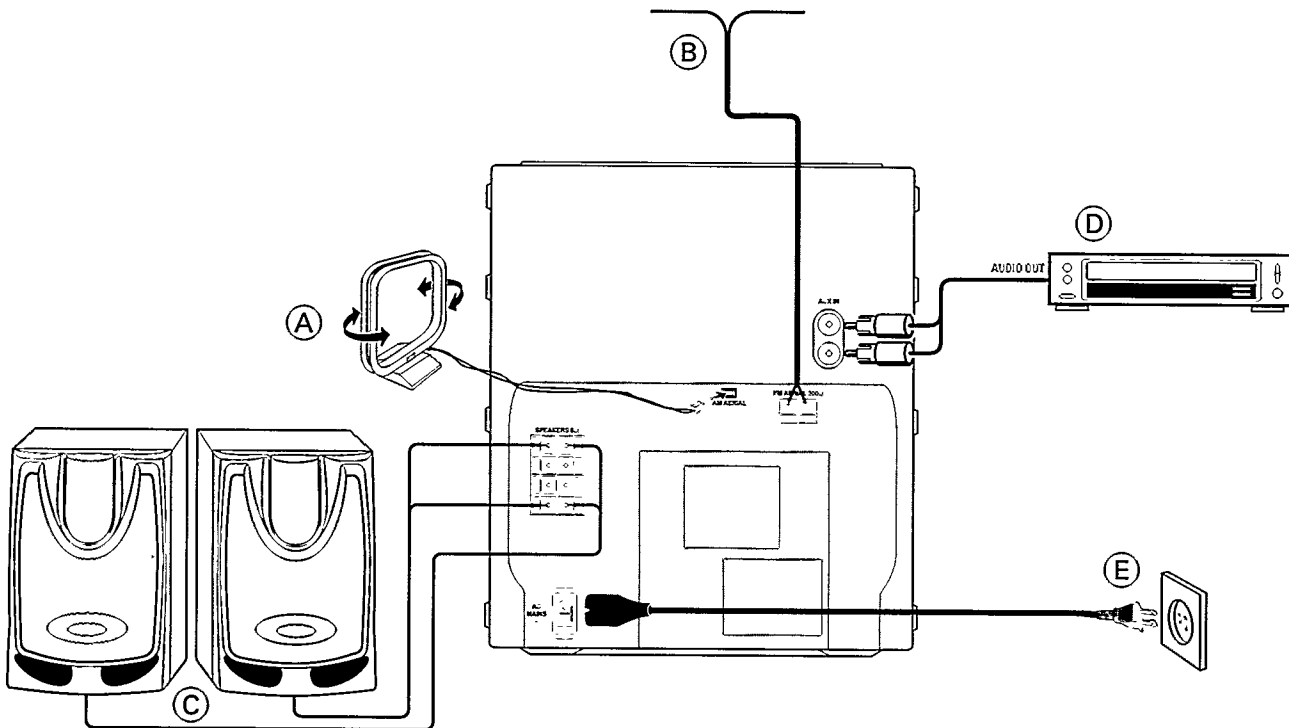


### Outdoor Antenna

For better FM stereo reception connect an outdoor FM antenna to the FM ANTENNA 300 Ω terminal using a 300 Ω dipole wire.


### Ⓒ Speaker Connections

You can connect the 2 supplied speakers or you can create a 4-speaker system for surround sound using two extra speakers having an impedance of at least 6 ohms.


#### 2-speaker system (without surround connection)

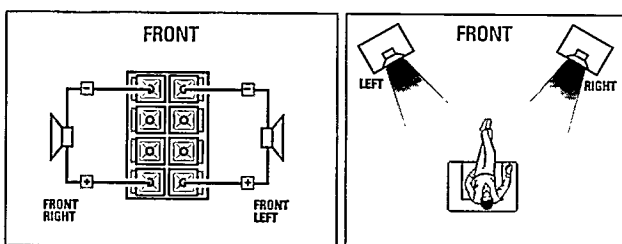

- Connect the right speaker to terminal **R**, with the red wire to + and the black wire to -.
- Connect the left speaker to terminal **L**, with the red wire to + and the black wire to -.
- Clip the stripped portion of the speaker wire as shown.

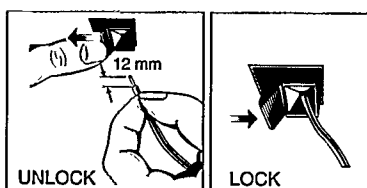

#### 4-speaker system (with surround connection)

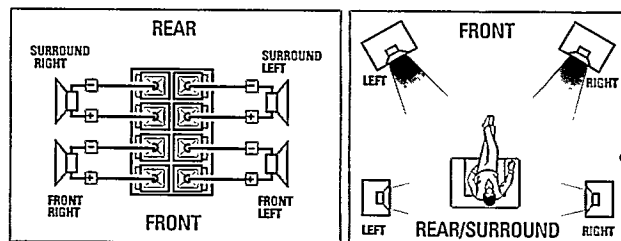

- Connect the right speaker to terminal **R**, with the red wire to + and the black wire to -.
- Connect the left speaker to terminal **L**, with the red wire to + and the black wire to -.
  - Clip the stripped portion of the speaker wire.

### Ⓓ Connecting other equipment to your system

You can connect the TV, Laser Disc or VCR audio left and right output terminals to the AUX terminal at the rear of the system.


### Ⓔ AC Power Supply

After all other connections have been made, connect the AC power cord to the set and the AC power plug to the wall outlet.

# Controls

English

## Front View

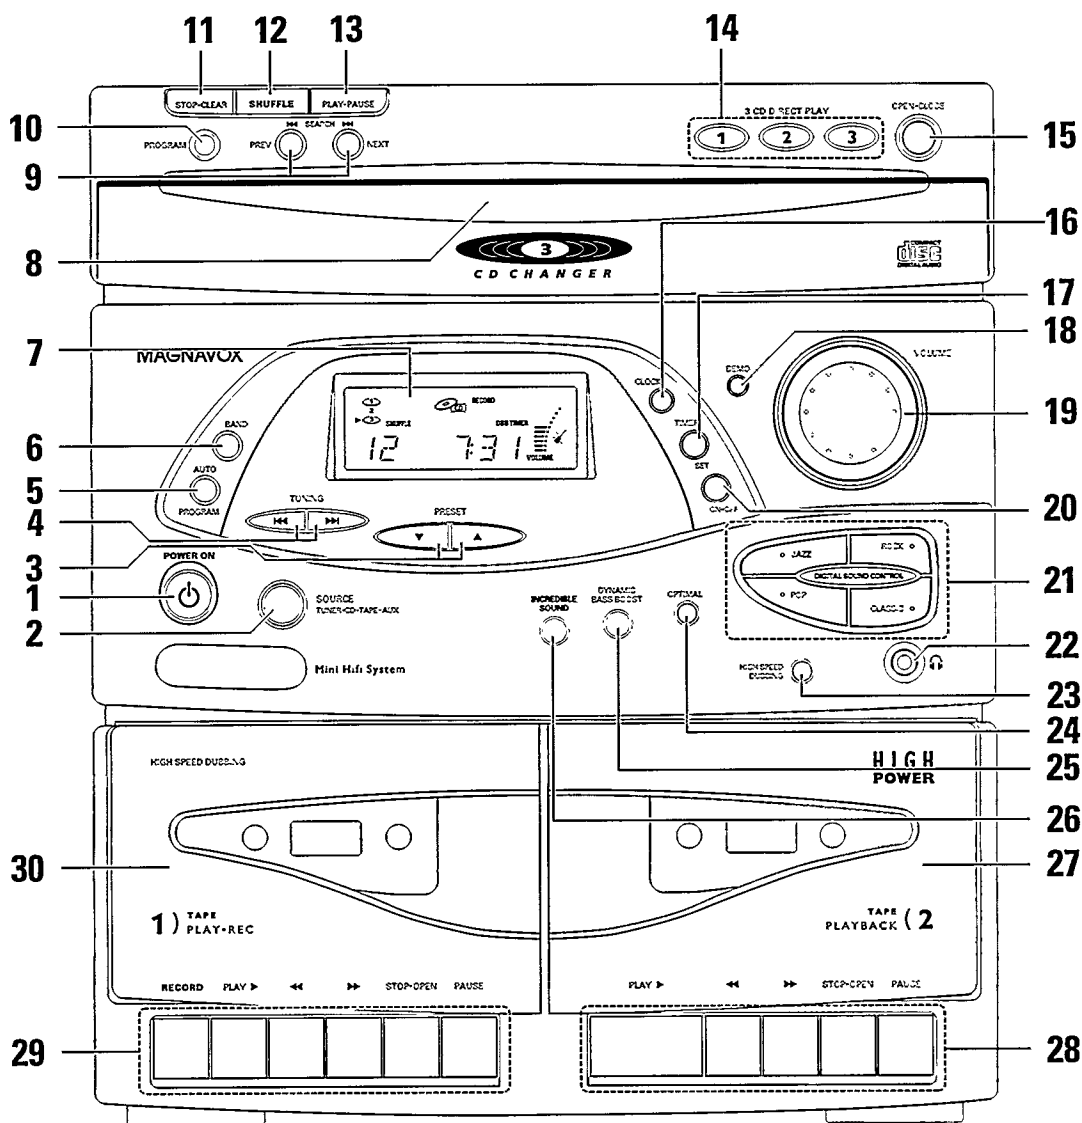

### 1 POWER ON

- to switch the set on or to select standby mode.

### 2 SOURCE

to select the following :

- TUNER** : to switch to Radio mode.
- CD** : to switch to CD mode.
- TAPE** : to switch to Tape mode.
- AUX** : to switch to AUX mode (for external sources, e.g. TV, Laser Disc or VCR sound).

### 3 PRESET ▲ or ▼

- to select a radio station in memory. Also use for clock and timer setting.

### 4 TUNING ◀◀ or ▶▶

- to tune to radio stations
- ◀◀ : lower frequencies.
- ▶▶ : higher frequencies.

Also use for clock and timer setting.

### 5 AUTO PROGRAM

- to program preset stations automatically or manually.

### 6 BAND

- to select the waveband : FM or AM

### 7 DISPLAY

- to display the current setting of the set.

### 8 CD CAROUSEL

### 9 ◀◀ PREVIOUS / NEXT ▶▶

- to skip to the beginning of the current or previous/next track or to search backward/forward.

### 10 PROGRAM

- to program CD tracks

### 11 STOP-CLEAR

- to stop CD playback or to clear a program.

### 12 SHUFFLE

- to play all the available discs and their tracks in random order.

### 13 PLAY-PAUSE

- to start or interrupt CD playback.

### 14 3 CD DIRECT PLAY

- to select play for each CD tray.

## 15 OPEN • CLOSE

- to open or close the CD carousel tray.

## 16 CLOCK

- to set the clock.

## 17 TIMER SET

- to set the timer.

## 18 DEMO

- to display the various features offered by the system.

## 19 VOLUME

- to adjust the volume level.

## 20 TIMER ON•OFF

- to switch the timer on or off.

## 21 DIGITAL SOUND CONTROL (DSC)

- to select the desired sound effect : JAZZ, ROCK, POP or CLASSIC.

## 22 PHONES

- to connect headphones (3.5mm) jack.

## 23 HIGH SPEED DUBBING

- to dub from **TAPE DECK 2** to **TAPE DECK 1** at high speed.

## 24 OPTIMAL

- to select the sound setting that is tuned to the acoustics of the supplied speakers.

## 25 DYNAMIC BASS BOOST (DBB)

- to switch on bass boost to enhance bass response or to switch off bass boost.

## 26 INCREDIBLE SOUND (for model FW392C only)

- to switch on or off the surround sound effect.

## 27 TAPE DECK 2

### 28 TAPE 2 CASSETTE OPERATION

- **PLAY ▶** : to start playback.
- **REW ◀◀** : to rewind the cassette.
- **F.FWD ▶▶** : to fast forward the cassette.
- **STOP•OPEN** : to stop playback or to open the cassette compartment.
- **PAUSE** : to interrupt playback

### 29 TAPE 1 CASSETTE OPERATION

- **RECORD** : to start recording.
- **PLAY ▶** : to start playback.
- **REW ◀◀** : to rewind the cassette.
- **F.FWD ▶▶** : to fast forward the cassette.
- **STOP•OPEN** : to stop playback or to open the cassette compartment.
- **PAUSE** : to interrupt playback or recording.


## 30 TAPE DECK 1

## Remote Control Functions

- First select the source you wish to control by pressing one of the source select keys on the remote control (e.g. CD, TV/VCR, TUNER, AUX or TAPE).
- Then select the desired function (PLAY, NEXT etc.).


### Note :

- Whenever a remote control button is pressed, the source icon on the set display will flicker. This indicates the remote control signal is received by the set.
- For TV/VCR operation, the accessory TV or VCR must use the RC-5 code remote control system.

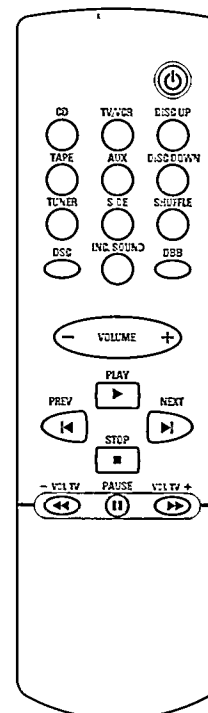

- ⏻ ..... to switch the unit to standby mode.
- CD** ..... to select CD mode.
- TV/VCR** ..... to select TV/VCR mode.
- DISC UP/DOWN** ..... to select desired disc.
- TUNER** ..... to select TUNER mode.
- AUX** ..... to select external mode.
- TAPE** ..... to select TAPE mode.
- SIDE** ..... not functional for this model.
- SHUFFLE** ..... to play CD tracks at random.
- DSC** ..... to select digital sound control: OPTIMAL, JAZZ, CLASSIC, ROCK or POP.
- INCREDIBLE SOUND** ... to switch on or off the surround sound effect. (for model FW392C only).
- DBB** ..... to switch on and off dynamic bass boost.
- VOLUME +/-** ..... to adjust the volume.
- PLAY** ..... to start play in CD.
- STOP** ..... to stop play in CD.
- ◀ PREV. / NEXT ▶  
for TUNER ..... to select a lower/higher tuner preset station.  
for CD ..... to select previous/next CD track.  
for TV/VCR ..... to select previous/next channel.
- PAUSE ||** ..... to interrupt play in CD mode.
- ◀◀ / ▶▶  
for TUNER ..... to select a lower/higher frequency.  
for CD ..... to search a particular passage.  
for TAPE ..... to fast rewind/forward the tape.
- TV VOLUME +/-** ..... to adjust the TV (RC 5 code) volume.

# Operating the System

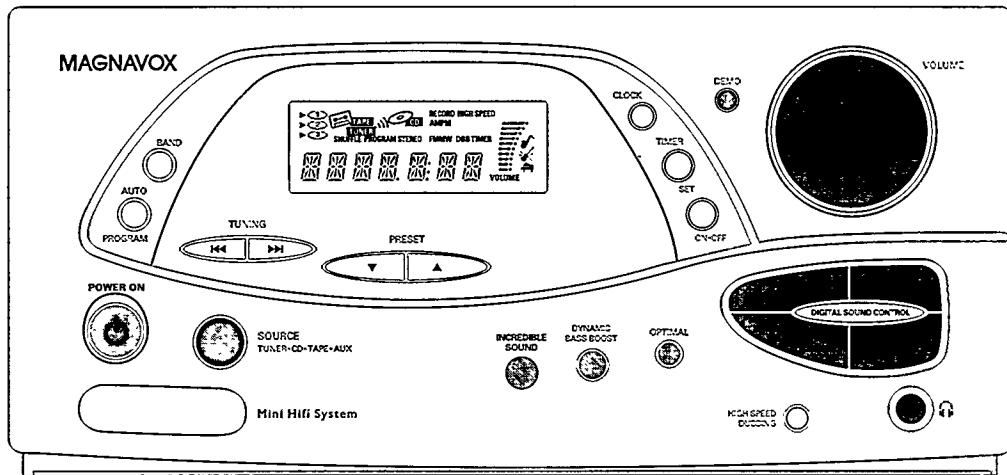


## Important :

Before you begin operating the system, complete the preparation procedures. The set is in the standby mode when the AC power plug is connected to the wall outlet and "12:00 AM" flashes on the display.

## Switching the system ON

- Press **POWER ON** or **SOURCE** (or **CD, TUNER, TAPE** or **AUX** on the remote control).

## Switching the system to standby mode

- Press **POWER ON** again (or  on the remote control).

## Selecting the Sound Source

- Press **SOURCE** to select either **TUNER, CD, TAPE** or **AUX** (or **CD, TUNER, TAPE** or **AUX** on the remote control).  
→ The display indicates the selected sound source.

You can also select the sound source directly by selecting the respective **PLAY** button or 3 **CD DIRECT PLAY** buttons for **CD** or the **PRESET, BAND** or **TUNING** button for **TUNER**.


## Note :

For **AUX** source, ensure that you have connected the audio left and right outputs of the external equipment (TV, VCR or Laser Disc player) to the **AUX IN** sockets at the rear of the set.





## Volume Adjustment

Turn **VOLUME** right or left (or press **VOLUME +** or **-** on the remote control) to increase or decrease the sound level.

## For Personal Listening

Connect the headphones jack to the  socket (3.5 mm) at the front of the set. The speakers will be muted.

## Digital Sound Control (DSC)

- To enjoy a special sound effect, press **JAZZ** (  ), **CLASSIC** (  ), **ROCK** (  ) or **POP** (  ).

## Optimal Sound

- Press **OPTIMAL** to hear the sound setting that is tuned to the acoustics of the supplied speakers.

## Dynamic Bass Boost (DBB)

- Press **DBB** to enhance the bass response.  
→ The **DBB** flag lights up.

## Incredible Sound (for model FW392C only)


- In addition to the other sound settings, you can switch on or off the incredible surround sound feature by pressing **INCREDIBLE SOUND**.  
→ This creates a surround sound effect even if the speakers are positioned close to the system. The sound becomes "incredibly" spatial.  
→ The **INCREDIBLE SOUND** button lights up.



## Demo mode

The system has a demonstration mode that shows the various features offered by the system.

- Press **DEMO** to switch on the demonstration.  
→ The display will show "WELCOME TO THE AUDIO WORLD", then a demonstration of the various features will follow.
- Press **DEMO** again or **POWER ON** to stop the demonstration mode.

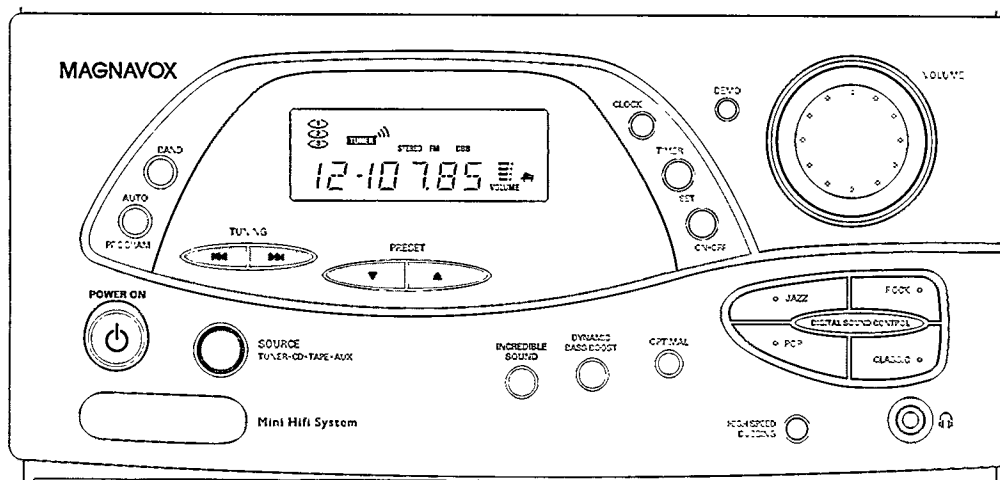

### Tuning to radio stations

- 1 Press **SOURCE** to select **TUNER**.
- 2 Press **BAND** to select the desired waveband: FM or AM.
- 3 Press **TUNING** |◀◀ or ▶▶| for more than one second.
  - The display will show 'SEARCH' until a station with sufficient signal strength is found.
- Repeat this procedure until the desired station is reached.
- To tune to a weak station, briefly press **TUNING** |◀◀ or ▶▶| until the display shows the right frequency and/or when the best reception has been obtained.

### Storing Preset Stations

You can store up to 20 stations in the memory. When a preset station is selected, the preset number appears next to the frequency on the display.

#### Automatic programming

- 1 Press **BAND** to select the desired waveband: FM or AM.
- 2 Press **AUTO PROGRAM** for more than 1 second to start the automatic programming.
  - PROGRAM flashes and 'AUTO' is displayed.
  - Every available station will be stored automatically. The frequency and preset number will be displayed briefly.
  - It will stop searching when all the available stations are stored or when 20 preset stations are stored.
- You can cancel the automatic programming by pressing **AUTO PROGRAM**; **TUNING** |◀◀ or ▶▶| ; **PRESET** ▼ or ▲ ; or **BAND**.

#### Note:

If you wish to maintain some previous set program stations, select the preset number after the last set station, then start the automatic programming.

### Manual programming


- 1 Press **AUTO PROGRAM** for less than 1 second.
  - PROGRAM flashes on the display.
- 2 Press **BAND** to select the desired waveband.
- 3 Press **TUNING** |◀◀ or ▶▶| to tune to the desired frequency.
- 4 Press **PRESET** ▼ or ▲ to select a preset number.
- 5 Press **AUTO PROGRAM** again.
  - PROGRAM disappears, and the station is stored.
- Repeat the above procedure to store other preset stations.

### Tuning to Preset Stations

- Press **PRESET** ▼ or ▲ (or **PREV** or **NEXT** on the remote control) to select the desired preset number.
  - The preset number, frequency and waveband appear on the display.

# Cassette Deck

English

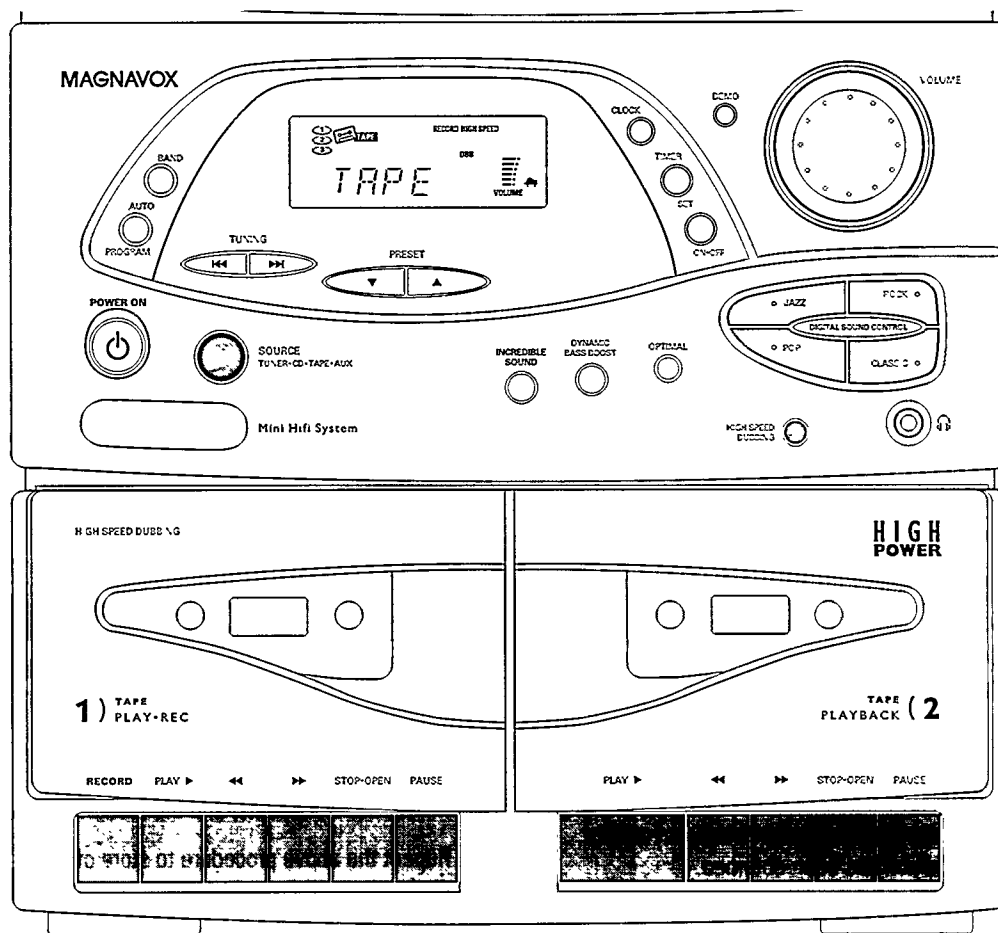

## Loading a cassette

- Press **STOP•OPEN**.
- The cassette compartment door opens.
- Load the cassette with the open side downward and the full spool to the left.
- Close the cassette compartment door.

## Tape Playback

- 1 Press **SOURCE** to select **TAPE**.
- 2 Load the cassette into a **CASSETTE DECK**.
- 3 Press **PLAY ►** to start playback.
- 4 Press **STOP•OPEN** to end playback.

## Fast Forward/Rewinding

- 1 You can rewind or fast forward the tape by pressing **◀◀** or **▶▶**, respectively.
- 2 Press **STOP•OPEN** to stop fast forwarding or rewinding.

### Note :

It is possible to fast forward or rewind a cassette when the set is in another source mode (e.g. TUNER, CD or AUX mode).

## Continuous playback of two cassettes

- 1 Press **SOURCE** to select **TAPE**.
- 2 Load the cassettes in **TAPE DECK 1** and **TAPE DECK 2**.
- 3 Press **PLAY ►** on **TAPE DECK 2**.
- 4 Press **PAUSE** on **TAPE DECK 1**.
- 5 Press **PLAY ►** on **TAPE DECK 1**.  
→ Playback will begin with **TAPE DECK 2** and will continue with **TAPE DECK 1** when **TAPE DECK 2** ends.
- 6 Press **STOP•OPEN** if you want to stop playback before the end of the tape in **TAPE DECK 1** or **TAPE DECK 2**.

## Recording (TAPE DECK 1)

- 1 Press **SOURCE** to select **TUNER, CD** or **AUX**.
- 2 Load a blank cassette into **TAPE DECK 1**.
- 3 Press **RECORD** on **TAPE DECK 1** to start recording.  
→ The **RECORD** flag starts flashing.
- 4 Press **STOP•OPEN** on **TAPE DECK 1** to stop recording.

### Note:

 
During recording, it is not possible to listen to another sound source.

## Cassette Deck

## Compact Disc

### Dubbing cassettes (from TAPE DECK 2 to TAPE DECK 1)

- 1 Load the pre-recorded cassette into **TAPE DECK 2** and a blank cassette into **TAPE DECK 1**.
  - Make sure that both cassettes have their full spools to the left.
- For high speed recording, press **HIGH SPEED DUBBING**.
  - HIGH SPEED appears on the display.
- 2 Press **PAUSE** on **TAPE DECK 1**.
- 3 Press **RECORD** on **TAPE DECK 1**.
  - RECORD appears on the display.
- 4 Press **PLAY** on **TAPE DECK 2**.
  - Recording will start automatically.
- 5 Press **STOP•OPEN** on **TAPE DECK 1** and **TAPE DECK 2** to stop dubbing.



### Notes :

- At the end of side A, flip the cassettes to side B and repeat the procedure.
- Dubbing of cassettes is only possible in the TAPE mode. To ensure good dubbing, use tapes of the same length.
- During high speed dubbing operation in the Tape mode, the sound is reduced to a low volume.

### General Information

- For recording, use only a cassette of IEC type I (normal cassette).
- The tape in the cassette is secured at both ends with leader tape. At the beginning and end of a cassette, nothing will be recorded for six to seven seconds.
- The recording level is set automatically, regardless of the position of VOLUME.
- Check and tighten slack tape with a pencil before use. Slack tape may get jammed or may burst in the mechanism.
- To prevent accidental recording, break out the tab on the left shoulder of the cassette side you want to protect. To re-record the cassette, cover each hole with cellophane tape.

### Erasure Prevention Tabs




- C-120 tape is extremely thin and may be easily deformed or damaged. It is not recommended for use in this unit.
- Store the cassettes at room temperature and do not put them too close to a magnetic field (for example, transformers, TVs or speakers).

### Warning!

- 1) This set is designed for conventional CDs. Do not use any accessories like disc stabilizer rings or CD treatment sheets, etc, which may damage the CD mechanism.
- 2) Do not load more than one disc into each tray.
- 3) When the CD changer is loaded with CD(s), do not turn over or shake the unit as this may jam the changer mechanism.

You can load up to three discs in the CD changer for continuous play without interruption. In addition to the conventional 12-cm disc, 8-cm discs can also be used without an adaptor .

### Loading the CD Changer

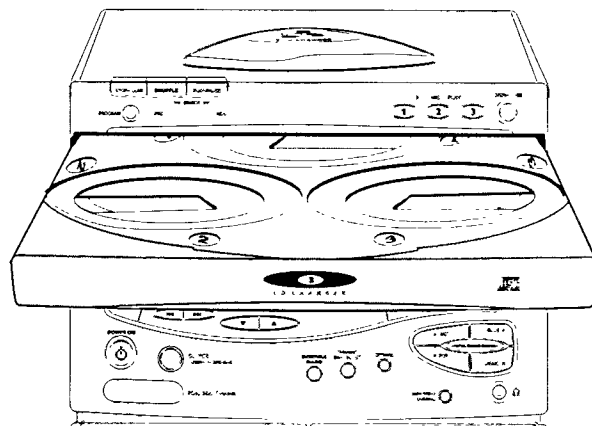


- 1 Press **SOURCE** to select **CD**.
- 2 Press **OPEN•CLOSE**.
  - The CD compartment slides out.
- 3 Load a disc with the **printed side up** in the right tray.
  - You can load another disc in the left tray.
  - To load the third disc, press the corresponding **3 CD DIRECT PLAY** button of the empty tray.
    - The CD changer will rotate until the empty tray is at the right hand side and is ready for loading.
    - Playback will always start with the outer right disc tray.
- 4 Press **OPEN•CLOSE** to close the CD compartment.
  - The total number of tracks and the playing time of the last selected disc will appear on the display.

The following display indications will help you to know whether the disc trays are empty or loaded.

- 1 – indicates the disc tray is empty.
- ② – indicates the disc tray is loaded with a disc.
- ▶ ③ – indicates the current or selected disc tray.

# Compact Disc

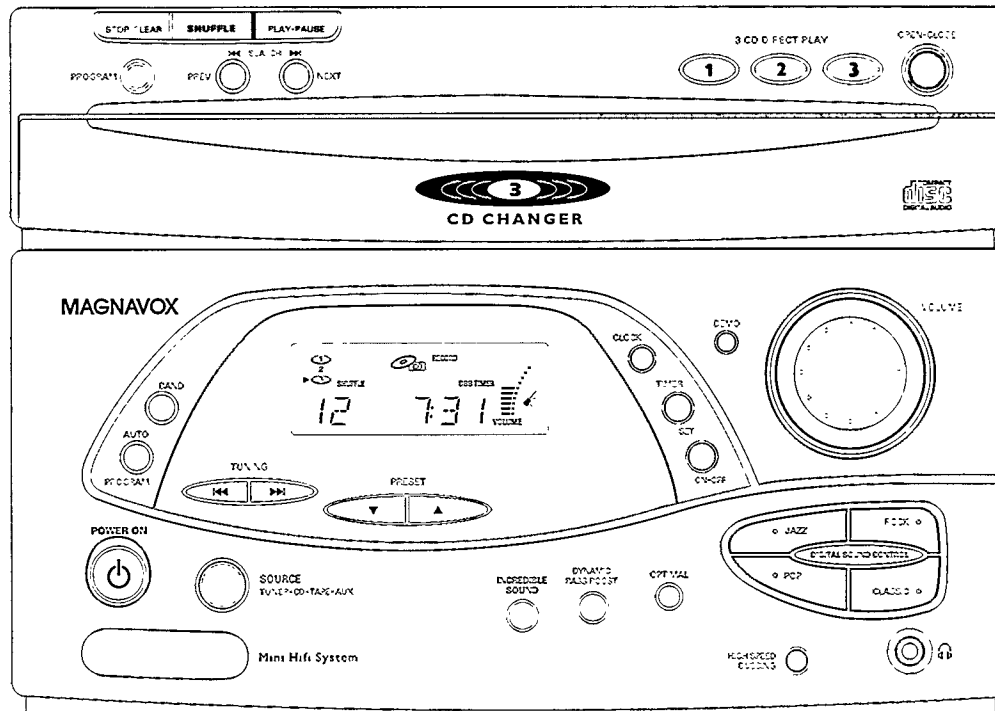


## Playing a Disc

- 1 Press **PLAY•PAUSE** (or **PLAY ►** on the remote control) to start playback.
  - The disc tray, track number and elapsed playing time of the current track appear on the display.
- To interrupt play, press **PLAY•PAUSE** (or **PAUSE II** on the remote control).
  - The playing time flashes.
- To resume play, press **PLAY•PAUSE** again (or **PLAY ►** on the remote control).
- 2 To stop play, press **STOP•CLEAR** (or **STOP ■** on the remote control).

### Note :

All the available discs will play once, then stop. When the CD has stopped playing, the set will switch to the standby mode automatically after 15 minutes if no button is pressed.

 When the CD tray is closed, you can play a CD directly by pressing the **3 CD DIRECT PLAY (1 – 3)** buttons. The CD player will stop at the end of playback of the selected disc.



## Selecting a desired track

### Selecting a desired track in the stop mode

- 1 Press **◀◀ PREV** or **NEXT ▶▶** ( **◀ PREV** or **NEXT ▶** on the remote control) until the desired track appears on the display.
- 2 Press **PLAY•PAUSE** (or **PLAY ►** on the remote control) to start playback.
  - The selected track number and elapsed playing time appear on the display.

### Selecting a desired track during play mode

- 1 Press **◀◀ PREV** or **NEXT ▶▶** ( **◀ PREV** or **NEXT ▶** on the remote control) until the desired track appears on the display.
  - The selected track number and elapsed playing time appear on the display.
- If you press **◀◀ PREV** once it will skip to the beginning of the current track and play the track again.

## Searching for a particular passage during playback

- Press and hold **SEARCH ◀◀** or **▶▶** (or **◀** or **▶** on the remote control) until the desired passage is located. During the search, the sound is played at a faster than normal rate and at a reduced volume. Playback returns to normal when **SEARCH ◀◀** or **▶▶** is released.

## Shuffle

**SHUFFLE** – playing all the available discs and their tracks in random order. It can also be used when tracks are programmed.

### To shuffle all the discs and tracks

- 1 Press **SHUFFLE**.
  - "SHUFFLE" flashes briefly on the display.
  - The SHUFFLE flag, the disc and the track selected at random appear on the display.
- The discs and the tracks will now be played in random order until you press **STOP•CLEAR**.
- 2 Press **SHUFFLE** again to resume normal playback.
  - The SHUFFLE flag disappears from the display.



## Programming Tracks

Programming tracks of a loaded CD is possible in the stop mode of the CD. The display will indicate the total tracks stored in the program. Up to 40 tracks can be stored in the memory in any order. When 40 tracks are stored and you attempt to store another track, the display will show "PROGRAM FULL".

- 1 Load the desired discs in the disc trays.
- 2 Press **PROGRAM** to start programming.
  - The PROGRAM flag flashes on the display.
- 3 Press the desired disc button to select the disc.
- 4 Press **◀◀ PREV** or **NEXT ▶▶** to select the desired track.
- 5 Press **PROGRAM** to store the track.
  - Repeat steps 3 to 5 to store other discs and tracks.
- 6 Press **STOP•CLEAR** once to end programming.
  - The total number of tracks programmed and total playing time will appear on the display.

### Playing the program

- 1 Press **PLAY•PAUSE** to start program playback.
  - The track number and elapsed playing time of the current track will appear on the display.
- 2 Press **STOP•CLEAR** to stop program playback.

### Note :

If you press any of the 3 CD DIRECT PLAY buttons, the set will play the selected disc, and the program will be ignored temporarily. The PROGRAM flag will also temporarily disappear from the display, then reappear when the playback for the selected disc ends.

### Reviewing the program

Reviewing of a program is only possible in the stop mode.

- Press **◀◀ PREV** or **NEXT ▶▶** repeatedly to review the programmed tracks.

### Erasing the program (in the stop position)

- Press **STOP•CLEAR**.
  - "PROGRAM CLEAR" appears on the display.

### Note :

The program is also erased when the set is switched off. If the CD carousel is opened, the tracks belonging to the outer two trays will be erased and "CLEAR" will flash on the display once.


## CD Recording

### During CD recording,

- it is not advisable to fast forward/rewind your cassette in TAPE DECK 2.
- it is not possible to listen to another sound source.

### CD Recording

- 1 Load a blank cassette (full spool to the left) into **TAPE DECK 1**.
- 2 Press **SOURCE** to select CD.
- 3 Load a disc into the disc tray.
- 4 Press **◀◀ PREV** or **NEXT ▶▶** to select the desired track.
  - If desired, you can program the tracks in the order you want them to be recorded (see Programming Tracks).
- 5 Press **RECORD** on cassette **TAPE DECK 1** to start recording.
  - The RECORD flag flashes on the display.
  - The CD starts playing.
- 6 Press **STOP•CLEAR** on the CD player and **STOP•OPEN** on cassette **TAPE DECK 1** to stop recording.

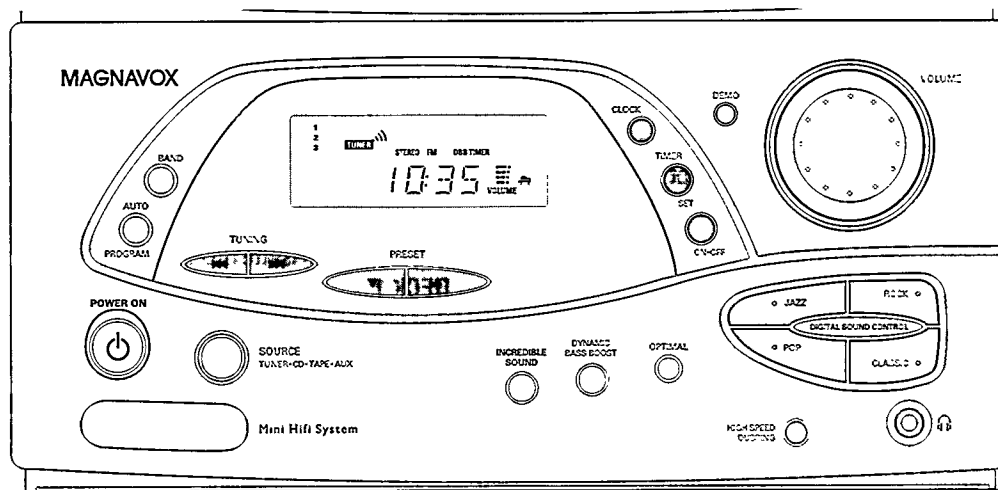

## Setting the clock

The clock will display in 12-hour mode, e.g. 1 PM or 12 AM.

- 1 Press **CLOCK**.  
→ "12:00 AM" starts flashing.
- 2 Set the hour with **PRESET** ▼ or ▲.
- 3 Set the minute with **TUNING** |◀◀ or ▶▶| .
- 4 Press **CLOCK** again to store the setting.  
→ The clock starts running.

### Note:

- When a power interruption occurs, the clock settings are erased, and "12:00 AM" will flash on the display.

## Setting the Timer

- The system can switch on to TUNER or CD mode automatically at a preset time. It can serve as an alarm to wake you up. A half an hour after the preset time, the system will return to the standby mode if no button is pressed.
- Before setting the timer, make sure the clock is set correctly.
- The timer works only once for each setting.
- **The volume of the timer will be at the last setting before the set is switched off.**

## Timer Setting

- 1 Press **TIMER SET**.  
→ The **TIMER** flag flashes.
- 2 Press **PRESET** ▲ to select the desired sound source.  
→ The display will switch as follows:  
TUNER → CD → TUNER .
- 3 Press **TIMER SET** to confirm your selection.  
→ The display will show " ON 12:00 AM" and "12:00 AM" flashes.
- 4 Press **PRESET** ▼ or ▲ to set the hour for the timer to start.
- 5 Press **TUNING** |◀◀ or ▶▶| to set the minutes for the timer to start.
- 6 Press **TIMER SET** to store the start time.  
→ The **TIMER** is now set.  
→ The **TIMER** flag remains lit.

## To stop the **TIMER**

- Press **TIMER ON•OFF** on the set.  
→ The **TIMER** is now off.

## To start the **TIMER** again

- Press **TIMER ON•OFF** on the set.  
→ The display will show the last set start time of the **TIMER** and its flag.  
→ The **TIMER** flag remains lit.

### Note:

1. If the source selected is TUNER, the last tuned frequency will be switched on.
2. If the source selected is CD, the first track of the last selected disc will be played. If the CD trays are empty, the TUNER source will be selected instead.

# Maintenance

# Specifications


## Maintenance

### Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

### Cleaning Discs


- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.

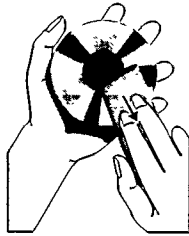

- Do not use solvents such as benzene, thinner, commercially available cleaners, or anti-static spray intended for analog records.

### Cleaning the Heads and the Tape Paths

- To ensure good recording and playback quality, clean the heads (A) and (B), the capstan (C), and pressure roller (D) after every 50 hours of tape operation.

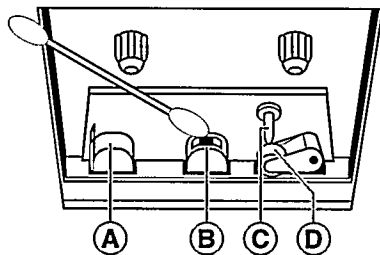

- Use a cotton swab slightly moistened with cleaning fluid or alcohol.

### Demagnetizing the heads

- Use a demagnetizing cassette available at your dealer.

## Specifications

### AMPLIFIER

Output power	
2 channel (front only) .....	2 x 100 W RMS
4 channel .....	4 x 35 W RMS
2 channel output only	
Power band width .....	40 - 20000 Hz
Frequency response .....	40 - 20000 Hz
Signal-to-noise ratio .....	≥ 88 dBA
Stereo separation .....	≥ 70 dB (1 kHz)
Input sensitivity	
Aux .....	400 mV
Outputs	
Headphones (3.5mm) .....	32 Ω - 1000 Ω
Loudspeakers .....	≥ 6Ω

### TUNER

FM wave range .....	87.5 - 108 MHz
AM wave range .....	530 - 1700 kHz
Sensitivity at 300 Ω, 26 dB S/N ratio, FM mono .....	13.8μV
46 dB signal-to-noise ratio, FM Stereo .....	309μV
FM Frequency response .....	63 - 12500 Hz (±3 dB)
Signal-to-noise ratio .....	≥ 50 dBA
Total Harmonic Distortion .....	< 3%

### CD PLAYER

Frequency range .....	20 - 20000 Hz
Signal-to-noise .....	≥ 86 dBA
Channel separation .....	≥ 60 dB
Total harmonic distortion .....	≤ 65 dB

### CASSETTE DECK

Frequency range	
Normal tape (type I) .....	80 - 14000 Hz (±5 dB)
Signal-to-noise ratio	
Normal tape (type I) .....	≥ 48 dBA
Wow and flutter .....	≤ 0.4% DIN

### CABINET

Material/finish .....	Metal and polystyrene
Dimensions (w x h x d) .....	685 x 310 x 366 (mm)
Weight with speakers .....	16 kg approx.
Weight without speakers .....	9 kg approx.

**Subject to modification**


# Troubleshooting Guide

**Warning! Under no circumstances should you try to repair the set yourself, as this will invalidate the warranty.**

- If a fault occurs, check the points listed below before taking the set in for repair.
- Should any problems persist after you have made these checks, consult your nearest dealer or service center.

Symptom	Cause	Remedy
<b>Radio Reception</b>		
The STEREO indicator flashes.	The signal is too weak.	Adjust the antenna.
Severe hum or noise	The signal is too weak. The TV or VCR is too close to the stereo system.	Adjust the antenna. Separate the stereo system from the TV or VCR. Connect an external antenna for better reception.
<b>Cassette Deck Operation</b>		
Recording is not possible.	No cassette in the cassette deck. The small tab has been broken.	Insert a blank cassette into the cassette deck. Put a piece of clear adhesive tape over the opening.
Recording or playback cannot be made or there is a decrease in audio level.	Dirty tape heads. Magnetic build-up in the record/playback head	See section on cassette deck maintenance. Use a demagnetizing cassette.
Excessive wow or flutter, or sound drop-out.	Contamination of the capstans or pressure rollers.	See section on cassette deck maintenance.
<b>CD Player Operation</b>		
"NO DISC" is displayed.	The disc is inserted upside down. Moisture condensation.  There is no disc in the selected CD tray. The CD is dirty, badly scratched or warped.	Place CD with printed side up. Wait until lens has adjusted to normal room temperature. Insert a CD. Replace or clean the CD.
<b>General</b>		
Set not working.	Set does not react when buttons are pressed.	Press POWER ON to switch the unit off, then switch it on again. Or, unplug the AC power plug from the wall outlet, then plug it in again.
No or poor sound.	Volume is not turned up. The headphones are connected. Speakers are not connected or are connected wrong.	Turn VOLUME clockwise. Disconnect the headphones. Check that the speakers are connected correctly. Make sure that the stripped speaker wire is clamped.
Reversed left and right sound.	Speakers are connected wrong.	Check the speaker connections and speaker location.
Lack of bass sound (or apparently imprecise location of musical instruments sound).	Speakers are connected wrong.	Check the speaker connection for proper phasing, red/black wires to red/black terminals.
Clock blinking.	There was a power outage.	Reset the clock.
Remote control has no effect on the set.	The distance to the system is too large. Batteries are inserted incorrectly. Batteries are dead. Wrong sound source is selected.	Reduce the distance. Insert the batteries correctly. Replace the batteries. Select the sound source before pressing the function button, (PLAY, PREV/NEXT, etc.)
Timer not working	Timer not on. Dubbing/recording is active.	Press TIMER ON•OFF on the set to switch on the timer.
"PRESS DEMO TO EXIT" is displayed.	Demo mode is switched on.	Press POWER ON or DEMO to switch off demo mode.


# Philips Consumer Electronics Company Factory Service Center Locations

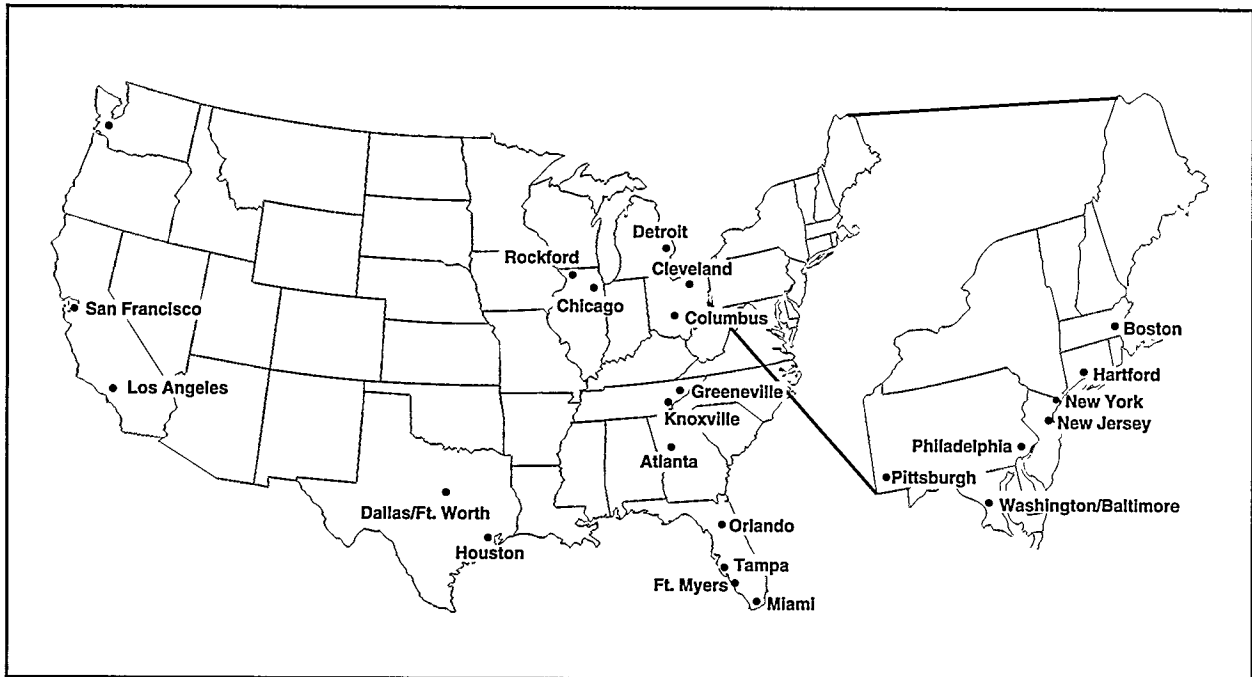

**NOTE:** If you reside in one of our Philips Factory Service Branch areas (see directory on back), you can contact the nearest Service Branch to obtain efficient and expedient repair for your product. If your product is In-Warranty, you should have proof-of-purchase to ensure No Charge Service. For Out-of-Warranty service, call the location nearest you.

**NOTA:** Si vous résidez dans une des régions desservies par une succursale de service après vente du fabricant Philips (voir liste ci-dessous), vous pourrez contacter la branche de service après vente la plus près de chez vous pour obtenir un service après vente rapide et efficace. Si le produit est sous garantie, il suffira de présenter une preuve d'achat pour bénéficier d'un service sans frais. Pour les produits non couverts par la garantie, contactez le centre le plus près de chez vous.

**NOTA:** Si Ud. reside en una de nuestras zonas para sucursales Philips de servicio al de fábrica (ver directorio más abajo), Ud. puede comunicarse con la sucursal de servicio más cercana para obtener una reparación oportuna y eficaz de su producto. Si su producto está todavía bajo garantía, Ud. debe presentar comprobante de compra para no ocasionar ningunos cargos por servicio. Para servicio después del vencimiento de la garantía, llame al lugar más cercano de los abajo indicados.

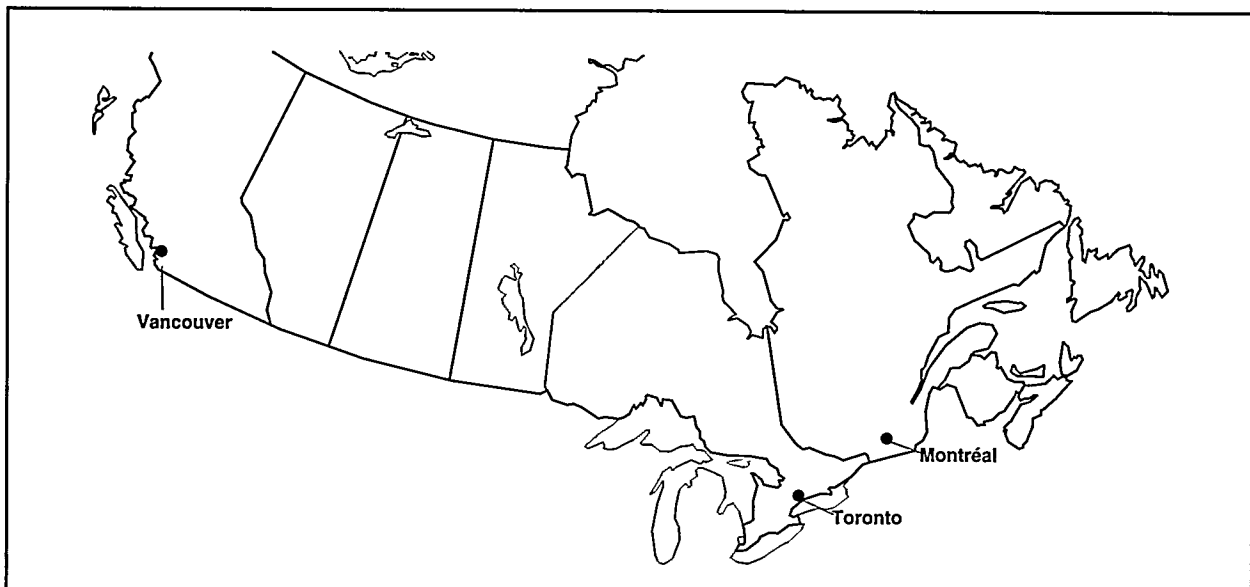

**QUALITY SERVICE IS AS CLOSE AS YOUR TELEPHONE! SIMPLY LOOK OVER THE LIST BELOW FOR THE NUMBER OF A FACTORY SERVICE CENTER NEAR YOU. YOUR PRODUCT WILL RECEIVE EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE, AND YOU WILL RECEIVE PEACE OF MIND, KNOWING YOUR PRODUCT IS BEING GIVEN THE EXPERT ATTENTION OF PHILIPS' FACTORY SERVICE. AND, IF THE PHONE NUMBER LISTED FOR YOUR AREA IS LONG DISTANCE, CALL 1-800-242-9225 FOR FACTORY SERVICE.**

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS. PLUS DE 600 CENTRES DE RÉCEPTION DE PRODUITS À RÉPARER À TRAVERS LE PAYS: CONTACTER LE CENTRE DE SERVICE AUX CONSOMMATEURS LE PLUS PROCHE POUR SAVOIR L'EMPLACEMENT DE CES DÉPÔTS DANS UN RAYON DE 50 À 75 MILES (80 KM À 120 KM) DU CENTRE DE SERVICE LOCAL.

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO. MAS DE 600 SITIOS POR TODO EL PAIS PARA LA RECEPCION DE PRODUCTOS NECESITADOS DE REPARACIONES: COMUNICARSE CON EL CENTRO DE SERVICIO DE FABRICA MAS CERCANO PARA ESTOS LUGARES DENTRO DE UN RADIO DE 80 A 120 KM (50 A 75 MILLAS) DEL CENTRO DE SERVICIO LOCAL.

<p><b>Atlanta–Athens–Macon–Chattanooga, TN–North Georgia Area</b> 200 North Cobb Parkway Building 100 Suite 120 Marietta, GA 30062 (700) 795-30062</p>	<p><b>Connecticut–Rhode Island–Springfield, MA Area</b> 1294 Blue Hills Avenue Bloomfield, CT 06002 (860) 726-9612</p>	<p><b>Los Angeles–San Diego Area</b> 2910 E. LaPalma, Suite E Anaheim, CA 92806 (714) 238-7250</p>	<p><b>Pittsburgh, PA–Steubenville, OH–Wheeling/Morgantown, WV Area</b> 2891 Banksville Road Pittsburgh, PA 15216 (412) 563-8020</p>
<p><b>Boston–Southern Maine–Southern New Hampshire Area</b> 1 North Avenue Burlington, MA 01803 (617) 272-4825</p>	<p><b>Dallas–Ft. Worth Area</b> 13375 Stemmons Freeway, Suite 200 Dallas, Texas 75234 (214) 243-4775</p>	<p><b>Miami–Southeast Florida Area</b> 2099 W. Atlantic Blvd. Pompano Beach, FL 33069 (305) 978-0467</p>	<p><b>Rockford–Kenosha–Beloit–Madison Area</b> 5602 N. Second Loves Park, IL 61111 (815) 654-7343</p>
<p><b>Charlotte–Winston Salem–Greensboro–Chapel Hill–Raleigh–Spartanburg, SC Area</b> 520-G Clanton Road Charlotte, NC 28217 (704) 529-6330</p>	<p><b>Detroit/Toledo Area</b> 25173 Dequindre Madison Heights, MI 48071 (810) 544-2110</p>	<p><b>North NJ–Staten Island–Rockland County, NY Area</b> 140J Commerce Way Totowa, NJ 07512 (201) 890-7200</p>	<p><b>San Francisco–Oakland–San Jose Area</b> 3370 Montgomery Drive Santa Clara, CA 95054 (408) 492-9013</p>
<p><b>Chicago–Gary Area</b> 1360 W. Hamilton Parkway Itasca, IL 60143 (708) 775-0990</p>	<p><b>Knoxville–Greeneville–Tri Cities–East Tennessee Area</b> 6700 D. Papermill Road Papermill Plaza Knoxville, TN 37919 (423) 584-6614</p>	<p><b>New York Metro Area</b> 116 Charlotte Avenue Hicksville, NY 11801 (516) 933-1780 Nassau County</p>	<p><b>Seattle–Tacoma/Olympia Area</b> 1055 Andover Park East Tukwila, WA 98188 (206) 575-6288</p>
<p><b>Cleveland–Akron–Youngstown Area</b> 24090 Detroit Road Westlake, OH 44145 (216) 899-2040</p>	<p><b>Ft. Myers–Naples–Southwest Florida Area</b> 11601 Cleveland Ave., Suite 15 Ft. Myers, FL 33907 (813) 278-4242</p>	<p><b>Orlando–Jacksonville–North Florida–Southeast Georgia Area</b> 2452 Sand Lake Road Orlando, FL 32809 (407) 857-8998</p>	<p><b>Tampa–St. Petersburg–Sarasota Area</b> Center Point Business Park, Building B-1, Suite 100 1911 U.S. Hwy. 301 North Tampa, FL 33619 (813) 621-8181</p>
<p><b>Columbus–Dayton–Cincinnati Area</b> 633 Busch Blvd Columbus, Ohio 43229 (614) 781-2605</p>	<p><b>Houston–Galveston–Beaumont–Austin–San Antonio Area</b> 1110 North Post Oak Road Suite 100 Houston, TX 77055 (713) 682-3990</p>	<p><b>Philadelphia/S. New Jersey Area</b> 352 Dunks Ferry Road Bensalem, PA 19020 (215) 638-7500</p>	<p><b>Washington, DC–Baltimore–Richmond, VA Area</b> 6671-J Santa Barbara Road Elkridge, MD 21227 (410) 796-0105</p>

HOW YOU CAN OBTAIN EFFICIENT AND EXPEDIENT CARRY-IN, MAIL-IN, OR IN-HOME SERVICE IN CANADA FOR YOUR PRODUCT THROUGH A PHILIPS CONSUMER SERVICE CENTER

COMMENT OBTENIR NOTRE SERVICE APRÈS VENTE RAPIDE ET EFFICACE SOIT PAR COURRIER, À DOMICILE, OU EN SE PRÉSENTANT À UN CENTRE DE SERVICE PHILIPS

CÓMO OBTENER UN SERVICIO OPORTUNO Y EFICIENTE POR CORREO, EN CASA O EN PERSONA EN EL CANADA PARA SU PRODUCTO A TRAVÉS DE UN CENTRO PHILIPS DE SERVICIO AL CONSUMIDOR

<p><b>TORONTO</b> 601 Milner Avenue Scarborough, Ontario M1B 1M8 (416) 754-6064 (Tel.) (416) 292-5161 (Tel.) (416) 754-6290 (Fax)</p>	<p><b>MONTRÉAL</b> 4977 Levy Street St. Laurent, Québec H4R 2N9 (514) 956-0120 (Tel.) (514) 956-0828 (Fax)</p>	<p><b>VANCOUVER</b> 1741 Boundary Road Vancouver, B.C. V5M 3Y7 (604) 294-3441 (Tel.) (604) 294-3574 (Fax)</p>
---	--	---

MAC2929 8/95










FW 391C  
FW 392C

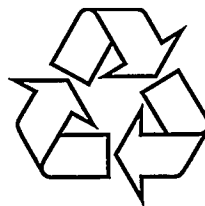

**Philips Consumer Electronics Company**

A Division of Philips Electronics North America Corporation, Knoxville, Tennessee 37914-1810, USA

3139 116 15981  
IB7613T001

Printed In Malaysia

TL-9664/37-3

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>