

User guide

MAGNAVOX
SMART. VERY SMART.

MAS85 MINI HI-FI SYSTEM



Thank you for choosing Magnavox

Need help fast?

Read your Quick Use Guide and/or
Owner's manual first for quick tips
that make using your magnavox product
more enjoyable.

If you have read your instructions
and still need assistance,
you may access our online help at

www.usasupport.magnavox.com

or call

1-800-705-2000

**while with your product
(and Model / Serial number)**



CAUTION

 
Use of controls or adjustments or performance of procedures other than herein may result in hazardous radiation exposure or other unsafe operation.

ATTENTION

Une utilisation des commandes ou des réglages ou l'exécution de procédures différentes à celles énoncées ici peuvent mener à une exposition dangereuse aux radiations ou autre opération dangereuse.

ATENCIÓN

El uso de mando o ajustes o la ejecución de métodos que no sean los aquí descritos puede ocasionar peligro de exposición a radiación.

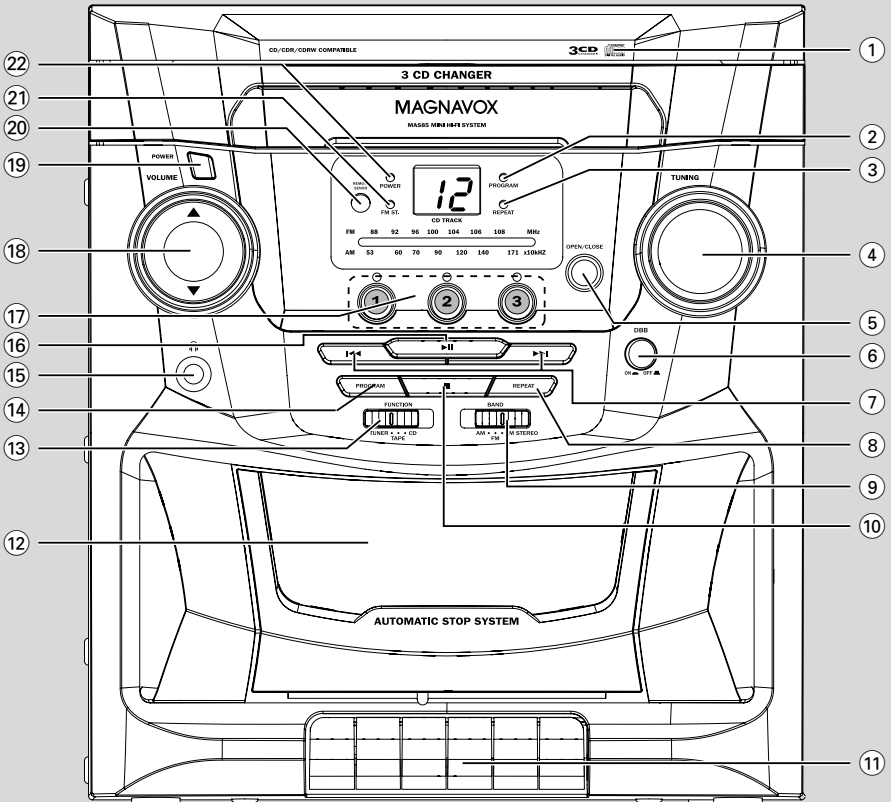

Return your Product Registration Card today to get the very most from your purchase.

Registering your model with Magnavox makes you eligible for all of the valuable benefits listed below, so don't miss out. Complete and return your Product Registration Card at once to ensure:

*Proof of Purchase

Returning the enclosed card guarantees that your date of purchase will be on file, so no additional paperwork will be required from you to obtain warranty service.

*Product Safety Notification


By registering your product, you'll receive notification - directly from the manufacturer - in the rare case of a product recall or safety defect.


*Additional Benefits of Product Ownership

Registering your product guarantees that you'll receive all of the privileges to which you're entitled, including special money-saving offers.

Know these safety symbols



 This “bolt of lightning” indicates uninsulated material within your unit may cause an electrical shock. For the safety of everyone in your household, please do not remove product covering.

 The “exclamation point” calls attention to features for which you should read the enclosed literature closely to prevent operating and maintenance problems.

For Customer Use

Enter below the Serial No. which is located on the rear of the cabinet. Retain this information for future reference.

Model No. _____

Serial No. _____

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS EQUIPMENT TO RAIN OR MOISTURE.

CAUTION: To prevent electric shock, match wide blade of plug to wide slot, fully insert.

MAGNAVOX

***Congratulations on your purchase,
and welcome to the “family!”***

Dear Magnavox product owner:

Thank you for your confidence in Magnavox. You've selected one of the best-built, best-backed products available today. We'll do everything in our power to keep you happy with your purchase for many years to come.

As a member of the Magnavox “family,” you're entitled to protection by one of the most comprehensive warranties and outstanding service networks in the industry. What's more, your purchase guarantees you'll receive all the information and special offers for which you qualify, plus easy access to accessories from our convenient home shopping network.

Most importantly, you can count on our uncompromising commitment to your total satisfaction.

 
All of this is our way of saying welcome - and thanks for investing in a Magnavox product.

P.S. To get the most from your Magnavox purchase, be sure to complete and return your Product Registration Card at once.

IMPORTANT SAFETY INSTRUCTIONS


1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use this apparatus near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.

9. Do not defeat the safety purpose of the polarized or grounding-type plug.



A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong are provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.

10. Protect the power cord from being walked on or pinched, particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.

12.  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.

13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.

15. Battery usage **CAUTION** – To prevent battery leakage which may result in bodily injury, property damage, or damage to the unit:

Install **all** batteries correctly, + and - as marked on the unit.

Do not mix batteries (**old** and **new** or **carbon** and **alkaline**, etc.).

Remove batteries when the unit is not used for a long time.

16. Apparatus shall not be exposed to dripping or splashing.
17. Do not place any sources of danger on the apparatus (e.g. liquid filled objects, lighted candles).

18. This product may contain lead and mercury. Disposal of these material may be regulated due to environment considerations. **For disposal or recycling information, please contact your local authorities or the Electronic Industries Alliance : www.eiae.org.**

EL 6475-E004: 03/12

Class II equipment symbol



This symbol indicates that the unit has a double insulation system

English 6

Español 25

Español 43

English

Français

Español

General Information

Supplied accessories	9
Environmental information	9
Maintenance	9
Safety information	9

Controls

Controls on the system	10
Remote control	11

Installation

Rear connections	12
Speakers connection	
FM antenna	
Using AC power	13
Inserting batteries into the remote control .	13

Basic Functions

Switching on/to standby and and selecting functions	14
Volume control	14
Sound control	14
DBB (Dynamic Bass Boost)	
Reset	14

CD Operation

Discs for playback	15
Playing discs	15
Selecting and searching	15-16
Selecting a different track	
Finding a passage within a track	
Changing discs	16
Programming tracks	16
Reviewing the program	
Erasing the program	
Different play modes: REPEAT	16

Radio Reception

Tuning to radio stations	17
--------------------------------	----

Tape Operation/Recording

Loading tapes	17
Playing tapes	17
General information on recording	18
Preparation for recording	18
One touch recording	19

Specifications	19
-----------------------------	----

Troubleshooting	20
------------------------------	----

This system complies with the FCC rules, Part 15 and with 21 CFR 1040.10.

Operation is subject to the following two conditions:

- **This device may not cause harmful interference, and**
- **This device must accept any interference received, including interference that may cause undesired operation.**

Supplied accessories

- 2 speaker boxes
- remote control

Environmental information

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet).

Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

Maintenance

Cleaning the Cabinet

- Use a soft cloth slightly moistened with a mild detergent solution. Do not use a solution containing alcohol, spirits, ammonia or abrasives.

Cleaning Discs

- When a disc becomes dirty, clean it with a cleaning cloth. Wipe the disc from the center out.
- Do not use solvents such as benzene, thinner, commercially available cleaners, or antistatic spray intended for analog records.

 


Cleaning the disc lens

- After prolonged use, dirt or dust may accumulate at the disc lens. To ensure good playback quality, clean the disc lens with Philips CD Lens Cleaner or any commercially available cleaner. Follow the instructions supplied with cleaner.

Cleaning the Heads and the Tape Paths

- To ensure good recording and playback quality, clean the heads (A) and (B), the capstan(s) (C), and pressure roller(s) (D) after every 50 hours of tape operation.
- Use a cotton swab slightly moistened with cleaning fluid or alcohol.
- You can also clean the heads by playing a cleaning tape once.

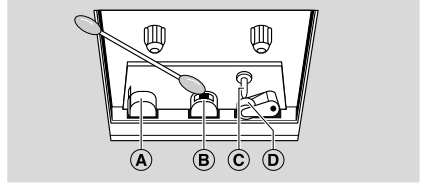

Demagnetizing the heads

- Use a demagnetizing tape available at your dealer.

Safety information


- Place the system on a flat, hard and stable surface.
- Do not expose the system, batteries or discs to excessive moisture, rain, sand or heat sources caused by heating equipment or direct sunlight.
- Place the system in a location with adequate ventilation to prevent internal heat build-up in your system. Allow at least 10 cm (4 inches) clearance from the rear and the top of the unit and 5 cm (2 inches) from each side.
- The mechanical parts of the set contain self-lubricating bearings and must not be oiled or lubricated.

Controls on the system


- ① **Disc trays**
- ② **PROGRAM** indicator
- ③ **REPEAT** indicator
- ④ **TUNING** rotary
 - tunes to radio stations
- ⑤ **OPEN/CLOSE**
 - press to open/close the disc tray
- ⑥ **DBB**
 - turns the bass enhancement on/off
- ⑦ **⏮ / ⏭**
 - skips or searches CD tracks backwards/ forwards
- ⑧ **REPEAT**
 - selects repeat modes
- ⑨ **BAND (AM•FM•FM STEREO)**
 - selects waveband
- ⑩ **STOP ■**
 - stops CD playback;
 - erases a CD program
- ⑪ **Tape deck keys**
 - RECORD ..** starts recording
 - ▶** starts playback
 - ⏮ / ⏭** fast rewinds/winds a tape
 - ▲** stops playback;
 - opens the tape holder
 - ||** interrupts playback or recording

- ⑫ **Tape deck**
- ⑬ **FUNCTION:TUNER,TAPE, CD**
 - selects CD, tape or radio source of sound
- ⑭ **PROGRAM**
 - programs tracks and reviews the program
- ⑮ **🎧**
 - 3.5 mm headphone socket
 - Helpful hints:**
 - Adjust the volume to a moderate level before you plug in the headphones.
 - Connecting headphones will switch off the speakers.
- ⑯ **▶ ||**
 - starts or pauses CD playback
- ⑰ **DISC: 1/ 2/ 3**
 - selects a disc tray for playback
- ⑱ **VOLUME ▲, ▼**
 - adjusts the volume level
- ⑲ **POWER**
 - switches the system on or to standby mode.
- ⑳ **REMOTE SENSOR**
 - sensor for the infrared remote control
 - Helpful hints:** Always point the remote control towards this sensor.
- ㉑ **FM ST. indicator**
- ㉒ **Power indicator**

 Remote control

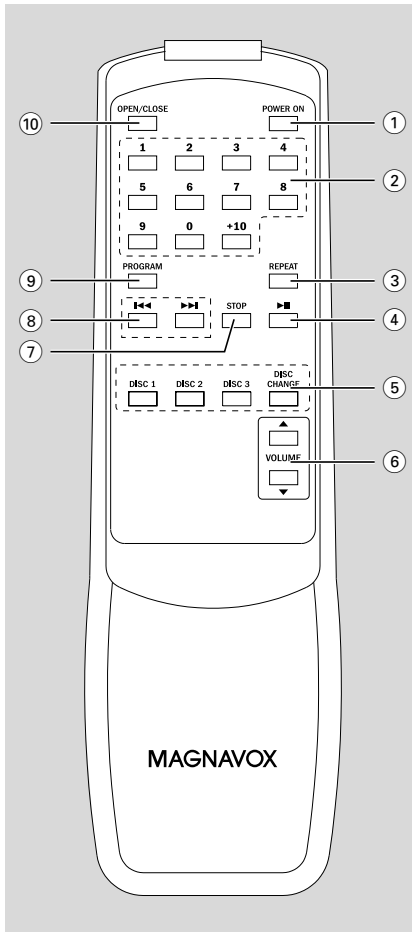

- ① **POWER ON**
 - switches the system on or to standby mode
- ② **DIGITS 0 - +10**
 - CD: selects a track number
- ③ **REPEAT**
 - selects repeat modes
- ④ **▶ ||**
 - starts or pauses CD playback
- ⑤ **DISC**
DISC 1/DISC 2/DISC 3
 - selects a disc tray for playback
- DISC CHANGE**
 - changes disc trays
- ⑥ **VOLUME ▲, ▼**
 - adjusts the volume level
- ⑦ **STOP**
 - stops CD playback
 - erase a CD program
- ⑧ **◀◀ / ▶▶**
 - skips or searches CD tracks backwards/ forwards
- ⑨ **PROGRAM**
 - programs tracks and reviews the program
- ⑩ **OPEN/CLOSE**
 - press to open/closes the disc tray

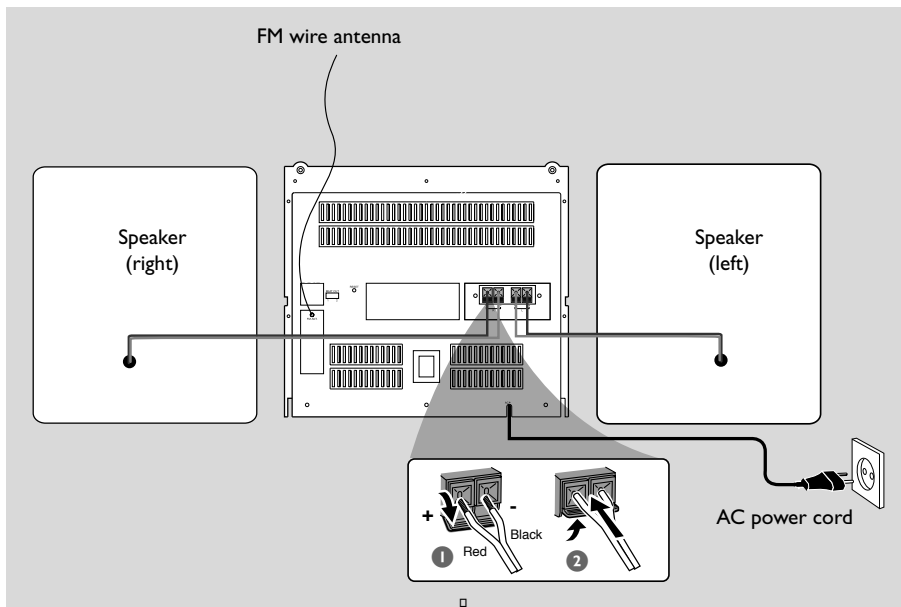 

Rear connections

 
Warning:

Never make or change connections with the power supply switched on.

A Speakers connection

Use the supplied speakers only. Using other speakers can damage the set or the sound quality will be negatively affected.

- Connect the speaker wires to the SPEAKERS terminals, right speaker to "R" and left speaker to "L", red (labelled red) wire to "+" and black (labelled black) wire to "-".

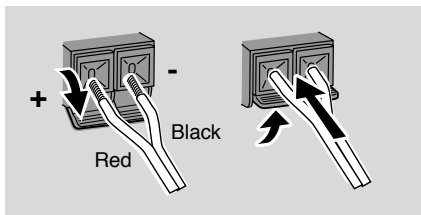

Press the clip of the red terminal and fully insert the stripped portion of the coloured (or marked) speaker cable into the socket, then release the clip.

Press the clip of the black terminal and fully insert the stripped portion of the black (or unmarked) speaker cable into the socket, then release the clip.

B FM antenna

- 1 Extend the wire antenna and move the antenna in different positions for optimal reception (as far away as possible from the TV, VCR or other radiation sources).
- 2 Fix the antenna's end to the wall.

Using AC power

 
- 1 Make sure all connections have been made before switching on the power supply.
- 2 Connect the power cable supplied to **AC ~** and to the wall socket. This switches on the power supply.

When the system is switched to standby, it is still consuming some power. **To disconnect the system from the power supply completely, remove the power plug from the wall socket.**

The type plate is located on the rear of the set.

Inserting batteries into the remote control

Insert two batteries type R06 or AA into the remote control with the correct polarity as indicated by the "+" and "-" symbols inside the battery compartment.

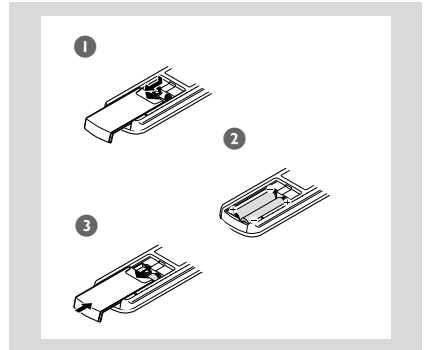


CAUTION!

- Remove batteries if they are exhausted or will not be used for a long time.
- Do not use old and new or different types of batteries in combination.
- Batteries contain chemical substances, so they should be disposed off properly.

Basic Functions

Switching on/to standby and selecting functions

 - 1 Press **POWER** to switch on (or **POWER ON** on the remote control).
→ The **POWER indicator** lights up
→ The system switches to the last source selected.
- 2 To select your function, push **FUNCTION** to **TUNER, TAPE** or **CD**.
- 3 Press **POWER** to switch the system to standby.

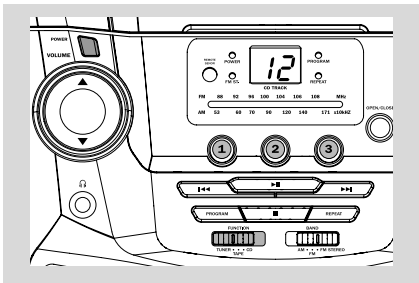

Volume control

 
- 1 Check the system is switched on.
- 2 Adjust the volume with **VOLUME** control.

Helpful hints:

– In the standby mode, the volume level will be retained in the system's memory.

IMPORTANT!

– Adjust the volume to a moderate level before you switch the system to standby mode or plug in the headphones.

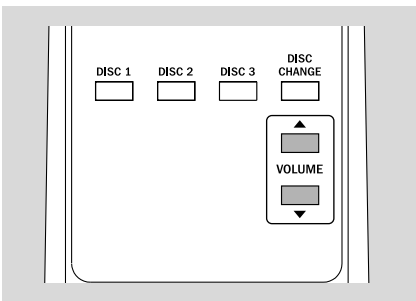


Sound control

- On the set, Press **DBB (Dynamic Bass Boost)** once or more to turn bass enhancement on or off.

Helpful hints:

 
– Some discs or tapes might be recorded in high modulation, which causes a distortion at high volume. If this occurs, switch off **DBB** or reduce the volume.

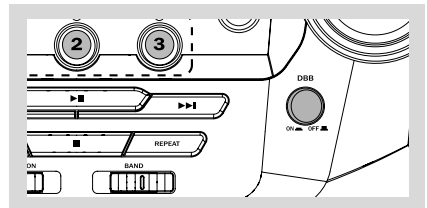

Reset

If desired, you can restore your system to its default setting.

 - 1 Remove the power plug from the wall socket.
- 2 Use a ballpoint pen to press the **RESET** for more than 30 seconds.
- 3 Reconnect the power plug .
→ The system is restored to its default setting.

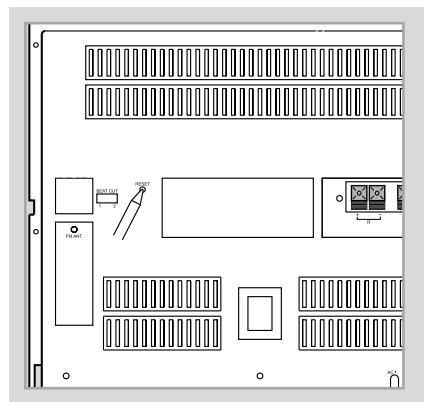

Discs for playback

This system can playback all digital audio CD, finalized digital audio CD-Recordable (CDR) discs and finalized digital audio CD-Rewritable (CDRW) discs.

 


IMPORTANT!

- This system is designed for regular discs. Therefore, do not use any accessories such as disc stabilizer rings or disc treatment sheets, etc., which may jam the changer mechanism.
- Do not load more than one disc into each tray.
- CDs encoded with copyright protection technologies by some record companies may be unplayable by this system.

Playing discs

- 1 Press **POWER** to on, then push **FUNCTION** to **CD**.
- 2 Press **OPEN/CLOSE** to open the disc trays, and load your discs in the two trays.

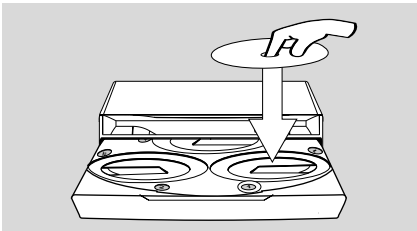

- To load a third disc, press **DISC CHANGE** (on the remote control) to rotate the disc trays.

Helpful hints:

- Make sure the disc label is facing up.
- 3 Press **OPEN/CLOSE** to close the disc trays,
 - A lighted DISC button indicates that a disc is being read in the disc tray.
 - Display shows: --, 00 and later, the total number of tracks.
 - 4 Press **▶||** to start playback.
 - Display shows: current track number.




- To start playback from a selected disc tray, press **DISC 1, 2** or **3**.
- 5 To pause playback, press **▶||**. Press **▶||** again to resume playback.
- 6 To stop playback, press **STOP ■**.
- 7 To remove the disc, press **OPEN/CLOSE** to open the disc trays.
- If necessary, press **DISC CHANGE** (on the remote control) to rotate the disc trays.

Helpful hints: CD playback will also stop when:
– you select **TUNER** or **TAPE**.

Selecting and searching

Selecting a different track

 - Briefly press **◀◀** or **▶▶** once or several times to skip to the beginning of the current, previous or subsequent track.
 - or
 - Use the digit keys on the remote control to select the track number directly. e.g.
 - Track 2: Press 2
 - Track 10: Press +10,
 - Track 12: Press +10 and then, 2
 - Track 22: Press +10, +10 and then, 2.

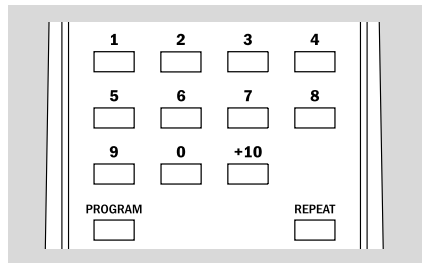

- In the pause/stop position, press **▶||** to start playback.
 - Playback of selected track starts.

CD Operation

Finding a passage within a track

- 1 During playback, press and hold **◀◀** or **▶▶**.
→ The CD plays at a high speed.
- 2 When you recognize the passage you want, release **◀◀** or **▶▶**.
→ Normal playback resumes.

Changing discs

- Press **DISC CHANGE** (on the remote control), or **DISC 1/2/3** to select a tray.

 
Helpful hints:

– Make sure that the disc tray you select is loaded. It will be no response if an unloaded disc tray is selected.

Programming tracks

You may store up to 30 tracks in the desired sequence. If you like, store any track more than once.

- 1 In the stop position, press **PROGRAM** to activate programming.
→ **PROGRAM** indicator flashes. Display shows **01**, indicating the start of the program.
→ **00** flashes for you to program a track.

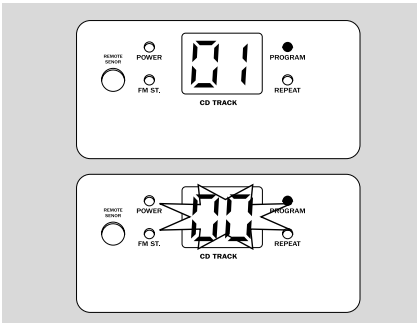

- 2 Press **digits 0 - +10** on remote control or **◀◀** or **▶▶** to select your desired track. (See **Selecting a different track**)
- If necessary, press **DISC 1/ 2/ 3** to select a disc tray.
- 3 Press **PROGRAM** to store the desired track number:
→ Display shows **02** (up to 30 in sequence), indicating the next program location available.
→ **00** flashes for you to program the next track.

- 4 Repeat steps **2** to **3** to select and store all desired tracks in this way.
- 5 To play your program, press **▶||**.
→ **PROGRAM** indicator lights up.

Helpful hints:

– If you store more than 30 tracks, the display will show the 1st track in the program. At this time, you can still store a new track, but the new track will replace the 1st track in the program.
– When playback of your program comes to the stop position, your set will return to normal playback. To re-enter program mode, press **PROGRAM** in the stop position.

Reviewing the program

- In the stop position, press repeatedly **PROGRAM** to see your stored track numbers.

Helpful hints:

– Display first shows the number of program location and then, the number of the track stored here.

Erasing the program

- You can erase the contents of the memory by:
– selecting **TUNER** or **TAPE** sound source;
– in the stop position, press **PROGRAM** to enter program mode and then, press **REPEAT**.
→ **PROGRAM** indicator turns off.

Different play modes: REPEAT

You can select and change the play modes before or during playback, and combine the modes **REPEAT** or **REPEAT** with **PROGRAM**.

REPEAT (lights up) – plays current track continuously.
REPEAT (flashes) – repeats current disc/program.


- 1 To select play modes, press once or more **REPEAT**.
- 2 Press **▶||** to start playback if in the stop position.
- 3 To return to normal playback, press **REPEAT** repeatedly until the **REPEAT** indicator turns off.
→ You can also press **REPEAT** to cancel your play modes.

Tuning to radio stations

- 1 Press **POWER** to on, then push **FUNCTION** to **TUNER**.
- 2 Adjust **BAND** to select your desired waveband, **AM** or **FM ST**.
- 3 Turn **TUNING** to tune to a station.
- **FM ST**. lights up for stereo FM reception.

To improve radio reception:

 - For FM, extend and turn the wire antenna for best reception.
To tune to a weak FM station, adjust **BAND** to FM (mono).
- For AM, the set uses a built-in antenna. Direct this antenna for best reception by turning the whole set.

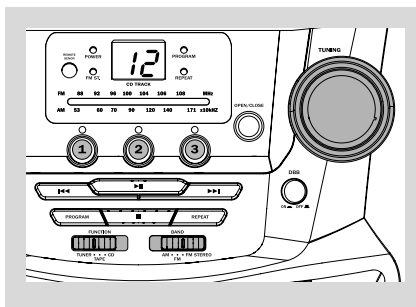


Tape Operation

IMPORTANT!

- Before playing a tape, check and tighten slack tape with a pencil. Slack tape may jam or burst in the mechanism.
- C-120 tape is extremely thin and is easily deformed or damaged. It is not recommended for use in this system.
- Store the tapes at room temperature and do not put them too close to a magnetic field (for example, a transformer, TV or speaker).

Loading a tape

 - 1 Press **POWER** to on, then push **FUNCTION** to **TAPE**.
- 2 Press **▲▲** to open the tape deck door.
- 3 Load the tape with the open side downward and full spool to the left.

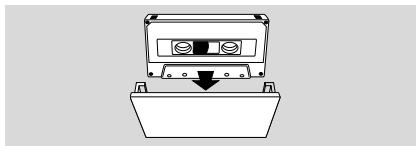

- 4 Close the tape deck door.

Playing tapes

- Press **▶**.
- To pause playback, press **||**. To resume playback, press **||** again.
- By pressing **◀◀ / ▶▶**, fast winding of the tape is possible in both directions. To stop fast winding, press **▲▲**.
- To stop the tape, press **▲▲**.


Helpful hints:

- During playback, the keys are automatically released at the end of a tape (unless **||** has been activated).
- During fast forwarding/rewinding, the keys will not be released at the end of a tape. To stop fast winding, press **▲▲**.

Tape Recording

General information on recording

 - For recording, use only tape of IEC type I (normal tape).
- The recording level is set automatically, regardless of the position of the Volume, DBB and so forth.
- The tape is secured at both ends with leader tape. At the beginning and end of the tape, nothing will be recorded for six to seven seconds.
- To prevent accidental recording, break out the tab on the left shoulder of the tape side you want to protect.

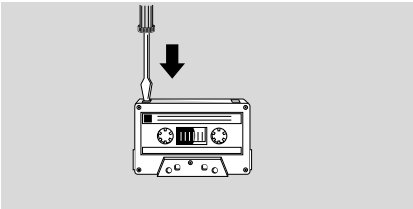

IMPORTANT!

– Recording is permissible if copyright or other rights of third parties are not infringed upon.

Preparation for recording

- 1 Load a recordable tape into tape deck with full spool to the left.
- 2 Prepare the source to be recorded.
CD – load a disc.
TUNER – tune to the desired radio station.

One touch recording

 
- 1 Push **FUNCTION** to **CD** or **TUNER** to select the source.
- If desired, program CD track numbers.
- 2 Start playback of the selected source.
- 3 Press **RECORD** ● to start recording.

To stop recording

- Press ■▲.

Helpful hints:

– When recording from AM (FW) radio stations, adjust **BEAT CUT** to 1 or 2, if necessary, to reduce interference.

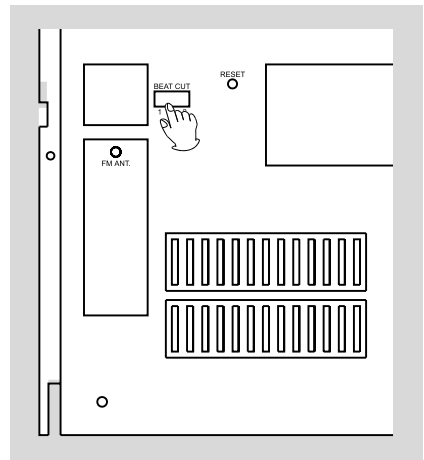

AMPLIFIER

Output power 4 W total power
 2 x 2 W RMS
 Signal-to-noise ratio ≥ 67 dBA (IEC)
 Frequency response 50 – 15000 Hz
 Impedance loudspeakers 8 Ω
 Impedance headphones 32 Ω -1000 Ω
 (1) (8 Ω , 60 Hz – 12.5 kHz, 10% THD)

CD PLAYER

Number of programmable tracks 30
 Frequency range 20 – 20000 Hz
 Signal-to-noise ratio ≥ 76 dBA
 Channel separation ≥ 25 dB (1 kHz)
 Total harmonic distortion < 3%

TUNER

FM wave range 87.5 – 108 MHz
 AM wave range 530 – 1700 kHz

TAPE DECK

Frequency response
 Normal tape (type I) 50 – 10000 Hz (8 dB)
 Signal-to-noise ratio
 Normal tape (type I) ≥ 48 dBA
 Wow and flutter $\leq 0.35\%$ DIN

SPEAKERS

System double port bass reflex
 Impedance 8 Ω
 Woofer 1 x 4" full range
 Dimensions (w x h x d)
 175 x 295 x 175 (mm)
 Weight 1.6 kg each

GENERAL INFORMATION

Material Polystyrene
 AC Power 120V / 60Hz
 Power Consumption
 Active 25W
 Standby ≤ 5 W
 Dimensions (w x h x d)
 265 x 295 x 360 (mm)
 Weight (without speakers) 6.3 kg

Specifications and external appearance are subject to change without notice.

Troubleshooting

WARNING

Under no circumstances should you try to repair the system yourself, as this will invalidate the warranty. Do not open the system as there is a risk of electric shock.

If a fault occurs, first check the points listed below before taking the system for repair. If you are unable to remedy a problem by following these hints, consult your dealer or Philips for help.

Problem	Solution
“no” is displayed.	<ul style="list-style-type: none">✓ Insert a suitable disc.✓ Check if the disc is inserted upside down.✓ Wait until the moisture condensation at the lens has cleared.✓ Replace or clean the disc, see “Maintenance”.✓ Use a finalized CD-RW or CD-R.
Radio reception is poor.	<ul style="list-style-type: none">✓ If the signal is too weak, adjust the antenna or connect an external antenna for better reception.✓ Increase the distance between the Mini HiFi System and your TV or VCR.
Recording or playback cannot be made.	<ul style="list-style-type: none">✓ Clean deck parts, see “Maintenance”.✓ Use only NORMAL (IEC I) tape.✓ Apply a piece of adhesive tape over the missing tab space.
The system does not react when buttons are pressed.	<ul style="list-style-type: none">✓ Reset the system (see RESET chapter),
Sound cannot be heard or is of poor quality.	<ul style="list-style-type: none">✓ Adjust the volume.✓ Disconnect the headphones.✓ Check that the speakers are connected correctly.✓ Check if the stripped speaker wire is clamped.
The left and right sound outputs are reversed.	<ul style="list-style-type: none">✓ Check the speaker connections and location.
The remote control does not function properly.	<ul style="list-style-type: none">✓ Reduce the distance between the remote control and the system.✓ Insert the batteries with their polarities (+/- signs) aligned as indicated.✓ Replace the batteries.✓ Point the remote control directly towards the IR sensor.

MAGNAVOX LIMITED WARRANTY

Six (6) Months Free Product Exchange

MAGNAVOX warrants this product against defect in material or workmanship, subject to any conditions set forth as follows:

PROOF OF PURCHASE:

You must have proof of the date of purchase to exchange the product. A sales receipt or other document showing the product and the date that you purchased the product as well as the authorized retailer included, is considered such proof.

COVERAGE:

Warranty coverage begins the day you buy your product. For a period of six (6) months from the date of purchase, if the product is determined to be defective, Magnavox will exchange the defective product with a new or renewed product, at its option, at no charge. The replacement product is covered only for the warranty period of the original product. When the warranty on the original product expires, the warranty on all replaced products also expires. When it is necessary for you to ship the product to Magnavox for exchange, you will pay the shipping cost for shipment to Magnavox. Magnavox will pay the shipping costs when returning a product to you.

Note: The exchange model supplied will be the most comparable one in Magnavox current inventory. Shipping of your product to Magnavox implies intent to follow the specified requirements of the warranty and exchange program. Product received by Magnavox cannot be returned. Replacement product can only be sent if all warranty requirements are met. Failure to follow all requirements can result in delay of exchange process.

EXCLUDED FROM WARRANTY COVERAGE

Your warranty does not cover:

- Shipping charges to return defective product.
- Labor charges for installation or setup of the product, adjustment of customer controls on the product, and installation or repair of antenna systems outside of the product.
- Product repair and/or part replacement because of improper installation, connections to improper voltage supply, abuse, neglect, misuse, accident, unauthorized repair or other cause not within the control of Magnavox.
- A product that requires modification or adaptation to enable it to operate in any country other than the country for which it was designed, manufactured, approved and/or authorized, or repair of products damaged by these modifications.
- Damage occurring to product during shipping when improperly packaged or costs associated with packaging.
- Product lost in shipment and no signature verification receipt can be obtained.
- A product used for commercial or institutional purposes (including but not limited to rental purposes).
- Products sold AS IS or RENEWED.

WHERE WARRANTY EXCHANGE IS AVAILABLE:

This warranty gives you specific legal rights. You may have other rights which vary from state/province to state/province.

Magnavox, P.O. Box 671539, Marietta, GA. 30006-0026

(Warranty: 4835 710 28200)

Exchange is available in all countries where Magnavox officially distributes the product. In countries where Magnavox does not distribute the product, the local Magnavox organization will attempt to exchange the product, although there may be a delay if the appropriate product is not readily available or special customs processes are implied.

FOR EXCHANGE IN THE U.S.A., PUERTO RICO, OR U.S. VIRGIN ISLANDS...

Contact Magnavox Customer Care Center at:
1-800-705-2000

FOR EXCHANGE IN CANADA...

1-800-661-6162 (French Speaking)
1-800-705-2000 (English or Spanish Speaking)

REPLACEMENT AS PROVIDED UNDER THIS WARRANTY IS THE EXCLUSIVE REMEDY FOR THE CONSUMER. MAGNAVOX SHALL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES FOR BREACH OF ANY EXPRESS OR IMPLIED WARRANTY ON THIS PRODUCT. EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW, ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE ON THIS PRODUCT IS LIMITED IN DURATION TO THE DURATION OF THIS WARRANTY.

Some states do not allow the exclusions or limitation of incidental or consequential damages, or allow limitations on how long an implied warranty lasts, so the above limitations or exclusions may not apply to you. In addition, if you enter into a service contract agreement with the MAGNAVOX partnership within ninety (90) days of the date of sale, the limitation on how long an implied warranty lasts does not apply.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>