

# Quick start guide



 
 
 
 
 
 
 
Step A *Connect*

Step B *Setup*

Step C *Enjoy*

## What's in the Box?

You should find these items upon opening the box.

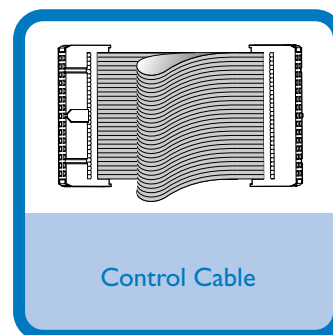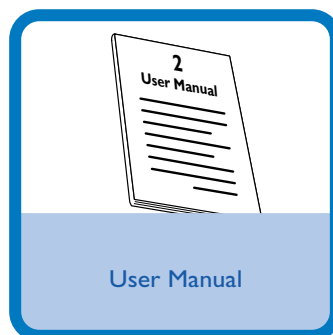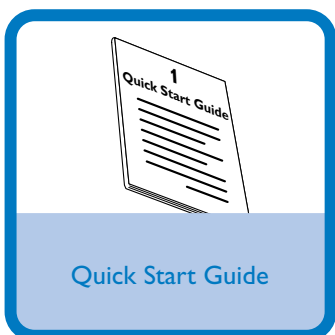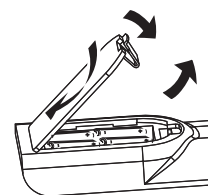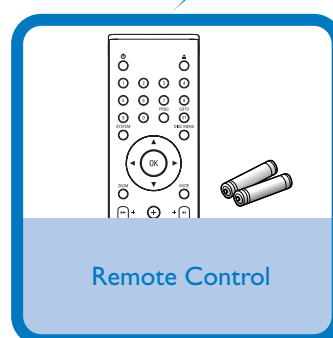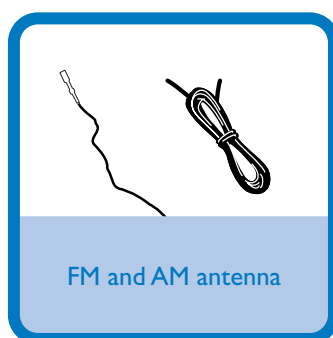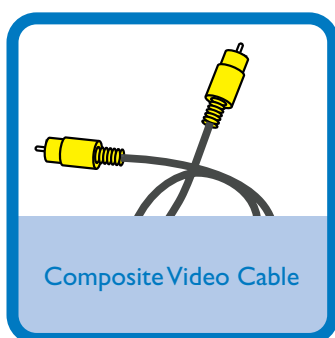


# Step A *Connect*

- 1 Connect the speakers to the **SPEAKERS** (8ohm) terminals with two speaker cables. Right speaker to "R" and left speaker to "L", red wire to "+" and silver wire to "-".
- 2 Connect the supplied **AM antenna** and **FM antenna** to the respective terminals. Adjust the position of the antenna for optimal reception.
- 3 Connect the serial port marked **CONTROL CABLE** at the rear of the DVD player to the same port at the rear of the power amplifier with the supplied control cable.
- 4 Connect the **VIDEO OUTPUT** jack at the rear of the DVD player to the video input jack on the TV using the supplied video cable (yellow).



## Tip

 
See the *User Manual* for other TV connection options.

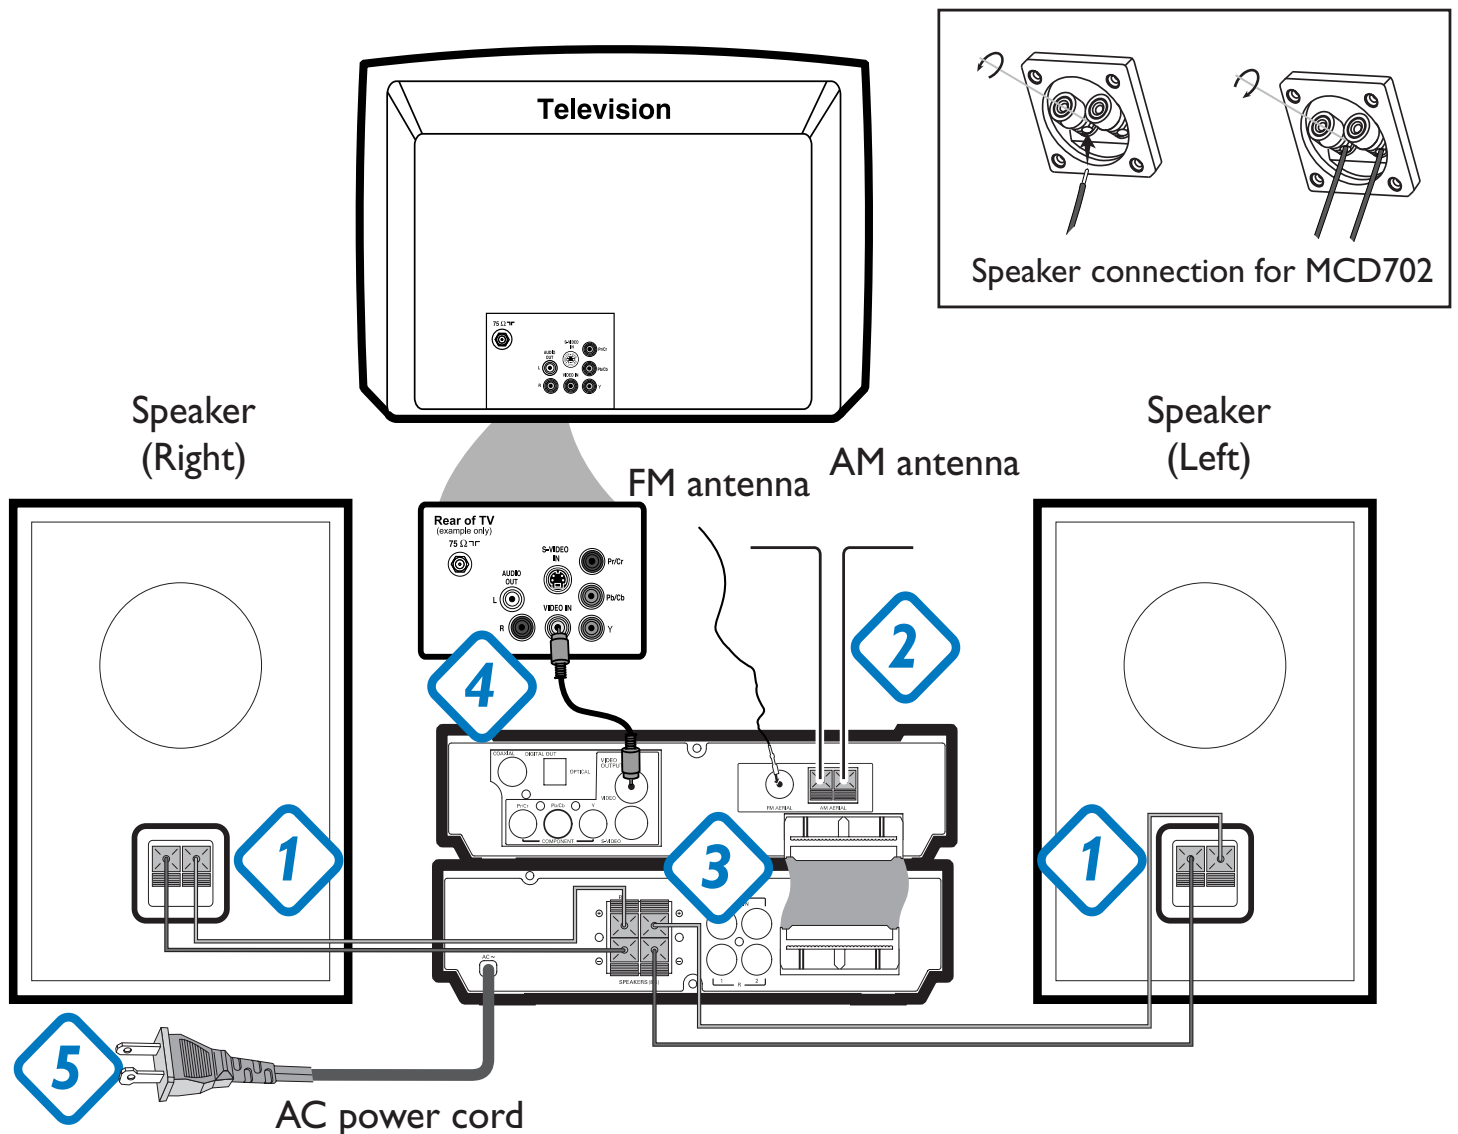- 5 Connect the power cord of the DVD system to the AC power outlet.



## Setting up the TV

 - 1 Press **STANDBY ON**  on the front panel of the DVD player or  on the remote to switch the DVD system on and then select the disc source.

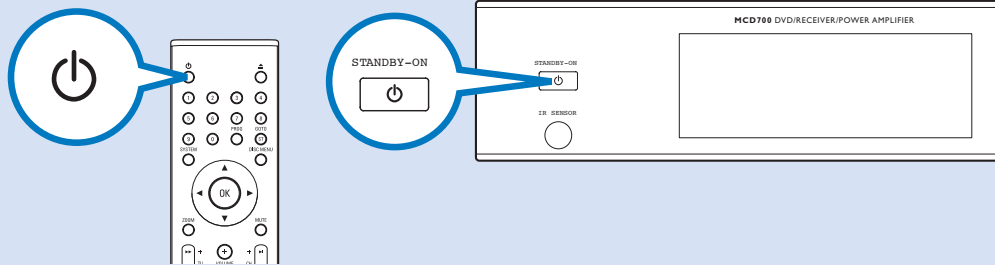


- 2 Switch on the TV set and set to the correct video-in channel until the blue Philips DVD background screen appears on the TV.

**Tip**  
See your TV manual for more details.

## Setting language preferences

 - 1 Press **SYSTEM** on the remote to enter the system menu.
- 2 Press **◀▶** on the remote to enter the 'Preference Page'. Then, select the preferred audio, subtitle and disc menu languages using **◀▶▲▼** and **OK** on the remote.
- 3 Press **◀▶** on the remote to enter the 'General Setup Page' and select the preferred OSD language using **◀▶▲▼** and **OK** on the remote.

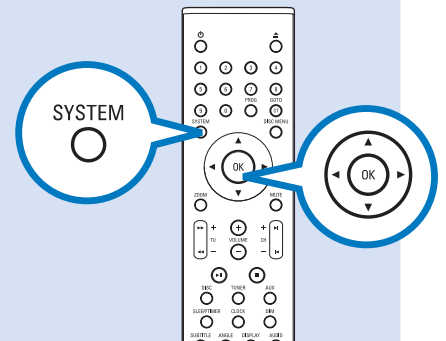



-- Preference Setup Page --		
TV Type	PAL	
Audio	CHI	English
Subtitle	CHI	French
Disc Menu	CHI	Spanish
Parental		Chinese
Default		Japanese
		Korean
		Russian
		Thai
Preferred Audio Language		

-- General Setup Page --		
TV Display		
OSD Language	English	
Screen Saver	Off	French
		Spanish
Set OSD Language		

**Tip**  
You can enter the 'Preference Page' in full stop mode only.


## Loading a disc

   - 1 Select the disc source, then press **OPEN•CLOSE** at the top of the DVD player or  on the remote.

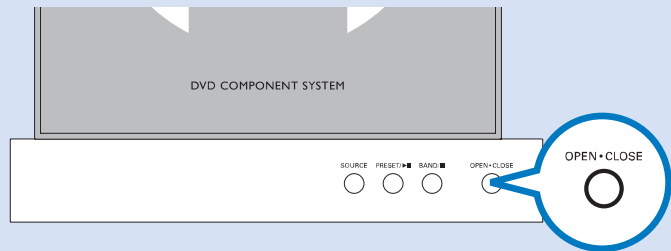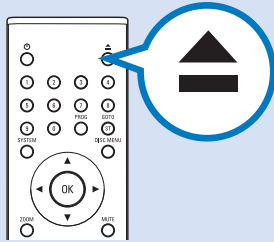



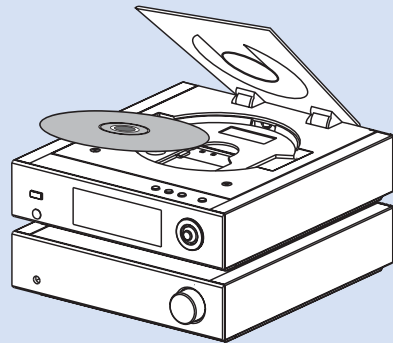

- 2 Load in a DVD disc with the label side facing up.

- 3 A disc menu pops up.




## Playback

 - 1 Use     and **OK** or **Numeric Keypad (0-9)** on the remote to select a playback feature or item.







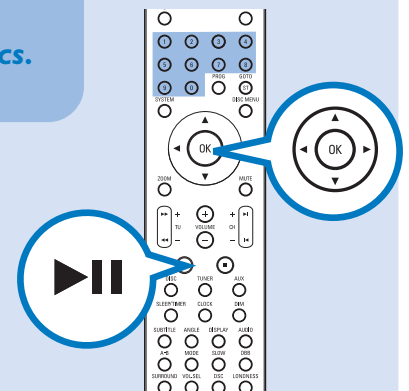

### Tip

Refer to the User Manual for playback of other types of discs.

- 2 Press **PRESET/▶II** (or  on the remote) to start playback.



## Types of Discs used on this DVD System

Type	Record	Playback	Edit
 DVD+RW <small>DVD + ReWritable</small>	✗	✓	✗
 DVD VIDEO	✗	✓	✗
 VIDEO CD	✗	✓	✗
 Super VCD	✗	✓	✗
 AUDIO CD	✗	✓	✗
 VIDEO CD	✗	✓	✗
 MP3-CD	✗	✓	✗
 WMA	✗	✓	✗



2005 © Koninklijke Philips Electronics N.V.  
All rights reserved.

[www.philips.com](http://www.philips.com)

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>