

# CONTENTS


---

<b>1. CONNECTING YOUR TV-VIDEO COMBI</b> .....	<b>4</b>	<b>7. PROGRAMMED RECORDING (TIMER)</b> .....	<b>15</b>
Connecting the cables .....	4	'VPS' (Video Programming System) and 'PDC' (Programme Delivery Control) .....	15
Connecting a decoder or other equipment .....	4	Programming a recording (with 'VIDEOplus') .....	15
<b>2. INSTALLING YOUR TV-VIDEO COMBI</b> .....	<b>5</b>	Programming a recording (without 'VIDEOplus') .....	16
Initial installation .....	5	How to check or change a TIMER .....	17
Allocating a decoder .....	5	<b>8. ADDITIONAL FUNCTIONS</b> .....	<b>18</b>
Manual TV channel search .....	6	How to read TELETEXT .....	18
Satellite receiver .....	6	Changing the TV system .....	18
Special installation functions .....	6	Parental control .....	18
Automatic TV channel search .....	6	Switching the On-screen display (OSD) on or off .....	19
Allocating a channel number .....	7	Switching to 16:9 wide screen picture .....	19
Delete a TV Channel .....	7	Switching the remote control command .....	20
Setting the language .....	8	Continuous playback .....	20
Setting the time and date .....	8	Sound playback without picture .....	21
Automatic time and date setting (SMART CLOCK) .....	8	Switch off function (SLEEP TIMER) .....	21
<b>3. IMPORTANT NOTES FOR OPERATION</b> .....	<b>9</b>	Switch on function (WAKE-UP TIMER) .....	21
SUMMARY OF USER GUIDE .....	9	<b>9. Before you call an engineer</b> .....	<b>22</b>
User guide (OSD) .....	9	Technical terms used .....	22
<b>4. TV SET FUNCTIONS</b> .....	<b>10</b>		
Selecting a TV programme .....	10		
Picture settings .....	10		
Selecting a preset picture setting (SMART PICTURE) ..	10		
Volume control .....	10		
Sound settings .....	10		
Switching Dolby Virtual Surround on or off .....	11		
Selecting a preset sound setting (SMART SOUND) ...	11		
Automatic volume control (AVL) .....	11		
Dolby Virtual Surround - Setting the speakers .....	11		
Sound track selection in TV mode .....	11		
<b>5. PLAYBACK FUNCTIONS</b> .....	<b>12</b>		
Playing a cassette .....	12		
Playing NTSC cassettes .....	12		
Tape position indication .....	12		
Searching for tape position with the picture (picture search) .....	12		
Still picture .....	12		
Slow motion .....	12		
Searching for tape position without the picture (wind and rewind) .....	12		
Instant View .....	12		
Automatic search for a tape position (index search) ..	12		
Picture interference .....	13		
Cleaning the video heads .....	13		
<b>6. MANUAL RECORDING</b> .....	<b>14</b>		
Recording without automatic switch-off .....	14		
Recording with automatic switch-off (OTR one-touch-recording) .....	14		
Protecting your recordings .....	14		
Auto-assembling .....	14		
Selecting the recording speed (SP or LP) .....	14		



# OPERATING INSTRUCTIONS IN BRIEF

## The remote control

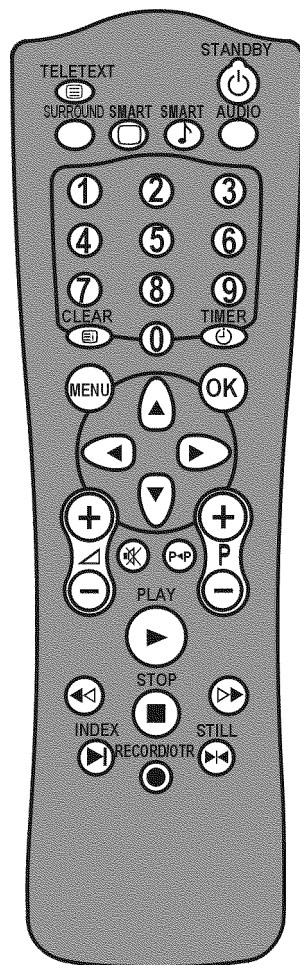

**STANDBY** **Switch off** : To switch off set, interrupt menu function, interrupt a programmed recording (TIMER)

**TELETEXT** **TELETEXT**: To switch TELETEXT on/off

**SURROUND (red)** **Dolby Virtual Surround**: To switch Surround Sound on/off

**red** **TELETEXT**: Select page/chapter shown at the bottom of the screen

**SMART (green)** **SMART PICTURE**: To show the preset picture settings

**green** **TELETEXT**: Select page/chapter shown at the bottom of the screen

**SMART (yellow)** **SMART SOUND**: To show the preset sound settings

**yellow** **TELETEXT**: Select page/chapter shown at the bottom of the screen

**AUDIO (blue)** **Audio**: To select the required sound track

**blue** **TELETEXT**: Select page/chapter shown at the bottom of the screen

**0-9** **Number buttons**: 0 - 9

**CLEAR** **Delete** : To delete last entry or clear programmed recording (TIMER)

**TELETEXT**: To select TELETEXT info page 100

**TIMER** **TIMER**: To make a manual TIMER programming or to alter or clear a programmed TIMER

**MENU** **Menu** : To call up or end main menu

**OK** **Store/Confirm**: To store or confirm entry

**Select**: Cursor left

**Select**: Cursor right

**Select**: One line up

**Select**: One line down

**Volume**: To regulate the volume

**Volume off**: To switch the volume on or off

**Previous programme number**: To select the previous programme number

**Programme number**: To select a programme number up or down

**Playback** : To play a recorded cassette

**Rewind** : During STOP and STANDBY: rewind, during PLAYBACK: reverse scanning

**Pause/Stop**: To stop the tape, except while a TIMER-recording is being made

**Forward wind**: During STOP and STANDBY: forward wind, during PLAYBACK: forward scanning


**Index search**: In combination with / : to search for previous/next recording on the cassette.

**Record**: To record the programme selected

**Still picture**: To stop the tape and show a still picture



## Front of the set

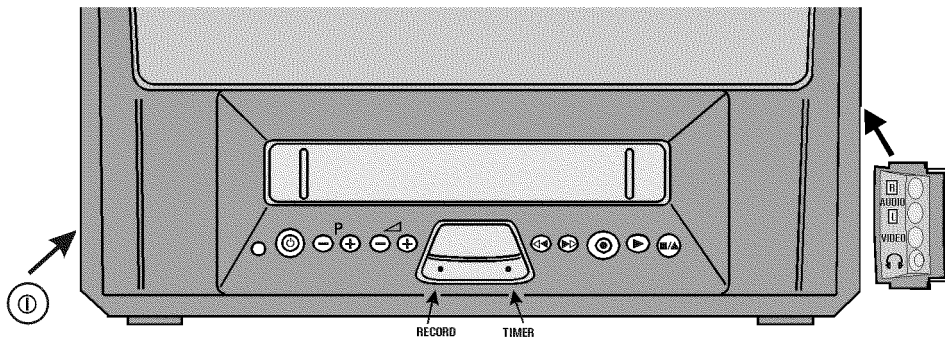

**ⓘ Power switch** : To switch off the set  
**Beware:** When you switch the set off with the power switch, TIMER-recordings are not possible!

**⏻ Standby** : To switch off, interrupt a function, interrupt a programmed recording (TIMER)

**P +/- Programme number** : To select programme number up or down

**▲ +/- Volume** : To regulate the volume

**◀ Rewind** : During STOP and STANDBY: rewind, during PLAYBACK: reverse scanning

**▶ Forward wind** : During STOP and STANDBY: forward wind, during PLAYBACK: forward scanning

**● Record** : To record the programme selected

**▶ Playback** : To play a recorded cassette


**■/▲ Pause/Stop, eject cassette** : To stop the tape and during STOP eject the cassette

**L AUDIO R Audio input socket left/right stereo**

**VIDEO Video input socket** : To connect a camcorder or videogames

**🎧 Headphones socket** : To connect headphones

## Back of the set

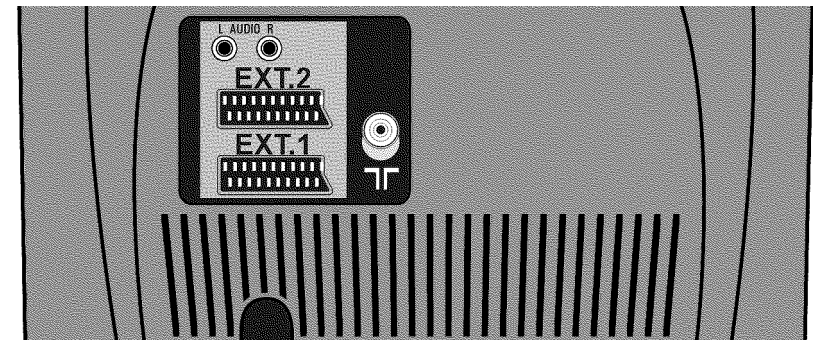

**TF Aerial input socket** : To connect the aerial cable

**L AUDIO R Audio output, left/right stereo** : To connect active speakers, a HiFi-set or a 'Dolby Prologic'-decoder.

**EXT.1 Scart socket** : To connect a decoder, satellite receiver, video recorder, etc.

**EXT.2 Scart socket** : To connect a satellite receiver, video recorder, etc.












# OPERATING INSTRUCTIONS PHILIPS 25PV720/07


**Congratulations!** You now own one of the most sophisticated and simple-to-use TV-VIDEO Combinations on the market. With this TV-VIDEO Combi you can record and play VHS-standard cassettes.



Please take the time to read this operating manual before using your TV-VIDEO Combi.

## Safety instructions and other notes

-  **Danger: High voltage!**  
Do not remove the top cover as there is a risk of an electrical shock!
-  The TV-VIDEO Combi does not contain any components that can be repaired by the customer. To switch off the TV-VIDEO Combi completely you must switch it off with the power switch .
-  Make sure that air can circulate freely through the ventilation slots on the TV-VIDEO Combi.
-  Make sure that no objects or liquids enter the TV-VIDEO Combi. If liquid is spilt into it, disconnect the TV-VIDEO Combi immediately from the power supply and call the After-sales Service for advice.
-  The TV-VIDEO Combi should **not be used immediately after transportation** from a cold to a hot area or vice versa, or in conditions of extreme humidity. After unpacking the TV-VIDEO Combi, it should be allowed to **acclimatize for at least three hours** before installation.
-  These operating instructions have been printed on nonpolluting paper.
-  Deposit old batteries at the relevant collection points.
-  Please make use of the facilities available in your country for disposing of the packaging of the TV-VIDEO Combi in a way that helps to protect the environment.
-  This electronic equipment contains many materials that can be recycled. Please inquire about the possibilities for recycling your old set.
-  VIDEOPlus+ and PlusCode are registered trademarks of Gemstar Development Corporation. The VIDEOPlus+ system is manufactured under licence from Gemstar Development Corporation.

 Manufactured under license from Dolby Laboratories Licensing Corporation. 'Dolby' and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

**VIRTUAL  
DOLBY  
SURROUND**

So that you can identify your machine in the event of theft, enter the serial number (PROD.NO) here. The serial number is printed on the type plate fixed at the rear of the set.



<b>MODEL NO.</b>	<b>25PV720/07</b>
<b>PROD.NO:</b>	.....

This product complies with the requirements of the Directive 73/23/EEC + 89/336/EEC + 93/68/EEC.

## Technical information

**Measurements in cm (W / H / D):** 58.0 / 57.3 / 46.0  
**Power consumption (Standby):** less than 80W (less than 4W)  
**Voltage:** 198-264V 50Hz  
**Headphones:** Output resistance less than 120 Ohms maximum output voltage more than 2.6V at 120 Ohms

## Emergency interrupt

You can use the  button on the TV-VIDEO Combi or the remote control to interrupt any function. If you want to interrupt a running Timer recording, hold the  button for several seconds. So if you are having operating problems, you can just interrupt the function and start again. And you can practise operating your set without any worries. No matter which buttons you press, you cannot damage it.

---

---

## Special functions on your TV-VIDEO Combi

---

<b>SmartClock</b>	If a TV channel which transmits TXT/PDC is stored under programme number 'P01', time and date will automatically be taken from the TXT/PDC information.
<b>Smart Picture</b>	This function allows you to save the playback settings that suit you best. Select your own personal settings for the type of film you are currently watching.
<b>Smart Sound</b>	This function allows you to save the sound settings that suit you best. Select your own personal settings for the type of film you are currently watching.
<b>Plug &amp; Play</b>	When you have plugged your TV-VIDEO Combi into the mains, you will be welcomed with an OSD picture. All you have to do is follow the instructions in the "intelligent help line" for the next step. Enjoy the Automatic TV channel search/save function and the automatic time adjustment.
<b>AVL</b>	Automatic Volume Leveller. This prevents a sudden increase of the volume, for example, during commercials.
<b>Digital Studio Picture Control</b>	Philips has developed a system which produces the best possible playback quality. It reduces disturbance on old, worn video cassettes, and emphasises the detail on very good quality cassettes.
<b>VIDEO <i>Plus</i></b>	Simple programming system for TV-VIDEO Combis. Makes programming as easy as making a telephone call. Simply enter the programme code which you will find in your listings magazine.
<b>TURBO ▼DRIVE</b>	The precision tape drive from Philips with rewind times of 100 seconds (E180) and automatic tape length recognition.
	We guarantee that your TV-VIDEO Combi will switch to the new millennium with no problems whatsoever.
<b>VIRTUAL DOLBY SURROUND</b>	Dolby Virtual Surround, the ease of use solution to enjoy best sound effects at home without the need to purchase and connect additional rear speakers.

# 1. CONNECTING YOUR TV-VIDEO COMBI

## Important for the United Kingdom

This apparatus is fitted with an approved moulded 13 Amp plug. To change a fuse in this type of plug proceed as follows:

- 1 Remove fuse cover and fuse.
- 2 Fix new fuse which should be a BS1362 5A, A.S.T.A. or BSI approved type.
- 3 Refit the fuse cover.

If the fitted plug is not suitable for your socket outlets, it should be cut off and an appropriate plug fitted in its place.

If the mains plug contains a fuse, this should have a value of 5A. If a plug without a fuse is used, the fuse at the distribution board should not be greater than 5A.

**i** Note: \* The severed plug must be destroyed to avoid a possible shock hazard should it be inserted into a 13A socket elsewhere.

### How to connect a plug:

The wires in the mains lead are coloured in accordance with the following code:


BLUE - 'NEUTRAL' ('N')

BROWN - 'LIVE' ('L')

- 4 The BLUE wire must be connected to the terminal which is marked with the letter 'N' or coloured BLACK.
- 5 The BROWN wire must be connected to the terminal which is marked with the letter 'L' or coloured RED.
- 6 Do not connect either wires to the earth terminal in the plug which is marked with the letter 'E' or by the safety earth symbol  $\perp$  or coloured green or green-and-yellow.

Before replacing the plug cover, make certain that the cord grip is clamped over the sheath of the lead - not simply over the two wires.

## Connecting the cables

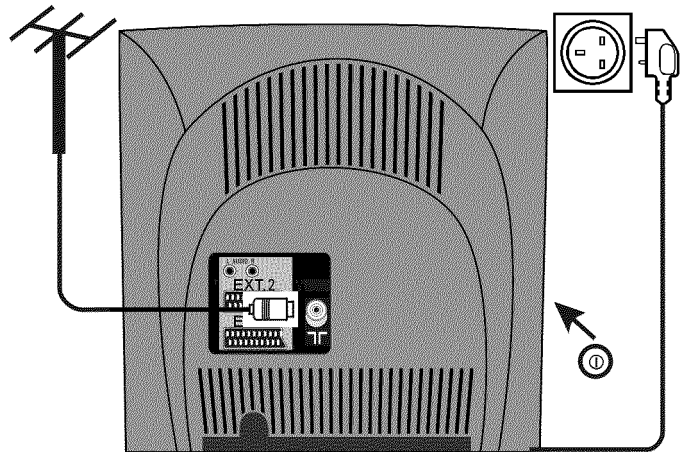


- 1 Insert the aerial plug into the **T** socket.
- 2 Insert the plug of the mains cable into the wall socket.
- 3 If the little red light at the front of the set is not alight, please switch on the set. The power switch **Ⓢ** is located on the left side panel of the set.

## Connecting a decoder or other equipment

You can also connect additional equipment, for instance, a decoder, a satellite receiver or camcorder to the **EXT.1** socket or a satellite receiver, camcorder to the **EXT.2** socket.

- If you don't connect a decoder, use the **EXT.1** socket for connecting other equipment.


You can connect active speakers, a hifi-stereo set or a 'Dolby Prologic' decoder to the socket **L AUDIO R** (audio output left/right).

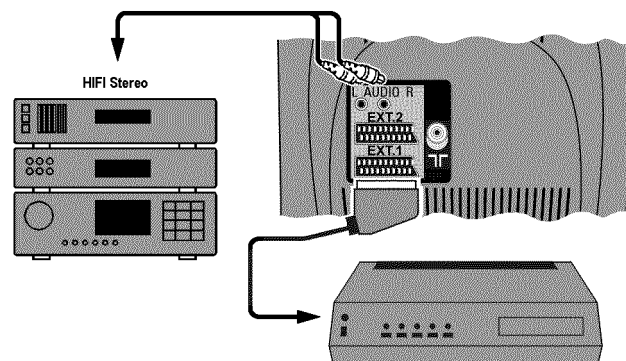


## 2. INSTALLING YOUR TV-VIDEO COMBI

### Initial installation

- 1 Open up the battery compartment of your remote control and place the batteries in it as shown in the picture.

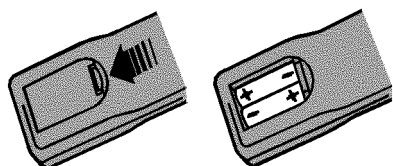

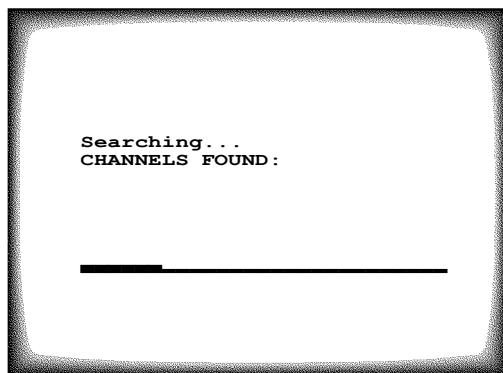

- 2 Close the battery compartment.
- 3 If the aerial (antenna) has been connected to the TV-VIDEO Combi, press the **OK** button. 'Automatic TV channel search' starts. This picture will appear on the screen:



Wait until all TV channels have been found. This can take several minutes.


When 'autoinstall' is ready, 'Installation comp.' will briefly appear on the TV screen.

-  If you have connected a decoder, you must install it as described in the next section.
-  If you have connected a satellite receiver, please read the section 'satellite receiver'.

### Allocating a decoder

Some TV stations will send coded TV channels, that you can only watch when you use a decoder. You can connect such a decoder (descrambler) to your TV-VIDEO Combi. With the following function, the connected decoder will automatically be activated for the TV programme you want to watch.

- 1 Choose the TV channel on which you wish to use the decoder with the **P+** or **P-** buttons on the TV-VIDEO Combi or the number buttons **0-9** on the remote control.
- 2 Press the **MENU** button on the remote control. The main menu will appear.
- 3 Select the line 'Installation' with the **▼** or **▲** button and confirm with the **▶** button.
- 4 Select the line 'Manual store' with the **▼** or **▲** button and confirm with the **▶** button.
- 5 Select the line 'Decoder' with the **▼** or **▲** button.

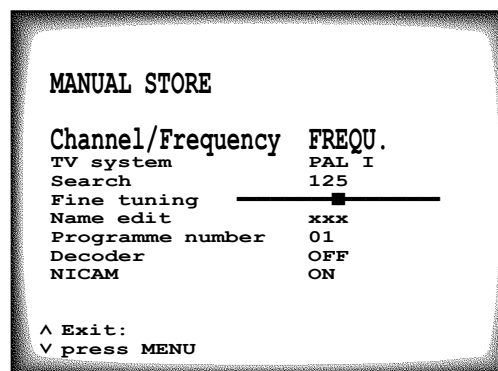

- 6 Select function 'ON' with the **◀** or **▶** button. When you select 'OFF', the function will be switched off.
- 7 Confirm with the **OK** button.
- 8 To end, press the **MENU** button.  
Your decoder has now been allocated to this TV channel.


---

## Manual TV channel search

---

In certain cases the 'Automatic TV channel search' may not be able to find all of the TV channels (e.g. coded TV channels). In that case, use this manual method to set the channels.

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **▼** or **▲** button and confirm with the **▶** button.
- 3 Select the line 'Manual store' with the **▼** or **▲** button and confirm with the **▶** button.

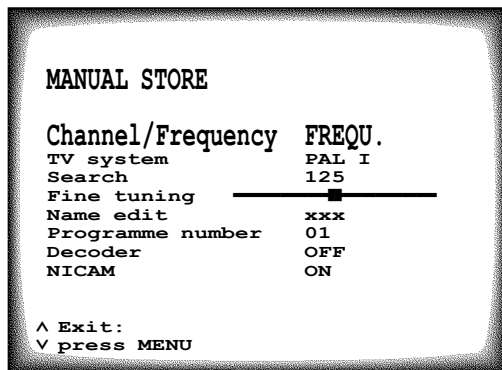

- 4 In the line 'Channel/Frequency', select the display for:  
'FREQU.': frequency  
'C CH': channel  
'S CH': special channel
- 5 If you know the frequency or channel of the desired TV channel, you can enter the data in line 'Search' with the digit buttons **0-9**.  
**i**▶ If you don't know the frequency or channel of the TV channel of your choice, press the **▶** button to start the channel search.
- 6 In the line 'Programme number' select the programme number you want e.g.: 'P01', using the **◀** or **▶** button.
- 7 If you want to change the TV channel name, press the **▶** button in line 'Name edit'.  
 Select the character you want to change with the **◀** or the **▶** button. Change the character with the **▼** or the **▲** button. Select the next character in the same way.  
 To confirm the information, press the **OK** button.
- 8 In the line 'NICAM', select function 'ON' or 'OFF' with the **▶** or **◀** button.

- 9 If you want to change the automatic tv channel setting, select the line 'Fine tuning'.  
With the **◀** or **▶** button you can vary the automatic tv channel setting. **Important:** This re-tuning is only necessary and useful in **special cases**, e.g.: when there are stripes on the picture with cable-TV systems.
- 10 Press the **OK** button to store the TV channel.  
**i**▶ If you want to search for further TV channels, start again at step **5**.
- 11 To end, press the **MENU** button.

---

## Satellite receiver

---

You can receive channels from the satellite receiver via the scart socket **EXT.1**.

To do this, select the channel number 'E1' with the **+P-** button. You will have to select the channels to be received by the satellite receiver on the receiver itself.

---

## Special installation functions

---

You can select one of the following installation functions in order to adapt your TV-VIDEO Combi to your own specific requirements.

---

## Automatic TV channel search


---

Your TV-VIDEO Combi will search for all TV channels. If you want to start the automatic TV channel search again, then follow the instructions below.

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **▼** or **▲** button and confirm with the **▶** button.
- 3 Select the line 'Autoinstall' with the **▼** or **▲** button.



- Press the button. The 'Automatic TV channel search' starts.

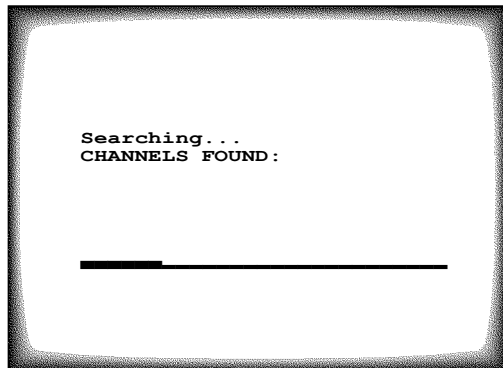


- When the TV channel search is complete, 'Installation comp.' will appear on the screen.

How to search for a TV channel manually, you can read in the section 'Manual TV channel search'.

- Automatic Channel Installation ():  
Some cable companies or broadcasters offer the possibility to install TV channels automatically with 'ACI'. Information about the installation offered and how to select it, will appear on the screen. This set will recognize and install TV channels with 'ACI' automatically. TV channels will be stored from programme number 1 onward. If 'ACI' cannot identify a TV channel, you can search for it using the method as described in the section 'Manual TV Channel Search'.

## Allocating a channel number


- Press the button. The main menu will appear.
- Select the line 'Installation' with the or button and confirm with the button.
- Select the line 'Sort channels' with the or button and confirm with the button.

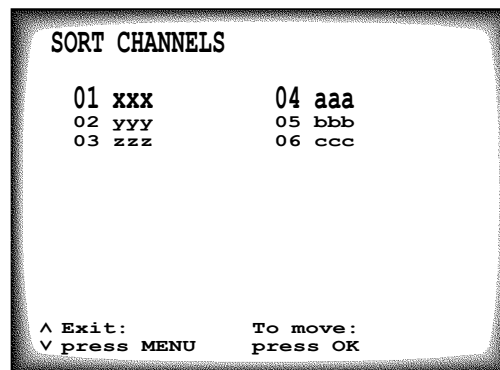





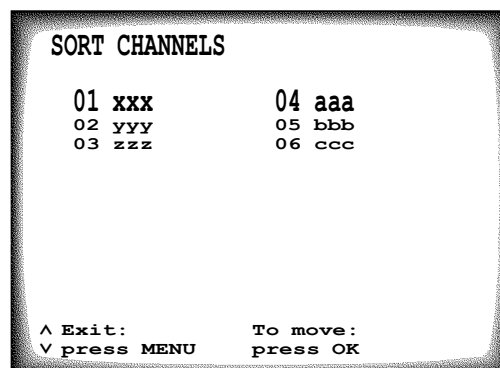

- With the , , or button, select the TV channel to which you want to allocate a programme number and press the button.
- With the , , or button, shift the TV channel to the programme number you wish to allocate to this TV channel and press the button.
- Repeat steps [4](#) to [5](#) until you have allocated a programme number to all the required TV channels.
- To end, press the button.

## Delete a TV Channel

- Press the button. The main menu appears.
- Select the line 'Installation' with the or button and confirm with the button.
- Select the line 'Sort channels' with the or button and confirm with the menu button .











 
- 4 With the , ,  or  button, select the TV channel you want to delete and press the  button.
- 5 Repeat step 4, until you have deleted all the required TV channels.
- 6 To end, press the  button.

---

## Setting the language

---








You can select the language for the on-screen display (OSD).

 
- 1 Press the  button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the  or  button and confirm with the  button.
- 3 Select the line 'Language' with the  or  button.
- 4 Select your language with the  or  button.
- 5 To end, press the  button.





---


## Setting the time and date

 ---

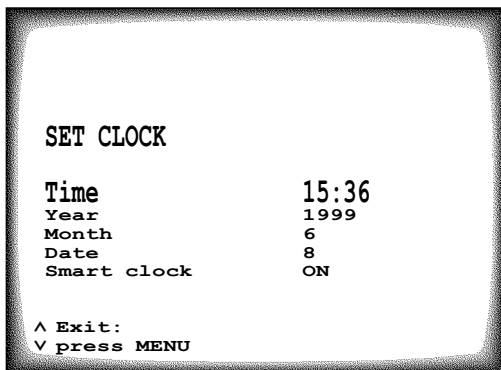

 - 1 Press the  button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the  or  button and confirm with the  button.
- 3 Select the line 'Set clock' with the  or  button and confirm with the  button.









- 4 Check the time in line 'Time'. If required, please change the time with the  buttons on the remote control.
- 5 Check 'Year', 'Month' and 'Date' in the same way. You can switch between entry fields with  or  button. Confirm each entry with the  button.

- 6 To end, press the  button.

## Automatic time and date setting (SMART CLOCK)



-  If a television programme, which transmits TELETEXT, is stored with programme number 'P01', time and date will be set automatically.
-  Time will automatically be adjusted to winter time and summer time.

- 1 Select the line 'Smart clock' with the menu buttons  or .
- 2 Switch the function on with the menu buttons  or .
- 3 Confirm with the .
- 4 To end, press the  button.


### 3. IMPORTANT NOTES FOR OPERATION

#### SUMMARY OF USER GUIDE


The OSD menu offers the following functions. More details on each can be found in the appropriate chapter.

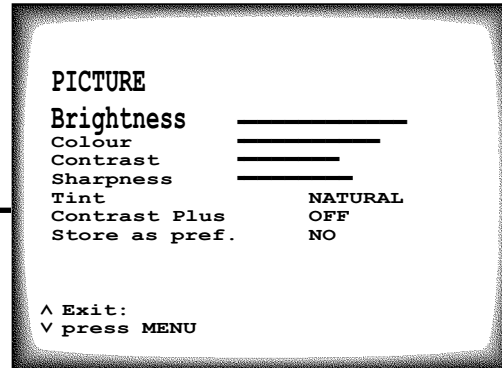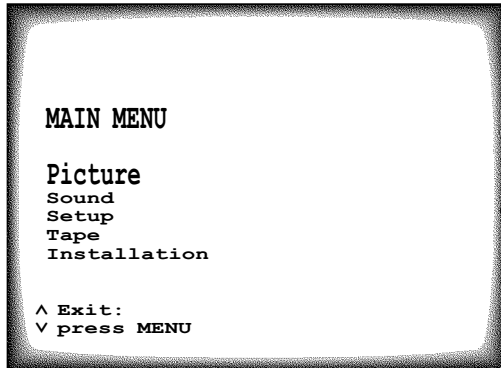


Chapter 'TV FUNCTIONS'

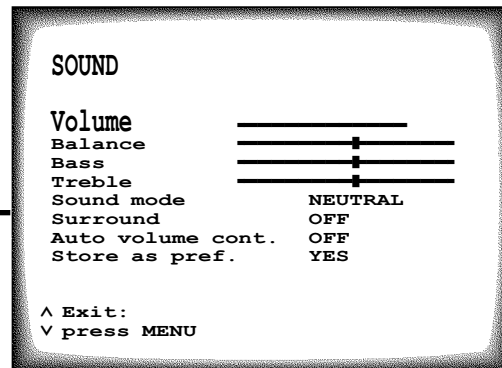

Chapter 'TV FUNCTIONS'

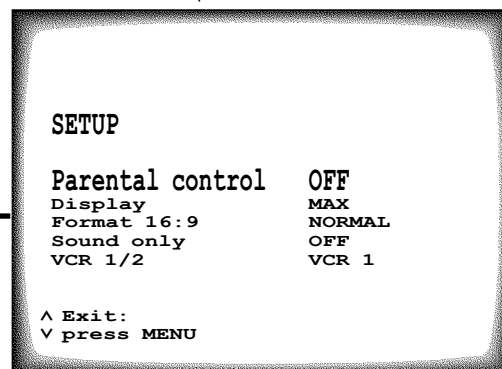

Chapter 'ADDITIONAL FUNCTIONS'

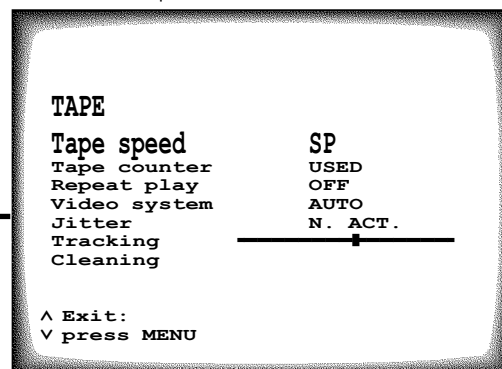


Chapter 'PLAYBACK FUNCTIONS'

#### User guide (OSD)

The OSD (On-screen display) shows the various functions in the form of a menu on the television screen. You can then choose the settings you require. There is a summary of the menus on this page. The main button functions are displayed in a help line along the bottom of the screen.

- To call up the menu:** With the **MENU** button.
- To select a line:** With the **▼** or **▲** button.
- To select within a line:** With the **◀** or **▶** button.
- To enter or change your selection:** With the **0-9**, **◀** or **▶** button.
- To cancel:** With the **MENU** button.
- To save:** With the **OK** button.
- To confirm:** With the **▶** button.
- To close the menu:** With the **MENU** menu button.

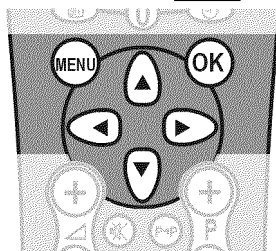

- To confirm the messages in red on the screen:** Press the **OK** button.
- You can switch the machine on with the **+P-**, **P◀** or **0-9** button or by putting in a cassette.

## 4. TV SET FUNCTIONS

### Selecting a TV programme


Select the required TV channel (=programme number) with the **P-**, **P+**, **▼** or **▲** button or with the digit buttons **0-9** on the remote control.

**i** If you don't know the programme number of the required TV channel:

- 1 Press the **+P-** button for more than 2 seconds. The TV channel list appears on the screen.
- 2 Select the required TV channel with the **+P-** button.  
After 1 second the TV-VIDEO Combi will switch to the selected programme number.

### Picture settings

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Picture' with the menu buttons **▼** or **▲** and confirm with the menu button **▶**.

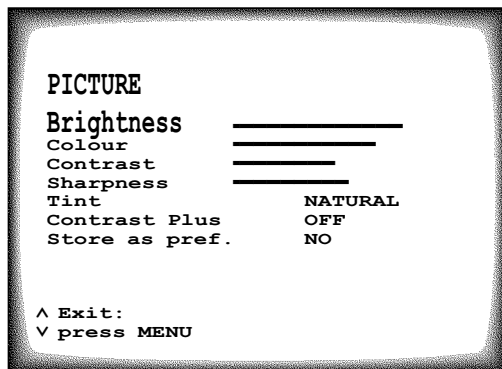

- 3 Select the required line with the menu buttons **▼** or **▲** and alter with the menu buttons **◀** or **▶**.  
**i** 'Contrast Plus': Enhances TV contrast by making the white whiter and the black blacker.  
**i** To store this setting as a standard setting, select the line 'Store as pref.' with the menu buttons **▼** or **▲**. Select 'YES' and confirm with the **OK** button.

### Selecting a preset picture setting (SMART PICTURE)

- i** 'SMART PICTURE': Optimises all picture settings using a single button on the remote control.
- Press the **SMART (green)** button repeatedly to select the required picture setting.

### Volume control


You can control the volume level with the **+▲-**, **◀** or **▶** button.

If you want to mute the sound temporarily (e.g.: during a telephone call), press the **⊗** button on the remote control. When you press the **⊗** button again, the sound will return at its original volume level.

### Sound settings

You can select between several sound settings, to meet your personal sound preferences.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Sound' with the **▼** or **▲** button and confirm with the **▶** button.

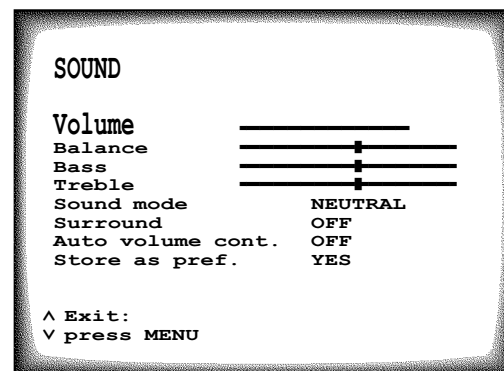

- 3 Select the required line with the **▼** or **▲** button and alter with the **◀** or **▶** button.
    - In the line 'Sound mode' select one of these options:  
'NEUTRAL': neutral sound setting  
'LOUDN.': when the volume level is low, high and low sound accentuated  
'SPATIAL': spacious stereo effect
- i** To store a setting as a standard setting, select the line 'Store as pref.' with the **▼** or **▲** button. Select 'YES' and confirm with the **OK** button.
- i** To call up the standard settings, switch the set off and on again or select 'Smart Sound' setting 'PERSONAL'.

## Switching Dolby Virtual Surround on or off

- 1 To switch on the Dolby Virtual Surround effect, in the line 'Surround' select 'ON' with the ◀ or ▶ button.
- You can always simply switch the function on/off with the **SURROUND (red)** button on the remote control.
- i* ▶ If Surround Sound is switched on, the line 'Sound mode' in the Sound menu will be deactivated.

## Selecting a preset sound setting (SMART SOUND)

- i* ▶ 'SMART SOUND': Provides a choice of sound settings from the remote control.
- Press the **SMART (yellow)** button repeatedly to select the desired sound setting.
- i* ▶ If Surround Sound is switched on, 'Smart Sound' will be switched to 'MANUAL'.


## Automatic volume control (AVL)

- Switch on 'Auto volume cont.', to activate the automatic volume control. It minimises sudden changes in TV volume, e.g. when commercial spots are transmitted or when switching TV channels.
- i* ▶ The AVL function will only affect the internal speakers.

## Dolby Virtual Surround - Setting the speakers

If you have connected active speakers or a HiFi stereo set to your TV VIDEO Combi, you can carry out several speaker settings.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Installation' with the ▼ or ▲ button and confirm with the ▶ button.
- 3 Select the line 'Speaker setup' with the ▼ or ▲ button and confirm with the menu button ▶.

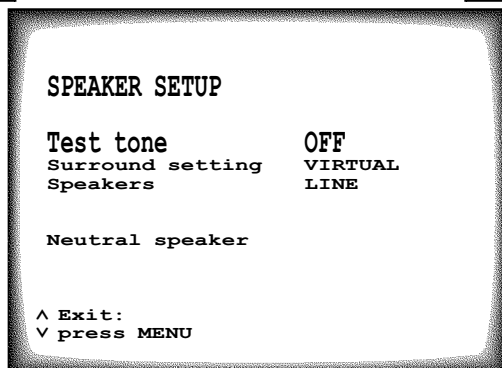

- 4 In the line 'Speakers' select one of these settings with the ◀ or ▶ buttons:  
'ACTIVE': only if you have connected active speakers. All sound settings will be controlled via your TV VIDEO Combi.  
'HIFI': only if you have connected a HIFI stereo set. The sound settings for the external speakers will be controlled via the HIFI stereo set. The sound settings for the internal speakers will be controlled via the TV VIDEO Combi.  
'LINE': this is the standard setting. Internal speakers are active. The **AUDIO R** socket sound output is fixed in nominal level.
- 5 Confirm with the **OK** button.
- 6 In the line 'Surround setting' select one of these settings:  
'VIRTUAL': Surround Sound effect possible with internal or external speakers  
'3STEREO': Surround Sound effect possible only with additional external speakers connected.
- 7 Confirm with the **OK** button.
- 8 To switch on the test tone, in the line 'Test tone' select 'ON' with the ◀ or ▶ button.  
You will hear a test tone. Now select the best volume for the internal and external speakers.  
*i* ▶ As the test tone only makes sense using external speakers, the machine will automatically switch to '3STEREO'. It will automatically switch back to the setting you selected last.  
*i* ▶ If you have connected a headset, you will not experience the complete surround effect.
- 9 To end, press the **MENU** button.

## Sound track selection in TV mode

You can select the required sound track. This is of particular interest when audio transmissions are multilingual.

- Press the **AUDIO (blue)** button to select one of the following options:

**STEREO transmissions:** 'STEREO' and 'MONO'

**Multilingual transmissions:** 'DUAL I' and 'DUAL II'

- i* ▶ While a tape is playing, you can also select one of the following modes: 'LEFT', 'RIGHT', 'MIX'. In the 'MIX' mode you can play the mono sound of the normal (linear) audio track together with the sound of the stereo audio track. You can play cassettes that have been dubbed on another video recorder.

## 5. PLAYBACK FUNCTIONS

### Playing a cassette

- 1 Put a cassette into the cassette slot.
- 2 Press the **PLAY▶** button.
- 3 If you press the **STOP■** button once, the TV-VIDEO Combi will switch to pause. To stop, press the **STOP■** button again.
- 4 To eject the cassette, press the **■/▲** button on the TV-VIDEO Combi or press the **STOP■** button on the remote control several seconds.

**i**▶ Some hired cassettes may have a poor picture or poor sound quality. This is not a fault in your machine. Please read 'Eliminating picture interference'.

**i**▶ Some functions switch off automatically after a while (for example, pause, still picture, picture search). This helps to protect the cassette and avoids wasting power.

### Playing NTSC cassettes

With this set you can play cassettes that have been recorded on another video recorder in the NTSC standard (for example, American cassettes).

**i**▶ Some special features (for example, still picture) are not possible while you are playing an NTSC cassette.

### Tape position indication

**i**▶ Press the **OK** button to display the current tape position.

**i**▶ To change the type of tape position display, proceed as follows:

- 1 During playback, press the **MENU** button.
- 2 Select the line 'Tape' with the menu buttons **▼** or **▲** and confirm with the **▶** button.
- 3 Select the line 'Tape counter' with the menu buttons **▼** or **▲**.
- 4 With the menu buttons **◀** or **▶** select 'USED' to check the time used, or 'LEFT' to check the time left on the tape.
- 5 Confirm with the **OK** button.

### Searching for tape position with the picture (picture search)

- 1 While a cassette is playing, press the **◀◀** (reverse) or **▶▶** (forward) button once or several times.
- 2 To stop at a certain picture, press the **PLAY▶** button.  
**i**▶ During picture search, the picture quality may not be so good and there will be no sound.

### Still picture

- 1 Press the **STILL▶◀** button. A still picture will appear on the screen.
- 2 Each time you press **STILL▶◀** again, the picture will move on one step.

### Slow motion

- 1 Press the **STILL▶◀** button. A still picture will appear on the screen.
- 2 When you hold the **STILL▶◀** button, the tape will be played in slow motion.
- 3 When you press the **▶▶** button several times, you have a choice of several playback speeds. During slow motion there will be no sound.

### Searching for tape position without the picture (wind and rewind)

- 1 Stop the tape with the **STOP■** button.
- 2 Press the **◀◀** (reverse) or **▶▶** (forward) button.
- 3 To stop at a certain picture, press the **STOP■** button.

### Instant View

With this function you can switch to picture search during wind and rewind.

- 1 If you hold the **◀◀** (rewind) or **▶▶** (wind) button during wind or rewind, you will switch to picture search.
- 2 When you release the button, the TV-VIDEO Combi will automatically switch back to rewind or wind.

### Automatic search for a tape position (index search)

At the start of each recording, the TV-VIDEO Combi will write an index code on the tape.

- 1 Press the **INDEX▶** button. Press the **▶▶** button to select the next code mark or the **◀◀** button for the previous code mark.

- 2 When the TV-VIDEO Combi finds the code mark, it will automatically switch to play.

---

## Picture interference

---

When the picture quality is poor when you play a cassette, please follow these instructions.

### Tracking during playback

- 1 During playback, press the **[MENU]** button.
- 2 Select the line 'Tape' with the menu buttons **[▼]** or **[▲]** and confirm with the **[▶]** button.
- 3 Select the line 'Tracking' with the menu buttons **[▼]** or **[▲]**.
- 4 Hold the menu buttons **[◀]** or **[▶]** until the playback quality is at its best.
- 5 Confirm with the **[OK]** button.
- 6 To end, press the **[MENU]** button. This setting will remain until you remove the cassette.

### Tracking during still picture

If the still picture vibrates vertically, you can improve the still picture as follows:

- 1 During still picture, press the **[MENU]** button.
- 2 Select the line 'Tape' with the **[▼]** button or **[▲]** and confirm with the **[▶]** button.
- 3 Select the line 'Jitter' with the **[▼]** or **[▲]** button.
- 4 Hold the **[◀]** or **[▶]** button until the picture quality is at its best.
- 5 Confirm with the **[OK]** button.
- 6 To end, press the **[MENU]** button.

**i▶** Please note, however, that interference may still occur with poor quality cassettes.

## Cleaning the video heads

If horizontal lines appear on the screen when you play a cassette, you should clean the video heads.



- 1 During playback, press the **[MENU]** button.
- 2 Select the line 'Tape' with the menu buttons **[▼]** or **[▲]** and confirm with the **[▶]** button.
- 3 Select the line 'Cleaning' with the menu buttons **[▼]** or **[▲]**.
- 4 Press the **[OK]** button. 'CLEANING' appears on the screen.
- 5 Wait a few seconds, until the message disappears and then press the **[MENU]** button.

## 6. MANUAL RECORDING

Use 'Manual Recording' to make a spontaneous recording (for example, a programme currently being shown).

- ❑ If you want to start and stop a recording manually, read the section: 'Recording without automatic switch-off'.
- ❑ If you want to start a recording manually but have it stopped automatically, read the section: 'Recording with automatic switch-off'.

### Recording without automatic switch-off

- 1 Insert a cassette.
- 2 Use the **+P-** button to select the programme number you want to record, for example, 'P01'.
  - ▶ Programme number 'E1' is provided for recording from external sources (via the **EXT.1** scart socket).
- 3 To start recording, press the **RECORD/OTR** button on the remote control or **RECORD** on the TV-VIDEO Combi. When you are recording, the red recording light at the front of the TV-VIDEO Combi will be alight.
- 4 Stop recording with the **STOP** button.
  - ▶ During a recording you can watch other TV channels.
  - ▶ To switch off the screen, press the **STANDBY** button.

### Recording with automatic switch-off (OTR one-touch-recording)

- 1 Put a cassette in the machine.
- 2 Use the **+P-** button to select the programme number you want to record.
- 3 Press the **RECORD/OTR** button on the remote control. When you are recording, the red recording light at the front of the TV-VIDEO Combi will be alight.
- 4 Press the **RECORD/OTR** button again and again until the display on the TV-VIDEO Combi shows the desired end time or length of the recording.
  - ▶ To cancel this information, press the **CLEAR** button.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.

### Protecting your recordings

So that you don't accidentally delete an important recording, remove the special tab on the narrow side of the cassette with a screwdriver or slide the special tab to the left. Later, if you no longer want to protect your recording, you can seal the gap again with sticky tape or slide the special tab to the right.

### Auto-assembling

You can use the auto-assembling function to join individual recordings without any major picture disturbance between them.

- 1 While the cassette is playing, search for the correct position on the tape.
- 2 Stop the cassette by pressing the **STOP** button. 'Pause' will appear on the TV screen.
- 3 Now start recording as usual by pressing the **RECORD/OTR** button on the remote control.

### Selecting the recording speed (SP or LP)

You can reduce the recording speed by half. This makes it possible to record, for example, eight-hours instead of four-hours on an 'E240' (four-hour) cassette.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Tape' with the **▼** or **▲** button, and confirm with the **▶** button.
- 3 Select the line 'Tape speed' with the **▼** or **▲** button.
- 4 Select the required recording speed with the **◀** or **▶** button.
  - ▶ 'LP': Long Play = half recording speed (double recording time).
  - 'SP': Standard Play = normal recording speed.
  - ▶ The picture quality will be adversely affected when recording at half recording speed ('LP').
  - ▶ For playback, the correct recording speed will automatically be selected.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.



## 7. PROGRAMMED RECORDING (TIMER)

Use programmed recording to automatically start and stop a recording at a later date.

To make a programmed recording, your TV-VIDEO Combi needs to know:

- \* the date you want to make the recording;
- \* the programme number for the TV channel you want to record;
- \* the start and stop time of the recording;
- \* whether you want to use VPS or PDC;
- \* the recording speed (SP/LP).

The TV-VIDEO Combi stores all the information in a TIMER block. You can programme up to 6 TIMER blocks a month in advance.

### 'VPS' (Video Programming System) and 'PDC' (Programme Delivery Control)

With 'VPS and PDC', the TV station controls the start time and the length of the recording. This means that the TV-VIDEO Combi switches itself on and off at the **right time** even if a TV programme you want to record begins earlier or finishes later than expected.

Usually the start time is the **same** as the VPS or PDC time. But if your TV guide gives a VPS or PDC time which is different to the programme's start time (for example, 20.15 and VPS 20.14), you must enter '20.14' as the start time.

If you want to programme a time that is different from the VPS or PDC time, you must switch off VPS or PDC.

### Programming a recording (with 'VIDEOplus')

All the information required for a programming is contained in the PlusCode-programming number.

**VIDEOplus**


- 1 Press the **TIMER** button on the remote control.
- 2 Select the line 'videoplus' with the menu buttons **▼** or **▲** and confirm with the **▶** button.

- 3 Enter the entire PlusCode-programming number (up to 9 digits) printed in your TV guide next to the start time of a TV programme.


For example, 5-234-89 or 5 234 89

Enter 523489 for the PlusCode-programming number.



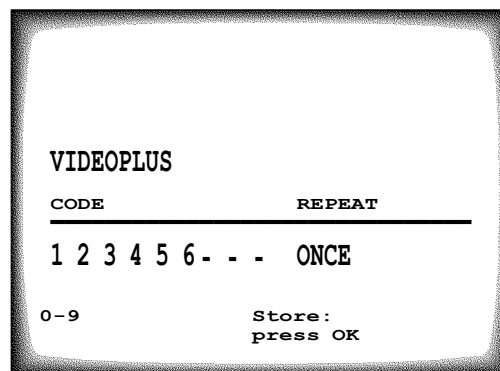


 


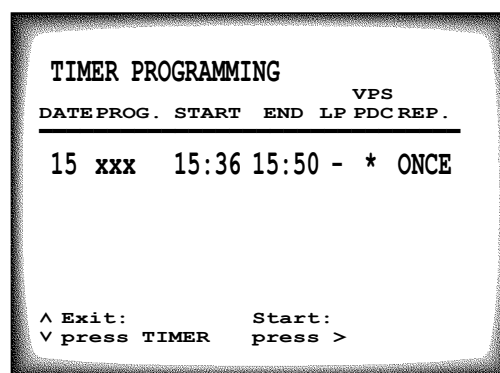


If you make a mistake, you can clear your instructions with the **CLEAR** button.

 


 
- 4 To programme daily or weekly recordings select the column 'REPEAT' with the **▶** button.
- 5 Select the kind of programming required with the **▼** or **▲** button.
  - 'Mo-Fr': recordings every day from Monday to Friday.
  - 'Mo-Su': recordings every day from Monday to Sunday.
  - 'WEEKLY': recordings every week on the same day of the week.
- 6 Confirm with the **OK** button. Your programming details will then appear on the TV screen.




- ▶ If VIDEOplus+ does not recognise the TV channel, 'P??' will appear on the TV screen. Instead of 'P??', you can select the programme number you want with the number buttons **[0-9]**.
- ▶ If 'Codeerror' appears on the TV screen, this means you entered an incorrect PlusCode number or the incorrect date. Correct your instructions or end with the **TIMER** button.
- ▶ If 'Daily error' appears on the TV screen, the date was incorrectly entered.


-  Under 'VPS/PDC', use the  or  button to switch 'VPS or PDC' on or off.
-  Under 'LP', use the  or  button to select the recording speed 'SP' or 'LP'.
-  The TIMER lamp on the front of the set lights up when one or more of the TIMER blocks are occupied.
-  When you are recording, the red recording light at the front of the TV-VIDEO Combi will be alight.
-  If the end of the cassette is reached during a recording, the TV-VIDEO Combi automatically ejects the cassette.
-  If you forget to load a cassette, 'No cassette' will appear.
-  If you inserted a cassette with erase protection when you want to start a recording, the cassette will be ejected.




**7** Press the  button.


**8** Confirm the message on the screen with the  button. A TIMER recording can only start, if the set is not used for other video recorder functions (e.g. playback).


**9** To end, press the  button.


## Programming a recording (without 'VIDEOPlus')



**1** Press the  button on the remote control.

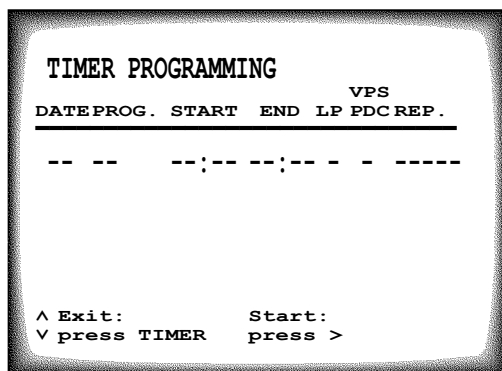
 
 
**2** Select the line 'Timer programming' with the menu buttons  or  and confirm with the  button.



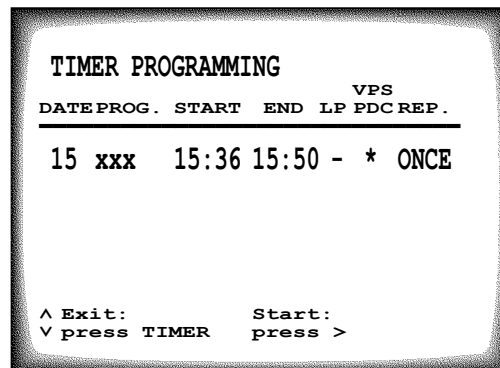





**3** Press the  button.






 

 
**4** Select the entry field with the  or  button.


**5** Enter information with the menu buttons  or  or with the digit buttons .

 
-  Under 'REP.', use the  or  button to select daily or weekly programming.  
 'Mo-Fr': Recording from Monday to Friday.  
 'Mo-Su': Recording from Monday to Sunday.  
 'WEEKL': Recordings every week on the same day.


 If you want to make a TIMER-recordings from an external source, use the  or  button to select the setting 'Record prepared' in the entry field 'PROG.'. Your TV-VIDEO Combi will now be controlled via the scart cable.

 
 Under 'VPS/PDC', use the  or  button to switch 'VPS or PDC' on or off.

  Under 'LP', use the  or  button to select the recording speed 'SP' or 'LP'.

 **6** Confirm with the  button when the information is correct.

**7** Confirm the message on the screen with the  button. A TIMER recording can only start, if the set is not used for other video recorder functions (e.g. playback).

 The programming information has been stored in a TIMER block.

**8** To end, press the  button.

**9** Make sure that the cassette you have put in can be recorded on.

---

## How to check or change a TIMER

---

- 1 Press the **TIMER** button on the remote control.
- 2 Select the line 'Timer programming' with the menu buttons **▼** or **▲** and confirm with the **▶** button.
- 3 Select the TIMER you want to check or change with the **▼** or **▲** button and confirm with the **OK** button.
- 4 Select the entry field with the **◀** or **▶** button.
- 5 Change any information with the **▼** or **▲** button or with the **0-9** buttons.
  - i▶** Under 'LP', use the **▼** or **▲** button to select the recording speed 'SP' or 'LP'.
- 6 Confirm with the **OK** button.
- 7 To end, press the **TIMER** button.
- 8 Make sure that the cassette you have put in can be recorded on.

---

## How to clear a TIMER

---

- 1 Press the **TIMER** button on the remote control.
- 2 Select the line 'Timer programming' with the menu buttons **▼** or **▲** and confirm with the **▶** button.
- 3 Select the TIMER you want to clear with the menu buttons **▼** or **▲**.
- 4 Press the **CLEAR** button.
- 5 Switch off with the **TIMER** button.

## 8. ADDITIONAL FUNCTIONS

### How to read TELETEXT

- Press the **TELETEXT** button to switch the TXT decoder on and off. The TV-VIDEO Combi is now receiving the TXT of the TV channel currently selected.
- To store the current page, press the **OK** button. The next time you call up TELETEXT, you will automatically turn to this page.
- If you want to select an other page, type in the number of the page with the digit buttons **[0-9]**. With the colour buttons on your remote control you can directly select the page numbers/chapters shown at the bottom of the TV screen.

### Extra TELETEXT functions

To use the extra TELETEXT functions, press the **MENU** button, when you are in TELETEXT.


- To enlarge the print, select the symbol '⊕' and confirm with the **OK** button.
- To switch off the TELETEXT decoder temporarily, select the symbol '⊗' and confirm with the **OK** button.
- To call up a TELETEXT sub-page:
  - 1** Select the symbol '○' and confirm with the **OK** button.
  - 2** Enter the page number of the sub-page with the **[0-9]**-buttons (e.g.: 0123).
- To call up concealed information, select the symbol '⊞' and confirm with the **OK** button.
- To stop the pages from being turned over, select the symbol '⊞' and confirm with the **OK** button.
- To show TELETEXT transparently, select the symbol '⊞' and confirm with the **OK** button.

### Changing the TV system

If you play back recordings made on a different kind of tape (for example, NTSC standard), the automatic TV system switch-over may lead to colour interferences. You can switch off the 'automatic TV system switch-over' as follows.

- 1** Press the **MENU** button. The main menu appears.

- 2** Select the line 'Tape' with the **▼** or **▲** button and confirm with the **▶** button.

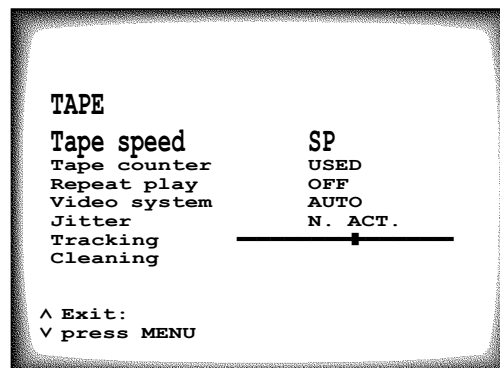


- 3** In the line 'video system' select the required TV system with the menu buttons **◀** or **▶**.
- 4** Confirm with the **OK** button.
- 5** To end, press the **MENU** button.

### Parental control

This function will prevent unauthorised use of your TV-VIDEO Combi. All button-functions will be locked.

**i** You can make programmed recordings while the parental control is on.

- 1** Press the **MENU** button. The main menu appears.
- 2** Select the line 'Setup' with the **▼** or **▲** button and confirm with the **▶** button.

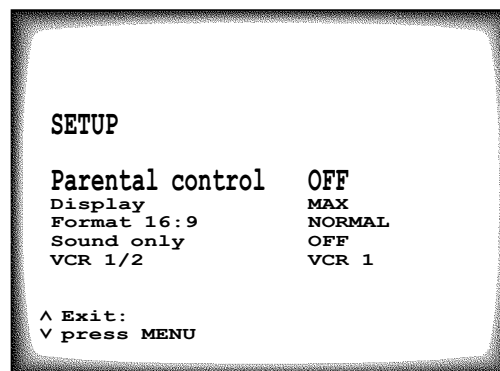

- 3** In the line 'Parental control' select 'ON' with the **◀** or **▶** button.
- 4** Confirm with the **OK** button.
- 5** To end, press the **MENU** button. Keep the remote control in a safe place.

- 6** If you want to switch off the parental control, select 'OFF' in line 'Parental control'.


**i** If a button is pressed with activated parental control, 'Parental Control activ' will appear.

**i** If you want to eject a cassette with activated parental control, press the **STOP** button several seconds.

## Switching the On-screen display (OSD) on or off

You can switch the On Screen Display of the current operating information on or off.

- Press the **MENU** button. The main menu appears.
- Select the line 'Setup' with the menu buttons **▼** or **▲** and confirm with the **▶** button.

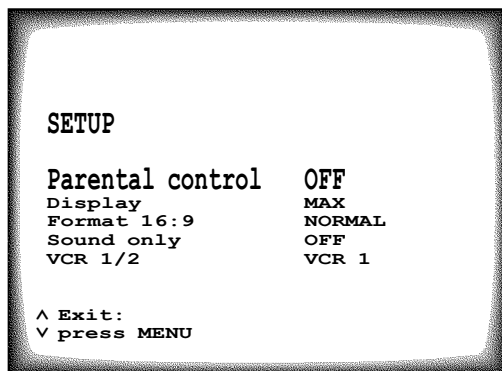


- Select the line 'Display' with the menu buttons **▼** or **▲**.
- Select one of the options indicated with the menu buttons **▶** or **◀**.
  - 'MAX': The OSD appears for a few seconds each time an operating mode is selected and then disappears.
  - 'MIN': The OSD is reduced to a minimum.
  - 'PROGR.': The programme number is always shown.
  - 'COUNTER': The tape position is always shown.
- Confirm with the **OK** button.
- To end, press the **MENU** button.
  - i** With the **OK** button you can superimpose the On Screen Display of current operating mode on the TV screen.

## Switching to 16:9 wide screen picture

If you are using a cassette with 16:9 wide screen recordings, you can switch this function 'ON'. The TV-VIDEO Combi will now automatically switch to wide screen.

- Press the **MENU** button. The main menu appears.
- Select the line 'Setup' with the **▼** or **▲** button and confirm with the **▶** button.

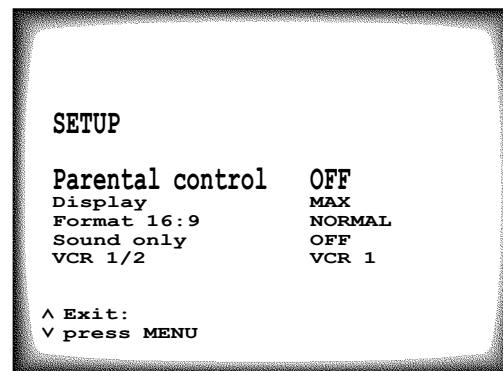


- Select the line 'Format 16:9' with the **▲** or **▼** button.
- Select one of the possibilities with the **▶** or **◀** button.
  - 'NORMAL': Normal size picture.
  - 'EXTEND.': Extended size picture.
  - 'COMPR.': 16:9 format picture.
  - i** When you watch TV you can select between 'EXTEND.' and 'NORMAL'.
- Confirm with the **OK** button.
- To end, press the **MENU** button.

## Switching the remote control command

If you have two machines with the same remote control command, you can change the remote control command of the handset and the remote control command of your TV-VIDEO Combi.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Setup' with the menu buttons **▼** or **▲** and confirm with the menu button **▶**.

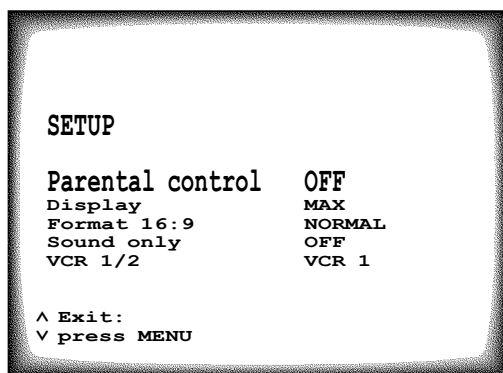

- 3 Select the line 'VCR1/2' with the menu buttons **▼** or **▲**.
- 4 Select 'VCR1' or 'VCR2' with the menu buttons **◀** or **▶**.
- 5 Confirm with the **OK** button.
- 6 On the remote control, press the **STOP** button and the digit button **2** at the same time to switch the remote control to 'VCR2'.


**i** If you want to switch back to 'VCR1', press the **STOP** button and the digit button **1** at the same time.

- 7 Confirm with the **STOP** button.  
**i** If the menu does not disappear, the TV-VIDEO Combi didn't recognise the remote control command. Repeat step **7**.  
**i** After you changed the batteries in the remote control, it will switch back to 'VCR1'.

## Continuous playback

You can automatically play a cassette again and again. When the end of the tape or the recording has been reached, it will rewind and start again.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Tape' with the menu buttons **▼** or **▲**. Confirm with the menu button **▶**.

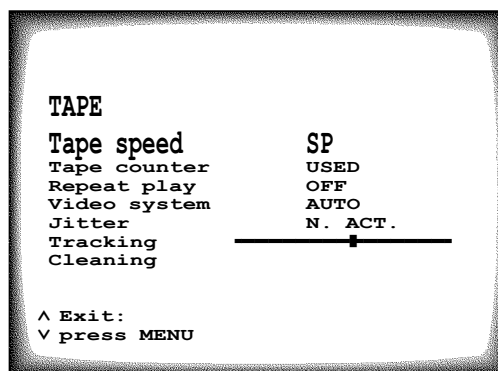

- 3 Select the line 'Repeat play' with the menu buttons **▼** or **▲**.
- 4 Select 'ON' with the menu buttons **◀** or **▶**. If you select 'OFF', the function will be switched off.
- 5 Confirm with the **OK** button.
- 6 Press the **MENU** button.


---

## Sound playback without picture

---

To play sound only when you watch TV or when you playback a cassette, you can switch off the picture. You will hear sound only.

- 1 Press the **[MENU]** button. The main menu appears.
- 2 Select the line 'Setup' with the menu buttons **[▼]** or **[▲]** and confirm with the **[▶]** button.

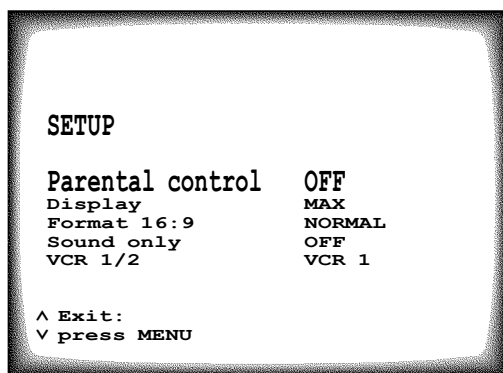

- 3 In the menu 'Setup', select the line 'Sound only'.
- 4 Switch the function on or off with the **[◀]** or **[▶]** button.
- 5 Confirm with the **[OK]** button.
- 6 Press the **[MENU]** button.

---

## Switch off function (SLEEP TIMER)

---

You can programme your set to switch off after a predetermined period.

- 1 Press the **[TIMER ⏰]** button on the remote control.
- 2 Select line 'Sleep timer' with the **[▼]** or **[▲]** button and confirm with the **[▶]** button.
- 3 Determine the time left until switch off in 15 minutes intervals using the **[▼]** or **[▲]** button.  
**[i▶]** You can switch the function off with the **[CLEAR ⏻]** button on the remote control.
- 4 Confirm with the **[OK]** button.
- 5 To end, press the **[TIMER ⏰]** button.

---

## Switch on function (WAKE-UP TIMER)

---

You can programme your set to switch on at a predetermined time.

- 1 Press the **[TIMER ⏰]** button on the remote control.
- 2 Select line 'wake-up timer' with the **[▼]** or **[▲]** button and confirm with the **[▶]** button.
- 3 Select the entry field with the **[◀]** or **[▶]** button.
- 4 Enter the information with the **[▼]** or **[▲]** button or with the number buttons **[0-9]**.
- 5 In the line 'ON', switch the function on or off.
- 6 Press the **[OK]** button.
- 7 To end, press the **[TIMER ⏰]** button.

## 9. Before you call an engineer

If, contrary to expectation, you have any problems using this TV-VIDEO Combi, it may be caused by one of the reasons mentioned below. You can also call the **customer service centre** in your country.

You will find the phone number in the enclosed guarantee leaflet.

### Your TV-VIDEO Combi does not respond to any button being pressed:

- There is no power supply: check the power supply
- A programmed recording is currently being made: cancel the programmed recording with the **STANDBY** button.
- Parental control is on: switch the parental control off.
- Continuous playback is on: switch the continuous playback off.
- There is a technical problem: switch off with the **power** switch for 30 seconds, then switch it on again.

### Cassette is jammed in the TV-VIDEO Combi:

- Don't use force. Switch off with the **power** switch for a moment.

### Remote control does not work:

- Remote control not pointed toward the TV-VIDEO Combi: point it at the TV-VIDEO Combi.
- Batteries have run out: change the batteries.
- You have given the wrong remote control command: read 'Switching remote control command' in chapter 'Additional functions'.

### No picture when you play a cassette:

- There is no recording on the cassette: change the cassette.

### Poor picture quality when you play a cassette:

- The cassette badly worn or of poor quality: use new cassette.
- Tracking is not properly adjusted or the video heads are dirty: turn to chapter 'PLAYBACK' and read the section 'Eliminating picture interference'.
- You are playing a cassette with a LongPlay recording on it: Excellent picture quality is only guaranteed with recordings made in StandardPlay recording speed.

### The TV-VIDEO Combi will not record:

- The TV channel you want to record is not stored or you selected the wrong programme number: check TV channels stored.
- You have loaded a cassette which cannot be recorded on: undo the erase protection on the cassette.

### Programmed recording does not work:

- You have not set the **TIMER** properly: check the **TIMER** blocks.
- You have programmed the wrong time or date: check time and date.
- You have put in a cassette that cannot be recorded on: undo the erase protection on the cassette.
- 'PDC' or 'VPS' switched on but 'PDC/VPS time' wrong: enter PDC or VPS time exactly to the minute. Have the aerial checked.

### Recording starts as soon as the satellite receiver or second video recorder is switched on:

- Externally controlled recording switched on: Switch off the externally controlled recording.

### 'Smart Clock' setting does not work:

- You have stored a TV channel on programme number 'P01' that does not transmit **TELETEXT**: On 'P01' store a TV channel that transmits **TELETEXT**.
- Poor **TELETEXT** reception: On 'P01' store a TV channel with good **TELETEXT** reception.
- You have not activated the Smart Clock function: Switch the function '**ON**'.

### You hear a very short and soft noise coming from your TV-VIDEO Combi at 3:00 at night:

- 'Smart Clock' is checking the time: Switch off the Smart Clock function.

### TELETEXT does not start at page 100:

- You have stored a different preferred page: Store page 100 as preferred page.

## Technical terms used

**Current tape position** : The part of the tape currently being played.

**External source** : A device connected via a socket (for example, scart socket) which is transmitting audio/video signals to the TV-VIDEO Combi.

**Index marking** : A marking which is automatically made on the tape at the beginning of every recording. This marking (recording ID) can be searched for with the Index search function.

**Scart cable** : Also known as a Euro-AV cable. This standard cable is an easy method of connecting various TV, audio and video devices, such as a HIFI and Dolby Surround set, video recorder, DVD player, SAT receiver, decoder, computer and similar devices. Other signals in addition to audio and video signals can be transmitted on it.

**TV system** : There are various systems for transmitting television signals, for example, PAL, SECAM, PAL BG, SECAM DK, SECAM L/L, NTSC etc. The system used by your television depends on which country you are in.

**TXT** : Also known as Teletext, Fasttext, Videotext, FLOF etc.

**OTR** : One touch recording. This function enables you to select the switch-off time in intervals of 30 minutes.

25PV720/07

3103 166 24102  
9294/011



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>