

Register your product and get support at

[www.philips.com/welcome](http://www.philips.com/welcome)

CD490  
CD495



# User manual

**PHILIPS**



# Contents

---

<b>1</b>	<b>Important safety instructions</b>	<b>3</b>
<hr/>		
<b>2</b>	<b>Your phone</b>	<b>4</b>
	What is in the box	4
	Overview of the phone	5
	Overview of the base station	5
	Main menu icons	6
	Display icons	7
<hr/>		
<b>3</b>	<b>Get started</b>	<b>8</b>
	Connect the base station and charger	8
	Install the handset	9
	Configure your phone (country dependent)	9
	Charge the handset	10
	Check the battery level	10
	What is standby mode?	10
	Check the signal strength	10
<hr/>		
<b>4</b>	<b>Calls</b>	<b>11</b>
	Make a call	11
	Answer a call	12
	End a call	12
	Adjust the earpiece/speaker volume	12
	Mute the microphone	12
	Turn the speaker on or off	12
	Make a second call	12
	Answer a second call	13
	Switch between two calls	13
	Make a conference call with the external callers	13
<hr/>		
<b>5</b>	<b>Intercom and conference calls</b>	<b>14</b>
	Make a call to another handset	14
	Transfer a call	14
	Make a conference call	15
<hr/>		
<b>6</b>	<b>Text and numbers</b>	<b>16</b>
	Enter text and numbers	16
	Switch between uppercase and lowercase	16

---

<b>7</b>	<b>Phonebook</b>	<b>17</b>
	View the phonebook	17
	Search a record	17
	Call from the phonebook	17
	Access the phonebook during a call	17
	Add a record	18
	Edit a record	18
	Delete a record	18
	Delete all records	18
	Set the personalized melody	19
	Add a contact to the exception list	19
<hr/>		
<b>8</b>	<b>Call log</b>	<b>20</b>
	Call list type	20
	View the call records	20
	Save a call record to the phonebook	20
	Return a call	21
	Delete a call record	21
	Delete all call records	21
<hr/>		
<b>9</b>	<b>Redial list</b>	<b>22</b>
	View the redial records	22
	Redial a call	22
	Save a redial record to the phonebook	22
	Delete a redial record	22
	Delete all redial records	22
<hr/>		
<b>10</b>	<b>Phone settings</b>	<b>23</b>
	Sound settings	23
	Set the date and time	24
	ECO mode	24
	Name the handset	24
	Set the display language	25
	Display settings	25
<hr/>		
<b>11</b>	<b>Alarm clock</b>	<b>26</b>
	Set the alarm	26
	Turn off the alarm	26

---

<b>12 Services</b>	27
Auto conference	27
Call barring	27
Call list type	27
Auto prefix	28
Network type	28
Select the recall duration	28
Dial mode	28
First ring	29
Auto clock	29
Register the handsets	29
Unregister the handsets	30
Call services	30
Restore default settings	31

---

<b>13 Baby monitor</b>	32
Activate/Deactivate the baby monitor	32
Send an alert	32
Set the baby cry level	33

---

<b>14 Telephone answering machine</b>	34
Turn the answering machine on or off	34
Set the answering machine language	34
Set the answer mode	34
Announcements	34
Incoming messages (ICM)	35

---

<b>15 Menu structure</b>	39
--------------------------	----

---

<b>16 Technical data</b>	42
--------------------------	----

---

<b>17 Notice</b>	43
Declaration of conformity	43
Use GAP standard compliance	43
Compliance with EMF	43
Disposal of your old product and batteries	44

---

<b>18 Frequently asked questions</b>	45
--------------------------------------	----

---

<b>19 Appendix</b>	46
Text and number input tables	46

# 1 Important safety instructions

## Power requirements

- This product requires an electrical supply of 100-240 volts AC. In case of power failure, the communication can be lost.
- The voltage on the network is classified as TNV-3 (Telecommunication Network Voltages), as defined in the standard EN 60950.

## Warning

- The Electrical network is classified as hazardous. The only way to power down the charger is to unplug the power supply from the electrical outlet. Ensure that the electrical outlet is always easily accessible.

## To avoid damage or malfunction

## Caution

- Use only the power supply listed in the user instructions.
- Use only the batteries listed in the user instructions.
- Risk of explosion if battery is replaced by an incorrect type.
- Dispose of used batteries according to the instructions.
- Always use the cables provided with the product.
- Do not allow the charging contacts or the battery to come into contact with metal objects.
- Do not let small metal objects come into contact with the product. This can deteriorate audio quality and damage the product.
- Metallic objects may be retained if placed near or on the handset receiver.
- Do not use the product in places where there are explosive hazards.
- Do not open the handset, base station or charger as you could be exposed to high voltages.
- For pluggable equipment, the socket-outlet shall be installed near the equipment and shall be easily accessible.
- Handsfree activation could suddenly increase the volume in the earpiece to a very high level: make sure the handset is not too close to your ear.
- This equipment is not designed to make emergency calls when the power fails. An alternative has to be made available to allow emergency calls.
- Do not allow the product to come into contact with liquids.

- Do not use any cleaning agents containing alcohol, ammonia, benzene, or abrasives as these may harm the set.
- Do not expose the phone to excessive heat caused by heating equipment or direct sunlight.
- Do not drop your phone or allow objects to fall on your phone.
- Active mobile phones in the vicinity may cause interference.

## When using the phone as a baby monitor

## Caution

- Children should be supervised to ensure that they do not play with the appliance.
- Make sure the baby unit and the cord are always out of reach of the baby (at least 1 metre/3 feet away).
- Keep the parent unit at least 1.5 metres/5 feet away from the baby unit to prevent acoustic feedback.
- Never place the baby unit inside the baby's bed or playpen.
- Never cover the parent unit and the baby unit with anything (e.g. a towel or blanket). Always make sure the cooling vents of the baby unit are free.
- Take every precaution to make sure that your baby can sleep safely.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If you place the parent unit next to a transmitter or other DECT appliance (e.g. a DECT telephone or wireless router for the internet), the connection with the baby unit may be lost. Move the baby monitor further away from the other wireless appliances until the connection is restored.
- This baby monitor is intended as an aid. It is not a substitute for responsible and proper adult supervision and should not be used as such.

## About operating and storage temperatures


- Operate in a place where temperature is always between 0°C to +40°C (up to 90% relative humidity).
- Store in a place where temperature is always between -20°C and +45°C (up to 95% relative humidity).
- Battery life may be shorter in low temperature conditions.

## 2 Your phone

Congratulations on your purchase and welcome to Philips!

To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome).

### What is in the box

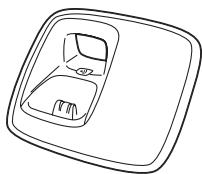

Base station (CD490)




Base station (CD495)



Handset\*\*



Charger\*\*

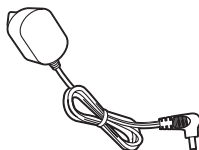

Power adapter\*\*



Line cord\*



Guarantee



User manual



Quick start guide


#### Note






 


- \* In some countries, you have to connect the line adapter to the line cord, then plug the line cord to the telephone socket.

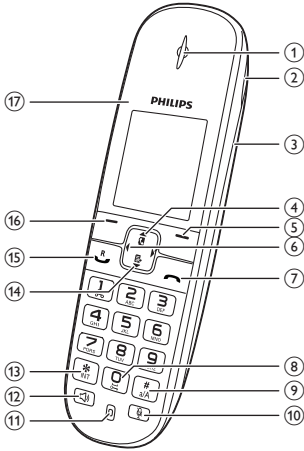



#### Note

- \*\* In multi-handset packs, there are additional handsets, chargers and power adapters.

## Overview of the phone





- |   |  |
|---|--|
| ① | Earpiece   |
| ② | Loudspeaker  |
| ③ | Battery door   |
| ④ |  <ul style="list-style-type: none"> <li>• Scroll up on the menu.</li> <li>• Increase the earpiece/speaker volume.</li> <li>• Access the phonebook.</li> </ul>                 |
| ⑤ |  <ul style="list-style-type: none"> <li>• Delete text or digits.</li> <li>• Cancel operation.</li> </ul>  |
| ⑥ |  <ul style="list-style-type: none"> <li>• Move the cursor to the left or right in editing mode.</li> </ul>  |
| ⑦ |  <ul style="list-style-type: none"> <li>• End the call.</li> <li>• Exit the menu/operation.</li> </ul>   |
| ⑧ |  <ul style="list-style-type: none"> <li>• Press to enter a space during text editing.</li> <li>• Press and hold to lock the keypad.</li> </ul>                              |
| ⑨ |  <ul style="list-style-type: none"> <li>• Make a predial call.</li> <li>• Press and hold to enter a pause.</li> <li>• Switch to upper/lower case during editing.</li> </ul> |
| ⑩ |  Mute or unmute the microphone.   |
| ⑪ | Microphone   |
| ⑫ |  <ul style="list-style-type: none"> <li>• Turn the speaker phone is on/off.</li> <li>• Make and receive calls through the speaker.</li> </ul>                               |


- |   |   |
|---|---|
| ⑬ |  <ul style="list-style-type: none"> <li>• Press and hold to make an intercom call (for multi handset version only).</li> </ul>  |
| ⑭ |  <ul style="list-style-type: none"> <li>• Scroll down on the menu.</li> <li>• Decrease the earpiece/speaker volume.</li> <li>• Access the call log.</li> </ul>   |
| ⑮ |  <ul style="list-style-type: none"> <li>• Make and receive calls.</li> <li>• Recall key</li> </ul>   |
| ⑯ |  <ul style="list-style-type: none"> <li>• Access the main menu.</li> <li>• Confirm selection.</li> <li>• Enter the options menu.</li> <li>• Select the function displayed on the handset screen directly above the key.</li> </ul> |
| ⑰ | LED light   |





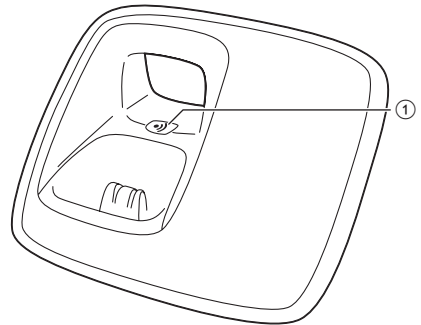


## Overview of the base station
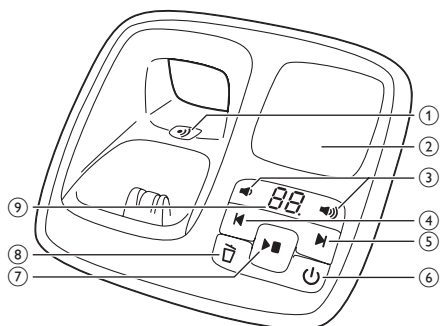
### CD490





 




- |   |  |
|---|--|
| ① |  <ul style="list-style-type: none"> <li>• Find handsets.</li> <li>• Enter registration mode.</li> </ul> |
|---|--|



①		<ul style="list-style-type: none"> <li>Find handsets</li> <li>Enter registration mode</li> </ul>
②	Speaker	
③		Decrease/increase the speaker volume.
④		Skip backward during playback.
⑤		Skip forward during playback.
⑥		Turn the answering machine on/off.
⑦		<ul style="list-style-type: none"> <li>Play messages.</li> <li>Stop messages playback.</li> </ul>
⑧		<ul style="list-style-type: none"> <li>Delete the current playback message.</li> <li>Press and hold to delete all old messages.</li> </ul>
⑨	Message counter	

## Main menu icons




 








The following is an overview of the menu options that are available in your CD490/495. For detailed explanation of the menu options, see the corresponding sections in this user manual.

Icon	Descriptions
	<b>[Phone setup]</b> - Set the date and time, sounds, ECO mode, phone name and display language.
	<b>[Services]</b> - Set the auto conference, auto prefix, network type, recall time, auto clock, call services etc. The services are network and country dependent.
	<b>[Alarm]</b> - Set date and time, alarm, alarm tone etc.
	<b>[Phonebook]</b> - Add, edit, manage phonebook entries etc.
	<b>[Incoming calls]</b> - Displays the call history of all missed or received calls. This icon is available only in CD490.
	<b>[Baby monitor]</b> - Set the alert to other handsets or an external number and set the baby cry level.
	<b>[Answer machine]</b> - Set up, listen to, delete phone messages, etc. This icon is available only in CD495.



## Display icons

In standby mode, the icons shown on the main screen tell you what features are available on your handset.

Icon	Descriptions
	When the handset is off the base station/charger, the bars indicate the battery level (from full to low).
	When the handset is on the base station/charger, the bars keep scrolling until charging completes.
	The empty battery icon flashes and you hear an alert tone. The battery is low and needs recharging.
	The number of bars indicates the link status between the handset and base station. The more bars are shown, the better the signal strength is.
	It remains steadily on when browsing new missed calls in call log.
	It flashes when there is a new missed call. It remains steadily on when browsing missed calls in call log.
	The speaker is on.
	The silent mode is activated.
	It is displayed when the ringer is off or during the preset time for the silent mode.
	The alarm is activated.
	Answering machine: it flashes when there is a new message. It displays when the telephone answering machine is turned on.
	It flashes when there is a new voice message. It remains steadily on when the voice messages are already viewed in the call log. The icon is not shown when there is no voice message.
<b>ECO</b>	The <b>ECO</b> mode is activated.

# 3 Get started

## ! Caution

- Make sure that you have read the safety instructions in the 'Important safety instruction' section before you connect and install your handset.

## Connect the base station and charger


## ! Warning

- Risk of product damage! Make sure that the power supply voltage corresponds to the voltage printed on the back or underside of the phone.
- Use only the supplied power adapter to charge the batteries.


## ≡ Note

- If you subscribe to the digital subscriber line (DSL) high speed internet service through your telephone line, Make sure you install a DSL filter between the telephone line cord and the power socket. The filter prevents noise and caller ID problems caused by DSL interference. For further information on DSL filters, contact your DSL service provider.
- The type plate is located on the bottom of the base station.

- 1 Connect each end of the power adapter to:
  - the DC input jack at the back of the base station;
  - the power socket on the wall.
- 2 Connect each end of the line cord to:
  - the telephone socket at the back of the base station;
  - the telephone socket on the wall.

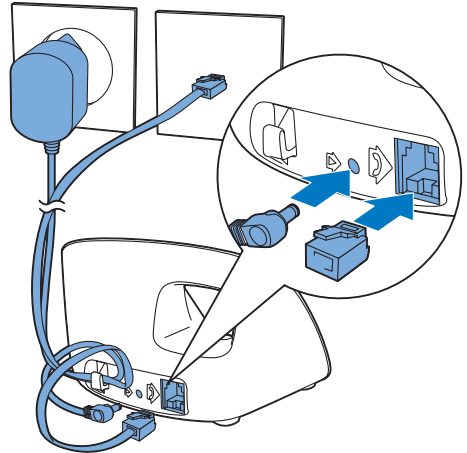


- 3 Connect each end of the power adapter to (for multi handset versions only):
  - the DC input jack at the back of the extra handset charger.
  - the power socket on the wall.

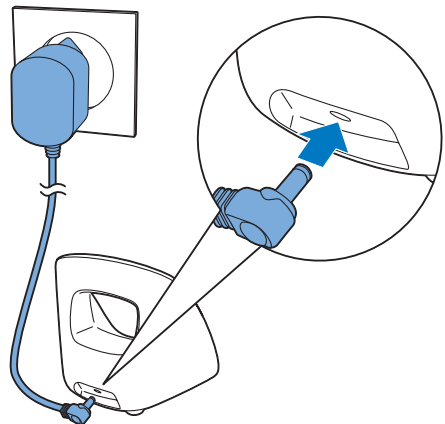

## Install the handset

The batteries are pre-installed in the handset. Pull the battery tape off from the battery door before charging.

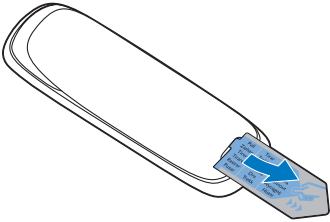

### Caution

- Risk of explosion! Keep batteries away from heat, sunshine or fire. Never discard batteries in fire.
- Use only the supplied batteries.
- Risk of decreased battery life! Never mix different brands or types of batteries.

### Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are charging, it is normal.

### Warning

- Check the battery polarity when inserting in the battery compartment. Incorrect polarity may damage the product.

## Configure your phone (country dependent)

- 1 When using your phone for the first time, you see a welcome message.
- 2 Press [OK].

## Set the country/language

Select your country/language, then press [OK] to confirm.

↳ The country/language setting is saved.

### Note

- The country/language setting option is country dependent. If no welcome message is displayed, it means the country/language setting is preset for your country. Then you can set the date and time.

To re-set the language, see the following steps.

- 1 Select [Menu] > ⚙ > [Language], then press [OK] to confirm.
- 2 Select a language, then press [OK] to confirm.  
↳ The setting is saved.

## Set the date and time

- 1 Select [Menu] > ⚙ > [Date & time], then press [OK] to confirm.
- 2 Select [Set date]/[Set time], then press [OK] to confirm.
- 3 Press the numeric buttons to enter the date and time.

### Note

- If the time is in 12-hour format, press  $\frac{*}{INT}$  to select [AM] or [PM].

- 4 Press [OK] to confirm.

## Set the date and time format

- 1 Select [Menu] > ⚙ > [Date & time], then press [OK] to confirm.
- 2 Select [Date format] or [Time format].
- 3 Press  $\frac{a}{b}$  /  $\frac{c}{d}$  to select [DD-MM-YYYY] or [MM-DD-YYYY] as the date display, and [12 Hours] or [24 Hours] as the time display. Then press [OK] to confirm.  
↳ The setting is saved.

## Note

- The date and time format setting is country dependent.

## Charge the handset

Place the handset on the base station to charge the handset. When the handset is placed correctly on the base station, you hear a docking sound.

↳ The handset starts charging.


## Note

- Charge the batteries for 8 hours before first use.
- If the handset becomes warm when the batteries are being charged, it is normal.

You can activate or deactivate the docking tone (see 'Set the docking tone' on page 24).

Your phone is now ready to use.

## Check the battery level

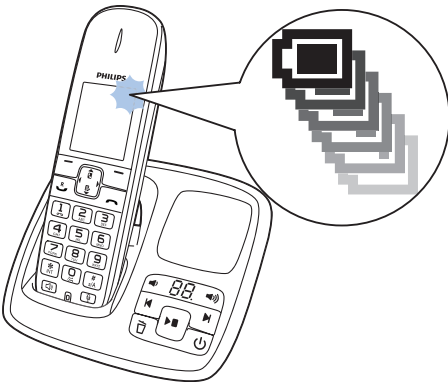

The battery icon displays the current battery level.

- ☐ When the handset is off the base station/charger; the bars indicate the battery level (from full to low).
- ☐ When the handset is on the base station/charger; the bars flash until charging is complete.

- ☐ The empty battery icon flashes. The battery is low and needs recharging.

If you are on the phone, you hear warning tones when the batteries are almost empty. The handset turns off when the batteries are completely empty.

## What is standby mode?

Your phone is in standby mode when it is idle. When the handset is off the charging cradle, the standby screen displays the date and time. When the handset is on the charging cradle, the standby screen displays the time as a screen saver.

## Check the signal strength

- ▮ The number of bars indicates the link status between the handset and base station. The more bars are shown, the better the connection is.

- Make sure the handset is linked to the base station before you make or receive calls and carry out the functions and features.
- If you hear warning tones when you are on the phone, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset close to the base station.

# 4 Calls

## Note

- When the power fails, the phone cannot access emergency services.

## Tip



- Check the signal strength before you make a call or when you are in a call (see 'Check the signal strength' on page 10).

## Make a call



You can make a call in these ways:

- Quick call
- Dial before you call
- Redial the most recent number
- Call from the redial list.
- Call from the phonebook list
- Call from the call log

## Quick call

- 1 Press  or .
- 2 Dial the phone number:
  - ↳ The number is dialed out.
  - ↳ The duration of your current call is displayed.


## Dial before you call

- 1 Dial the phone number
  - To erase a digit, press **[Clear]**.
  - To enter a pause, press and hold **#**.
- 2 Press  or  to dial out the call.

## Call from the redial list

You can make a call from the redial list (see 'Return a call' on page 21).

### Redial the most recent number

- 1 Press **[Redial]**.
  - ↳ The redial list is displayed and the most recent number is highlighted.
- 2 Press .
  - ↳ The most recent number is then dialed out.

## Call from the phonebook

You can make a call from the phonebook list (see 'Call from the phonebook' on page 17).

## Call from the call log

You can return a call from the received or missed call log (see 'Return a call' on page 21).

## Note

- The call timer displays the talk time of your current call.



## Note

- If you hear warning tones, the handset is almost out of battery or the handset is out of range. Charge the battery or move the handset nearer to the base station.

---

## Answer a call

When there is an incoming call, the phone rings and the LCD backlight flashes. Then you can:

- press  or  to answer the call.
- select **[Divert]** to send incoming call to the answering machine.
- select **[Silent]** to turn off the ringer of the current incoming call.



### Warning

- When the handset rings or when the handsfree is activated, keep the handset away from your ear to avoid ear damage.



### Note

- The caller ID service is available if you have registered to the caller ID service with your service provider.



### Tip

- When there is a missed call, a notification message appears.

---


## Turn off the ringer for an incoming call

When the phone rings, press **[Silent]**.

---

## End a call

You can end a call in these ways:

- Press  ; or
- Place the handset to the base station or charging cradle.

---



## Adjust the earpiece/speaker volume

Press  /  on the handset to adjust the volume during a call.

- ↳ The earpiece/speaker volume is adjusted and the phone is back to the call screen.

---

## Mute the microphone

- 1 Press  during a call.
  - ↳ The handset displays **[Mute on]**.
  - ↳ The caller cannot hear you, but you can still hear his voice.
- 2 Press  again to unmute the microphone.
  - ↳ You can now communicate with the caller.

---

## Turn the speaker on or off

Press .


---

## Make a second call



### Note

- This service is network dependent.

- 1 Press  during a call.
  - ↳ The first call is put on hold.
- 2 Dial the second number.
  - ↳ The number displayed on the screen is dialed out.

## Answer a second call

### Note

- This service is network dependent.

When there is a periodical beep to notify you of an incoming call, you can answer the call in these ways:

- 1 Press **Ⓜ** and **2<sub>ABC</sub>** to answer the call.
  - ↳ The first call is put on hold, and you are now connected to the second call.
- 2 Press **Ⓜ** and **1<sub>A</sub>** to end the current call and answer the first call.

## Switch between two calls

You can switch your calls in these ways:

- Press **Ⓜ** and **2<sub>ABC</sub>**; or
- Press **[Option]** and select **[Switch calls]**, then press **[OK]** again to confirm.
  - ↳ The current call is put on hold, and you are now connected to the other call.

## Make a conference call with the external callers

### Note

- This service is network dependent. Check with the service provider for additional charges.

When you are connected to two calls, you can make a conference call in these ways:

- Press **Ⓜ**, then **3<sub>DEF</sub>**; or
- Press **[Option]**, select **[Conference]** and then press **[OK]** again to confirm.
  - ↳ The two calls are combined and a conference call is established.

# 5 Intercom and conference calls

An intercom call is a call to another handset that shares the same base station. A conference call involves a conversation between you, another handset user and the outside callers.

---

## Make a call to another handset

### Note

- If the base station only has 2 registered handsets, press and hold **\*<sub>INT</sub>** to make a call to another handset.

- 1 Press and hold **\*<sub>INT</sub>**.  
↳ The handsets available for intercom are displayed.
- 2 Select a handset number; then press **[OK]** to confirm.  
↳ The selected handset rings.
- 3 Press **☎** on the selected handset.  
↳ The intercom is established.
- 4 Press **[Cancel]** or **⏏** to cancel or end the intercom call.

### Note

- If the selected handset is busy, **[Busy]** is displayed on the handset screen.

---

## While you are on the phone

You can go from one handset to another during a call:

- 1 Press and hold **\*<sub>INT</sub>**.  
↳ The current caller is put on hold.
- 2 Select a handset number; then press **[OK]** to confirm.  
↳ Wait for the other side to answer your call.

---

## Switch between calls

Press **[Extern]** to switch between the outside call and the intercom call.

---

## Transfer a call

- 1 Press and hold **\*<sub>INT</sub>** during a call.  
↳ The handsets available for intercom are displayed.
- 2 Select a handset number; then press **[OK]** to confirm.
- 3 Press **☎** when the other side answers your call.  
↳ The call is now transferred to the selected handset.



---

## Make a conference call

A 3-way conference call is between you, another handset user and the outside callers. It requires two handsets to share the same base station.

---

### During an external call

- 1 Press and hold **\*<sub>INT</sub>** to initiate an internal call.
  - ↳ The handsets available for intercom are displayed.
  - ↳ The external caller is put on hold.
- 2 Select or enter a handset number, then press **[OK]** to confirm.
  - ↳ The selected handset rings.
- 3 Press **☺** on the selected handset.
  - ↳ The intercom is established.
- 4 Press **[Conf]**.
  - ↳ You are now in a 3-way conference call with an external call and a selected handset.
- 5 Press **☺** to end the conference call.



#### Note

- Press **☺** to join an ongoing conference with another handset if **[Services] > [Conference]** is set to **[Auto]**.

---

### During the conference call

- Press **[Int.]** to put the external call on hold and go back to the internal call.
  - ↳ The external call is put on hold.
- Press **[Conf]** to establish the conference call again.



#### Note

- If a handset hangs up during the conference call, the other handset remains connected to the external call.

# 6 Text and numbers

You can enter text and numbers for handset name, phonebook records, and other menu items.

---

## Enter text and numbers

- 1 Press once or several times on the alphanumeric key to enter the selected character.
- 2 Press **[Clear]** to delete the character. Press **◀/▶** to move the cursor left and right.
- 3 Press **□** to add a space.



Tip

- For further information on the text and number input, see the chapter 'Appendix'.

---

## Switch between uppercase and lowercase

By default, the first letter of each word in a sentence is uppercase and the rest is lowercase. Press **#/A** to switch between the uppercase and lowercase letters.

# 7 Phonebook

This phone has a phonebook that stores up to 200 records. You can access the phonebook from the handset. Each record can have a name up to 14 characters long and a number up to 24 digits long.

There are 2 direct access memories (keys **1** and **2**). Depending on your country, keys **1** and **2** are preset to the voice mail number and information service number of your service provider respectively. When you press and hold on the key in standby mode, the saved phone number is dialed automatically.

## View the phonebook

### Note

- You can view the phonebook on one handset only each time.

- Press **☰** or select **[Menu] > ☰ > [OK]** to access the phonebook list.
- Press **☰** / **☷** to scroll through the phonebook entries.

## Search a record

You can search the phonebook records in these ways:

- Scroll the contact list.
- Enter the first character of the contact.

## Scroll the contact list

- Press **☰** or select **[Menu] > ☰ > [OK]** to access the phonebook list.
- Press **☰** / **☷** to scroll through the phonebook list.

## Enter the first character of a contact

- Press **☰** or select **[Menu] > ☰ > [OK]** to access the phonebook list.
- Press the alphanumeric key that matches the character.
  - ↳ The first record that starts with this character is displayed.

## Call from the phonebook

- Press **☰** or select **[Menu] > ☰ > [OK]** to access the phonebook list.
- Select a contact in the phonebook list.
- Press **☎** to make the call.

## Access the phonebook during a call



- Press **[Option]** and select **[Phonebook]**.
- Press **[OK]** to confirm.
- Select a contact, press **[Option]**, then press **[View]** to view the number.

---

## Add a record

### Note

- If your phonebook memory is full, the handset displays a notification message. Delete some records to add new ones.

- 1 Press  or select [Menu] >  to access the phonebook list.
- 2 Select [Option] > [Add new], then press [OK] to confirm.
- 3 Enter the name, then press [OK] to confirm.
- 4 Enter the number; then press [Save] to confirm  
↳ Your new record is saved.



### Tip

- Press and hold  $\#$   $\frac{a}{A}$  to insert a pause.
- Press  $\#$   $\frac{a}{A}$  to switch between the uppercase and lowercase letters.

### Note



- The phonebook overwrites the old number with the new number.

### Tip

- Press [Clear] to delete the character. Press  /  to move the cursor left and right.



---

## Edit a record

- 1 Press  or select [Menu] >  > [Option] > [Edit], then press [OK] to confirm.
- 2 Edit the name, then press [OK] to confirm.
- 3 Edit the number; then press [Save] to confirm.  
↳ The record is saved.



---

## Delete a record

- 1 Press  or select [Menu] > 
- 2 Select a contact, then select [Option] > [Delete]. Press [OK] to confirm.  
↳ The handset displays a confirmation request.
- 3 Select [OK] to confirm.  
↳ The record is deleted.

---

## Delete all records

- 1 Press  or select [Menu] > 
- 2 Select a contact, then select [Option] > [Delete all].
- 3 Press [OK] to confirm.  
↳ The handset displays a confirmation request.
- 4 Press [OK] to confirm.  
↳ All records are deleted.

## Set the personalized melody

You can personalize the melody played when someone in the phonebook calls you.



### Note

- Make sure you have subscribed to caller identification before you use this feature.

- 1 Press or select **[Menu]** > then press **[OK]** to confirm.
- 2 Select a contact, then press **[Option]** > **[Select melody]**.
- 3 Press **[OK]** to set or change the melody for the contact.
- 4 Select a melody for the contact, then press **[OK]** to confirm.  
↳ The melody is set.

## Add a contact to the exception list

You can select a contact to the exception list. When the contact who is added into the exception list calls you, the phone rings immediately even though you activate the silent mode.

- 1 Press or select **[Menu]** >
- 2 Select a contact, then select **[Option]** > **[Set exception]**.
- 3 Press **[On]** to confirm.  
↳ The setting is saved.

# 8 Call log


The call log stores the call history of all missed or received calls. The incoming call history includes the name and number of the caller, call time, and date. This feature is available if you have registered to the caller ID service with your service provider.


Your phone can store up to 50 call records. The call log icon on the handset flashes to remind you of any unanswered calls. If the caller allows the display of his identity, you can view his name or number. The call records are displayed in chronological order with the most recent received call at the top of the list.

## Note

- Make sure that the number in the call list is valid before you can call back directly from the call list.

The following icon shown on the screen informs you if you have missed calls.


 It remains steadily on when browsing the new missed calls in call log.

 It flashes when there is a new missed call. It remains steadily on when browsing missed calls in call log.



## Call list type

You can view all incoming calls or missed calls from this menu.

### Select the call list type

- 1 Select **[Menu]** >  > **[Call list type]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.



## View the call records

- 1 Press  or select **[Menu]** > , then press **[OK]** to confirm.  
↳ The incoming call log is displayed.
- 2 Select **[Incoming calls]**.
- 3 Select a record, then select **[Option]** > **[View]** > **[OK]** to view the available information.

## Note




-  is available only in CD490.

## Save a call record to the phonebook

- 1 Press  or select **[Menu]** > , then press **[OK]** to confirm.  
↳ The incoming call log is displayed.
- 2 Select **[Incoming calls]**.
- 3 Select a record, then press **[Option]**.
- 4 Select **[Save number]**, then press **[OK]** to confirm.
- 5 Enter and edit the name, then press **[OK]** to confirm.
- 6 Enter and edit the number, then press **[Save]** to confirm.  
↳ The record is saved.



---

## Return a call

- 1 Press  or select **[Menu]** > , then press **[OK]**.  
↳ The incoming call log is displayed.
- 2 Select **[Incoming calls]**.
- 3 Select a record on the list.
- 4 Press  to make the call.



---

## Delete a call record

- 1 Press  or select **[Menu]** > , then press **[OK]** to confirm.  
↳ The incoming call log is displayed.
- 2 Select **[Incoming calls]**.
- 3 Select a record, then press **[Option]** to confirm.
- 4 Select **[Delete]**, then press **[OK]** to confirm.  
↳ The handset displays a confirmation requests.
- 5 Press **[OK]** to confirm.  
↳ The record is deleted.

---

## Delete all call records

- 1 Press  or select **[Menu]** > , then press **[OK]** to confirm.  
↳ The incoming call log is displayed.
- 2 Select **[Incoming calls]**.
- 3 Select a record, then press **[Option]**.
- 4 Select **[Delete all]**, then press **[OK]** to confirm.  
↳ The handset displays a confirmation request.
- 5 Press **[OK]** to confirm.  
↳ All records are deleted.

## 9 Redial list

The redial list stores the call history of dialed calls. It includes the names and/or numbers you have called. This phone can store up to 20 redial records.

---

### View the redial records

Press **[Redial]**.

↳ The dialed calls list is displayed.

---

### Redial a call

- 1 Press **[Redial]**.
- 2 Select the record you want to call. Press **[R]**.  
↳ The number is dialed out.

---

### Save a redial record to the phonebook

- 1 Press **[Redial]** to enter the list of dialed calls.
- 2 Select a record, then press **[Option]** to confirm.
- 3 Select **[Save number]**, then press **[OK]** to confirm.
- 4 Enter and edit the name, then press **[OK]** to confirm.
- 5 Enter and edit the number, then press **[Save]** to confirm.  
↳ The record is saved.

---

### Delete a redial record

- 1 Press **[Redial]** to enter the list of dialed calls.
- 2 Select a record, then press **[Option]** to confirm.
- 3 Select **[Delete]**, then press **[OK]** to confirm.  
↳ The handset displays a confirmation request.
- 4 Press **[OK]** to confirm.  
↳ The record is deleted.

---

### Delete all redial records

- 1 Press **[Redial]** to enter the list of dialed calls.
- 2 Select **[Option]** > **[Delete all]**, then press **[OK]** to confirm.  
↳ The handset displays a confirmation request.
- 3 Press **[OK]** to confirm.  
↳ The record is deleted.



# 10 Phone settings

You can customize the settings to make it your own phone.

## Sound settings

### Set the handset's ringtone

You can select from 10 ringtones.

- 1 Select **[Menu]** > **[Settings]** > **[Sounds]** > **[Ring Tone]**, then press **[OK]** to confirm.
- 2 Select a ringtone, then press **[OK]** to confirm.  
↳ The setting is saved.

### Set the handset's ringtone volume

You can select among 5 ringtone volume levels, **[Progressive]** or **[Off]**.

- 1 Select **[Menu]** > **[Settings]** > **[Sounds]** > **[Ring volume]**, then press **[OK]** to confirm.
- 2 Select a volume level, then press **[OK]** to confirm.  
↳ The setting is saved.

## Silent mode

You can set your phone to silent mode and enable it for a specific duration when you do not want to be disturbed. When the silent mode is turned on, your phone does not ring or send any alerts or sound.

### Note

- When you press **[Mute]** to find your handset, or when you activate the alarm, your phone still sends alert even when the silent mode is activated.

- 1 Select **[Menu]** > **[Settings]** > **[Sounds]** > **[Silent mode]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.
- 3 Select **[Start & end]**, then press **[OK]** to confirm.
- 4 Set the time, then press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- When the silent mode is set to **[On]**, **[Mute]** is displayed. **[Mute]** is displayed during the preset time for the silent mode.

### Exclude the contacts from silent mode

You can select the length of ring delay and set the contacts to be excluded from the phonebook. Ring delay is the number of rings that will be muted before the rings become audible on the phone.

- 1 Select **[Menu]** > **[Settings]** > **[Sounds]** > **[Silent mode]**, then press **[OK]** to confirm.
- 2 Select **[Exception]**.
- 3 Select **[On]** to activate, or **[Off]** to deactivate the silent mode, then press **[OK]** to confirm.
- 4 Select **[Ring delay]**, then select an option.
- 5 press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- If **[Exception]** is set to **[On]** and **[Ring delay]** option is selected, the handset rings only after length of ring delay selected is reached.
- Make sure that the contact under the **[Set exception]** option of the phonebook menu is set to **[On]** before you can exclude this contact from the silent mode.

---

## Set the key tone

Key tone is the sound made when you press a key on the handset.

- 1 Select **[Menu]** > **⚙️** > **[Sounds]** > **[Key tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the docking tone

Docking tone is the sound made when you place the handset on the base station or charger.

- 1 Select **[Menu]** > **⚙️** > **[Sounds]** > **[Docking tone]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Set the sound profile

You can set the sound in the earpiece among 3 different profiles.

- 1 Select **[Menu]** > **⚙️** > **[Sounds]** > **[My sound]**, then press **[OK]** to confirm.
- 2 Select a profile, then press **[OK]** to confirm.  
↳ The setting is saved.

### Access the sound profile during a call

Press **[Sounds]** for once or several times to change the sound profile during a call.

---

## Set the date and time

For further information, see chapter 'Get started', sections 'Set the date and time' and 'Set the date and time format'.

---

## ECO mode

The **ECO** mode reduces the transmission power of the handset and base station when you are on a call or when the phone is in standby mode.

- 1 Select **[Menu]** > **⚙️** > **[Eco mode]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, and press **[OK]** to confirm.  
↳ The setting is saved.  
↳ **ECO** is displayed in standby mode.



### Note

- When **ECO** is set to **[On]**, the connection range between the handset and the base station can be reduced.

---

## Name the handset

The name of the handset can be up to 14 characters. It is displayed on the handset screen in standby mode.


- 1 Select **[Menu]** > **⚙️** > **[Phone name]**, then press **[OK]** to confirm.
- 2 Enter or edit the name. To erase a character, select **[Clear]**.
- 3 Press **[Save]** to confirm.  
↳ The setting is saved.

---

## Set the display language

### Note

- This feature only applies to models with multiple-language support.
- Languages available vary from country to country.


- 1 Select **[Menu]** >  > **[Language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.  
↳ The setting is saved.

---

## Display settings

You can change the brightness of the phone display during standby mode.


### Set the display

- 1 Select **[Menu]** >  > **[Display]**, then press **[OK]** to confirm.
- 2 Select **[Brightness]**, then press **[OK]** to confirm.
- 3 Select an option, then press **[OK]** to confirm.

---

## Set the backlight of the LCD screen

You can set the backlight of the LCD screen and keypad flashing on or off when the phone rings.



- 1 Select **[Menu]** >  > **[Display]** > **[Visual alert]**, then press **[OK]** to confirm.
- 2 Select **[Flashing on]/[Flashing off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

# 11 Alarm clock

Your phone has a built-in alarm clock. Check the information below to set your alarm clock.

---

## Set the alarm

- 1 Select **[Menu]** > , then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, then press **[OK]** to confirm.
- 3 Select **[Alarm time]**, then press **[OK]** to confirm.
- 4 Enter an alarm time, then press **[OK]** to confirm.
- 5 Select **[Repetition]**, then press **[OK]** to confirm.
- 6 Select an alarm occurrence, then press **[OK]** to confirm.
- 7 Select **[Alarm tone]**, then press **[OK]**.
- 8 Select a tone from options, then press **[OK]** to confirm.
  - ↳ The alarm is set and  is displayed on the screen.



### Tip


- Press  to switch between **[AM]/[PM]** .

---

## Turn off the alarm

---

### Before the alarm rings

Select **[Menu]** >  > **[Off]**, then press **[OK]** to confirm.

↳ The setting is saved.

---

### When the alarm rings


- Press **[Off]** to turn off the alarm.
- Press **[Snooze]**(or any key except **[Off]** ) to snooze.
  - ↳ The alarm rings again after 5 minutes. After you snooze it for 3 times, the snooze function is off.

# 12 Services

The phone supports a number of features that help you handle and manage the calls.


---

## Auto conference

To join an external call with another handset, press .

---

### Activate/Deactivate auto conference

- 1 Select **[Menu]** >  > **[Conference]**, then press **[OK]** to confirm.
- 2 Select **[Auto]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.


---

## Call barring

You can restrict the phone from making specific outgoing calls.


---

### Select the barring mode

- 1 Select **[Menu]** >  > **[Call barring]** > **[Barring mode]** then press **[OK]** to confirm.
- 2 Enter the PIN. The default PIN is 0000.
- 3 Select **[On]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

---

### Add new number to the barred list

- 1 Select **[Menu]** >  > **[Call barring]** > **[Barring number]**, then press **[OK]** to confirm.
- 2 Enter the PIN. The default PIN is 0000.
- 3 Select a number from the list, then press **[OK]** to confirm.  
↳ The setting is saved.


---

#### Note

- The number in the barred list can still be sent as an external line for a baby call (see 'Send to an external line' on page 32).

---

### Change the PIN

- 1 Select **[Menu]** >  > **[Call barring]** > **[Change PIN]**, then press **[OK]** to confirm.
- 2 Enter the old PIN, then press **[OK]** to confirm.
- 3 Enter the new PIN, then press **[OK]** to confirm.
- 4 Enter the new PIN again, then press **[Save]** to confirm.  
↳ The setting is saved.


---

## Call list type

You can view all incoming calls or missed calls from this menu.

---

### Select the call list type

- 1 Select **[Menu]** >  > **[Call list type]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.

---

## Auto prefix

This feature checks and formats your outgoing call number before it is dialed out. The prefix number can replace the detect number you set in the menu. For example, you set 604 as the detect number and 1250 as the prefix. When you have dialed out a number such as 6043338888, your phone changes the number to 12503338888 when it dials out.

### Note


- The maximum length of a detect number is 5 digits. The maximum length of an auto prefix number is 10 digits.

### Note

- This is a country dependent feature.

---

## Set auto prefix

- 1 Select **[Menu]** >  > **[Auto prefix]**, then press **[OK]** to confirm.
- 2 Enter the detect number, then press **[OK]** to confirm.
- 3 Enter the prefix number, then press **[OK]** to confirm.  
↳ The setting is saved.

### Note

- To enter a pause, press and hold  $\frac{\#}{a/A}$ .

### Note

- If the prefix number is set and the detect number is left empty, the prefix number is added to all outgoing calls.

### Note


- The feature is unavailable if the dialed number starts with \* and #.

---

## Network type

### Note


- This feature only applies to models with network type support.

- 1 Select **[Menu]** >  > **[Network type]**, then press **[OK]**.
- 2 Select a network type, then press **[OK]**.  
↳ The setting is saved.

---

## Select the recall duration

Make sure that the recall time is set correctly before you can answer a second call. In normal case, the phone is already preset for the recall duration. You can select among 3 options: **[Short]**, **[Medium]** and **[Long]**. The number of available options varies with different countries. For details, consult your service provider.

- 1 Select **[Menu]** >  > **[Recall time]**, then press **[OK]** to confirm.
- 2 Select an option, then press **[OK]** to confirm.  
↳ The setting is saved.

---


## Dial mode

### Note


- This feature only applies to models that support both tone and pulse dial.

Dial mode is the telephone signal used in your country. The phone supports tone (DTMF) and pulse (rotary) dial. Consult the service provider for detailed information.

## Set the dial mode

- 1 Select **[Menu]** >  > **[Dial mode]**, then press **[OK]** to confirm.
- 2 Select a dial mode, then press **[OK]** to confirm.  
↳ The setting is saved.


### Note

- If your phone is in pulse dial mode, press  during a call for temporary tone mode. Digits entered for this call are then sent out as tone signals.

## First ring

If you have subscribed to the caller ID service with your service provider, your phone can cancel the first ring before the caller ID is displayed on the screen. After the phone is reset, it can detect automatically if there is a caller subscription and start to cancel the first ring. You can change this setting to suit your preference. This feature only applies to models with first ring support.

## Turn the first ring on/off

- 1 Select **[Menu]** >  > **[First ring]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**, press **[OK]** to confirm.  
↳ The setting is saved.

### Note


- To reset the first ring status, go to the reset menu.

## Auto clock

### Note

- This service is network dependent.
- Make sure you have subscribed to the caller ID service before you use this feature.

It synchronizes the date and time on your phone with the public switched telephone network (PSTN) automatically. For the date to be synchronized, make sure the current year is set.

- 1 Select **[Menu]** >  > **[Auto clock]**, then press **[OK]** to confirm.
- 2 Select **[On]/[Off]**. Press **[OK]**.  
↳ The setting is saved.

## Register the handsets

You can register additional handsets to the base station. The base station can register up to 5 handsets.

## Auto registration


Place the unregistered handset on the base station.

- ↳ The handset detects the base station and registers automatically.
- ↳ Registration is completed in less than two minutes. The base station automatically assigns a handset number to the handset.

---

## Manual registration

If auto registration fails, register your handset manually to the base station.

- 1 Select **[Menu]** >  > **[Register]**, then press **[OK]** to confirm.
- 2 Press and hold **(\*)** on the base station for 5 seconds.



### Note

- For models with an answering machine, you hear a confirmation beep.

- 3 Enter the system PIN. Press **[Clear]** to make corrections.
- 4 Press **[OK]** to confirm the PIN.  
↳ Registration is completed in less than 2 minutes. The base automatically assigns a handset number to the handset.



### Note

- If the PIN is incorrect or no base is found within a certain period, your handset displays a notification message. Repeat the above procedure if registration fails.




### Note

- The preset PIN is 0000. No change can be made on it.

---

## Unregister the handsets

- 1 If two handsets share the same base station, you can unregister a handset with another handset.
- 2 Select **[Menu]** >  > **[Unregister]**, then press **[OK]** to confirm.
- 3 Select the handset number to be unregistered.
- 4 Press **[OK]** to confirm.  
↳ The handset is unregistered.



### Tip

- The handset number displays beside the handset name in standby mode.

---

## Call services

The call services are network and country dependent. Contact your service provider for more information.



### Note

- For the call services to work properly, make sure that the activation and/or deactivation codes are correctly entered.


---

## Call forward

You can divert your calls to another phone number. You can select among 3 options:

- **[Call forward]**: divert all incoming calls to another number.
- **[Call fwd busy]**: divert calls when the line is busy.
- **[Call fwd unans]**: divert calls when no one answers.

 
### Activate/Deactivate call forward

- 1 Select **[Menu]** >  > **[Call Services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**
- 2 Select **[Activate]/[Deactivate]**, then press **[OK]** to confirm.
- 3 Enter the telephone number.  
↳ The setting is saved.



### Edit the activation/deactivation code

You can edit the prefix and suffix to the call forward codes.

- 1 Select **[Menu]** >  > **[Call Services]** > **[Call forward]/[Call fwd busy]/[Call fwd unans]**, then press **[OK]** to confirm.
- 2 Select **[Change code]**, then press **[OK]**.
- 3 Then you can either
  - Select **[Activation]** > **[Prefix]/[Suffix]**, then press **[OK]** to confirm; or
  - Select **[Deactivation]**, then press **[OK]** to confirm.
- 4 Enter or edit the code, then press **[OK]** to confirm.
  - ↳ The setting is saved.

---

### Call return


You can check the most recent unanswered call.

#### Call the return service centre

Select **[Menu]** >  > **[Call Services]** > **[Call return]** > **[Call]**, then press **[OK]** to confirm.

↳ Your call is made to the service center.

#### Edit the call return service centre number

- 1 Select **[Menu]** >  > **[Call Services]** > **[Call return]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number, then press **[OK]** to confirm.
  - ↳ The setting is saved.

---

### Call back service


The call back service notifies you when a party you have tried to call becomes available. You can cancel this service from the menu after you have activated it from the service provider.

#### Cancel the call back service

Select **[Menu]** >  > **[Call Services]** > **[Cancel call bk]** > **[Call]**, then press **[OK]** to confirm.

↳ A call is made to the service centre to cancel the call back option.

### Edit the cancel call back service number


- 1 Select **[Menu]** >  > **[Call Services]** > **[Cancel call bk]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number, then press **[OK]** to confirm.
  - ↳ The setting is saved.

---

### Hide your identity


You can hide your identity from the caller.

#### Activate ID withheld

Select **[Menu]** >  > **[Call Services]** > **[Hide my ID]** > **[Activate]**, then press **[OK]** to confirm.

↳ When you make a call to your contact, your ID is withheld.


#### Edit the ID withheld code

- 1 Select **[Menu]** >  > **[Call Services]** > **[Hide my ID]** > **[Settings]**, then press **[OK]** to confirm.
- 2 Enter or edit the number, then press **[OK]** to confirm.
  - ↳ The setting is saved.

---

### Restore default settings

You can reset your phone settings to the original factory settings.


- 1 Select **[Menu]** >  > **[Reset]**, then press **[OK]** to confirm.
  - ↳ The handset displays a confirmation request.
- 2 Press **[OK]** to confirm.
  - ↳ All settings are reset.

# 13 Baby monitor

Your phone supports the baby monitor function which sends an alert if the sound level exceeds the set limit.

## ! Caution

- Make sure that you do not leave the handset that has the active monitor in the baby room.
- Make sure the baby unit and the cord are always out of reach of the baby.
- Place the baby unit at least 1 meter/3 feet but not more than 2 meters/6 feet away from the baby.

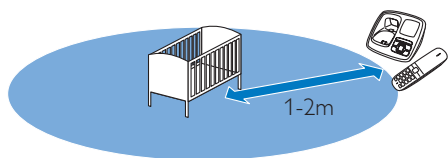

## Activate/Deactivate the baby monitor

Select **[Menu]** > **[☰]** > **[Activate]**, then press **[OK]** to confirm.

↳ The baby monitor mode is activated.

## \* Tip

- If you have not set the parent unit, a notification message appears. Then you are asked to select to where you send the alert: external lines or other handset number. For information, see the next section.
- To exit from the baby monitor menu, press **[Off]**.

## ☰ Note

- When the baby monitor mode is activated, the baby handset does not ring on incoming calls.

## Send an alert

You can send an alert to other handsets within the home or an external line. External line can be a cell phone or another fixed line outside the house.

## ☰ Note

 
- Make sure that any prefix digits and/or country code are included when you send an alert.

## Send to other handsets

- 1 Select **[Menu]** > **[☰]** > **[Send alert to]** > **[Connected line]**, then press **[OK]** to confirm.
- 2 Select the handset number, then press **[OK]** to confirm.

## ☰ Note

- Make sure that the distance between the baby unit and the parent unit is at least 1.5 meter away from each other to prevent the howling effect.



## Send to an external line


- 1 Select **[Menu]** > **[☰]** > **[Send alert to]** > **[External line]**, then press **[OK]** to confirm.
- 2 Enter a telephone number, then press **[Save]** to confirm.

## ☰ Note

- You can still send an alert to the external line even though it is in the barred list.


---

## Send to a contact from the phonebook

- 1 Select **[Menu]** >  > **[Send alert to]** > **[Select number]**, then press **[OK]** to confirm.
- 2 Select a contact from the phonebook, then press **[Save]** to confirm.

---

## Set the baby cry level

- 1 Select **[Menu]** >  > **[Baby cry level]**, then press **[OK]** to confirm.
- 2 Select a new setting, then press **[OK]** to confirm.  
↳ The setting is saved.

# 14 Telephone answering machine

## Note

- Available only for CD495.


Your phone includes a telephone answering machine that records unanswered calls when it is on. By default, the answering machine is set to the **[Answer & rec.]** mode. You can also access the answering machine remotely and change the settings through the answering machine menu on the handset.

The LED indicator on the base station lights up when the answer machine is on.


## Turn the answering machine on or off

You can turn the answering machine on or off through the base station or the handset.

### Through the handset

- 1 Select **[Menu]** >  > **[Answer mode]**, then press **[OK]** to confirm.
- 2 Select **[Answer only]/[Answer & rec.]/[Off]**, then press **[OK]** to confirm.  
↳ The setting is saved.

### Through the base

Press  to turn the answering machine on or off in standby mode.

## Note


- When the answering machine is switched on, it answers incoming calls after a certain number of rings based on the ring delay setting.

## Set the answering machine language

### Note


- This feature only applies to models with multiple-language support.

The answering machine language is the language for the announcements.

- 1 Select **[Menu]** >  > **[Voice language]**, then press **[OK]** to confirm.
- 2 Select a language, then press **[OK]** to confirm.  
↳ The setting is saved.

## Set the answer mode

You can set the answering machine and select if the callers can leave messages. Select **[Answer & rec.]** if you allow the callers to leave messages. Select **[Answer only]** if you forbid the callers to leave messages.

- 1 Select **[Menu]** >  > **[Answer mode]**, then press **[OK]** to confirm.
- 2 Select an answer mode, then press **[OK]** to confirm.  
↳ The setting is saved.

### Note


- If the memory is full, the answering machine switches to **[Answer only]** mode automatically.

## Announcements

The announcement is the message your caller hears when the answering machine picks up the call. The answering machine has 2 default announcements: the **[Answer & rec.]** mode and **[Answer only]** mode.

## Record an announcement

The maximum length of the announcement you can record is 3 minutes. The newly recorded announcement automatically replaces the old one.


- 1 Select **[Menu]** >  > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Answer & rec.]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Record new]**, then press **[OK]** to confirm.
- 4 Recording starts after the beep.
- 5 Press **[OK]** to stop recording or the recording stops after 3 minutes.
  - ↳ You can listen to the newly recorded announcement on the handset.



### Note

- Make sure that you speak close to the microphone when you record an announcement.

## Listen to the announcement


- 1 Select **[Menu]** >  > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Answer & rec.]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Play]**, then press **[OK]** to confirm.
  - ↳ You can listen to the current announcement.



### Note

- You can no longer listen to the announcement when you pick up an incoming call.

## Restore the default announcement

- 1 Select **[Menu]** >  > **[Announcement]**, then press **[OK]** to confirm.
- 2 Select **[Answer & rec.]** or **[Answer only]**, then press **[OK]** to confirm.
- 3 Select **[Use default]**, then press **[OK]** to confirm.
  - ↳ The handset displays a confirmation request.
- 4 Press **[OK]** to confirm.
  - ↳ The default announcement is restored.

## Incoming messages (ICM)

Each message can be up to 3 minutes long. When you receive new messages, the new message indicator flashes on the answering machine and the handset displays a notification message.



### Note

- If you pick up the phone when the caller leaves a message, the recording stops and you can talk to the caller directly.



### Note

- If the memory is full, the answering machine switches to **[Answer only]** automatically. Delete old messages to receive new ones.

---

## Listen to the incoming messages

You can listen to the incoming messages in the sequence they are recorded.

### From the base

- To start/stop listening, press **▶■**.
- To adjust the volume, press **◀ / ▶**.
- To play the previous message/replay the current message, press **◀**.
- To play the next message, press **▶**.
- To delete the current message, press **☒**.

### Note

- No deleted messages can be recovered.

### From the handset

Select **[Menu] > ☒ > [Play]**, then press **[OK]** to confirm.

- ↳ New messages start playing. Old messages start playing if there is no new message.
- Press **[Back]** to stop listening.
- Press **[Option]** to enter the options menu.
- Press **▲ / ▼** to increase/decrease the volume.

---

## Delete an incoming message

### From the base

Press **☒** when you listen to the message.

- ↳ The current message is deleted.

### From the handset

- 1 When you listen to the message, press **[Option]** to enter the options menu.
- 2 Select **[Delete]**, then press **[OK]** to confirm.
  - ↳ The current message is deleted.

---

## Delete all old incoming messages

### From the base

Press and hold **☒** in standby mode.

- ↳ All old messages are permanently deleted.

### From the handset

- 1 Select **[Menu] > ☒ > [Delete all]**, then press **[OK]** to confirm.
  - ↳ The handset displays a confirmation request.
- 2 Press **[OK]** to confirm.
  - ↳ All old messages are permanently deleted.

### Note

- You can only delete the read messages. No deleted messages can be recovered.

---

## Call screening

You can hear the caller while he is leaving a message. Press **☒** to answer the call.

### From the base


Press **◀ / ▶** to adjust the speaker volume during call screening.

### Note

- If you turn the speaker to the lowest volume level, the call screening function is off.

## Set the sound quality of the message

You can adjust the sound quality of the messages received from the answering machine.

- 1 Select **[Menu]** >  > **[Msg quality]**, then press **[OK]** to confirm.
- 2 Select the new setting, then press **[OK]** to confirm.  
↳ The setting is saved.




### Note

- The sound quality can only be adjusted before recording starts.

## Set the ring delay

You can set the number of times the phone rings before the call goes to the answering machine..

- 1 Select **[Menu]** >  > **[Ring delay]**, then press **[OK]** to confirm.
- 2 Select a new setting, then press **[OK]** to confirm.  
↳ The setting is saved.



### Note

- Make sure that the answering machine is switched on before this feature can be applied.



### Tip

- When you access the answering machine remotely, you are recommended to set the ring delay to **[Toll saver]** mode. This is a cost effective way to manage your messages. When there are new messages, the answering machine picks up the call after 3 rings; When there is no messages, it picks up the call after 5 rings.

## Remote access


You can operate your answering machine when you are away from home. Simply make a call to your phone with a touch tone phone and enter your 4-digit PIN code.



### Note


- The remote access PIN code is the same as your system PIN. The preset PIN is 0000.

## Change the PIN code

- 1 Select **[Menu]** >  > **[Remote access]** > **[Change PIN]**, then press **[OK]** to confirm.
- 2 Enter the old PIN, then press **[OK]** to confirm.
- 3 Enter the new PIN code, then press **[OK]** to confirm.
- 4 Enter the new PIN code again, then press **[Save]** to confirm.  
↳ The setting is saved.

## Activate/deactivate the remote access

You can allow or block remote access to the answering machine.

- 1 Select **[Menu]** >  > **[Remote access]**, then press **[OK]** to confirm.
- 2 Select **[Activate]** / **[Deactivate]**, then press **[OK]** to confirm.  
↳ The setting is saved.

## Access the answering machine remotely

- 1 Make a call to your home number with a touch tone phone.
- 2 Enter **#** when you hear the announcement.
- 3 Enter your PIN code.  
↳ You now have access to your answering machine, and you can listen to the new messages.



### Note

- You have 2 chances to enter the correct PIN code before your phone hangs up.

4 Press a key to carry out a function. See the Remote access commands table below for a list of available functions.

 **Note**

 







- When there is no message, the phone hangs up automatically if no key is pressed for 8 seconds.

**Remote access commands**

Key	Function
1	Repeat the current or listen to the previous message.
2	Listen to messages.
3	Skip to the next message.
6	Delete the current message.
7	Switch the answering machine on. (not available when you listen to the messages).
8	Stop listening to the message.
9	Switch the answering machine off. (not available when you listen to the messages).


**Behavior of the LED display on the base station**


The table below shows you the current status with different LED display behavior on the base station.


LED display	Answering machine status	Message status
No display	Off	--
	On	No message
	On	It is steady on when there are 3 new messages.
	On	It flashes when the memory is full.
	On	It keeps scrolling when the answering machine is recording the incoming message or announcement.
	On	Press  /  to display the volume level.
	On	It flashes when you access the answering machine menu from the handset, the answering machine remotely, or listen to messages from the handset.



# 15 Menu structure

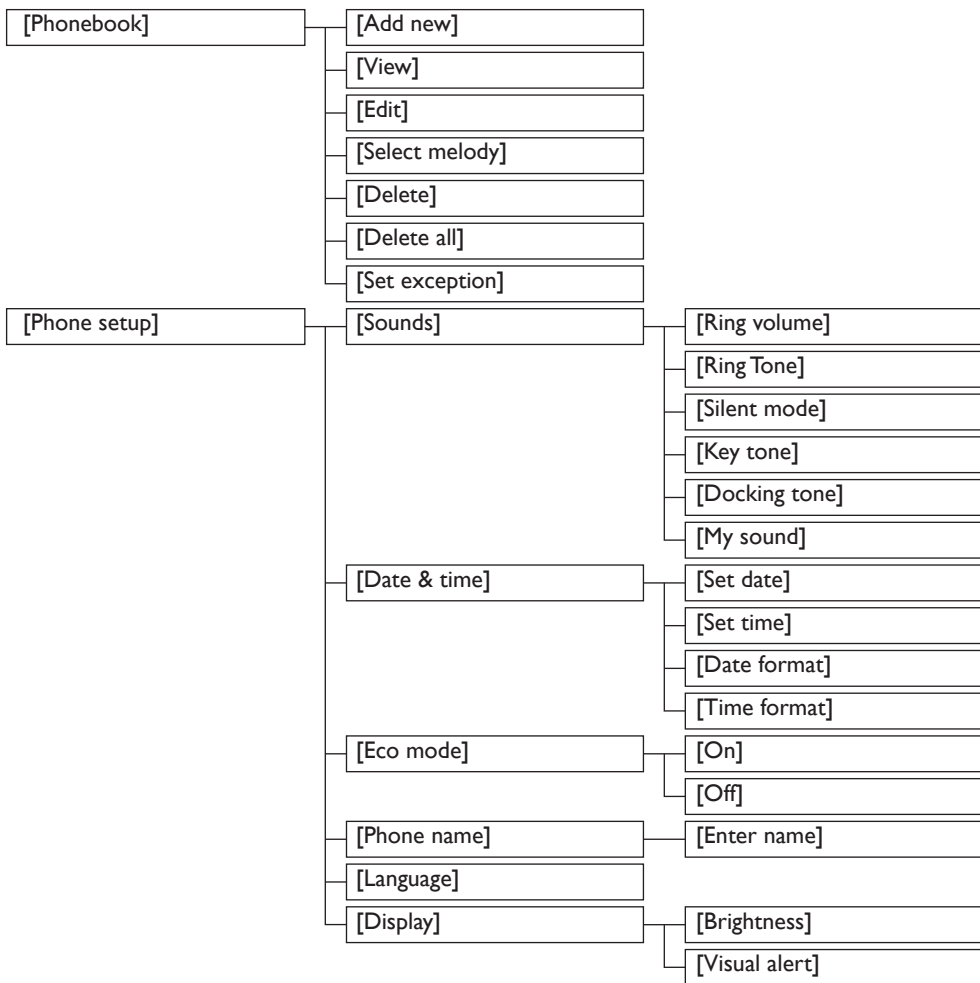

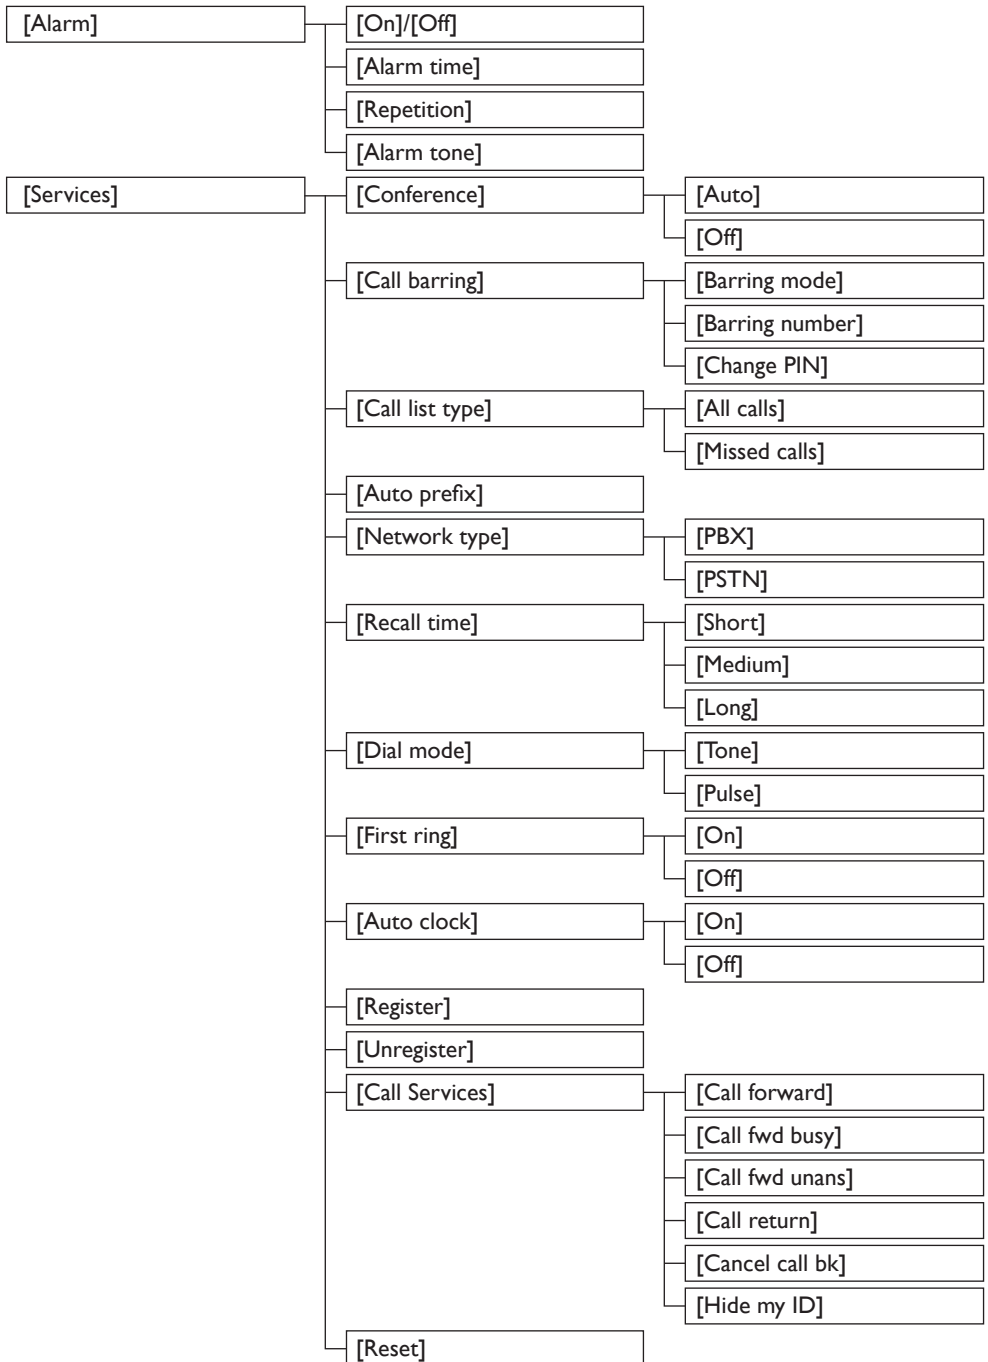

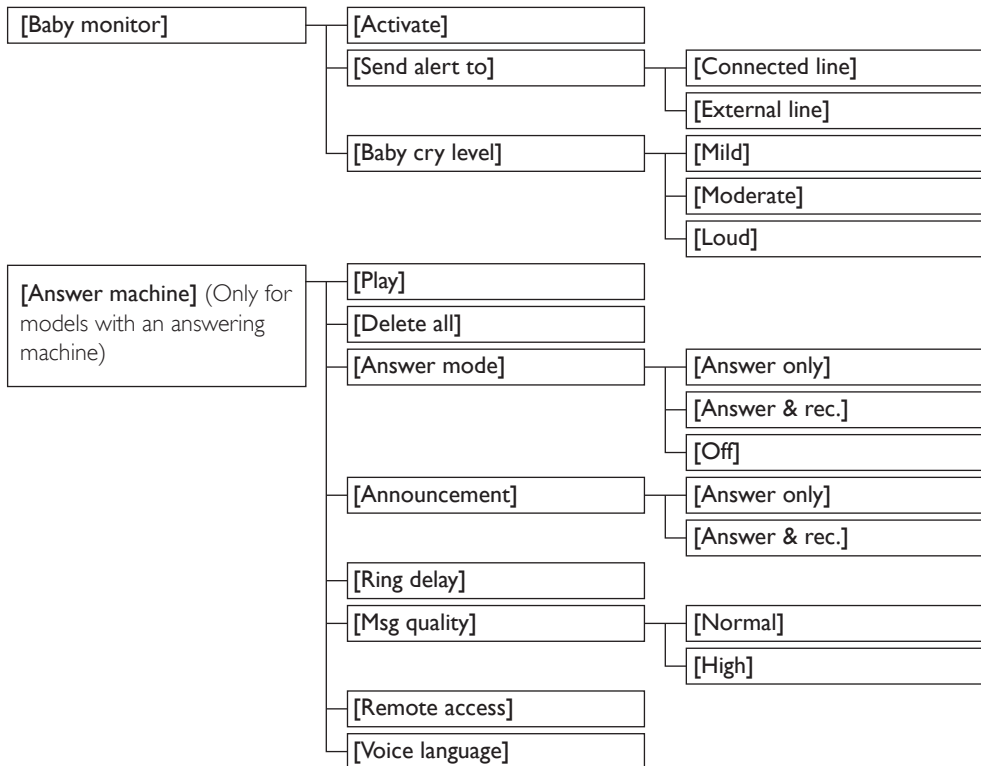

# 16 Technical data

## Display

- Black and white reverse

## General telephone features

- Dual mode caller name & number identification
- Conference call and voicemails
- Intercom
- Maximum talk time: 20 hours

## Phonebook list, Redial list and Call log

- Phonebook list with 200 entries
- Redial list with 20 entries
- Call log with 50 entries

## Battery

- CEL: 2 x AAA Ni-MH 1.2V 600 mAh rechargeable batteries
- Fuyang Corun Battery Co. Ltd.: 2 x AAA Ni-MH 1.2V 600 mAh rechargeable batteries

## Power adapter

### Base and charger

- Philips, SSW-2095UK-1, input: 100-240Vac, 50-60Hz 0.2A, output: 5V 600mA
- Philips, S003PB0500060R012380E-B, input: 100-240Vac, 50-60Hz 0.2A, output 5V 600mA

## Power consumption

- Power consumption at standby mode: around 0.5 W (CD490); 0.55 W (CD495)

## Note

- It only applies when the screen saver is turned off (see 'Display settings' on page 25).

## Weight and dimensions (CD490)

- Handset: 130 grams
- 161 x 47.3 x 27.5mm (H x W x D)
- Base: 131.7 grams
- 106.3 x 130 x 65.8mm (H x W x D)
- Charger: 42.7 grams
- 106.4 x 80.2 x 55.3 mm (H x W x D)

## Weight and dimensions (CD495)

- Handset: 130 grams
- 161 x 47.3 x 27.5mm (H x W x D)
- Base: 154.2 grams
- 106.3 x 130 x 65.8mm (H x W x D)
- Charger: 42.7 grams
- 106.4 x 80.2 x 55.3 mm (H x W x D)

# 17 Notice

## Declaration of conformity

Hereby Philips Consumer Lifestyle, Accessories, declares that the CD490/495 is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. You can find the Declaration of Conformity on [www.p4c.philips.com](http://www.p4c.philips.com).

This product has been designed, tested and manufactured according to the European R&TTE directive 1999/5/EC.

## Use GAP standard compliance

The GAP standard guarantees that all DECT™ GAP handsets and base stations comply with a minimum operating standard irrespective of their make. The handset and base station are GAP compliant, which means they guarantee the minimum functions: register a handset, take the line, make a call and receive a call. The advanced features may not be available if you use them with other makes. To register and use this handset with a GAP compliant base station of different make, first follow the procedure described in the manufacturer's instructions, then follow the procedure described in this manual for registering a handset. To register a handset from different make to the base station, put the base station in registration mode, then follow the procedure described in the handset manufacturer's instructions.

## Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.

## Disposal of your old product and batteries



Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means that the product is covered by the European Directive 2002/96/EC. Please inform yourself about the local separate collection system for electrical and electronic products.

Please act according to your local rules and do not dispose of your old products with your normal household waste.

Correct disposal of your old product helps to prevent potential negative consequences for the environment and human health.



Your product contains batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste. Please inform yourself about the local rules on separate collection of batteries because correct disposal helps to prevent negative consequences for the environmental and human health.



When this logo is attached to a product, it means a financial contribution has been paid to the associated national recovery and recycling system.

### **Environmental information**

All unnecessary packaging has been omitted. We have tried to make the packaging easy to separate into three materials: cardboard (box), polystyrene foam (buffer) and polyethylene (bags, protective foam sheet.) Your system consists of materials which can be recycled and reused if disassembled by a specialized company. Please observe the local regulations regarding the disposal of packaging materials, exhausted batteries and old equipment.

# 18 Frequently asked questions

## No signal bar is displayed on the screen.

- The handset is out of range. Move it closer to the base station.
- If the handset displays [**Unregister**], put the handset on the base until the signal bar appears..



### Tip

- For further information, see 'Register the handsets' on the Services section.

## If I fail to register the additional handsets to the base station, what do I do?

Your base memory is full. Unregister the unused handsets and try again.

### No dialing tone

- Check your phone connections.
- The handset is out of range. Move it closer to the base station.

### No docking tone

- The handset is not placed properly on the base station/charger.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.

## I cannot change the settings of my voice mail, what do I do?

The voice mail service is managed by your service provider but not the phone itself. Contact your service provider to change the settings.

## The handset on the charger does not charge.

- Make sure the batteries are inserted correctly.
- Make sure the handset is placed properly on the charger. The battery icon animates when charging.
- Make sure the docking tone setting is turned on. When the handset is placed correctly on the charger, you can hear a docking tone.
- The charging contacts are dirty. Disconnect the power supply first and clean the contacts with a damp cloth.
- Batteries are defective. Purchase new ones from your dealer.

## No display

- Make sure the batteries are charged.
- Make sure there is power and the phone is connected.

## Bad audio (crackles, echo, etc.)

- The handset is nearly out of range. Move it closer to the base station.
- The phone receives interference from the nearby electrical appliances. Move the base station away from them.
- The phone is at a location with thick walls. Move the base away from them.

## The handset does not ring.

Make sure the handset ringtone is turned on.

## The caller ID does not display.

- The service is not activated. Check with your service provider.
- The caller's information is withheld or unavailable.

## The handset loses connection with the base or the sound is distorted during a call.

Check if the **ECO** mode is activated. Turn it off to increase the handset range and enjoy the optimal call conditions.



### Note

- If the above solutions do not help, disconnect the power supply from both the handset and base station. Try again after 1 minute.

# 19 Appendix

## Text and number input tables

Key Upper case characters (for English/  
French/ German/ Italian/Turkish/  
Portuguese/Spanish/Dutch/Danish/  
Finnish/Norwegian/Swedish)

0	Space .0,/;:"'!j?i*+-%\^~
1	1@_#=<>()&£\$¥[[]{}␣§...
2	A B C 2 À Á Â Ã Ä Å Ç
3	D E F 3 È É Ê Ë Ì Í Î Ï
4	G H I 4 Ğ Ħ İ Ï
5	J K L 5 Λ
6	M N O 6 Ñ Ó Ô Õ Ö
7	P Q R S 7 Ş Π Θ Σ
8	T U V 8 Ù Ú Û
9	W X Y Z 9 Ø Ω Ξ Ψ

Key Lower case characters (for English/  
French/ German/ Italian/Turkish/  
Portuguese/Spanish/Dutch/Danish/  
Finnish/Norwegian/Swedish)

0	Space .0,/;:"'!j?i*+-%\^~
1	1@_#=<>()&€£\$¥[[]{}␣§...
2	a b c 2 à á â ã ä å ç
3	d e f 3 è é ê ë ì í î ï
4	g h i 4 ğ ħ ï ï
5	j k l 5 λ
6	m n o 6 ñ ó ô õ ö ò
7	p q r s 7 ş π θ σ
8	t u v 8 ù ú û
9	w x y z 9 ø ω ξ ψ

Key	Upper case characters (for Greek)
0	Space .0,/;:"'!j?i*+-%\^~
1	1@_#=<>()&£\$¥[[]{}␣§...
2	A B Γ 2 A B C A E A A Ç
3	Δ E Z 3 D E F É
4	H Θ I 4 G H I
5	K Λ M 5 J K L
6	N Ξ O 6 M N O Ñ Ö
7	Π Ρ Σ 7 P Q R S
8	T Υ Φ 8 T U V Ü
9	X Ψ Ω 9 W X Y Z Ø

Key	Lower case characters (for Greek)
0	Space .0,/;:"'!j?i*+-%\^~
1	1@_#=<>()&€£\$¥[[]{}␣§...
2	α β γ 2 a b c à æ ä å
3	δ ε ζ 3 d e f è é
4	η θ ι 4 g h i ï
5	κ λ μ 5 j k l λ
6	ν ξ ο 6 m n o ñ ö ò
7	π ρ σ 7 p q r s β
8	τ υ φ 8 t u v ù ü
9	χ ψ ω 9 w x y z ø

Key	Upper case characters (for Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian)
0	Space .0,/;:"'!j?i*+-%\^~
1	1@_#=<>()&£\$¥[[]{}␣§...
2	A B C 2 Â Ã Ä Å Æ Ç Ć Ć
3	D E F 3 Đ Đ Ę Ę Ę Δ Φ
4	G H I 4 Í Î Ĵ Ĵ
5	J K L 5 Ł Ł Ľ Ľ
6	M N O 6 Ń Ń Ń Ó Ö Ő
7	P Q R S 7 Ŕ Ŕ Ś Ś Ś Π Θ Σ
8	T U V 8 Ţ Ţ Ú Ú Û Ü Ű Ű
9	W X Y Z 9 Ý Ž Ž Ž Ĵ Ø Ω Ξ Ψ



Key	Lower case characters (for Romanian/ Polish/Czech/Hungarian/Slovakian/ Slovenian/Croatian)
0	Space .0,/;:"'!j?i*+-%\^~
1	1@_#=<>()&€£\$¥[]{}ǻ§ ...
2	a b c 2 à â æ á ä å ä ç ě
3	d e f 3 đ đ é ě è è ě Δ Φ
4	g h i 4 î ï Γ
5	j k l 5 Λ
6	m n o 6 ñ ñ ó ö ò ò
7	p q r s 7 ř ř ś ś Π Θ Σ Β
8	t u v 8 ț ț ț ù ú û ü ũ ů ů
9	w x y z 9 ý ž f ø Ω Ξ Ψ

Key	Upper case characters (for Serbian/ Bulgarian)
0	Space .0,/;:"'!j?i*+-%\^~
1	1@_#=<>()&£\$¥[]{}ǻ§...
2	А Б В Г Ђ Ѓ Ђ 2 А В С Ђ Ä Å Ç
3	Д Е Ж З Ј Џ 3 Д Е Ф Ђ Δ Φ
4	И Й К Л Љ 4 Г Н И Г
5	М Н О П Њ 5 Ј К Л Λ
6	Р С Т У Ћ 6 М Н О Њ Ö
7	Ф Х Ц Ч Ж 7 Р Q R S Π Θ Σ
8	Ш Щ Ъ Ы 8 Т U V Ü
9	Ь Э Ю Я Ž 9 W X Y Z Ø Ω Ξ Ψ

Key	Lower case characters (for Serbian/ Bulgarian)
0	Space .0,/;:"'!j?i*+-%\^~
1	1@_#=<>()&€£\$¥[]{}ǻ§ ...
2	a b c 2 à æ ä å
3	d e f 3 è é Δ Φ
4	g h i 4 ï Γ
5	j k l 5 Λ
6	m n o 6 ñ ö ò
7	p q r s 7 Π Θ Σ Β
8	t u v 8 ù ü
9	x y z 9 ø Ω Ξ Ψ

# 20 Index

---

## A

additional handsets	29
alarm	26
announcements	34
answer a call	12
answering machine	34
answering machine language	34
auto clock	29
auto conference	27
auto prefix	28

---

## B

baby monitor	32
base station	
installation	8
overview	5
battery	9

---

## C

call back service	31
call barring	27
call forward service	30
call log	20
call return	31
call screening	36
caller ID	12
calling	11
charging	10
conference call	15
contacts	17

---

## D

date setting	9
default settings	31
delete messages	36
dial mode	28
display icons	7
display settings	25
disposal	44

---

## E

ECO mode	24
exception list, silent mode	19

---

## F

find phones/paging	5
first ring	29

---

## G

GAP	43
-----	----

---

## H

hide own call	31
---------------	----

---

## I

incoming message	35
intercom	14
internal call	14

---

## L

language setting	
answering machine	34
handset	9
LED behavior	38
listen to messages	36

---

## M

main menu icons	6
menu structure	39
missed calls	20
mute	12

---

## N

name the handset	24
network type	28

---

## O

on or off	34
-----------	----

---

---

**P**

phone settings	23
phonebook	17
PIN	
answering machine	37
handset	27
power adapter	39

---

**R**

recall time	28
redial	22
register/unregister	29
remote access to the answering machine	37
ring delay	37
ringtone	23
ringtone customization	19

---

**S**

safety	3
save a number	20
signal strength	10
silent mode	23
sounds	
docking	24
keytone	24
sound profile	24
speaker phone	12
standby mode	10

---

**T**

text entry	16
time setting	9
transfer call	14
troubleshooting/FAQ	45
two calls	13

---

**V**

volume adjustment	12
-------------------	----

HK-1151-CD490

(Report No. / Numéro du Rapport)

Year 2011

(Year in which the CE mark is affixed / Année au cours de laquelle le marquage CE a été apposé)

## EC DECLARATION OF CONFORMITY

(DECLARATION DE CONFORMITE CE)

We / Nous, PHILIPS CONSUMER LIFESTYLE B.V.

(Name / Nom de l'entreprise)

TUSSENDIEPEN 4, 9206 AD DRACHTEN, THE NETHERLANDS

(address / adresse)

Declare under our responsibility that the electrical product(s):

(Déclarons sous notre propre responsabilité que le(s) produit(s) électrique(s):)

PHILIPS

(brand name, nom de la marque)

CD490

(Type version or model, référence ou modèle)

DECT Phone

(Telecommunication Terminal Equipment)

(product description, description du produit)

To which this declaration relates is in conformity with the following harmonized standards:

(Auquel cette déclaration se rapporte, est conforme aux normes harmonisées suivantes)

(title, number and date of issue of the standard / titre, numéro et date de parution de la norme)

EN 301 406 V2.1.1:2009

EN 301 489-1 V1.8.1:2008

EN 301 489-6 V1.3.1:2008

EN61000-3-2:2006+A2:2009

EN61000-3-3:2008

EN 60950-1:2006+A11:2009+A1:2010

EN 50360:2001

EN 50385:2002

EN50383:2002

Following the provisions of :

(Conformément aux exigences essentielles et autres dispositions pertinentes de:)

1999/5/EC (R&TTE Directive)

2006/95/EC (Low Voltage Directive)

2004/108/EC (EMC Directive)

2009/125/EC (ErP Directive)

- EC/278/2009

And are produced under a quality scheme at least in conformity with ISO 9001 or CENELEC

Permanent Documents

(Et sont fabriqués conformément à une qualité au moins conforme à la norme ISO 9001 ou aux Documents Permanents CENELEC)

BABT / 0168

Notified Body Opinion

The Notified Body

(L'Organisme Notifié)

(Name and number/ nom et numéro)

performed

(a effectué)

(description of intervention /

description de l'intervention)

N/A

And issued the certificate,

(et a délivré le certificat)

(certificate number / numéro du certificat)

Remarks:

(Remarques.)

Drachten, Netherlands, Dec.21, 2011

(place, date / lieu, date)

A. Speelman, CL Compliance Manager

(signature, name and function / signature, nom et fonction)

HK-1151-CD495

(Report No. / Numéro du Rapport)

Year 2011

(Year in which the CE mark is affixed / Année au cours de laquelle le marquage CE a été apposé)

## EC DECLARATION OF CONFORMITY

(DECLARATION DE CONFORMITE CE)

We / Nous, PHILIPS CONSUMER LIFESTYLE B.V.

(Name / Nom de l'entreprise)

TUSSENDIEPEN 4, 9206 AD DRACHTEN, THE NETHERLANDS

(address / adresse)

Declare under our responsibility that the electrical product(s):

(Déclarons sous notre propre responsabilité que le(s) produit(s) électrique(s):)

PHILIPS

(brand name, nom de la marque)

CD495

(Type version or model, référence ou modèle)

DECT Phone

(Telecommunication Terminal Equipment)

(product description, description du produit)

To which this declaration relates is in conformity with the following harmonized standards:

(Auquel cette déclaration se rapporte, est conforme aux normes harmonisées suivantes)

(title, number and date of issue of the standard / titre, numéro et date de parution de la norme)

EN 301 406 V2.1.1:2009

EN 301 489-1 V1.8.1:2008 EN 301 489-6 V1.3.1:2008

EN61000-3-2:2006+A2:2009 EN61000-3-3:2008

EN 60950-1:2006+A11:2009+A1:2010

EN 50360:2001

EN 50385:2002

EN50383:2002

Following the provisions of :

(Conformément aux exigences essentielles et autres dispositions pertinentes de:)

1999/5/EC (R&TTE Directive) (Directive R&TTE 1999/5/CE)

2006/95/EC (Low Voltage Directive)

2004/108/EC (EMC Directive)

2009/125/EC (ErP Directive)

- EC/278/2009

And are produced under a quality scheme at least in conformity with ISO 9001 or CENELEC Permanent Documents

(Et sont fabriqués conformément à une qualité au moins conforme à la norme ISO 9001 ou aux Documents Permanents CENELEC)

BABT / 0168

Notified Body Opinion

The Notified Body ..... performed .....

(L'Organisme Notifié)

(Name and number/ nom et numéro)

(a effectué)

(description of intervention /  
description de l'intervention)

N/A

And issued the certificate, .....

(et a délivré le certificat)

(certificate number / numéro du certificat)

Remarks:

(Remarques:)

Drachten, Netherlands, Dec.21, 2011

(place, date / lieu, date)



A. Speelman, CL Compliance Manager

(signature, name and function / signature, nom et fonction)







# CE 0168

Specifications are subject to change without notice  
© 2012 Koninklijke Philips Electronics N.V.  
All rights reserved.

UM\_CD490-495\_05\_EN\_V1.2  
WK12092





## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>