

# CONTENTS


<b>1. CONNECTING YOUR TV-VIDEO COMBI</b> .....	<b>4</b>	How to check or change a <b>TIMER</b> .....	<b>19</b>
Connecting the cables .....	4		
Connecting a decoder or other equipment .....	4		
<b>2. INSTALLING YOUR TV-VIDEO COMBI</b> .....	<b>5</b>	<b>9. ADDITIONAL FUNCTIONS</b> .....	<b>20</b>
Initial installation .....	5	How to read <b>TELETEXT</b> .....	20
Allocating a decoder .....	6	Selecting the display brightness .....	20
Manual TV channel search .....	6	Changing the TV system .....	21
Manual radio channel search .....	7	Parental control .....	21
Satellite receiver .....	7	Switching the On-screen display (OSD) on or off .....	22
Special installation functions .....	7	Switching to 16:9 wide screen picture .....	22
Automatic TV channel search .....	7	Continuous playback .....	23
Channel Number Allocation .....	8	Switch off function ( <b>SLEEP TIMER</b> ) .....	23
Delete a TV Channel .....	9	Switch on function ( <b>WAKE-UP TIMER</b> ) .....	23
Setting the language .....	9		
Setting the time and date .....	10	<b>10. Before you call an engineer</b> .....	<b>24</b>
Automatic time and date setting ( <b>SMART CLOCK</b> ) .....	10	Technical terms used .....	24
<b>3. IMPORTANT NOTES FOR OPERATION</b> .....	<b>11</b>		
SUMMARY OF USER GUIDE .....	11		
User guide (OSD) .....	11		
<b>4. TV SET FUNCTIONS</b> .....	<b>12</b>		
Selecting a TV programme .....	12		
Automatic volume control (AVL) .....	12		
<b>5. RADIO FUNCTIONS</b> .....	<b>13</b>		
Selecting a radio channel .....	13		
Searching a radio channel .....	13		
<b>6. PLAYBACK FUNCTIONS</b> .....	<b>14</b>		
Playing a cassette .....	14		
Playing NTSC cassettes .....	14		
Tape position indication .....	14		
Searching for tape position with the picture (picture search) .....	14		
Still picture .....	14		
Searching for tape position without the picture (wind and rewind) .....	14		
Instant View .....	14		
Automatic search for a tape position (index search) ..	15		
Picture interference .....	15		
Cleaning the video heads .....	15		
<b>7. MANUAL RECORDING</b> .....	<b>16</b>		
Recording without automatic switch-off .....	16		
Recording with automatic switch-off (OTR one-touch-recording) .....	16		
Protecting your recordings .....	16		
Auto-assembling .....	16		
<b>8. PROGRAMMED RECORDING (TIMER)</b> .....	<b>17</b>		
'VPS' (Video Programming System) and 'PDC' (Programme Delivery Control) .....	17		
Programming a recording (with 'SHOWVIEW') .....	17		
Programming a recording (without 'SHOWVIEW') .....	18		





# OPERATING INSTRUCTIONS IN BRIEF

## The remote control

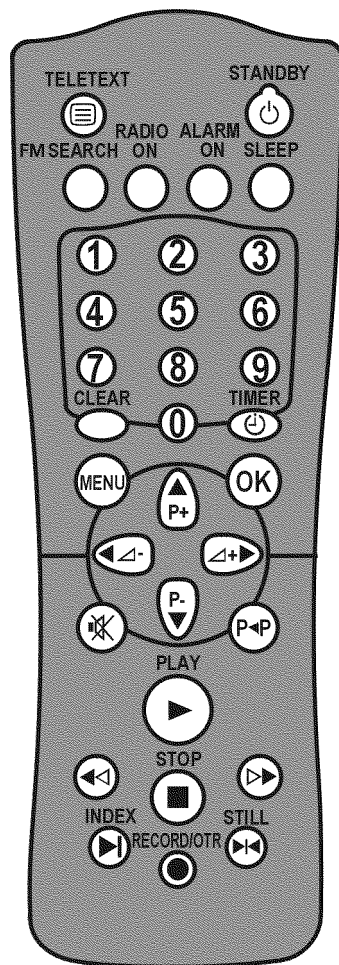

- TELETEXT** **TELETEXT:** To switch TELETEXT on/off
- STANDBY** **Switch off:** To switch off set, interrupt menu function, interrupt a programmed recording (TIMER)
- FM SEARCH** **Radio:** To search for radio channels
- RADIO ON** **Radio:** To switch on the radio and to switch between radio and TV mode
- ALARM ON** **Switch on function:** To switch the radio- or buzzer-alarm on or off
- SLEEP** **Sleep timer:** To select the switch-off time in 15 minutes intervals
- 0-9** **Number buttons:** 0 - 9
- CLEAR** **Delete:** To delete last entry or clear programmed recording (TIMER)
- TIMER** **TIMER:** To make a manual TIMER programming or to alter or clear a programmed TIMER
- MENU** **Menu:** To call up or end main menu
- OK** **Store/Confirm:** To store or confirm entry
- P +/- ▲ ▼** **Programme number:** To select a programme number up or down
- ▲ P+** **Select:** One line up
- P- ▼** **Select:** One line down
- ◀ ▲ - / ▲ + ▶** **Volume:** To regulate the volume
- ◀ ▲ -** **Select:** Cursor left
- ◀ ▲ + ▶** **Select:** Cursor right
- ⊗** **Volume off:** To switch the volume on or off


- P◀P** **Previous programme number:** To select the previous programme number
- PLAY ▶** **Playback:** To play a recorded cassette
- ◀◀** **Rewind:** During STOP and STANDBY: rewind, during PLAYBACK: reverse scanning
- STOP ■** **Pause/Stop:** To stop the tape, except while a TIMER-recording is being made
- ▶▶** **Forward wind:** During STOP and STANDBY: forward wind, during PLAYBACK: forward scanning
- INDEX ▶** **Index search:** In combination with ◀◀ / ▶▶ : to search for previous/next recording on the cassette.
- RECORD/OTR ●** **Record:** To record the programme selected
- STILL ▶◀** **Still picture:** To stop the tape and show a still picture

**Coloured TELETEXT buttons:** To select TELETEXT page directly

- (red)** **TELETEXT:** To select page/chapter shown in red at the bottom of the screen
- (green)** **TELETEXT:** To select page/chapter shown in green at the bottom of the screen
- (yellow)** **TELETEXT:** To select page/chapter shown in yellow at the bottom of the screen
- (blue)** **TELETEXT:** To select page/chapter shown in blue at the bottom of the screen



## Front of the set

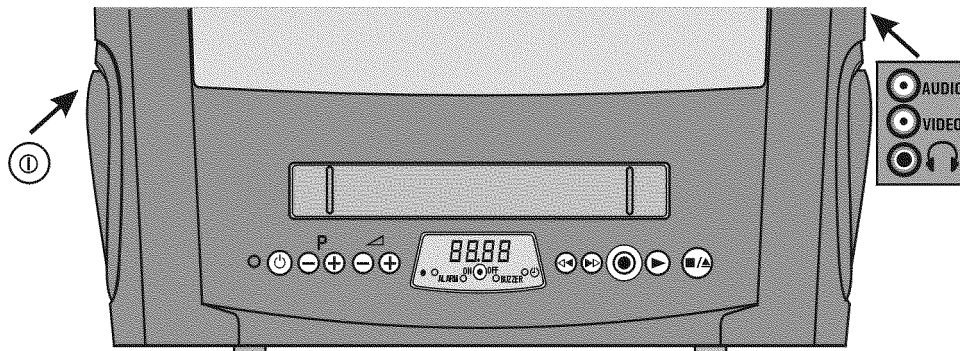

**⏻ Power switch** : To switch off the set  
**Beware:** If you switch the set off with the power switch **⏻**, TIMER-recordings are not possible!

**⏻ Standby** : To switch off, interrupt a function, interrupt a programmed recording (TIMER)

**P +/-** **Programme number** : To select programme number up or down

**⏮ +/-** **Volume** : To regulate the volume

**ON/OFF** **Radio** : To switch on the radio and to switch between radio- and TV-mode

**⏮** **Rewind** : During STOP and STANDBY: rewind, during PLAYBACK: reverse scanning

**⏭** **Forward wind** : During STOP and STANDBY: forward wind, during PLAYBACK: forward scanning

**Ⓜ** **Record** : To record the programme selected

**▶** **Playback** : To play a recorded cassette


**■/▲** **Pause/Stop, eject cassette** : To stop the tape and during STOP eject the cassette

**AUDIO** **Audio input socket left/right stereo**

**VIDEO** **Video input socket** : To connect a camcorder or videogames

**🎧** **Headphones socket** : To connect headphones


## Back of the set

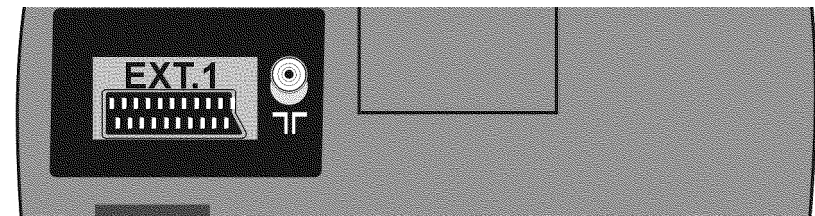

**📡** **Aerial input socket** : To connect the aerial cable

**EXT.1** **Scart socket** : To connect a satellite receiver, decoder, video recorder, etc.

## The display at the front of the machine

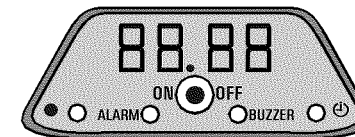

In the display the time, the radio frequency or the radio programme number will be shown. Also, these lights may light up in the display:

**● Recording light** : Will light up when a recording is being made

**ALARM ●** **Radio alarm** : Will light up when the radio alarm is activated

**●BUZZER** **Buzzer alarm** : Will light up when the buzzer alarm is activated

**⏻** **Timer light** : Will light up when a Timer recording has been programmed; will blink when a Timer recording cannot start

# OPERATING INSTRUCTIONS PHILIPS 14PV340/58

**Congratulations!** You now own one of the most sophisticated and simple-to-use TV-VIDEO Combinations on the market. With this TV-VIDEO Combi you can record and play VHS-standard cassettes.




Please take the time to read this operating manual before using your TV-VIDEO Combi.


 
So that you can identify your machine in the event of theft, enter the serial number (PROD.NO) here. The serial number is printed on the type plate fixed at the rear of the set.


MODEL NO. 14PV340/58


PROD.NO: . . . . .


## Safety instructions and other notes


 **Danger: High voltage!**  
Do not remove the top cover as there is a risk of an electrical shock!


 The TV-VIDEO Combi does not contain any components that can be repaired by the customer. To switch off the TV-VIDEO Combi completely you must switch it off with the power switch .


 Make sure that air can circulate freely through the ventilation slots on the TV-VIDEO Combi.


 Make sure that no objects or liquids enter the TV-VIDEO Combi. If liquid is spilt into it, disconnect the TV-VIDEO Combi immediately from the power supply and call the After-sales Service for advice.


 The TV-VIDEO Combi should **not be used immediately after transportation** from a cold to a hot area or vice versa, or in conditions of extreme humidity. After unpacking the TV-VIDEO Combi, it should be allowed to **acclimatize for at least three hours** before installation.

 These operating instructions have been printed on nonpolluting paper.

 Deposit old batteries at the relevant collection points.

 Please make use of the facilities available in your country for disposing of the packaging of the TV-VIDEO Combi in a way that helps to protect the environment.

 This electronic equipment contains many materials that can be recycled. Please inquire about the possibilities for recycling your old set.

 SHOWVIEW is a registered trademark of Gemstar Development Corporation. SHOWVIEW is manufactured under licence from Gemstar Development Corporation.

# SHOWVIEW®

## Technical information

**Measurements in cm (W / H / D):** 39.2 / 40.7 / 39.8


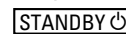
**Power consumption (Standby) :** less than 45W (less than 4W)

**Voltage :** 198-264V 50Hz

**Headphones :** Output resistance less than 120 Ohms  
maximum output voltage more than 2.6V at 120 Ohms

UK

## Emergency interrupt

You can use the  button on the TV-VIDEO Combi or the remote control to interrupt any function. If you want to interrupt a running Timer recording, hold the  button for several seconds.

So if you are having operating problems, you can just interrupt the function and start again.

And you can practise operating your set without any worries. No matter which buttons you press, you cannot damage it.

## Important!

If you switch the machine off with the mains switch while a Timer recording or a Wake-up Timer has been programmed, you will hear a soft warning signal. This signal should remind you that a programmed recording and the Wake-up function will only work with the machine switched to standby.

---

---

## Special functions on your TV-VIDEO Combi

---

### SmartClock

If a TV channel which transmits TXT/PDC is stored under programme number 'P01', time and date will automatically be taken from the TXT/PDC information.

### Plug & Play

When you have plugged your TV-VIDEO Combi into the mains, you will be welcomed with an OSD picture. All you have to do is follow the instructions in the "intelligent help line" for the next step. Enjoy the Automatic TV channel search/save function and the automatic time adjustment.

### AVL

Automatic Volume Leveller. This prevents a sudden increase of the volume, for example, during commercials.

### Digital Studio Picture Control

Philips has developed a system which produces the best possible playback quality. It reduces disturbance on old, worn video cassettes, and emphasises the detail on very good quality cassettes.

## SHOWVIEW

Simple programming system for TV-VIDEO Combis. Makes programming as easy as making a telephone call. Simply enter the programme code which you will find in your listings magazine.



We guarantee that your TV-VIDEO Combi will switch to the new millennium with no problems whatsoever.

## TURBO ▼DRIVE

The precision tape drive from Philips with rewind times of 100 seconds (E180) and automatic tape length recognition.

## Digital Clock Radio


Your Philips TV-VIDEO Combi combines perfect TV and VIDEO picture and sound quality with full digital radio and alarm clock functionality.

## Alarm functions

If you wish to be waken up by TV, radio, buzzer or your favorite video tape you can programme your Combi to be switched on at a desired time.

# 1. CONNECTING YOUR TV-VIDEO COMBI


## Connecting the cables

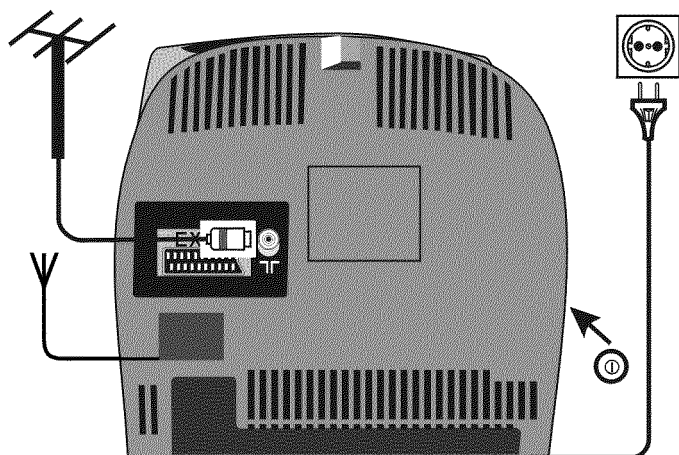

- 1 Insert the aerial plug into the **ANT** socket.
- 2 Insert the plug of the mains cable into the wall socket.
- 3 Adjust the radio aerial at the back of your TV-VIDEO Combi to obtain the best possible reception quality by positioning the ends of the aerial in opposite directions.
- 4 If the little red light at the front panel of the set is not lit, please switch on the set. The power switch **⏻** is located on the left side panel of the set.

## Connecting a decoder or other equipment


You can also connect additional equipment to the **EXT.1** socket. For instance, a satellite receiver, decoder or camcorder.

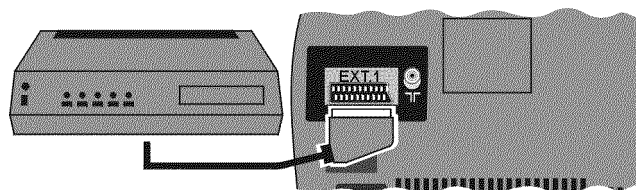


## 2. INSTALLING YOUR TV-VIDEO COMBI

### Initial installation

- 1 Open up the battery compartment of your remote control and place the batteries in it as shown in the picture.

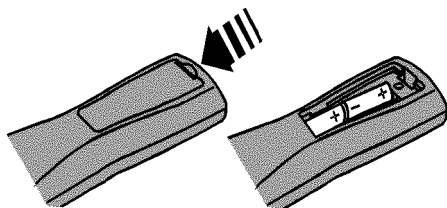


- 2 Close the battery compartment.
- 3 Select the language for the on-screen display (OSD) with the **P-▼** or **▲P+** button.
- 4 Confirm with the **OK** button.
- 5 Select the country of your residence with the **P-▼** or **▲P+** button.  
If this country does not show up, select 'OTHER'.
- 6 Confirm with the **OK** button.
- 7 If the aerial (antenna) has been connected to the TV-VIDEO Combi and the radio aerial has been adjusted, press the **OK** button.  
'Automatic TV channel search' starts. This picture will appear on the screen:

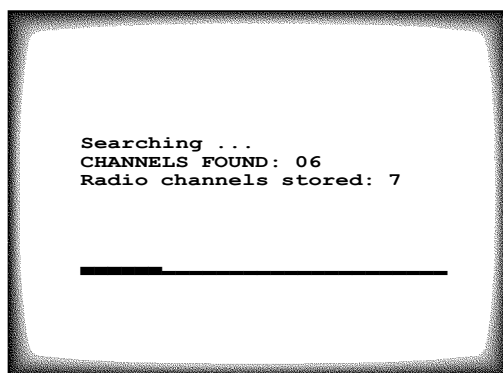

Wait until all TV channels have been found. This can take several minutes.

- 'Time', 'Year', 'Month' and 'Date' will appear on the TV screen.

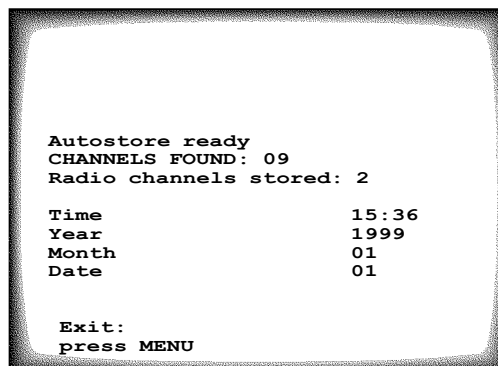


- 8 Check if the time in line 'Time' is correct. If required, change the time with the number buttons **0-9** on your remote control.
- 9 Check 'Year', 'Month' and 'Date' in the same way. You can switch between lines with **P-▼** or **▲P+** button. Confirm the new information with the **OK** button. The initial installation is now complete.
  - ▶ If you have connected a decoder, you must install it as described in the next section.
  - ▶ If you have connected a satellite receiver, please read the section 'satellite receiver'.



## Allocating a decoder

Some TV stations will send coded TV channels, that you can only watch when you use a decoder. You can connect such a decoder (descrambler) to your TV-VIDEO Combi. With the following function, the connected decoder will automatically be activated for the TV programme you want to watch.

- 1 Choose the TV channel on which you wish to use the decoder with the **▲P+** or **P-▼** buttons on the TV-VIDEO Combi or the number buttons **[0-9]** on the remote control.
- 2 Press the **[MENU]** button on the remote control. The main menu will appear.
- 3 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↵** button.
- 4 Select the line 'Manual store' with the **P-▼** or **▲P+** button and confirm with the **↵** button.
- 5 Select the line 'Decoder' with the **P-▼** or **▲P+** button.

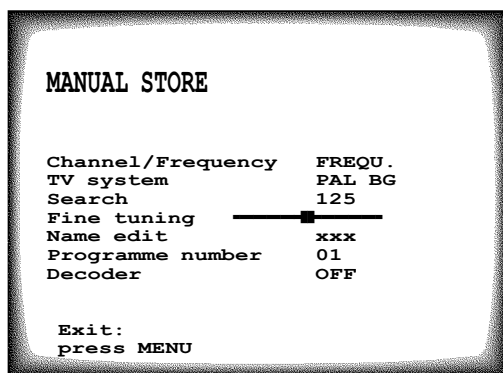


- 6 Select function 'ON' with the **↵** or **↵** button. When you select 'OFF', the function will be switched off.
- 7 Confirm with the **[OK]** button.
- 8 Press the **[MENU]** button.  
Your decoder has now been allocated to this TV channel.
- 9 To end, press the **[MENU]** button.

## Manual TV channel search

In certain cases the 'Automatic TV channel search' may not be able to find all of the TV channels (e.g. coded TV channels). In that case, use this manual method to set the channels.

- 1 Press the **[MENU]** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↵** button.
- 3 Select the line 'Manual store' with the **P-▼** or **▲P+** button and confirm with the **↵** button.

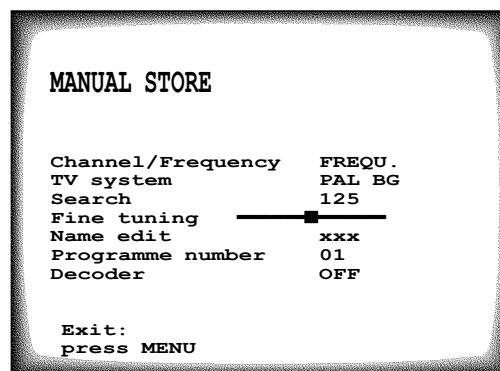

- 4 In the line 'Channel/frequency', select the display for:  
'FREQ.': frequency  
'C CH': channel  
'S CH': special channel
- 5 If you know the frequency or channel of the desired TV channel, you can enter the data in line 'Searching' with the digit buttons **[0-9]**.  
  - ▶ If you don't know the frequency or channel of the TV channel of your choice, press the **↵** button to start the channel search.
- 6 In the line 'Programme number' select the programme number you want e.g.: '01', using the **↵** or **↵** button.
- 7 If you want to change the TV channel name, press the **↵** button in line 'Edit name'.  
  - Select the character you want to change with the **↵** or the **↵** button. Change the character with the **P-▼** or the **▲P+** button. Select the next character in the same way.
  - To confirm the information, press the **[OK]** button.




- 8** If you want to change the automatic tv channel setting, select the line 'Fine tuning'.  
With the or button you can vary the automatic tv channel setting. **Important:** This re-tuning is only necessary and useful in **special cases**, e.g.: when there are stripes on the picture with cable-TV systems.

- 9** Press the **OK** button to store the TV channel.  
 If you want to search for further TV channels, start again at step **5**.

- 10** To end, press the **MENU** button.

## Manual radio channel search

- 1** Press the **MENU** button. The main menu appears.  
**2** Select the line 'Installation' with the or button and confirm with the button.  
**3** Select the line 'Radio store' with the or button and confirm with the button.

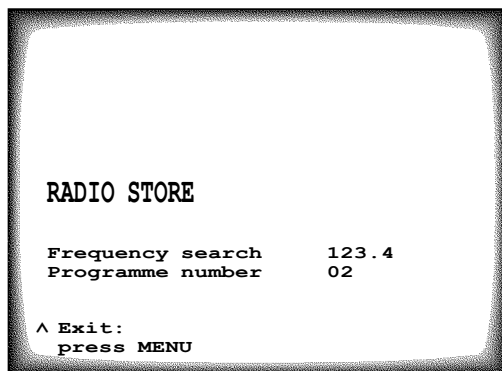

- 4** If you know the frequency of the desired radio channel, you can enter the data in line 'Frequency search' with the digit buttons **0-9**.

- If you don't know the frequency of the radio channel of your choice, press the button to start the channel search.

- 5** In the line 'Programme number' select the programme number you want e.g.: '01', using the or button.

- 6** Press the **OK** button to store the radio channel.

- If you want to search for further radio channels, start again at step **4**.

- 7** To end, press the **MENU** button.

## Satellite receiver

You can receive channels from the satellite receiver via the scart socket **EXT.1**.

To do this, select the channel number 'E1' with the button. You will have to select the channels to be received by the satellite receiver on the receiver itself.

## Special installation functions


You can select one of the following installation functions in order to adapt your TV-VIDEO Combi to your own specific requirements.

UK

## Automatic TV channel search


Your TV-VIDEO Combi will search for all TV channels. If you want to start the automatic TV channel search again, then follow the instructions below.

- 1** Press the **MENU** button on the remote control. The main menu will appear.  
**2** Select the line 'Installation' with the or button and confirm with the button.  
**3** Select the line 'Autostore' with the or button.  
**4** Press the button.  
**5** Select the country you are in with the or button.  
If your country doesn't show up, select 'OTHER'.  
**6** Confirm with the **OK** button. The 'Automatic TV channel search' starts.

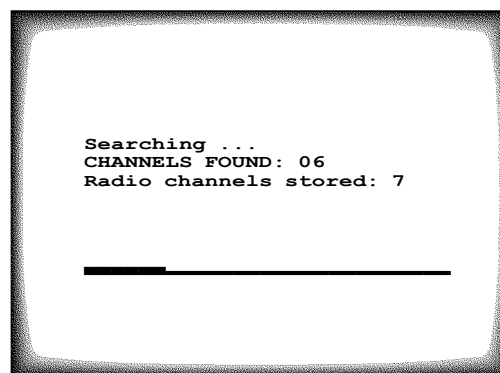

- 7** When the TV channel search is complete, 'Autostore ready' will appear on the screen.

- 'Time', 'Year', 'Month' and 'Date' will appear on the TV screen.

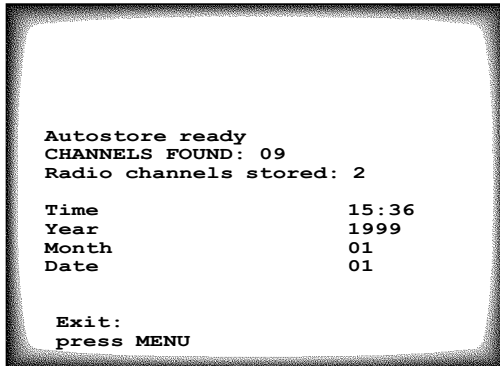


- 8 Check if the time in line 'Time' is correct. If required, change the time with the number buttons [0-9] on your remote control.
- 9 Check 'Year', 'Month' and 'Date' in the same way. You can switch between lines with [P-▽] or [▲P+] button. Confirm the new information with the [OK] button.

How to search for a TV channel manually, you can read in the section 'Manual TV channel search'.

- i Automatic Channel Installation (ACI):  
Some cable companies or broadcasters offer the possibility to install TV channels automatically with 'ACI'. Information about the installation offered and how to select it, will appear on the screen. This set will recognize and install TV channels with 'ACI' automatically. TV channels will be stored from programme number 1 onward. If 'ACI' cannot identify a TV channel, you can search for it using the method as described in the section 'Manual TV Channel Search'.

## Channel Number Allocation

- 1 Press the [MENU] button. The main menu appears.
- 2 Select the line 'Installation' with the buttons [P-▽] or [▲P+] button and confirm with the [↘+▶] button.
- 3 Select the line 'SORT CHANNELS' with the [P-▽] or [▲P+] button and confirm with the [↘+▶] button.

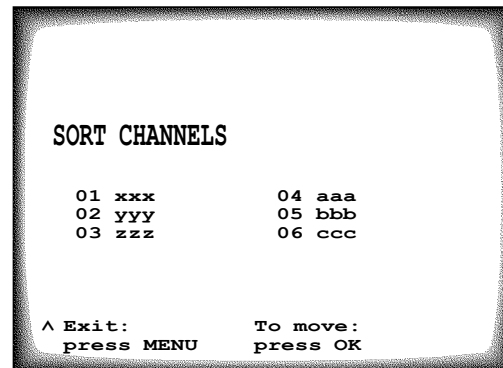


- 4 With the [P-▽], [▲P+], [◀◂-] or [▶+▶] button, select the TV channel to which you want to allocate a programme number and press the [OK] button.
- 5 With the [P-▽], [▲P+], [◀◂-] or [▶+▶] button, shift the TV channel to the programme number you wish to allocate to this TV channel and press the [OK] button.
- 6 Repeat steps 4 to 5 until you have allocated a programme number to all the required TV channels.
- 7 To end, press the [MENU] button.

---

## Delete a TV Channel

---

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↘+▶** button.
- 3 Select the line 'SORT CHANNELS' with the **P-▼** or **▲P+** button and confirm with the **↘+▶** button.

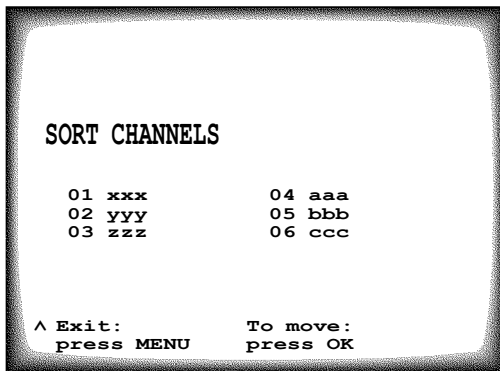

- 4 With the **P-▼**, **▲P+**, **◀◁-** or **▷+▶** button, select the TV channel you want to delete and press the **CLEAR** button.
- 5 Repeat step **4**, until you have deleted all the required TV channels.
- 6 To end, press the **MENU** button.

---

## Setting the language

---


You can select the language for the on-screen display (OSD).

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **↘+▶** button.
- 3 Select the line 'Language' with the **P-▼** or **▲P+** button.
- 4 Select your language with the **◀◁-** or **▷+▶** button.
- 5 To end, press the **MENU** button.



## Setting the time and date

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **◀+▶** button.
- 3 Select the line 'SET CLOCK' with the **P-▼** or **▲P+** button and confirm with the **◀+▶** button.

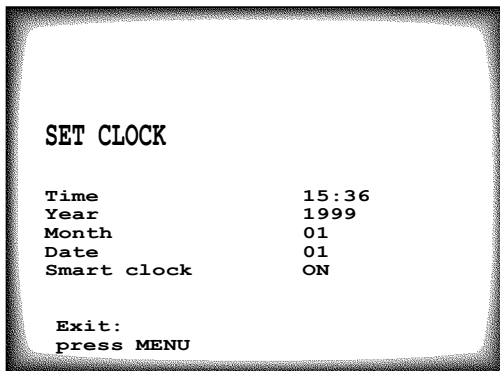


- 4 Check the time in line 'Time'. If required, please change the time with the **0-9** buttons on the remote control. Confirm with the **OK** button.
- 5 Check 'Year', 'Month' and 'Date' in the same way. Confirm each entry with the **OK** button.
- 6 To end, press the **MENU** button.
  - ▶ When you are watching TV or when the TV-VIDEO Combi is switched to standby, the time will appear in the display at the front panel of your Combi.

## Automatic time and date setting (SMART CLOCK)

- ▶ If a television programme, which transmits TELETEXT, is stored with programme number 'P01', time and date will be set automatically.
- ▶ Time and date will automatically be adjusted to winter time and summer time.

- 1 Press the **MENU** button on the remote control. The main menu will appear.
- 2 Select the line 'Installation' with the **P-▼** or **▲P+** button and confirm with the **◀+▶** button.
- 3 Select the line 'SET CLOCK' with the **P-▼** or **▲P+** button and confirm with the **◀+▶** button.
- 4 Select the line 'Smart clock' with the **P-▼** or **▲P+** button.


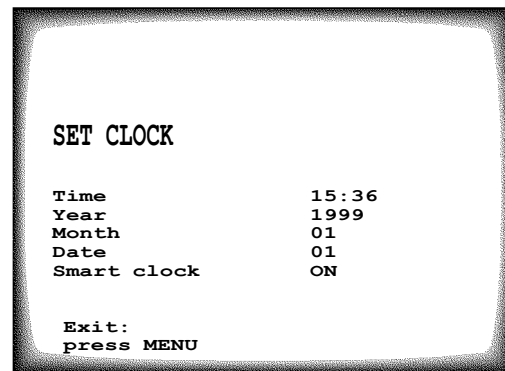


- 5 Switch the function on with the **◀-▶** or **◀+▶** button.
- 6 Confirm with the **OK** button.
- 7 To end, press the **MENU** button.


### 3. IMPORTANT NOTES FOR OPERATION

#### SUMMARY OF USER GUIDE


The OSD menu offers the following functions. More details on each can be found in the appropriate chapter.

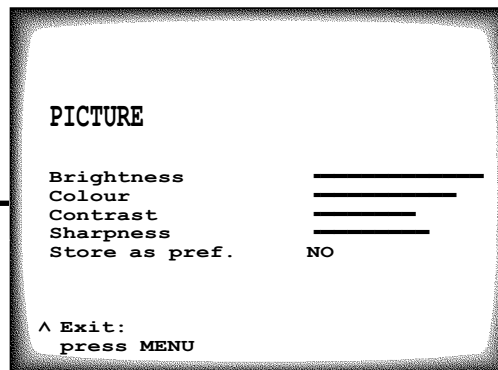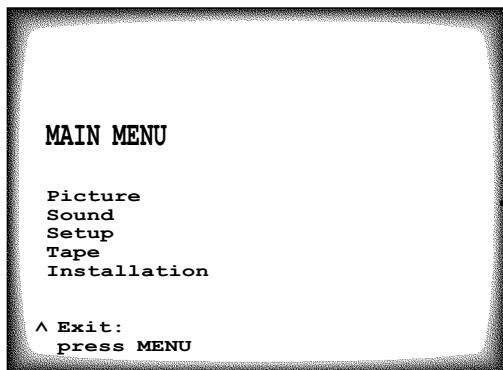


Chapter 'TV FUNCTIONS'

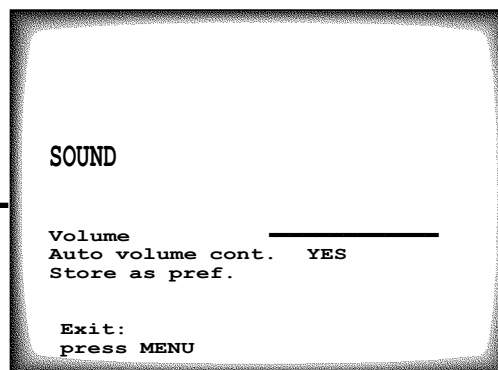

Chapter 'TV FUNCTIONS'

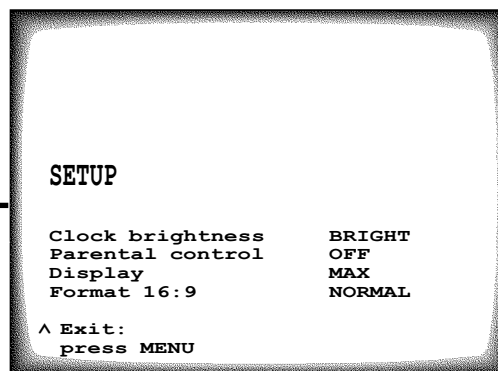

Chapter 'ADDITIONAL FUNCTIONS'

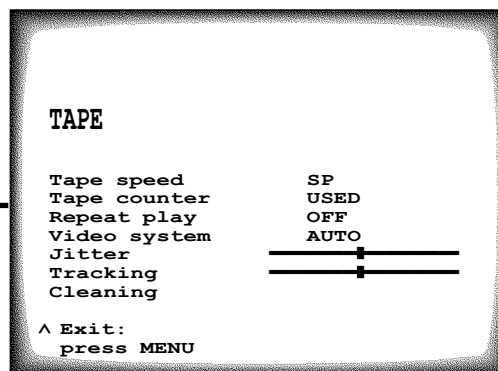


Chapter 'PLAYBACK FUNCTIONS'



#### User guide (OSD)

The OSD (On-screen display) shows the various functions in the form of a menu on the television screen. You can then choose the settings you require. There is a summary of the menus on this page. The main button functions are displayed in a help line along the bottom of the screen.

- To call up the menu: With the **[MENU]** button.
- To select a line: With the **[P-▼]** or **[▲P+]** button.
- To select within a line: With the **[◀◁-]** or **[▷+▶]** button.
- To enter or change your selection: With the **[0-9]**, **[◀◁-]** or **[▷+▶]** button.
- To enter or change your selection in the **TIMER** entry columns: With the **[P-▼]** or **[▲P+]** button.
- To cancel: With the **[MENU]** button.
- To save: With the **[OK]** button.
- To confirm: With the **[▷+▶]** button.
- To exit the menu: With the **[MENU]** menu button.

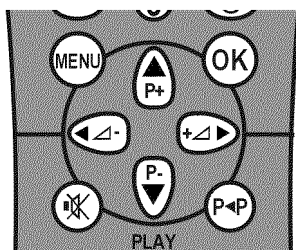

- To confirm the messages in red on the screen: Press the **[OK]** button.
- You can switch the machine on with the **[P+/-▲▼]**, **[P◀P]** or **[0-9]** button or by putting in a cassette.

## 4. TV SET FUNCTIONS

### Selecting a TV programme


Select the required TV channel (=programme number) with the **P+/-▲▼** button or with the digit buttons **[0-9]** on the remote control.

**i** If you don't know the programme number of the required TV channel:

- 1 Press the **P+/-▲▼** button for more than 2 seconds. The TV channel list appears on the screen.
- 2 Select the required TV channel with the **P+/-▲▼** button.  
After 1 second the TV-VIDEO Combi will switch to the selected programme number.

### Picture settings

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'PICTURE' with the **P-▼** or **▲P+** button and confirm with the **↔+▶** button.

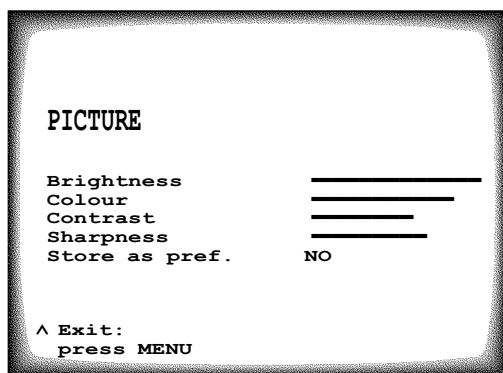

- 3 Select the required line with the **P-▼** or **▲P+** button and alter with the **↔-◀** or **▶+↔** button.  
**i** To store this setting as a standard setting, select the line 'Store as pref.' with the **P-▼** or **▲P+** button. Select 'YES' and confirm with the **OK** button.


### Volume control

You can control the volume level with the **↔-◀/▶+↔** button.

If you want to mute the sound temporarily (e.g.: during a telephone call), press the **⊗** button on the remote control. When you press the **⊗** button again, the sound will return at its original volume level.

### Sound settings

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'SOUND' with the **P-▼** or **▲P+** button and confirm with the **↔+▶** button.

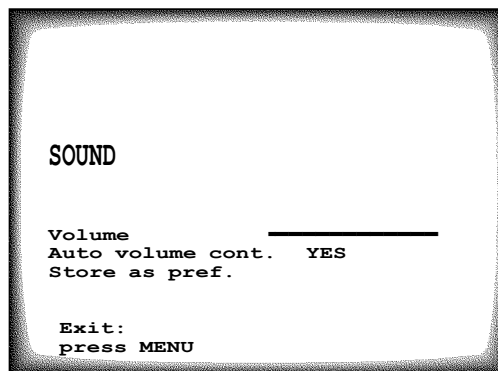

- 3 Select the required line with the **P-▼** or **▲P+** button and alter with the **↔-◀** or **▶+↔** button.  
**i** To store this setting as a standard setting, select the line 'Store as pref.' with the **P-▼** or **▲P+** button. Select 'YES' and confirm with the **OK** button.  
**i** To call up the standard settings, switch the set off and then switch it on again.

### Automatic volume control (AVL)

- Switch on 'Auto volume cont.', to activate the automatic volume control. It minimises sudden changes in TV volume when commercial spots are transmitted.

## 5. RADIO FUNCTIONS

---

To switch the radio on, press the **RADIO ON** button. You can switch between radio- and TV-mode with the **RADIO ON** button. You can switch the radio off with the **STANDBY** button.

**i** You can be waken up by the radio. Read the paragraph Switch on function (WAKE-UP TIMER) in the chapter 'Additional functions'.

**i** You can not call up any menu function while the radio function is switched on.

---

### Selecting a radio channel

---

Select the required radio channel with the **P +/- ▲ ▼** button or with the digit buttons **0-9** on the remote control. The programme number will appear in the display.

---

### Searching a radio channel

---

You can search for radio channels that have not been stored, while you are listening to the radio.

**1** Press the **FM SEARCH** button.

**i** The TV-VIDEO Combi will search for the next radio channel. The corresponding frequency will appear in the display.

**2** Repeat step **1** to search for the next radio channel.

### Storing a radio channel

**1** If you want to store a radio channel, switch to TV-mode with the **RADIO ON** button.

**2** Press the **MENU** button. The main menu appears.

**3** Select the line 'Installation' with the menu buttons **P- ▼** or **▲ P+** and confirm with the menu button **▶ + ▶**.

**4** Select the line 'Radio store' with the menu buttons **P- ▼** or **▲ P+** and confirm with the menu button **▶ + ▶**.

**5** In line 'Programme number' select the programme number you want the radio channel to be stored on, using the **▶ + ▶** or **◀ - ▶** button.

**6** Press the **OK** button.

**7** To end, press the **MENU** button.

---

### Showing the frequency

---

Press the **OK** button while you are listening to the radio. You will see the frequency of the radio channel you are listening to on the display.

UK

## 6. PLAYBACK FUNCTIONS

### Playing a cassette

- 1 Put a cassette into the cassette slot.
- 2 Press the **PLAY▶** button.
- 3 If you press the **STOP■** button once, the TV-VIDEO Combi will switch to pause. To stop, press the **STOP■** button again.
- 4 To eject the cassette, press the **■/▲** button on the TV-VIDEO Combi or press the **STOP■** button on the remote control several seconds.
  - i Some hired cassettes may have a poor picture or poor sound quality. This is not a fault in your machine. Please read 'Eliminating picture interference'.
  - i Some functions switch off automatically after a while (for example, pause, still picture, picture search). This helps to protect the cassette and avoids wasting power.

### Playing NTSC cassettes

With this set you can play cassettes that have been recorded on another video recorder in the NTSC standard (for example, American cassettes).

- i Some special features (for example, still picture) are not possible while you are playing an NTSC cassette.

### Tape position indication

- i Press the **OK** button to display the current tape position.
- i To change the type of tape position display, proceed as follows:
  - 1 During playback, press the **MENU** button.
  - 2 Select the line 'Tape' with the menu buttons **P-▼** or **▲P+** and confirm with the **OK** button.
  - 3 Select the line 'Counter' with the menu buttons **P-▼** or **▲P+**.
  - 4 With the menu buttons **◀/▶-** or **▶/▶+** select 'USED' to check the time used, or 'LEFT' to check the time left on the tape.

- 5 Confirm with the **OK** button.

### Searching for tape position with the picture (picture search)

- 1 While a cassette is playing, press the **◀◀** (reverse) or **▶▶** (forward) button once or several times.
- 2 To stop at a certain picture, press the **PLAY▶** button.
  - i During picture search, the picture quality may not be so good and there will be no sound.

### Still picture

- 1 Press the **STILL▶◀** button. A still picture will appear on the screen.
- 2 Each time you press **STILL▶◀** again, the picture will move on one step.

### Searching for tape position without the picture (wind and rewind)

- 1 Stop the tape with the **STOP■** button.
- 2 Press the **◀◀** (reverse) or **▶▶** (forward) button.
- 3 To stop at a certain picture, press the **STOP■** button.

### Instant View

With this function you can switch to picture search during wind and rewind.

- 1 If you hold the **◀◀** (rewind) or **▶▶** (wind) button during wind or rewind, you will switch to picture search.
- 2 When you release the button, the TV-VIDEO Combi will automatically switch back to rewind or wind.



## **Automatic search for a tape position (index search)**

At the start of each recording, the TV-VIDEO Combi will write an index code on the tape.

- 1 Press the **[INDEX▶]** button. Press the **[▶▶]** button to select the next code mark or the **[◀◀]** button for the previous code mark.
- 2 When the TV-VIDEO Combi finds the code mark, it will automatically switch to play.

## **Picture interference**

When the picture quality is poor when you play a cassette, please follow these instructions.


### **Tracking during playback**

- 1 During playback, press the **[MENU]** button.
- 2 Select the line 'Tape' with the **[P-▼]** or **[▲P+]** button and confirm with the **[↘+▶]** button.
- 3 Select the line 'Tracking' with the **[P-▼]** or **[▲P+]** button.
- 4 Hold the **[◀◀-]** or **[↘+▶]** button until the playback quality is at its best.
- 5 Confirm with the **[OK]** button.
- 6 To end, press the **[MENU]** button. This setting will remain until you remove the cassette.

### **Tracking during still picture**

If the still picture vibrates vertically, you can improve the still picture as follows:

- 1 During still picture, press the **[MENU]** button.
- 2 Select the line 'Tape' with the **[P-▼]** button or **[▲P+]** and confirm with the **[↘+▶]** button.
- 3 Select the line 'Jitter' with the **[P-▼]** or **[▲P+]** button.

- 4 Hold the **[◀◀-]** or **[↘+▶]** button until the picture quality is at its best.
- 5 Confirm with the **[OK]** button.
- 6 To end, press the **[MENU]** button.  
 Please note, however, that interference may still occur with poor quality cassettes.

## **Cleaning the video heads**

If horizontal lines appear on the screen when you play a cassette, you should clean the video heads.



- 1 During playback, press the **[MENU]** button.
- 2 Select the line 'Tape' with the **[P-▼]** or **[▲P+]** button and confirm with the **[↘+▶]** button.
- 3 Select the line 'Cleaning' with the **[P-▼]** or **[▲P+]** button.
- 4 Press the **[OK]** button. 'CLEANING' appears on the screen.
- 5 Wait a few seconds, until the message disappears and then press the **[MENU]** button.

UK

## 7. MANUAL RECORDING

Use 'Manual Recording' to make a spontaneous recording (for example, a programme currently being shown).

- ❑ If you want to start and stop a recording manually, read the section: 'Recording without automatic switch-off'.
- ❑ If you want to start a recording manually but have it stopped automatically, read the section: 'Recording with automatic switch-off'.

### Recording without automatic switch-off

- 1 Insert a cassette.
- 2 Use the **P+/-▲▼** button to select the programme number you want to record, for example, 'P01'.
  - ▶ Programme number 'E1' is provided for recording from external sources (via the **EXT.1** scart socket).
- 3 To start recording, press the **RECORD/OTR●** button on the remote control or **●** on the TV-VIDEO Combi. When you are recording, the red recording light at the front panel of the TV-VIDEO Combi will be lit.
- 4 Stop recording with the **STOP■** button.
  - ▶ During a recording you can only watch the current programme.
  - ▶ To switch off the screen, press the **STANDBY⏻** button.

### Recording with automatic switch-off (OTR one-touch-recording)

- 1 Put a cassette in the machine.
- 2 Use the **P+/-▲▼** button to select the programme number you want to record.
- 3 Press the **RECORD/OTR●** button on the remote control. When you are recording, the red recording light at the front panel of the TV-VIDEO Combi will be lit.
- 4 Press the **RECORD/OTR●** button again and again until the display on the TV-VIDEO Combi shows the desired end time or length of the recording.
  - ▶ To cancel this information, press the **CLEAR** button.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.

### Protecting your recordings

So that you don't accidentally delete an important recording, remove the special tab on the narrow side of the cassette with a screwdriver or slide the special tab to the left. Later, if you no longer want to protect your recording, you can seal the gap again with sticky tape or slide the special tab to the right.

### Auto-assembling

You can use the auto-assembling function to join individual recordings without any major picture disturbance between them.

- 1 While the cassette is playing, search for the correct position on the tape.
- 2 Stop the cassette by pressing the **STOP■** button. 'Pause' will appear on the TV screen.
- 3 Now start recording as usual by pressing the **RECORD/OTR●** button on the remote control.

### Selecting the recording speed (SP or LP)

You can reduce the recording speed by half. This makes it possible to record, for example, eight-hours instead of four-hours on an 'E240' (four-hour) cassette.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Tape' with the **P-▼** or **▲P+** button, and confirm with the **↵▶** button.
- 3 Select the line 'Tape speed' with the **P-▼** or **▲P+** button.
- 4 Select the required recording speed with the **◀◀-** or **▶▶+** button.
  - ▶ 'LP': Long Play = half recording speed (double recording time).
  - 'SP': Standard Play = normal recording speed.
  - ▶ The picture quality will be adversely affected when recording at half recording speed ('LP').
  - ▶ For playback, the correct recording speed will automatically be selected.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.

## 8. PROGRAMMED RECORDING (TIMER)

Use programmed recording to automatically start and stop a recording at a later date.

To make a programmed recording, your TV-VIDEO Combi needs to know:

- \* the date you want to make the recording;
- \* the programme number for the TV channel you want to record;
- \* the start and stop time of the recording;
- \* whether you want to use VPS or PDC;
- \* the recording speed (SP/LP).

The TV-VIDEO Combi stores all the information in a TIMER block. You can programme up to 6 TIMER blocks a month in advance.

### 'VPS' (Video Programming System) and 'PDC' (Programme Delivery Control)

With 'VPS and PDC', the TV station controls the start time and the length of the recording. This means that the TV-VIDEO Combi switches itself on and off at the **right time** even if a TV programme you want to record begins earlier or finishes later than expected.

Usually the start time is the **same** as the VPS or PDC time. But if your TV guide gives a VPS or PDC time which is different to the programme's start time (for example, 20.15 and VPS 20.14), you must enter '20.14' as the start time.

If you want to programme a time that is different from the VPS or PDC time, you must switch off VPS or PDC.


### Programming a recording (with 'SHOWVIEW')

All the important information needed for a programming is contained in the SHOWVIEW-programming number.


## SHOWVIEW®

- 1** Press the **TIMER** button on the remote control.
- 2** Select the line 'Showview' with the **P-▼** or **▲P+** button and confirm with the **↔▶** button.

- 3** Enter the entire SHOWVIEW-number (up to 9 digits) printed in your TV guide next to the start time of a TV programme.  
For example, 5-234-89 or 5 234 89  
Enter 523489 for the SHOWVIEW-number.  
If you make a mistake, you can clear your instructions with the **CLEAR** button.

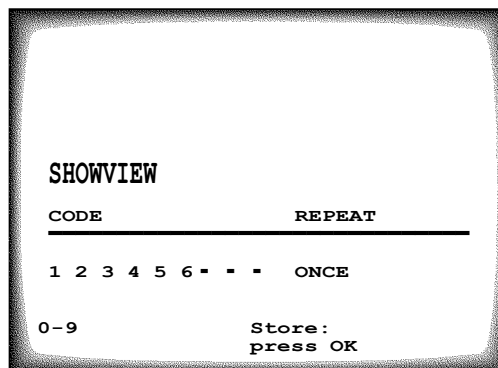

- 4** To programme daily or weekly recordings select the column 'REPEAT' with the **↔▶** button. Select the kind of programming required with the **P-▼** or **▲P+** button.  
'Mo-Fr': recordings every day from Monday to Friday.  
'Mo-Su': recordings every day from Monday to Sunday.  
'WEEKLY': recordings every week on the same day of the week.
- 5** Confirm with the **OK** button. Your programming details will then appear on the TV screen.

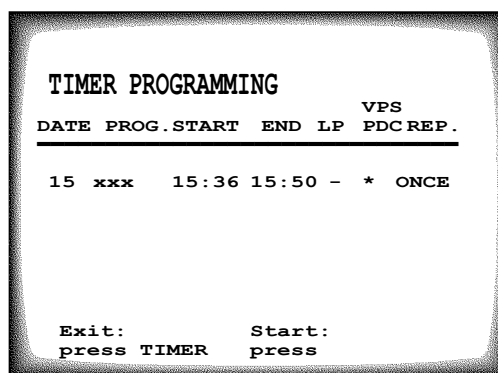

- i** If SHOWVIEW does not recognise the TV channel, 'P??' will appear on the TV screen. Instead of 'P??', you can select the programme number (programme name) you want with the number buttons **0-9** and confirm with the **OK** button.
- i** If 'Code error' appears on the TV screen, this means you entered an incorrect SHOWVIEW-code number or the incorrect date. Correct your instructions or end with the **TIMER** button.

**i** If 'Daily error' appears on the TV screen, the date was incorrectly entered. Daily programming can only be used for recordings to be made from Monday to Friday.

**i** Under 'VPS/PDC', use the **P-▼** or **▲P+** button to switch 'VPS or PDC' on or off.

**i** Under 'LP', use the **P-▼** or **▲P+** button to select the recording speed 'SP' or 'LP'.

**i** The TIMER lamp on the front of the set lights up when one or more of the TIMER blocks are occupied.

**i** When you are recording, the red recording light at the front panel of the TV-VIDEO Combi will be lit.

**i** If the end of the cassette is reached during a recording, the TV-VIDEO Combi automatically ejects the cassette.

**i** If you forget to load a cassette, 'No cassette' will appear.

**i** If you inserted a cassette with erase protection when you want to start a recording, the cassette will be ejected.

**6** Confirm with the **OK** button.

**□** 'To record press STANDBY' will appear on the screen. If you have programmed a recording that should start within the next few minutes, confirm with the **STANDBY** button. If you have programmed a recording that will start at some later point in time, confirm with the **OK** button.

**i** A programmed recording can only start, when the machine is switched to standby.


**i** If you entered the wrong date for a daily/weekly recording, your TV-VIDEO Combi will correct it automatically.

**7** If you confirmed with the **OK** button, exit the menu with the **TIMER** button.


## Programming a recording (without 'SHOWVIEW')

**1** Press the **TIMER** button on the remote control.

**2** Select the line 'TIMER PROGRAMMING' with the **P-▼** or **▲P+** button and confirm with the **↵** button.

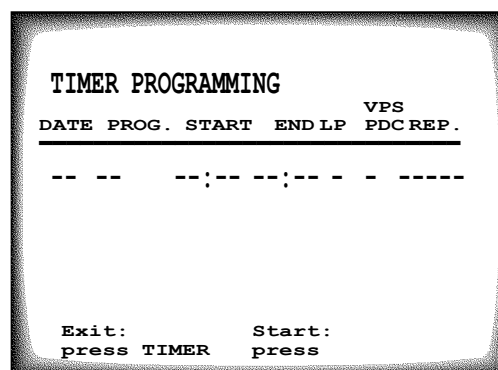

**3** Press the **↵** button.

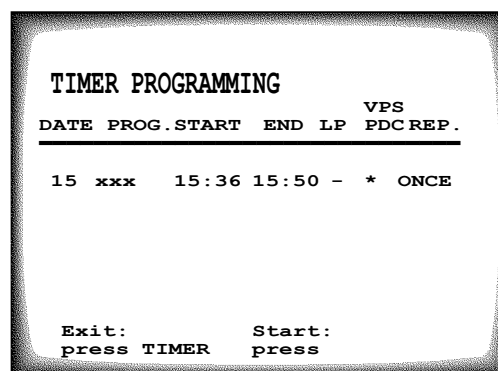

**4** Select the entry field with the **◀◀-** or **▶▶** button.

**5** Enter information with the **P-▼** or **▲P+** button or with the digit buttons **0-9**.

**i** Under 'REP.', use the **P-▼** or **▲P+** button to select daily or weekly programming.

'Mo-Fr': Recording from Monday to Friday.

'Mo-Su': Recording from Monday to Sunday.

'WEEKL': Recordings every week on the same day.

**i** Under 'VPS/PDC', use the **P-▼** or **▲P+** button to switch 'VPS or PDC' on or off.

**6** Confirm with the **OK** button when the information is correct.

- 'To record press STANDBY' will appear on the screen. If you have programmed a recording that should start within the next few minutes, confirm with the **STANDBY** button. If you have programmed a recording that will start at some later point in time, confirm with the **OK** button.

**i** A programmed recording can only start, when the machine is switched to standby.

**i** If you entered the wrong date for a daily/weekly recording, your TV-VIDEO Combi will correct it automatically.

- 7** If you have confirmed with the **OK** button, use the **TIMER** button to exit the menu.

**i** The programming information has been stored in a TIMER block.

- 8** Make sure that the cassette you have put in can be recorded on.

---

## How to clear a TIMER

---

- 1** Press the **TIMER** button on the remote control.
- 2** Select the line 'Timer programming' with the **P-▼** or **▲P+** button and confirm with the **↙+▶** button.
- 3** Select the TIMER you want to clear with the **P-▼** or **▲P+** button.
- 4** Press the **CLEAR** button.
- 5** Switch off with the **TIMER** button.



---

## How to check or change a TIMER

---

- 1** Press the **TIMER** button on the remote control.
- 2** Select the line 'TIMER PROGRAMMING' with the **P-▼** or **▲P+** button and confirm with the **↙+▶** button.
- 3** Select the TIMER you want to check or change with the **P-▼** or **▲P+** button and confirm with the **OK** button.
- 4** Select the entry field with the **↙-▶** or **↘+▶** button.
- 5** Change any information with the **P-▼** or **▲P+** button or with the **0-9** buttons.

**i** Under 'LP', use the **P-▼** or **▲P+** button to select the recording speed 'SP' or 'LP'.
- 6** Confirm with the **OK** button.
- 7** To end, press the **TIMER** button.
- 8** Make sure that the cassette you have put in can be recorded on.

## 9. ADDITIONAL FUNCTIONS

### How to read TELETEXT

- Press the **TELETEXT** button to switch the TXT decoder on and off. The TV-VIDEO Combi is now receiving the TXT of the TV channel currently selected.
- To store the current page as preferred page, press the **OK** button.  
The next time you call up TELETEXT, you will automatically turn to this page.
- If you want to select an other page, type in the number of the page with the digit buttons **[0-9]**. With the colour buttons on your remote control you can directly select the page numbers shown at the bottom of the TV screen.

### Extra TELETEXT functions


To use the extra TELETEXT functions, press the **MENU** button, when you are in TELETEXT.

- To enlarge the print, select the symbol '⊕' and confirm with the **OK** button.
- To switch off the TELETEXT decoder temporarily, select the symbol '⊗' and confirm with the **OK** button.
- To call up a TELETEXT sub-page:
  - 1** Select the symbol '⊙' and confirm with the **OK** button.
  - 2** Enter the page number of the sub-page with the **[0-9]**-buttons (e.g.: 0123).
- To call up concealed information, select the symbol '⊚' and confirm with the **OK** button.
- To stop the pages from being turned over, select the symbol '⊕' and confirm with the **OK** button.
- To show TELETEXT transparently, select the symbol '⊚' and confirm with the **OK** button.

### Selecting the display brightness

You have a choice of several levels of display brightness (clock, radio frequency, programme number).

- 1** Press the **MENU** button. The main menu appears.
- 2** Select the line 'Setup' with the **P-▼** or **▲P+** button and confirm with the **↔+▶** button.

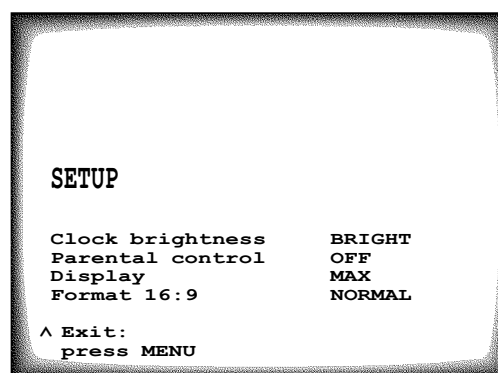


- 3** Select the line 'Clock Brightness' with the **P-▼** or **▲P+** button.
- 4** Select one of the options with the **↔+▶** or **↔-◀** button: 'OFF' (display is switched off), 'STB.OFF' (display is switched off in standby mode), 'LOW', 'MIDDLE', 'HIGH', 'BRIGHT'.
- 5** Confirm with the **OK** button.
- 6** To end, press the **MENU** button.

## Changing the TV system

If you play back recordings made on a different kind of tape (for example, NTSC standard), the automatic TV system switch-over may lead to colour interferences. You can switch off the 'automatic TV system switch-over' as follows.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Tape' with the **P-▼** or **▲P+** button and confirm with the **↵** button.

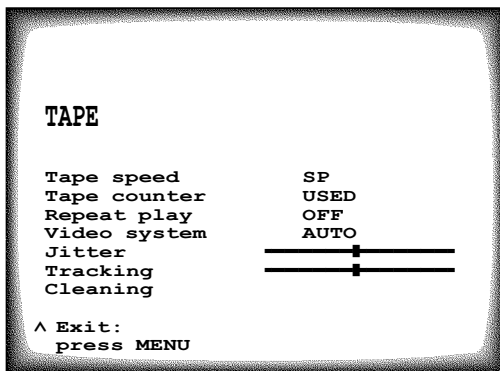


- 3 In the line 'Video system' select the required TV system with the **◀◀-** or **▶▶+** button.
- 4 Confirm with the **OK** button.
- 5 To end, press the **MENU** button.

## Parental control

This function will prevent unauthorised use of your TV-VIDEO Combi. All button-functions will be locked.

**i** You can make programmed recordings while the parental control is on.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Setup' with the **P-▼** or **▲P+** button and confirm with the **↵** button.

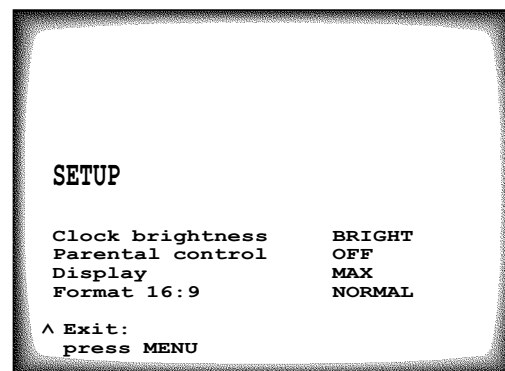

- 3 In the line 'Parental Control' select 'ON' with the **◀◀-** or **▶▶+** button.

- 4 Confirm with the **OK** button.

- 5 To end, press the **MENU** button.  
Keep the remote control in a safe place.

- 6 If you want to switch off the parental control, select 'OFF' in line 'Parental Control'.


**i** If a button is pressed with activated parental control, 'Parental Control active' will appear in the display.

**i** If you want to eject a cassette with activated parental control, press the **STOP** button several seconds.

## Switching the On-screen display (OSD) on or off

You can switch the On Screen Display of the current operating information on or off.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Setup' with the **P-▼** or **▲P+** button and confirm with the **↘+▶** button.

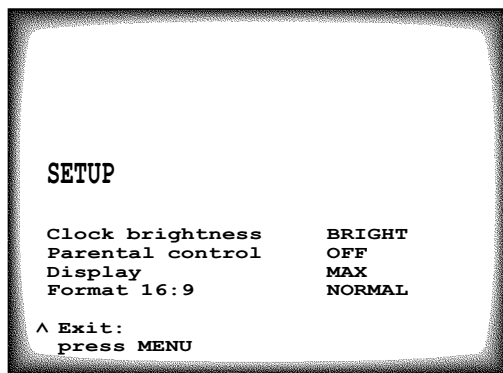


- 3 Select the line 'Display' with the **P-▼** or **▲P+** button.
- 4 Select one of the options indicated with the **↘+▶** or **↙-◀** button.  
'MAX': The OSD appears for a few seconds each time an operating mode is selected and then disappears.  
'MIN': The OSD is reduced to a minimum.  
'PROGR.': The programme number is always shown.  
'COUNTER': The tape position is always shown.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.  
**i▶** With the **OK** button you can superimpose the On Screen Display of current operating mode on the TV screen.

## Switching to 16:9 wide screen picture

If you are using a cassette with 16:9 wide screen recordings, you can switch this function 'ON'. The TV-VIDEO Combi will now automatically switch to wide screen.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Setup' with the **P-▼** or **▲P+** button and confirm with the **↘+▶** button.

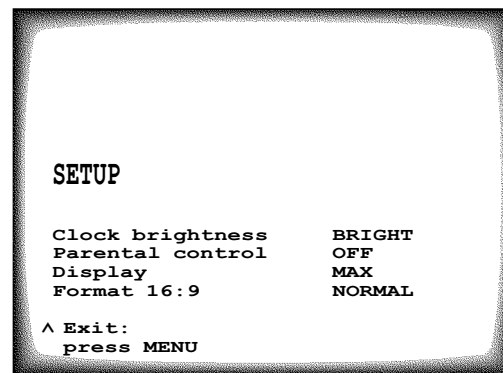


- 3 Select the line 'Format 16:9' with the **▲P+** or **P-▼** button.
- 4 Select one of the possibilities with the **↘+▶** or **↙-◀** button.  
'NORMAL': Normal size picture.  
'EXTEND.': Extended size picture.  
'COMPR.': 16:9 format picture.  
**i▶** When you watch TV you can select between 'EXTEND.' and 'NORMAL'.
- 5 Confirm with the **OK** button.
- 6 To end, press the **MENU** button.



## Continuous playback

You can automatically play a cassette again and again. When the end of the tape or the recording has been reached, it will rewind and start again.

- 1 Press the **MENU** button. The main menu appears.
- 2 Select the line 'Tape' with the **P-▼** or **▲P+** button. Confirm with the **↔▶** button.

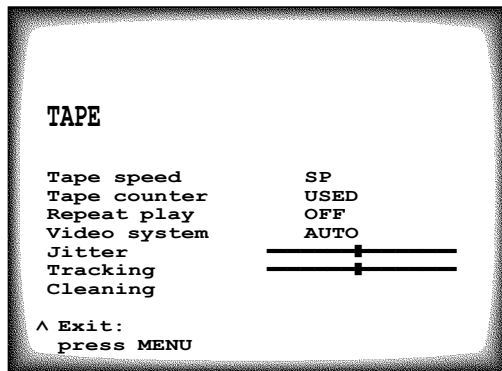

- 3 Select the line 'Repeat play' with the **P-▼** or **▲P+** button.
- 4 Select 'ON' with the **◀▶-** or **▶▶+** button. If you select 'OFF', the function will be switched off.
- 5 Confirm with the **OK** button.
- 6 Press the **MENU** button.

## Switch off function (SLEEP TIMER)

You can programme your set to switch off after a predetermined period.

- 1 Press the **TIMER** button on the remote control.
- 2 Select line 'Sleep timer' with the **P-▼** or **▲P+** button and confirm with the **↔▶** button.
- 3 Determine the time left until switch off in 15 minutes intervals using the **P-▼** or **▲P+** button.
  - ▶ You can also select the switch-off time with the **CLEAR** button on the remote control.
- 4 Confirm with the **OK** button.
- 5 To end, press the **TIMER** button.
- You can always simply select the switch-off time with the **SLEEP** button on the remote control.

## Switch on function (WAKE-UP TIMER)

You can programme your set to switch on at a predetermined time.

- 1 Press the **TIMER** button on the remote control.
- 2 Select the line 'Wake-up Timer' with the **P-▼** or **▲P+** button and confirm with the **↔▶** button.
- 3 Select the line TV, RADIO or BUZZER with the **P-▼** or **▲P+** button and press the **↔▶** button.
- 4 Select the entry field with the **◀▶-** or **▶▶+** button.
- 5 Enter the information with the **P-▼** or **▲P+** button or with the number buttons **0-9**.
  - In the column 'REPEAT' select one of the following options with the **▲P+** or **▶▶+** button:
    - 'ONCE': Wake-up alarm only once.
    - 'Mo-Fr': Wake-up alarm every day from Monday to Friday.
    - 'Mo-Su': Wake-up alarm every day from Monday to Sunday.
    - 'Sa-Su': Wake-up alarm during the weekend.
    - 'WEEKL': Wake-up alarm every week on the same day.
- 6 Activate the function in the first entry field. You can also always switch the programmed WAKE-UP TIMER for the radio and the buzzer on/off with the **ALARM ON** button on the remote control.

- 7 Press the **OK** button.
- 8 To end, press the **TIMER** button.

- ▶ If 'Date corrected' appears on the screen, press the **OK** button and check the date of the programmed Timer in the second entry field.
- ▶ When a wake-up Timer has been programmed and switched on, the corresponding light will light up in the display.
- ▶ If you want to switch off the alarm when it is going off, press the **STANDBY** button. If you want the alarm to repeat after ten minutes, press any key on the remote control or the Combi, except the **STANDBY** button.



## 10. Before you call an engineer

H

If, contrary to expectation, you have any problems using this TV-VIDEO Combi, it may be caused by one of the reasons mentioned below. You can also call the **customer service centre** in your country.

You will find the phone number in the enclosed guarantee leaflet.

**Your TV-VIDEO Combi does not respond to any button being pressed:**

- There is no power supply: check the power supply
- A programmed recording is currently being made: cancel the programmed recording with the **STANDBY** button.
- Parental control is on: switch the parental control off.
- Continuous playback is on: switch the continuous playback off.
- There is a technical problem: switch off with the **power** switch for 30 seconds, then switch it on again.

**Cassette is jammed in the TV-VIDEO Combi:**

- Don't use force. switch off with the **power** switch for 30 seconds, then switch it on again.

**Remote control does not work:**

- Remote control not pointed toward the TV-VIDEO Combi: point it at the TV-VIDEO Combi.
- Batteries have run out: change the batteries.

**No picture when you play a cassette:**

- There is no recording on the cassette: change the cassette.

**Poor picture quality when you play a cassette:**

- The cassette badly worn or of poor quality: use new cassette.
- Tracking is not properly adjusted or the video heads are dirty: turn to chapter 'PLAYBACK' and read the section 'Cleaning the video heads'.
- Read the section 'Picture interference'.
- You are playing a cassette with a LongPlay recording on it: Excellent picture quality is only guaranteed with recordings made in StandardPlay recording speed.

**The TV-VIDEO Combi will not record:**

- The TV channel you want to record is not stored or you selected the wrong programme number: check TV channels stored.
- You have loaded a cassette which cannot be recorded on: undo the erase protection on the cassette.

**Programmed recording does not work:**

- You have not set the TIMER properly: check the TIMER blocks.
- You have programmed the wrong time or date: check time and date.
- You have put in a cassette that cannot be recorded on: undo the erase protection on the cassette.
- 'PDC' or 'VPS' switched on but 'PDC/VPS time' wrong: enter PDC or VPS time exactly to the minute. Have the aerial checked.

**'Smart Clock' setting does not work:**

- You have stored a TV channel on programme number 'PO1' that does not transmit TELETEXT: On 'PO1' store a TV channel that transmits TELETEXT.
- Poor TELETEXT reception: On 'PO1' store a TV channel with good TELETEXT reception.
- You have not activated the Smart Clock function: Switch the function 'ON'.

**You hear a very short and soft noise coming from your TV-VIDEO Combi at 3:00 at night:**

- 'Smart Clock' is checking the time: Switch off the Smart Clock function.

**TELETEXT does not start at page 100:**

- You have stored a different preferred page: Store page 100 as preferred page.

### Technical terms used

**Current tape position** : The part of the tape currently being played.

**External source** : A device connected via a socket (for example, scart socket) which is transmitting audio/video signals to the TV-VIDEO Combi.

**Index marking** : A marking which is automatically made on the tape at the beginning of every recording. This marking (recording ID) can be searched for with the Index search function.

**Scart cable** : Also known as a Euro-AV cable. This standard cable is an easy method of connecting various TV, audio and video devices, such as a HIFI and Dolby Surround set, video recorder, DVD player, SAT receiver, decoder, computer and similar devices. Other signals in addition to audio and video signals can be transmitted on it.

**TV system** : There are various systems for transmitting television signals, for example, PAL, SECAM, PAL BG, SECAM DK, SECAM L/L, NTSC etc. The system used by your television depends on which country you are in.

**TXT** : Also known as Teletext, Fasttext, Videotext, FLOF etc.

**OTR** : One touch recording. This function enables you to select the switch-off time in intervals of 30 minutes.

PL

CS

SK

PYC

UK

14PV340/58

3103 166 24023  
9371/011

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>