

Philips Remote User Guide

Bailey 146

Overview

The following document intends to familiarize one with the use of features in our *Smart Classrooms* via the Philips Remote Control. The remote itself allows for full control of all devices installed in the room.

General Operations Using the Pronto Remote

Press on the **HELP** icon for support information.

Contrast controls for the touch screen display.

Backlight initiate button.

Press on the **VCR** icon to get to the VCR controls.

Press on the **LAPTOP** icon to send the laptop desktop to the projector.



Master **MUTE** button.

Press on the **BLK SCR** icon to have the projector project a black image.

Master **VOLUME** controls.

Press on the **PRESENTER** icon to display documents from the document camera on the projector

Press on the **AUX** icon to display auxiliary AV inputs on the projector.

Press on the **MASTER SHUT DOWN** icon and hold it for at least 6 seconds to turn every equipment off.


ANY TROUBLE USING THE PRONTO PLEASE REFER TO THE NEXT PAGE

Starting up Troubleshooting

Blank Screen !

The Pronto screen will be blank when picked up from the charger base.

To initiate the Pronto just Touch anywhere on the touch screen as indicated.

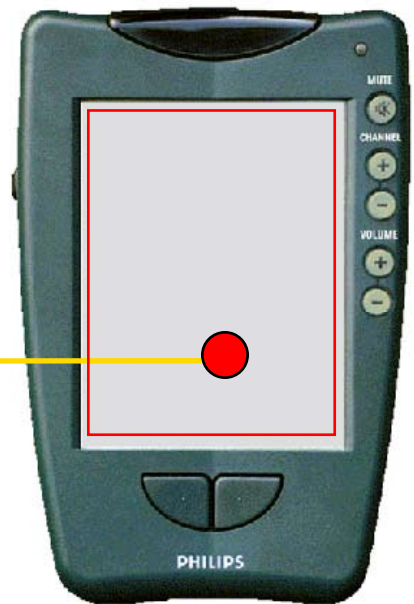

Where is the main page!

Just press on the icon that resembles a house at the top left hand corner of any equipment menu page. Should a display other than the main page appear.

No Display!

If display is dark or do not appear check contrast dial before calling for. There is a contrast dial on the right side of the Pronto receiver that is similar to a volume control dial on a walkman.

***IF THE EQUIPMENT APPEARS NON RESPONSIVE...
AIM PRONTO REMOTE AT THE IR SENSOR ON THE
BACKSPASH.**



Displaying an Auxiliary Video Source



Step 1

Connect the AUX video source to the terminals labeled AUX VIDEO on the backslash.

Step 2

Press the AUX VIDEO icon on the main page.

Step 3

Press the Show icon to display the video source through the projector.



Displaying a Laptop Computer



Step 1

Connect the **VGA and Audio** cables onto the **VGA in** plate on the backslash.

Step 2

Press the LAPTOP icon on the main page.

Step 3

Press the SHOW icon to display the output through the computer.

Step 4

Make sure that the projector resolution is at 1024 x 768.



Playing the VCR



Step 1

Press the VCR icon in the main menu.

The **VCR** controls page as shown in the right will be displayed.

Step 2

Press the **PLAY** icon.

Step 3

Press the **SHOW** icon to send the VCR video signal to the projector.



Displaying the Document Camera



step 1

Press the **Presenter** icon on the main menu.

step 2

press the **Show** icon to display the image from the document camera on the projector.



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>