

G96SVC Replacement REMOTE CONTROL

Thank you for buying the latest in remote control technology. Your remote control has programs installed in the factory to operate your TV and a majority of VCRs and Cable Converters.

 
This new remote probably looks different from your old one. That's okay. It still operates all of the features of your old remote, and may also operate other features that your old remote didn't. Of course your TV, VCR or Cable Converter must have these features.

(BEGIN)

1 Installing the batteries is the first step. Use 4 type AAA Alkaline cells. NOTE: The easy way to open the battery door is with a penny or a dime inserted in to the shortest of two slots. Press down on the coin. Move the top of the coin away from the long slot. The door will pop open. Take care to insert the batteries as the drawing inside the door indicates. Reinstall the door by pressing in place until there is a click.

2 YOUR REMOTE IS NOW "AWAKE":
Your new remote control is set up to operate Philips, Magnavox, Sylvania, or Philco TV as well as Crosley, Curtis Mathes and Bell & Howell TVs manufactured by Philips. Try it, switch to the TV position, point it at your TV and try it.


3 When your remote "wakes up" it is ready to operate TVs listed above that were manufactured after 1987. It can be programmed to operate TVs of some of those brands as far back as 1981. The following pages will instruct you in programming for older TVs and for VCRs and Cable Converters.

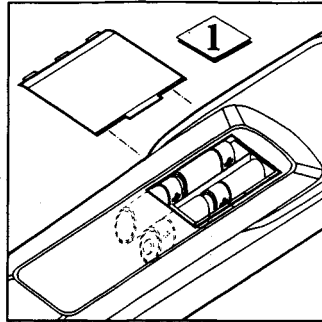

SMART HELP



 If the distance that the remote will operate the TV (or VCR-Cable Box) becomes shorter the batteries need replacing. Replace with 4 AAA Alkaline cells.

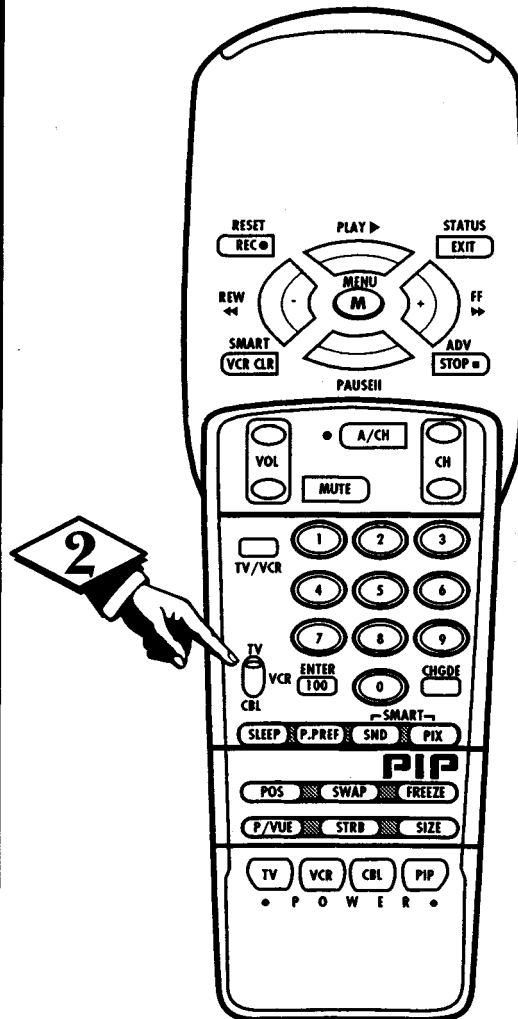

Your remote "wakes up" ready to work Philips, Magnavox, Sylvania, or Philco TVs as well as Crosley, Curtis Mathes and Bell & Howell TVs manufactured by Philips since 1987. If you have tried the remote as suggested on page 1 and there is no response, there is a one time set up to operate your TV.

BEGIN

- 1 Press the **POWER** button on your TV to turn it on.
- 2 Place the switch on the remote in the TV position.
- 3 Stand at least 6 feet away from the TV. Point the remote toward the TV. Hold down the A/CH button and the TV POWER button at the same time. Keep holding then down.
- 4 Watch the channel indicator on the TV. The channel numbers will change when the TV has been identified. This may take as long as one minute.

SMART HELP



 
Remember, a minute may seem like a long time but the code will be located in that minute.

Don't let the TV change more than 5 channels. If you do the remote will pass on the right identification for the TV and another one minute search cycle will have to be done.

If no channel change happens in one minute take the following steps:

1. Remove and reinsert the batteries, taking care that they are inserted as the picture inside the battery compartment shows.
2. Repeat steps 1 to 4.
3. Have this remote and your old remote in hand along with the Model Number of your TV set and call 1-423-475-8869.

On rare occasions the failure to respond to a remote may be in the TV set. In this case a Service Technician will be required.

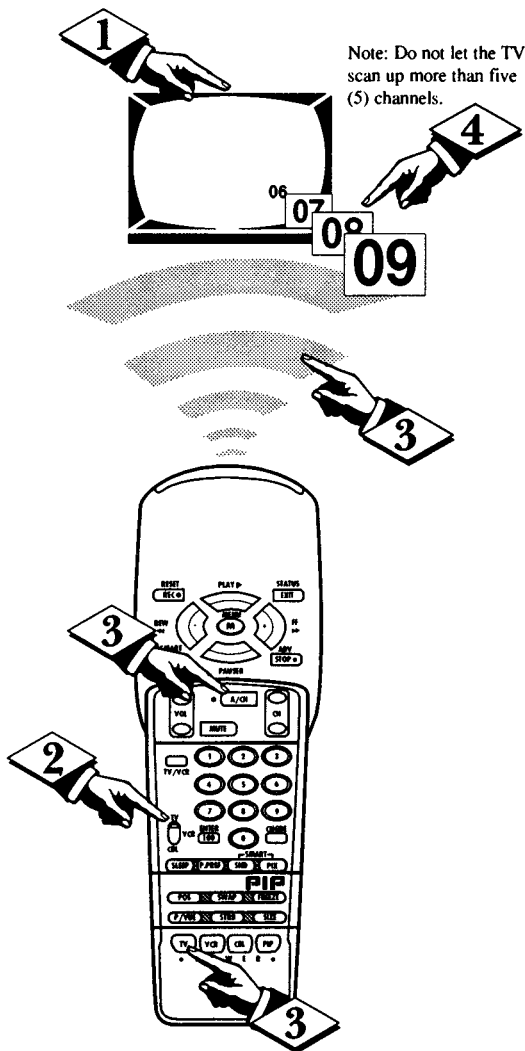


SETTING THE REMOTE TO WORK VCRs

Your remote control is set to work your TV and many infrared remote (IR) control VCRs. However, an easy one-time step may be necessary before the remote will work your VCR.

Try this initial check to see if going on to the following section is necessary.

BEGIN

 - 1 Slide the switch on the remote to VCR.
- 2 Point the remote toward the VCR and press the VCR POWER button.
- 3 Does the remote turn on the VCR? If YES, **STOP** and try the other VCR buttons on the remote. If they also work the VCR, then the remote is ready and no further steps are needed.
If NO, continue...

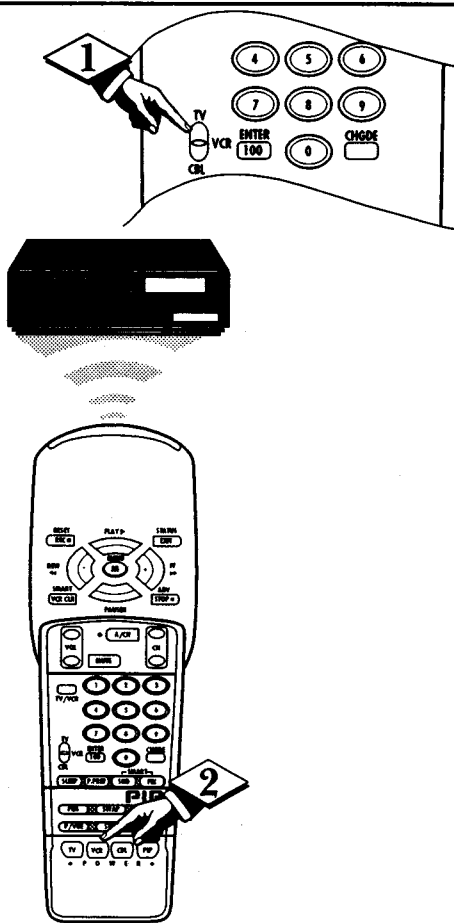

First look up a **TWO-DIGIT** remote code number for your brand VCR before going through the simple "1,2,3" steps (on the following page).

continue to next page

SMART HELP

Remember, if more than one number is listed, you may have to try more than the first two-digit code given in order to locate your VCR's remote code.


| VCR BRAND | REMOTE CODE NO. | VCR BRAND | REMOTE CODE NO. |
|---------------|--------------------|------------------|--------------------|
| Akai | 24, 25, 36 | Panasonic | 01, 02, 52 |
| Capehart | 33 | Philips | 00, 05 |
| Conoid | 13 | Philips Video CD | 37 |
| Curtis Mathes | 42 | RCA | 04, 32, 42, 43, 44 |
| Daewoo | 33 | Samsung | 22, 30 |
| Emerson | 20, 31, 34, 40 | Sansui | 49 |
| Fisher | 06, 07 | Sanyo | 13 |
| Goldstar | 23 | Sears | 08 |
| Go Video | 45, 46 | Sharp | 11, 12 |
| Hitachi | 03, 51 | Shintom | 35 |
| JVC | 14, 47, 48 | Sony | 09, 10, 41 |
| Magnavox | 00, 05 | Teknika | 26 |
| Matsushita | 01, 02 | Toshiba | 18, 19 |
| Mitsubishi | 16, 17, 38, 39, 50 | Video Concepts | 29 |
| Multitech | 27, 28 | Zenith | 15 |
| NEC | 21 | | |

Now that you have looked up the two-digit Remote Code Number for your brand of VCR (on previous page), you are ready to follow the four simple steps below.

Please read through steps 1-4 before beginning.

BEGIN

 - 1 Press and release the REC (RECORD) button.
- 2 Within thirty seconds after releasing the REC button, press and release the VCR Power button.
- 3 Within thirty seconds after releasing the VCR Power button, ENTER THE TWO DIGIT CODE NUMBER for the desired VCR. The remote is now ready to send commands to the VCR.
- 4 Point the remote at the VCR. Press the VCR Power button on the remote to turn the VCR ON.

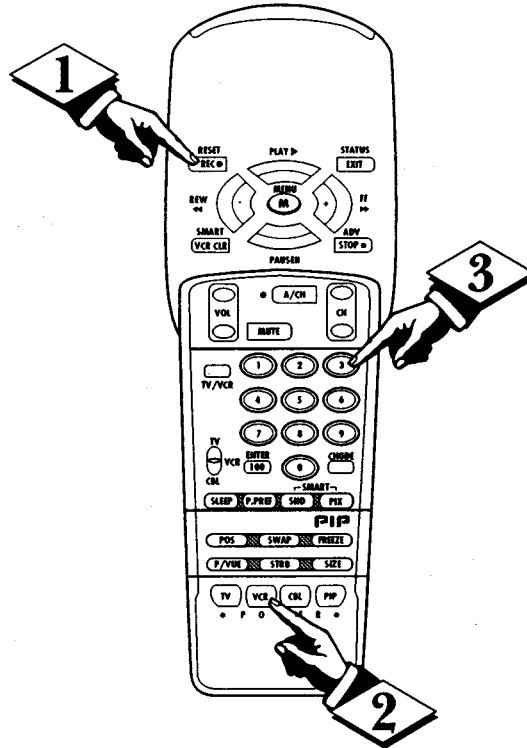

SMART HELP



Try it out. The Channel and VCR buttons on the remote should now operate the VCR.

Remember, if this doesn't work the first time, repeat steps using the same remote code number.

If after a second try the remote does not operate your VCR, and there are more code numbers listed for your brand VCR, use the next listed code number.

If after repeated attempts the code number method does not work your VCR, try the "VCR SEARCH" method on page 7.



 
SETTING THE REMOTE TO WORK CABLE TV CONVERTERS

Your remote control is set to work your TV and many infrared remote (IR) control Cable Converters. However, an easy one-time step may be necessary before the remote will work your Converter.

Try this initial check to see if going on to the following section is necessary.

BEGIN

- 1 Slide the switch on the remote to CBL.
- 2 Point remote toward Cable Converter and press the CBL Power button.
- 3 Does the remote turn the Converter ON?
IF YES, stop and try the CH ▲ ▼ and CH number buttons on the remote. If they also work the Converter then the remote is ready and no further steps are needed.
IF NO, continue...

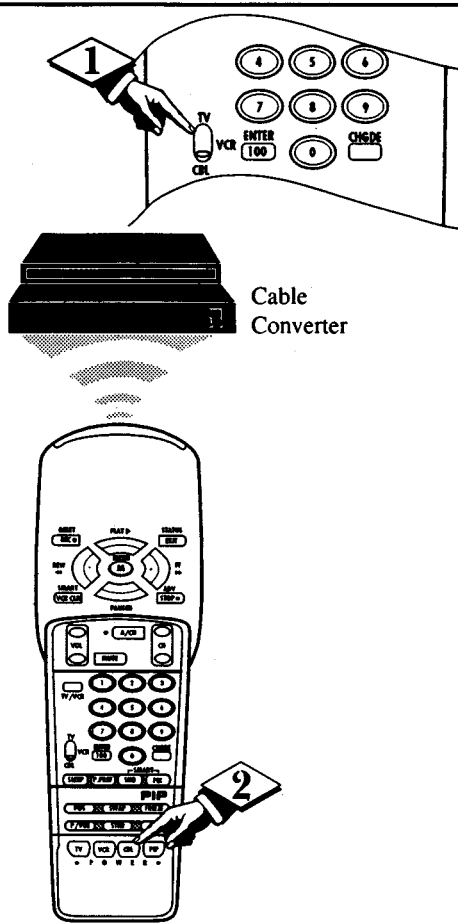

First look up a **TWO-DIGIT** remote code number for your brand Converter before going through the simple "1,2,3" steps (on the following page).

continue to next page

SMART HELP

Remember, if more than one number is listed, you may have to try more than the first two-digit code given in order to locate your Converter's remote code.


| CONVERTER BRAND | REMOTE CODE NO. | CONVERTER BRAND | REMOTE CODE NO. |
|-----------------|-------------------------|--------------------|-----------------|
| Archer | 28 | Rembrant | 33 |
| Diamond | 23 | Salora | 52 |
| Drake | 37 | Scientific Atlanta | 08, 22, 47 |
| Gemini | 45 | Sheritech | 34 |
| Hamlin | 14, 15 | Starcom | 30 |
| Hitachi | 25 | Sylvania | 16 |
| Jerrold | 00,01,02,03,04,05,46,55 | Texscan | 48 |
| Macom | 29, 38 | Tocom | 12,13, 53 |
| Magnavox | 17, 31 | Toshiba | 43 |
| NSC | 49 | Uniden Satellite | 44 |
| Oak | 06, 27, 39 | Unika | 50 |
| Panasonic | 18, 35 | United Satellite | 54 |
| Philips | 19, 20, 21, 24, 26 | Universal | 36 |
| Pioneer | 09, 32 | Video Tech | 40 |
| Regency | 10, 11 | Video Way | 51 |
| | | Zenith | 07, 41, 42 |

Now that you have looked up the two-digit Remote Code Number for your brand of Cable Converter (on previous page), you are ready to follow the four simple steps below.


Please read through steps 1-4 before beginning.

BEGIN

 - 1 Press and release the REC (RECORD) button.
- 2 Within thirty seconds after releasing the REC button, press and release the CBL Power button.
- 3 Within thirty seconds after releasing the CBL Power button, ENTER THE TWO DIGIT CODE NUMBER for the desired Converter. The remote is now ready to send commands to the Converter.
- 4 Point the remote at the Converter. Press the CBL POWER button on the remote to turn the Converter ON.

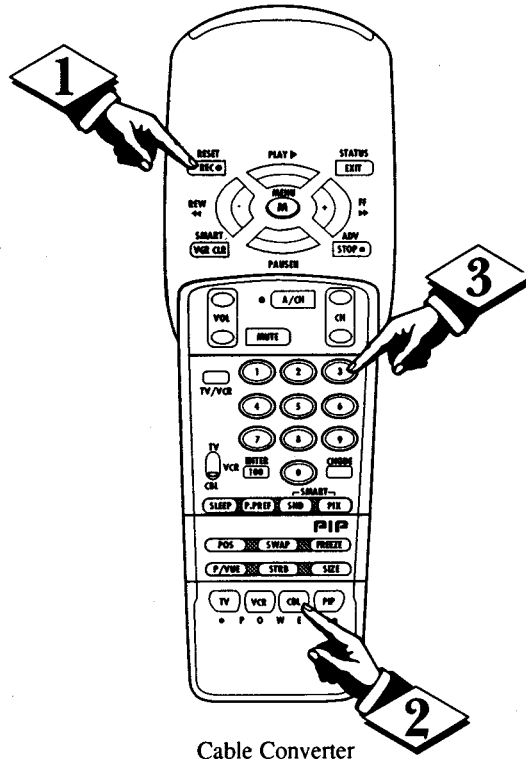

Cable Converter

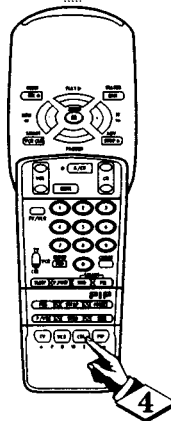 

SMART HELP



Try it out. The Channel and POWER buttons on the remote should now operate the Converter.

Remember, if this doesn't work the first time, repeat steps using the same remote code number.

If after a second try the remote does not operate your Converter, and there are more code numbers listed for your brand Converter, use the next listed code number.

If after repeated attempts the code number method does not work your Converter, try the "CONVERTER SEARCH" method on the next page.

SETTING YOUR REMOTE TO WORK VCRs, CONVERTERS - SEARCH

Your TV remote can be set to work your VCR or Cable Converter by what is called the **SEARCH** method.

If the "REMOTE CODE" number method shown in the previous section did not set your remote to work your VCR or Converter, then follow the easy steps listed below.

Please read through steps 1-4 before beginning.

BEGIN

- 1 Press the **POWER** button on the VCR or Converter to turn the unit ON.
- 2 Place the **TV/VCR/CBL** switch on the remote in the desired position (VCR or CBL).
- 3 Stand at least six feet away from the front of the VCR or Converter. Point the remote toward the unit. **HOLD DOWN** the **A/CH** and desired **POWER** (VCR or CBL Converter) buttons at the same time. **KEEP HOLDING BUTTONS DOWN.**
- 4 Watch the **Channel Indicator** on the unit. Channel Numbers will **SCAN UP** when the unit has been identified. This may take up to two minutes.
- 5 Release the **A/CH** and **POWER** (VCR or CBL) buttons as soon as channel numbers start to scan up. The code has been identified and the remote is ready to operate the VCR or Converter.

SMART HELP

 


Remember, a minute or two can seem very long, but the code should be located within two minutes.

Don't let the VCR scan up more than five channels. If you do the remote may pass up the right code and another two minute search cycle will have to be repeated.

If no channel change happens within two minutes, repeat steps 1-4. Should a channel change still not occur, the remote will not work with the desired unit.

Don't let the VCR or Converter scan up more than five channels (in Search mode).

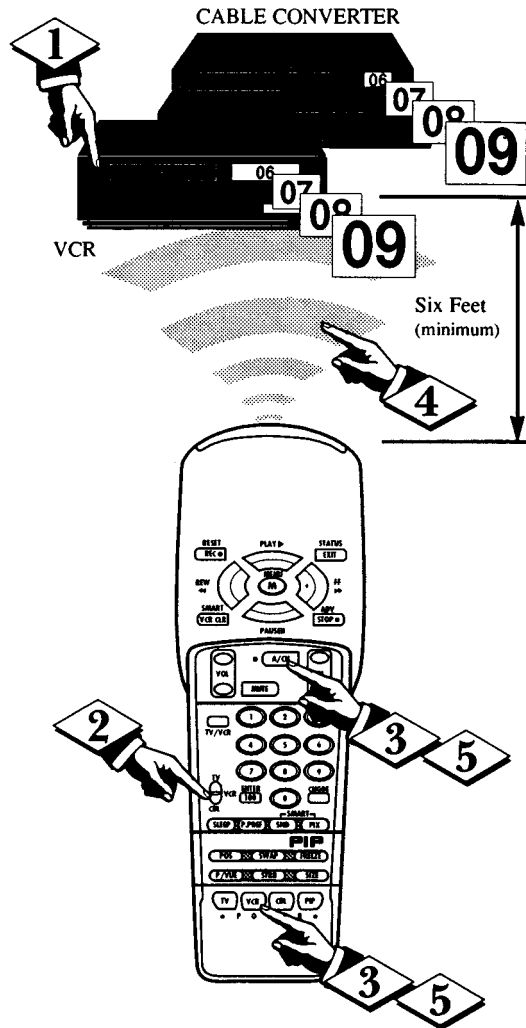

90 Days Over the Counter Exchange

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

During the First 90 Days

For the first Ninety (90) days from the date of purchase, your Accessory will be replaced with a new or renewed product (at Philips' option) if it becomes defective or inoperative. This is done without charge to you. Replacement products are warranted for the balance of the warranty period.

Who is Protected... Where?

This warranty is extended to the original purchaser for products purchased and used in the U.S.A., Puerto Rico and the Virgin Islands. (For Canada see below.)

What the Purchaser Must Do (in Canada ONLY)

If you require an exchange during the warranty period, you must take your Accessory to the dealer from whom it was purchased with proof of the purchase receipt. You are responsible for all shipping costs.

What the Purchaser Must Do (except in Canada)

If you require an exchange during the warranty period, you must take your accessory to the dealer from whom it was purchased, or carefully pack the product and ship it by prepaid transportation with proof of the purchase date to the Small Products Service Center, address listed below.

ALL IMPLIED WARRANTIES INCLUDING IMPLIED GUARANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THIS EXPRESS WARRANTY. Some states do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you.

**Philips CEC - Credit Receiving
Small Products Service Center
1001 Snapp Ferry Road
Greenville, TN 37745
(423) 475-8869**

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>