

PM435 Universal Remote

Table of Contents

Introduction	3
Setup	4
Battery Installation	4
Battery Saver	4
Code Saver	4
Power-On default	5
TV Punch Through	5
VCR Punch Through	5
Code Setup	5
Button Functions	6
Advanced DVD and SAT Button Functions	8
TV/VCR Punch-Through	9
TV/VCR and TV/DVD Combo units	9
Code Entry	10
Direct Code Entry	10
Code Search	11
Code Identification	12
Sleep Timer	13
Code List	13
Product Operation	18
Troubleshooting	19

Introduction

Congratulations on your purchase of Philips Magnavox Universal Remote Control. Philips Magnavox Universal Remotes let you replace a broken or lost remote or combine more than one remote into one.

 
This remote control operates the common features of most but not all models and brands of IR Infrared Controlled Video Equipment. This remote may provide functions that are not available on your equipment. Some functions of your particular equipment (e.g. menu functions) may not be controlled by this remote. In such cases, use the original remote control for your equipment. Please use this manual to become familiar with your Philips Magnavox Universal Remote. After you are familiar with your remote the first thing you need to do is to install batteries and setup your remote for your particular product and brand.

Thank you for buying a Philips Magnavox remote and we hope it will give you many years of service.

Setup


Battery Installation

1. On the back of the remote, push down on the tab and lift the cover off.
2. Match the batteries to the + and - marks inside the battery case, then insert 2 AAA Alkaline batteries.
3. Press the battery cover back into place.

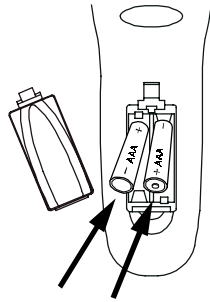

Battery Saver

 Your remote automatically times out if the buttons are depressed more than 30 seconds. This will save your batteries should your remote get stuck in a place where the buttons remain depressed (e.g., between the sofa cushions).

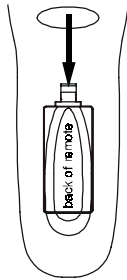

Code Saver

You will have up to 10 minutes to change the batteries in your remote without losing codes you have programmed. However, do not press any buttons until batteries are installed in the remote. If buttons are pressed without batteries in the remote, all codes will be lost.

Power-On Default

The remote powers on in TV mode.

TV Volume/Mute Punch-Through

The TV Volume/Mute punch-through feature lets you control the Volume and Mute function of your TV in any mode programmed to be a VCR, DVD, or SAT device, without needing to change to TV mode.

 
VCR Punch-Through

Punch-through to VCR mode is only allowed in TV, and VCR modes. SAT is dedicated for satellite mode.

Code Setup

The Code Search button is used to setup the remote. You can either setup the remote using the code for your brand of product, from the code tables, or you can search through the library of codes until you find a code that works for your product.

NOTE: You can store any kind of code under any mode (except TV). I.E. you can store a VCR code under the SAT key, or a DVD code under the VCR key, etc. However, you can only store TV codes under the TV key.

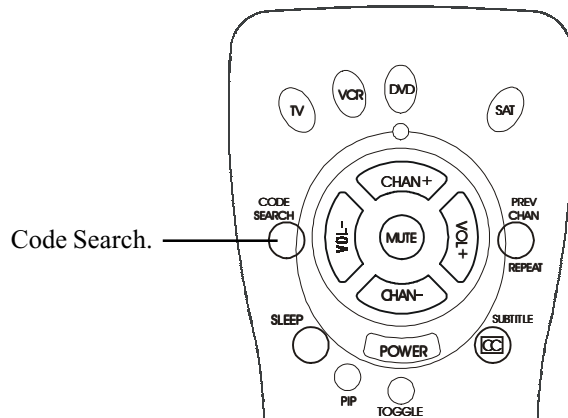

Button Functions

Some buttons on the remote might have functions that are referred to by different names on the device you are controlling. E.G. Prev. Ch. may be called RECALL, or ENTER may be called DISPLAY. These differences depend on the brand and model of your product. Also, this remote can only operate features that exist on your product. E.G., your product must be equipped with Prev. Ch. ability for the Prev. Ch. button to operate this feature.

MUTE Turns off the TV sound while the picture remains.
TV, VCR, DVD, SAT Selects product to be operated.
Indicator light Lights when any button is pressed.

Code Search
For setup.

POWER Turns product On or Off.

SLEEP Turns off the TV after a period of 1 to 99 minutes.

PIP TV Picture-in-Picture control.

NUMBERS
Enter numbers for direct channel selection. Some products require Enter to be pressed after channel selection.

ENTER
Used after direct channel number entry to immediately change to the selected channel.

INFO/Select
displays/selects on-screen channel information, etc.

MENU Access the Menu functions of the device you are controlling.

OK
Selects menu items for the device you are controlling.

Note: The REC button must be pressed TWICE to record from your VCR. For some brands of VCRs, you might need to press the REC button once, then press it again for three seconds.

6

Button Functions, cont.

CHANNEL Up/Down Changes the channels.

VOLUME Up/Down Changes the volume level of the product, normally the TV.

Prev. Ch.
Returns to the previously selected channel, or DVD repeat toggle.

CC (Subtitle)
TV Closed Caption (if your TV has this feature) or DVD Subtitle toggle.

TOGGLE Swaps TV PIP screens.

 
TV/VCR/input toggle
For some TVs, press repeatedly to select from available viewing sources (antenna, VCR, etc.).

GUIDE displays on-screen program guide.

QUIT Used to exit menu functions.

CHAPTER +/- controls DVD track selection i.e. DVD Track Skip Up/Down (in DVD and SAT modes). Note the VCR Transport keys also control DVD when in DVD Mode.

RECORD, PLAY, STOP, REW, FF, PAUSE VCR control buttons operate your VCR even when the remote is set to operate the TV. Also operates DVD Scan +/-.

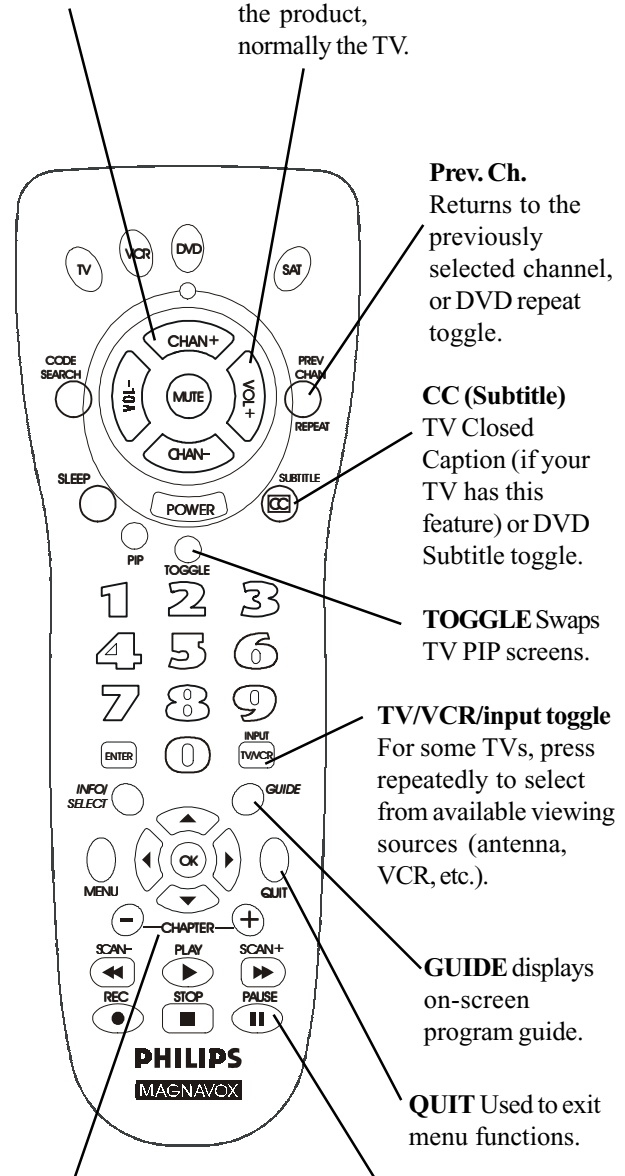

7

Advanced Button Functions

DVD

Scan+ and **Scan-** buttons control the speed of Fast Forward and Reverse Playback respectively.

Chapter+ and **Chapter-** buttons respectively locate the succeeding or preceding Chapters or Tracks on a disc.

Subtitle button brings up DVD Subtitle Menu for Subtitle selection and display.

Repeat button performs DVD players "A-B Repeat" (or RPT A.B) function for repeat play of current Chapter or Track.

Info/Select button brings up DVD Display or Control Menu for Chapter/Track/Title number, Time remaining/elapsed indication, system information, etc.

Menu brings up the DVD disc Menu screen - use with the Up, Down, Left & Right navigation buttons.

OK button is used for on-screen Menu selection. Note some DVD players require the Play button to be used.

Quit button is used to Exit or Clear on-screen Menu displays.

Play button is used to start Disc playback and for Menu selection on some DVD players.

Stop button stops Disc playback.

Pause button will pause Disc playback - press Play to resume.

Note - in DVD Mode the INPUT button activates the DVD Players SETUP Menu.

SAT

Guide button displays on-screen Satellite Channel Guide.

Chapter+ and **Chapter-** buttons perform the "Page+" and "Page-" function for on-screen Guide Menus used by some Satellite systems.

Info/Select button brings up Satellite Display screen for current Channel and system information.

Menu brings up the Satellite Menu screen - use with the Up, Down, Left & Right navigation buttons.

OK button is used for on-screen Menu selection.

Quit button is used to Exit or Clear on-screen Menu displays.

Input button performs the Satellite TV/SAT function.

TV/VCR Punch-Through

VCR Punch-through is only available in TV mode, i.e. the 6 VCR keys (Play, Pause, Stop, Record, FF and Rewind) will punch-through to the device programmed under VCR when in TV mode.

The TV/VCR/INPUT button performs the TV/VCR antenna switch function when in VCR Mode.

The TV/VCR/INPUT button performs the TV/SAT switch function when in SAT Mode.

The TV/VCR/INPUT button performs the INPUT source switch function when in TV Mode.

The TV/VCR/INPUT button performs the DVD Setup function when in DVD Mode.

Misc.

SELECT means same as OKAY - some manufacturers use OKAY label and others use SELECT label on their remotes.

CC will activate the Closed Caption feature if your device has that feature.

PIP (Picture-in-Picture) and **TOGGLE** buttons operate your television's Picture-in-Picture features. Use PIP to activate the feature and TOGGLE to swap between the displayed pictures on your TV.

 
TV/VCR and TV/DVD Combo units

Note that for some TV/VCR and TV/DVD combo units you might need to set up two different buttons to control both parts of the combo unit. E.G., (referring to the Direct Code Entry section on the following page) you might need to set up a code under the TV button to control the TV part of the combo unit AND a separate code for the VCR or DVD under any other button you choose.

Code Entry

Direct Code Entry

1. Press and hold the Code Search button until the red indicator stays on. Release the Code Search button.
2. Press and release the desired mode button (TV, VCR, etc.).
The red indicator blinks, then stays lit.
3. Enter the 3 digit code from the code tables. Note: after a valid code entry, the red indicator turns off. For an invalid code, the red indicator flashes.
4. With your device on, press CHANNEL Up. If the device responds, no further programming is required. Note: If some buttons do not operate your equipment, try one of the other codes for your brand.

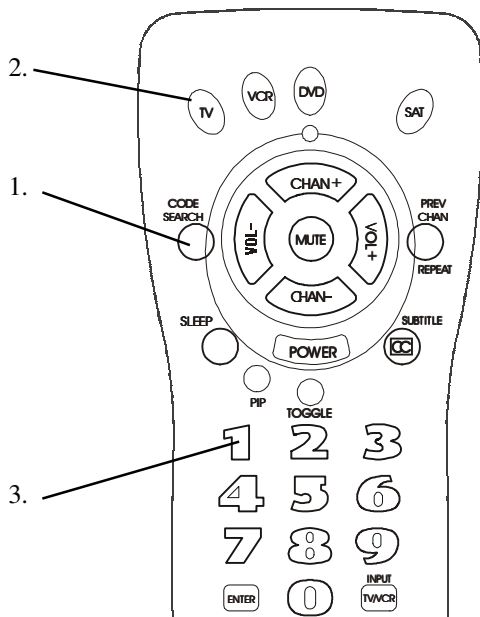

Write your codes down here for easy reference later.

Type	Type stored	Code
TV	TV	
VCR		
DVD		
SAT		

 
Programming with Code Search

If your device does not respond after you have tried all the codes for your brand, or if your brand is not listed, try searching for your code by following these steps.

1. Manually turn on the device (TV, VCR, etc.) to be controlled.
2. Press and hold Code Search button until the red indicator stays on. Release the Code Search button.
3. Press and release the desired mode button (TV, VCR, etc.). The red indicator blinks, then stays lit.
4. Press the Channel Up button repeatedly (up to 300 times) until the device to be controlled changes channel. The red indicator blinks, then stays lit. If you accidentally overshoot the code required, press the Channel Down button to backtrack through the library until the device changes channel. Pressing Channel Up changes direction to forward again. Press and release Mute to install the code.

The above assumes that you want to store VCR codes under the VCR button, DVD codes under DVD, etc. If you want to store a VCR code under DVD, etc., first follow the procedure on page 10 and try ANY DVD code from the code tables, e.g. press DVD in step 2, page 10, and then enter ANY VCR code. Then follow the steps above.


Note: If the device does not have a Channel Up button, use Play (VCR only) or Power instead. Code Search starts from the currently stored three digit number under that mode.

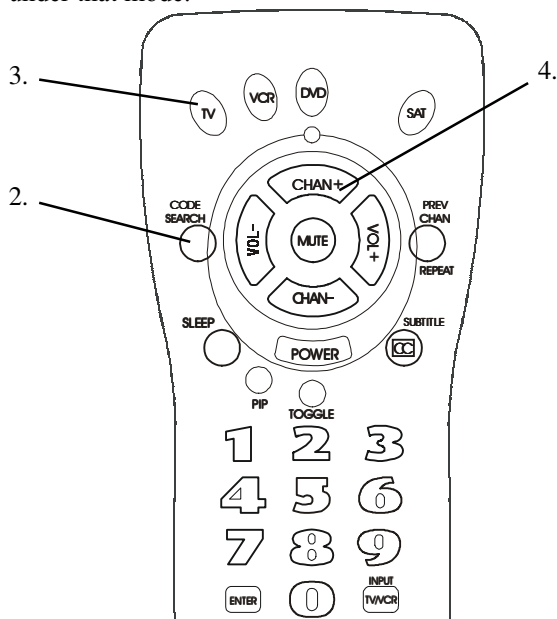

Code Identification

Code Identification

 1. Press and hold Code Search button until the red indicator stays on. Release the Code Search button.
2. Press and release the desired mode button (TV, VCR, etc.).
The red indicator blinks, then stays lit.
3. Press and release the Code Search button. The indicator light blinks off.
4. To find the first digit for the code stored under the mode key pressed in step 2, press each numeric key from 0-9 in turn. When the indicator light blinks off the number you pressed is the first digit for the code you are searching for.
5. To find the second digit, repeat step 4, this time when the indicator light blinks off this is the second digit.
6. Repeat step 4 again to find the third digit.

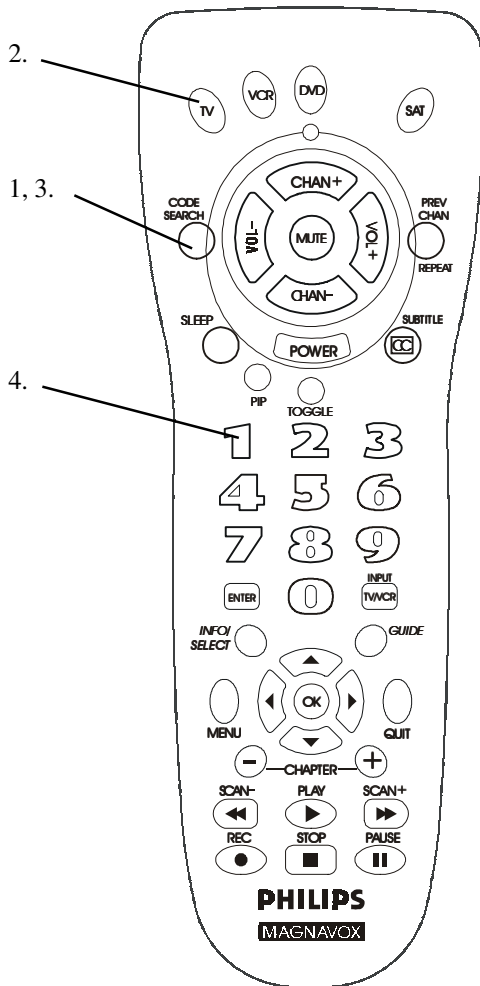

Sleep Timer

The Sleep feature enables the remote to turn off the TV after a period of 1 to 99 minutes. Remote is to be in TV mode to set a Sleep Timer. This feature works even if your TV does not have this feature.

1. Press and release the TV Mode key.
2. Press and hold the Sleep button until LED remains on (occurring after approx. 2-3 seconds).
3. Release Sleep button.
4. Press and release the numeric keys (01-99) for the time required. The LED will blink off to indicate keypress acceptance and remain off after second keypress.
5. TV Sleep Timer now set.
6. **Leave the Remote pointing towards the TV with an unobstructed path.**

To cancel the Sleep Timer, press and hold the Sleep key until the LED blinks or press and release the Power key in TV Mode.

Code List

TV

ABEX	120	CITIZEN	002 112 319 402
ADMIRAL	701 918	407 502 512 701 805 906
ADVENTURA	019	CLAIRTONE	003
AIKO	407	CLASSIC	805
AIWA	121 221	CLP	021
ALLERON	206	CLP CLASSIC ...	018 004 002
AMARK	603	COLORTYME ...	002 502 602
AMTRON	906	CONCERTO	002 502
AKAI	801	CONCIERGE	713
AMSTRAD	520	CONTEC/CONY	003 802
ANAM NATIONAL .	104 805	805 902 906
.....	901 906 920	CRAIG	805 906
AOC	002 003 102 119	CROWN	805 906
.....	217 302 502 814	CURTIS MATHES	002
ARCHER	603	103 112 502 506
AUDIOVOX	906	512 601 701 704
BANG & OLUFSEN	620	CXC	805 906
BELCOR	002	DAEWOO	002 102 110
BELL & HOWELL	506	214 303 311 314
.....	601 701	403 407 415 502 503
BRADFORD	906	611 614 805 809 909
BROKSONIC	215 316	DAYTRON	002 502
BROKWOOD	002	DIMENSIA	601 704
CANDLE	002 019 402 502	DUMONT	002 713
CAPEHART	119	DYNASTY	805
CELEBRITY	801	ELEKTRA	701
CENTURION	502	ELECTROBAND	003 801
CETRONIC	805	ELECTROHOME	002 502
		803 901 914

EMERSON002 003 004
 005 104 105 106 115 204
 205 206 213 304 305 316
 319 405 502 505 506 519
 604 605 705 804 805 903
 904 905 906
 ENVISION002 502
 FISHER 506 522 606 619 902
 FUJITSU206 321
 FUNAI206 805 906
 FUTURETEC805 906
 GE 002 006 007 018 107
 114 310 312 502 601 704
 719 803 806 810 901 911
 GIBRALTER002 713
 GOLDSTAR 002 102 117 207
 217 307 502 818 914
 GRUNDY206 906
 HALLMARK002 502
 HARVARD 906
 HITACHI... 002 016 116 216
 315 410 502 507 515
 519 607 615 622 701
 707 710 715 815 902 915
 IMA 906
 INFINITY 807
 INTEQ713
 JANEIL 019
 JBL 807
 JCB 801
 JC PENNY002 007 102
 107 112 310 312
 402 502 512 601 704
 719 803 806 818 907
 JENSEN002 502
 JVC007 107 108
 308 510 607 902
 KAWASHO002 502 801
 KAYPANI 119
 KEC 805
 KENWOOD002 502 914
 KLOSS NOVABEAM 019
408 508
 KONKA203 208
 219 306 317 417
 KTV003 213 319
 608 703 805 906
 LODGENET601 701
 LOEWE722 807
 LOGIK601 701
 LUXMAN002 502
 LXI 002 312 502 506
 512 601 704 719 807
 MAGNAVOX002 009 109
 118 209 309 402 408
 502 508 510 807 914 917
 MAJESTIC601 701
 MARANTZ002 502 807
 MEGATRON002 502 507
 MEI 003
 MEMOREX 002 115 206 502
 506 601 701 706
 MGA002 102 206
 502 619 803 914
 MIDLAND 007 107 312
 713 719 818

MINUTZ 806
 MITSUBISHI002 102
 206 502 510 619
 709 803 814 914
 MONTGOMERY WARD 601
 701
 MOTOROLA901 918
 MTC002 003 102
 112 502 512
 MULTITECH 906
 MULTIVISION 010
 NAD002 120 502 512
 NEC002 102 110 111
 502 510 602 901
 NIKEI 805
 NIKKO002 407 502
 NTC 407
 ONKING 805
 ONWA 805 906
 OPTIMUS 120 618
 OPTONICA 111 918
 ORION 105 115 713
 PANASONIC007 107 416
 516 608 618 718 807 901
 PHILCO002 009 102 109
 309 402 408 502
 508 807 901 914
 PHILIPS002 009 020 109
 122 202 209 210 222
 310 322 402 408 422
 508 510 807 822 901
 914 917 919 922
 PHILIPS/MAGNAVOX ... 020
 422 919 922
 PILOT 002
 PIONEER002 120
 502 519 610
 PORTLAND002 102
 407 502
 PRECISION 218
 PRICE CLUB 112
 PRISM 107
 PROSCAN ..312 601 704 719
 PROTON002 119 220
 502 820 910
 PULSAR 713
 PULSER 002
 QUASAR ... 007 107 416 516
 608 618 718 807 901
 RADIO SHACK/REALISTIC .
 002 021 111 117 406
 502 506 601 618 704
 705 805 818 906 914
 RCA 002 021 011 102 211
 302 312 318 320 406 409
 411 420 502 511 514 519
 601 702 711 719 809 811
 901 909 911 912 914
 RHAPSODY 003
 RUNCO 713
 SAMPO 002 119 502 818
 SAMSUNG ..002 012 102 103
 112 212 502 512 818 914
 SAMSUX 502
 SANSUI 115 215

SANYO002 412 506
 522 612 619 902
 SCOTCH002 502
 SCOTT002 004 105
 206 502 805 906
 SEARS .002 112 206 312 502
 506 512 520 601 612
 619 704 719 902 914
 SHARP 002 013 014 111 502
 509 712 812 813 913 918
 SHOGUN 002
 SIGNATURE601 701 903
 SIMPSON 402
 SONIC 003
 SONY 202 414 708 801
 SOUNDESIGN ..002 206 402
 502 805 906
 SPECTRAVISION 921
 SQUAREVIEW 520
 SSS002 805 906
 STARLITE 906
 SUPREMACY 019
 SUPREME 801
 SYLVANIA002 009 109
 209 309 402 408 502
 508 717 807 914 917
 SYMPHONIC520 904 906
 TANDY 918
 TATUNG 901
 TECHNICS007 107
 TECHWOOD002 007
 107 502
 TEKNIKA .. 002 019 102 112
 206 209 402 407 502 512
 601 618 701 805 902 906
 TELECAPTION 313
 TELERENT601 701
 TERA002 220
 TMK002 502
 TOSHIBA ... 112 313 413 419
 506 510 512 517 613 902
 UNIVERSAL310 806
 VICTOR 607
 VIDTECH002 102 502
 VIKING 019
 WARDS002 004 009 102
 109 111 206 209 310
 408 502 508 513 601
 701 704 806 807 914
 WHITE WESTINGHOUSE ...
 311 611
 YAMAHA ... 002 102 502 914
 ZENITH002 008 115
 215 405 407 507
 601 701 713 903 916

AMERICAN HIGH... 130 226
 ASHA 425
 AUDIO DYNAMICS .025 436
 AUDIOVOX 525
 DAEWOO 529
 BELL & HOWELL 428
 BEAUMARK 425
 BROKSONIC227 325
 530 626 632
 CALIX 525
 CANDLE025 026 425
 525 625 725 825
 CANNON .. 130 226 535 635
 CAPEHART135 534
 CARVER 330
 CCE230 826
 CITIZEN ... 025 026 425 525
 625 725 825 826
 COLORTYME 025
 COLT 230
 CRAIG 230 425 426 525
 CURTIS MATHES025
 124 130 226 324
 425 526 635 725
 CYBERNEX 425
 DAEWOO ..026 135 625 626
 726 825 826 926
 DAYTRON 135
 DBX025 436
 DIMENSIA 124
 DYNATECH324 726
 ELECTROHOME027 525
 ELECTROPHONIC 525
 EMERSON027 028 127
 128 130 226 227 228
 324 325 327 427 428
 525 526 527 528 625
 626 627 628 630 634 724
 726 727 735 827 828 927
 FISHER 025 029 129 328
 330 426 428 928
 FUJI 130 226 524
 FUNAI 324 726 924
 GARRARD 726
 GE 124 130 136 226
 425 429 635 835
 GOLDSTAR 025 236 525
 GRADIENTE 726
 GO-VIDEO 139 438 537
 HARLEY DAVIDSON 726
 HARMAN KARDON 025 930
 HARWOOD 230
 HEADQUARTER 428
 HITACHI ... 136 235 324 336
 538 629 638 829 834
 HI-Q 426
 INSTANT REPLAY 130
 226 924
 INTEQ 525
 JCL 130 226
 JC PENNEY 025 130 235
 425 428 436 525
 629 635 834 935
 JENSEN 235 629
 JVC 025 235 239
 326 339 428 436

VCR

ADMIRAL 224
 ADVENTURA 726
 AIKO 826
 AIWA 126 324 528 726
 AKAI 027 235 335 424
 524 624 724 924
 ALLEGRO 326 534 925

KENWOOD025 235
 428 436 725
 KLH230 237
 KODAK130 226 525
 LLOYD324 726
 LOGIK230
 LXI525
 MAGNAVOX130 226 330
 534 536 635 734
 MAGNIN425
 MARANTZ025 130 226
 330 428 436 530 535 725
 MARTA525
 MATSUSHITA130 226
 MEI130 226
 MEMOREX130 224 226
 324 335 425 426
 428 525 534 726
 MGA027 630
 MGN TECHNOLOGY425
 MIDLAND429
 MINOLTA629 834
 MITSUBISHI027 031 131
 229 231 329 431 436
 531 629 630 730 930
 MONTGOMERY WARD 224
 631
 MOTOROLA130 224 226
 MTC324 425 726
 MULTITECH324 425
 726 429 230
 NEC025 235 428 526 530
 725 731 831 931 436
 NIKKO525
 NOBLEX425
 OLYMPUS130 226
 OPTIMUS035 224 525
 537 737 837 937
 OPTONICA537 631
 ORION227
 PANASONIC035 039 130
 226 635 636 937 938
 PENTAX136 629 725 834
 PENTEX RESEARCH025
 PHILCO130 226 330 635
 PHILIPS130 226 330
 430 434 439 536
 631 734 738 934 937
 PHILIPS/MAGNAVOX ... 434
 934
 PILOT525
 PIONEER ... 132 232 436 629
 PORTLAND026 135
 725 825
 PROSCAN124
 PROTEC230
 PULSAR534
 QUARTER428
 QUARTZ428
 QUASAR039 130
 635 636 937
 RCA033 124 130 133 136
 226 233 332 424 425
 432 532 629 636 732
 832 834 835 837 932

RADIOSHACK ..027 029 035
 124 129 130 224 226 324
 335 425 426 428 525 631
 635 726 737 835 837 937
 RADIX525
 RANDEX525
 REALISTIC027 029 035
 124 129 130 224 226
 324 335 425 426 428 525
 631 635 726 737 837 937
 REPLAY938
 RICOH936
 RUNCO534
 SAMSUNG ..037 335 425 427
 429 537 624 625 629
 SANKY224 534
 SANSUI235 333 436
 SANYO328 425 426 428
 SCOTT325 327 433 625
 626 630 735 927
 SEARS029 129 130 226
 330 426 428 525
 629 834 928 935
 SHARP027 224 324 338
 631 637 737 825
 SHINTOM230 337
 524 629 936
 SHOGUN425
 SIGNATURE324
 SINGER130 226 230
 SONY034 038 138
 238 524 838 936
 STS130 226 629 834
 SYLVANIA130 324 330
 536 630 635 726
 SYMPHONIC225 324 726
 TANDY324 428
 TASHIKO525
 TATUNG235
 TEAC235 324 726
 TECHNICS035 130 226
 TEKNIKA130 134 226
 324 525 726
 TiVo738 838
 TOSHIBA029 330 433
 625 629 630 735
 TOTEVISION425 525
 TMK425 526 828
 UNITECH425
 VECTOR RESEARCH025
 436 625 725
 VICTOR436
 VIDEO CONCEPTS ..025 027
 436 625 725
 VIDEOSONIC425
 WARDS027 130 224 226
 230 234 324 425 426 525
 625 629 631 726 735 834
 WHITE WESTINGHOUSE ...
 324 924
 XR-1000130 226 230 726
 YAMAHA ...025 235 428 436
 ZENITH030 036 125 326
 436 437 524 525 534 632
 638 729 824 925 929 936

DVD

AIWA043
 AKAI141
 APEX044
 DAEWOO046 645 745
 DENON641 743
 ELTA045 145
 EMERSON241
 FISHER243
 GE644
 GO-VIDEO244 342
 HITACHI042 543 545
 HARMAN/KARDON344
 JVC242 443
 INTEGRA843
 KENWOOD544 641
 KONKA642 742 842 942
 MAGNAVOX441 442
 MARANTZ441 442
 MITSUBISHI841
 MUSTEK744
 NAD944
 NAKAMICHI844
 ONKYO843
 OPTIMUS042 545
 ORITRON143
 PANASONIC641 741
 PHILIPS441 442 943
 PIONEER042 545
 PROSCAN941
 RADIOSHACK835 945
 RCA644 835 941 945
 SAMSUNG342
 SAMPO343
 SEG444
 SHARP341
 SHERWOOD144
 SHINCO644
 SONY541
 TEAC042 545
 THETA DIGITAL042 545
 TOSHIBA245 411
 WHARFEDALE845
 ZENITH142 241 345
 YAMAHA641 643
 YAMAKAWA445

Laser Disc


DENON132
 PIONEER132
 PROSCAN432
 RCA432
 SANYO824
 SONY933
 ZENITH824

SAT

AMPLICA159
 CHANNEL MASTER359
459 559
 CHAPPARAL657 659 757
 CHEYENNE757
 DRAKE059 360 857
 DISH NETWORK067 366
 460 464 466 560 660 962
 DX ANTENNA458 859
 ECHOSPHERE464
 ECHOSTAR067 366 460
 464 560 660 962
 EXPRESSVU067 366
464 962
 FUJITSU760 860
 GE265 863
 GENERAL INSTRUMENTS .
058 066 158 166
 258 665 865 960 965
 HITACHI DSS765 864
 HUGHES SATELLITE DSS ...
 465 564 664 864 964
 JANEIL261
 JERROLD361
 JVC466
 KENWOOD461
 LUXOR561
 MAGNAVOX DSS259
565 862
 MACOM STATE661
 NORSTAT761 861
 PACE063 163 266
 PANASONIC DSS260 264
 PRIMESTAR364 665
 PHILIPS259 565 862
 PHILIPS/MAGNAVOX ... 259
565 862
 PIONEER060
 PROSCAN265 863
 RCA DSS265 566 866 966
 REALISTIC358 961
 SAMSUNG061
 SCIENTIFIC ATLANTA 362
 SHARP062
 "SIERRA I II III"757
 SONY DSS160 963
 STARCHOICE364 665
 STAR SIGHT964
 STAR TRAK462
 STS458 558 658 758
 SUPER GUIDE562
 THOMSON063
 TOSHIBA858
 TOSHIBA DSS ...064 164 764
 UNIDEN762 958
 UNIDEN DSS964
 VIDEO CIPHER II059
 ZENITH059 065 163 165
266 360 857 957

Product Operation

 After the batteries are installed and you have programmed the remote for the codes that operate your products, you can use your remote to operate a TV, VCR, DVD, Satellite System, etc.

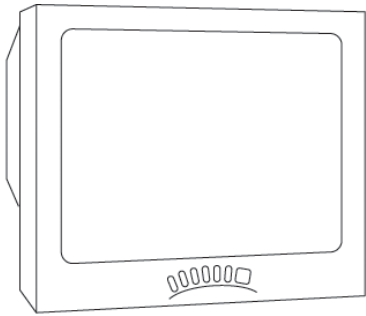

TV (Press **TV** First)



 
VCR
(Press **VCR** First)



DVD Player
(Press **DVD** first)



Satellite System
(Press **SAT** first)

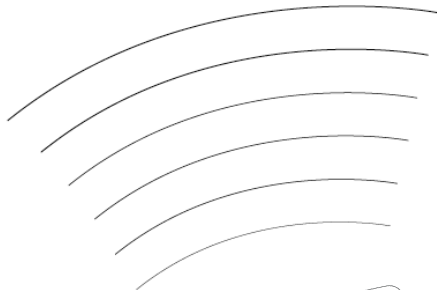

To Operate:

1. Press the TV, VCR, DVD, SAT, etc. button (depending on which product you want to operate).
2. Aim the remote at the product.
3. Press POWER to turn on the product.
4. Press other buttons to operate the features of your product.

Troubleshooting

Remote does not operate your product.

 
- Press the mode button of the product you want to control.
- Program the remote with a new code.
- Install new batteries. (You might have to reprogram your remote after installing new batteries.)
- Remote may not be compatible with your product.

Remote does not operate some features of your product.

- Program remote with a new code.
- Remote may not be able to operate all features of your product or button names might be different than your product.

Indicator light blinks after you program a product code.

- Remote did not accept the code.
- Try to program the code again or try a different code.

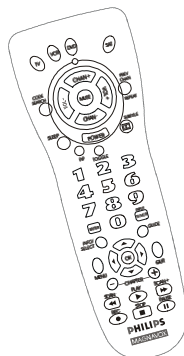

90 Day Warranty

This product is manufactured to PHILIPS MAGNAVOX specifications and is free from defects in material, workmanship and assembly. This warranty extends only to the original purchaser and is nontransferable. Should a defect occur under normal operating conditions within 90 days from the date of purchase, PHILIPS MAGNAVOX will provide a comparable replacement free of charge within the warranty period, to the original purchaser. Defective product must be returned, with the dated proof of purchase, to the place of purchase for replacement. This warranty does not extend to the product if it has been damaged or rendered defective as a result of accident, misuse, abuse, tampering with or modification. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. IN NO EVENT SHALL PHILIPS MAGNAVOX BE LIABLE FOR SPECIAL, INDIRECT, INCIDENTAL OR CONSEQUENTIAL DAMAGES, WHETHER IN CONTRACT, TORT OR NEGLIGENCE. Some States do not allow limitations on how long an implied warranty lasts, so the above limitation may not apply to you. Some States do not allow exclusion or limitation of incidental or consequential damages, so the above limitation or exclusion may not apply to you. This warranty gives you specific rights and you may also have other rights, which vary from State to State.

Made in China-TC, Quality Assured in USA
Clifton, NJ 07014-1115

PM435

PM435S

PM435P

PM430G

Back

Cover Art

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>