

PHILIPS MAGNAVOX

REM380 I-TV Universal Remote Control



User's Guide

TABLE OF CONTENTS

Introduction	2	Operating Your Remote Control.	8
Keys And Functions	2	About Other Features	10
Setting Up Your Remote Control	3	Quick Features Setup Guide	11
About Batteries	4	Troubleshooting	13
Using The Lighted Keypad	4	Manufacturer's Codes.	14
Programming Your Remote Control.	5		

INTRODUCTION

The I-TV Universal Remote Control is the complete solution for all of your interactive-television remote control needs. It can be programmed to operate a variety of components, up to six at a time, and is packed with easy-to-use features such as:


- Easy access to On-Screen menus of the TV, VCR, DSS, and Cable Box (see page 8 for details).
- Channel Scan, a convenient way to “channel surf” by scanning channels.

- Auto Scan code search to help program remote control for a variety of components, including older/discontinued models.
- Multi-component Power Key for master on/off control of home entertainment components with a single key press.
- Favorite Command Keys that allow you to define and program a number of key presses into a sequence that can be accessed by a single key press.

KEYS AND FUNCTIONS

Use the illustration below to locate I-TV keys and then study the numbered Key

Charts (on the next page) to learn how each one functions.

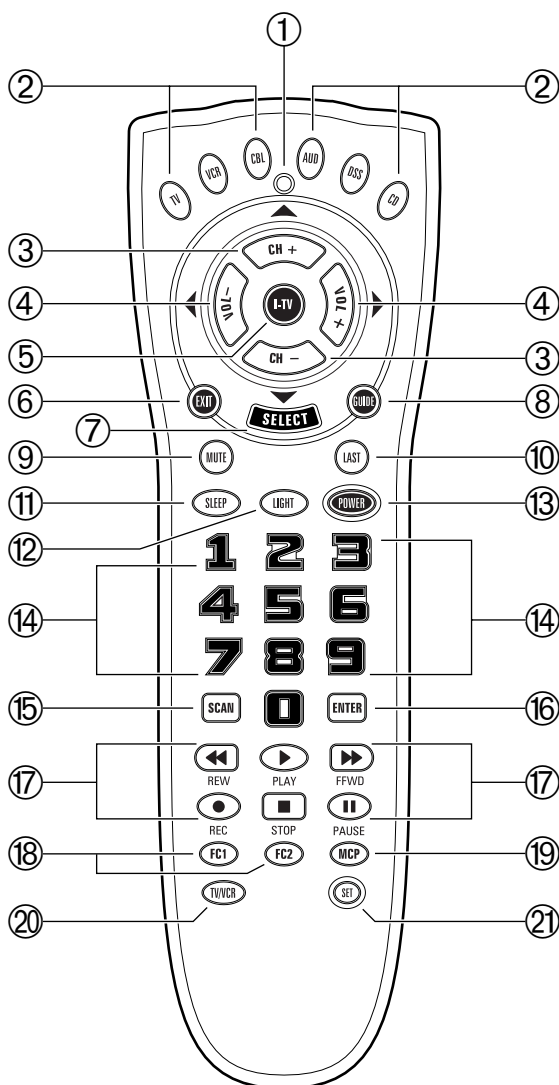

KEYS AND FUNCTIONS (continued)

Key Charts

- ① **Red Indicator Light**
The Red Indicator Light blinks to show that the remote control is working and also provides feedback during programming sequences.
- ② **Component Keys**
Press **TV**, **VCR**, **CBL**, **AUD**, **DSS**, or **CD** once to select a home entertainment component to control.
- ③ **CH Keys**
Use **CH +** (or **CH -**) to select the next higher (or lower) channel for the selected home entertainment component.
- ④ **VOL Keys**
Use **VOL +** (or **VOL -**) to raise (or lower) the sound volume.
- ⑤ **I-TV Key**
Press **I-TV** to access the On-Screen Menu for your home entertainment components (see page 8).
- ⑥ **EXIT Key**
Use **EXIT** to exit out of the selected component's menu or guide.
- ⑦ **SELECT Key**
Use **SELECT** to choose options from your selected component's menu or guide.
- ⑧ **GUIDE Key**
Use **GUIDE** to display the programming guide for your components (if applicable).
- ⑨ **MUTE Key**
Press **MUTE** once to turn sound off or on.
- ⑩ **LAST Key**
Press **LAST** once to recall the last channel and to page back one screen in the main menu.
- ⑪ **SLEEP Key**
Press **SLEEP** to activate your TV's internal sleep timer. (Not available for all TVs.)
- ⑫ **LIGHT Key**
Press **LIGHT** once to turn on or off the keypad back light.
- ⑬ **POWER Key**
Press **POWER** once to turn on or off the selected home entertainment component.
- ⑭ **Keypad**
Use the keypad (**0 ~ 9**) to directly enter in channels (for example, 09 or 31). The keypad is also used for all programming sequences, such as entering in your programming codes.
- ⑮ **SCAN Key**
Press **SCAN** once to change channels every 3 seconds. Press it again to stop the scan.
- ⑯ **ENTER Key**
Press **ENTER** once after entering channel numbers on some TV models.
- ⑰ **VCR Transport Keys**
Use the VCR Transport Keys to control your VCR, as well as CD or DVD player. Press **REC** twice to record a tape.
- ⑱ **FC1 and FC2 Keys**
User-programmable Favorite Command Keys (see page 9 for details).
- ⑲ **MCP Key**
Multiple-component On/Off Key (see page 8 for details).
- ⑳ **TV/VCR Key**
Press **TV/VCR** once to view VCR playback or TV through the VCR.
- ㉑ **SET Key**
Use **SET** for all programming sequences.

SETTING UP YOUR REMOTE CONTROL




Before using your new I-TV remote control, you will need to obtain and install new batteries, as described on the next page.

Then you'll also need to program the I-TV remote control with the correct code numbers for your specific components. See instructions starting on page 5.

ABOUT BATTERIES

NOTE: The I-TV requires four (4) new "AAA" alkaline batteries (not supplied). Do not mix old and new batteries or mix alkaline with manganese-type batteries.


Installing Batteries

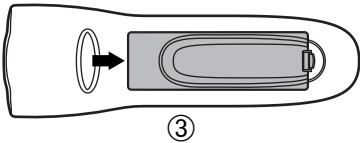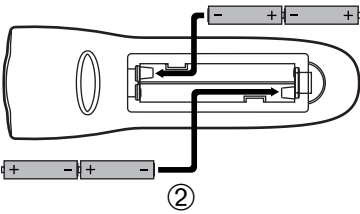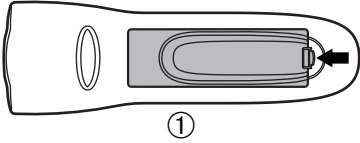

1. On the back of the remote control, push the tab and lift the battery compartment cover off.
2. Match the + and - marks on the batteries to the + and - marks in the battery case and insert four (4) "AAA" alkaline batteries.
3. Press the battery cover back into place. The tab should click when the cover is locked.

USING THE LIGHTED KEYPAD

When activated, the I-TV remote control features a lighted keypad that illuminates all of the remote control keys whenever you press any key.

1.  To turn on the keypad back light, press **LIGHT** once. The keypad will remain lit for 5 seconds after you release any key.

4. Test the unit by pressing **POWER** and any Component key (e.g., **TV**, **VCR**, **CBL**, etc.). If the batteries are inserted correctly, the red indicator light will blink once.


Battery Saver

The I-TV has a *Time-Out* feature that will automatically deactivate the remote control if a key is depressed for more than 30 seconds. This feature will help conserve the battery life should your remote control get stuck in a place where keys remain depressed (e.g., between the sofa cushions).

Replacement And Code Saver

When the batteries need replacing, the I-TV remote control will stop working and will require four (4) new "AAA" alkaline batteries for continued operation. Once you remove the old batteries, program settings and codes will be saved for 10 minutes, allowing adequate time to insert new ones.

However, if you do not replace the batteries within the allotted time (i.e., 10 minutes), you will have to reprogram the I-TV remote control (see next page).

2.  To turn off the keypad back light, press **LIGHT** once again. (The keypad will not light whenever you press any key.)

PROGRAMMING YOUR REMOTE CONTROL

Philips/Magnavox Components

The I-TV remote control can control up to six different components and is already *pre-programmed* for use with newer Philips/Magnavox audio/video equipment. Unless you want to change a factory setting, skip the programming instructions and simply start using your new remote control.

Programming Other Components

To control component brands other than Philips/Magnavox, you'll need to perform the following steps to manually program the I-TV with codes listed under *Manufacturer's Codes* on pages 14 through 19. Or as alternative, you can use the *Auto Scan* feature, on page 6, to program your component codes.

The following chart lists the I-TV's component keys and what type of device each key will control:

Key	Programmed To Control
TV	TV
VCR	VCR, DVD or LD Player
CBL	Cable Box
AUD	Amplifier, Tuner, Misc. Audio, or CD Player
DSS	Digital Satellite System
CD	CD Player, Amplifier, Tuner, or Misc. Audio

NOTE: If you want the component keys to control other types of devices, you'll need to reassign the component keys. See page 7.




IMPORTANT: Please completely read and review the following steps before proceeding. We recommend highlighting the codes (starting on page 14) for the brands you wish to program or writing them down in the supplied chart.

Setup Codes For My Components

TV	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
VCR	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
CBL	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
DSS	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
CD	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
DVD	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
AUDIO	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
LD	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>
OTHER	<input type="text"/> <input type="text"/> <input type="text"/> <input type="text"/>

To Manually Program The Remote Control:

NOTE: To program a TV/VCR Combo, skip these instructions and follow the steps on the next page.

1. Manually turn on a component (e.g., TV, VCR, etc.) and, if applicable, insert media (e.g., cassette).
2.  On the remote control, press a component key once (e.g., **TV, VCR, CBL, AUD, DSS, or CD**).
3.  Press and hold **SET** (approx. 5 seconds) until the red light blinks twice, then release **SET**.
4. Enter the first four-digit code for your brand of component. If performed correctly, the red light will blink twice.
5.  Aim the remote control at the component and press **POWER** once. It should turn off. If it does not respond, repeat steps 2 and 3, trying each code for your brand until you find one that works. If it still does not work, try using *Auto Scan* (on page 6) to program your component.
6. Repeat steps 1 through 5 for each component you want to program into the I-TV remote control.

NOTES: Press each key within 10 seconds of the previous entry. Otherwise, the remote control will exit the programming mode.

*If you press **SET** at any time (except during step 3), the remote control will exit the programming mode without saving your entries. You will have to start with step 1 to begin programming again.*

PROGRAMMING YOUR REMOTE CONTROL (continued)




Programming A TV/VCR Combo

Perform the following instructions to have the I-TV control a TV/VCR Combo. For Sharp and Sony models, also see page 13.



IMPORTANT: Please completely read and review these steps before proceeding. Highlight the code (on page 16) for the brand you wish to program or write it down in the supplied chart.

Setup Code For My Component

TV/VCR




1. Manually turn on the TV/VCR Combo; insert a video cassette.
2.  On the remote control, press **VCR** once.
3.  Press and hold **SET** until the red light blinks twice, then release **SET**.
4. Use the *Setup Codes For TV/VCR Combos* (on page 16) to find the brand name. Enter the first four-digit code for your component. If performed correctly, the red light will blink twice.
5.  Aim the remote control at the TV/VCR Combo. Press **POWER** once. It should turn off. If it does not respond, repeat steps 2-3, trying each code for your brand until you find one that works. If it still doesn't work, use *Auto Scan* (later on this page) to program your TV/VCR combo.

*NOTE: If the TV/VCR Combo does not have a Power key, press **PLAY** on the I-TV.*

6. If you've located a TV/VCR code that works, but it has a separate TV code, you'll also need to program it into the remote control to access volume control as follows:
 - a.  Press **TV** once. The red light will blink twice.
 - b.  Press and hold **SET** until the red light blinks twice, then release **SET**.
 - c. Enter the TV code for the TV/VCR Combo. If performed correctly, the red light will blink twice.




6. (continued)

If there is no separate TV code listed, you will need to perform the following steps to access volume control:

- a.  Press **VCR** once.
- b.  Press and hold **SET** until the red light blinks twice, then release **SET**.
- c.  Press **VOL +**.


Programming With Auto Scan

If your component does not respond to the remote control after trying all codes listed for your brand, or if your brand is not listed at all, try searching for your code using *Auto Scan*. For example, to search for a code for a TV:

1.  On the remote control, press **TV** once.
2.  Press and hold **SET** until the red light blinks twice, then release **SET**.
3.  Aim the remote control at the TV and press **SCAN**. The red light will blink twice.
4. Continue aiming the remote control at the TV (which may take up to 5 minutes) until it turns off. Immediately press any key except **VOL+**, **VOL-**, **EXIT**, **SCAN**, or **SET**.

NOTES: In the search mode, the remote will send IR (infrared) codes from its library to the selected device, starting with the most popular code first.


*If you have passed by the code that turns off the TV, press **VOL-** one or more times until the TV turns on again.*


5.  To lock in the code and exit *Auto Scan*, press and release **SET** the red light will blink twice.
6. To search for codes of other components, repeat steps 1 through 5, but substitute the appropriate key (e.g., **VCR**, **CBL**, **AUD**, **DSS**, or **CD**) for the (VCR, Cable, Audio, Satellite, or CD) component you are searching for.


PROGRAMMING YOUR REMOTE CONTROL (continued)


Checking The Auto Scan Codes

If you have set up the remote control using *Auto Scan*, you can now find out which four-digit code is operating your component:


1.  On the remote control, press a component key once (e.g., **TV**, **VCR**, **CBL**, **AUD**, **DSS**, or **CD**).

2.  Press and hold **SET** until the red light blinks twice, then release **SET**.

3.  Enter **9-9-0**. The red light will blink twice.

4.  To view the code for the first digit, press **1** once. Wait 3 seconds, count the red light blinks (e.g., 3 blinks = 3) and write down the number.


NOTE: If a code digit is "0", the red light will not blink.


5.  Repeat step 4 three more times for remaining digits. Use **2** for the second digit, **3** for the third digit, and **4** for the fourth digit.

6. To find codes of other components, repeat steps 1 through 5, but substitute the appropriate key (e.g., **VCR**, **CBL**, **AUD**, **DSS**, or **CD**) for the component you are checking. As before, write down each four-digit code.

Re-Assigning Component Keys

The I-TV remote can be set up to control any combination of six home entertainment components. By following these instructions, you can re-assign or duplicate a component key onto an unused component key.

1.  Press and hold **SET** until the red light blinks twice, then release **SET**.


2.  Enter **9-9-2**. The red light will blink twice.


3. Press the Component key (e.g., **TV**, **VCR**, etc.) to be moved once, then press the Component key (e.g., **AUD**, etc.) to be re-assigned once. When re-assignment is done, the red light will blink twice to confirm your choice.


4. The re-assigned key is now ready to be programmed for the new component. See *Programming Other Components* on page 5.


Example – Re-assigning The AUD Key To Be A DVD (Or VCR) Key:

For example, to have the I-TV control a TV, a Cable Converter, and two VCRs, you will need to re-assign the unused **AUD** key to operate the second VCR as follows:

1.  Press and hold **SET** until the red light blinks twice, then release **SET**.

2.  Enter **9-9-2**. The red light will blink twice.

3.  Press **VCR** once.

4.  Then press **AUD** once. When re-assignment is done, the red light will blink twice to confirm your choice.

5. The **AUD** key is now ready to be programmed for your DVD (or VCR) player. See *Programming Other Components* on page 5.

OPERATING YOUR REMOTE CONTROL

The I-TV Universal Remote Control is designed to be an enhanced replacement for your original remote control. Although most keys operate the same (see *Key Charts* on page 3), some do differ or provide unique features as described below.

I-TV Key

The **I-TV** key works just like the **MENU** key of your original remote control and allows you to access the on-screen menu of the component you have selected (e.g., TV, VCR, DVD, LD, CBL, or DSS).

Moreover, while in the I-TV mode, the **VOL+**, **VOL-**, **CH+**, and **CH-** keys* will allow you to navigate and adjust the on screen menu settings just like you would with your original remote control.

To exit out of I-TV mode, either press **I-TV** again or **EXIT** (depending on how the original remote control functioned) to return to normal operation.

NOTE: If your component's On-Screen menu requires the use of the Volume and Channel keys to navigate and change the On-Screen menu settings, press **I-TV again while the On-Screen menu is displayed.*

GUIDE Key

The **GUIDE** key works just like the **GUIDE** key of your original remote control and allows you to access the On-Screen guide* of the component you have selected (e.g. CBL, DSS, and some newer TVs).

While in the Guide mode, the **VOL+**, **VOL-**, **CH+**, and **CH-** keys* will allow you to navigate Up, Down, Left and Right just like you would with your original remote control.

To exit out of the Guide mode, either press **GUIDE** key again or **EXIT** (depending on how the original remote control functioned) to return to normal operation.

*NOTE: *On-Screen guide is an interactive channel listings menu that is available on most DSS Satellite systems and is also used with advanced converters being offered by some cable systems. This feature is not applicable for all DSS or cable boxes.*




SELECT Key

The **SELECT** key allows you to choose features displayed on your On-Screen menu while in the I-TV mode, and programs while in the **GUIDE** mode.

If your original remote control includes a **SELECT** key, then the I-TV's **SELECT** key will operate in the same manner for the selected component.

SCAN Key







The **SCAN** key allows the remote control to scan the TV, VCR, CBL and DSS channels. When activated, the remote control will change channels every 3 seconds.

-  On the remote control, press **TV**, **VCR**, **CBL**, or **DSS** once.
-  Press **SCAN** once. Scanning will start with the current channel, then proceed to the next channel up, and continue until all channels of your TV, VCR, CBL or DSS component are scanned.
-  To stop scanning channels, press **SCAN** (or any key).

MCP Key

The I-TV remote control includes a multi-component power (**MCP**) key that can be programmed for master power on/off control of components using a single key.





To Program The MCP Key:

-  On the remote control, press and hold **SET** until the red light blinks twice, then release **SET**.
-  Enter **9-9-5**. The red light will blink twice.
-  Press **MCP** once.
-  Press a Component key once (e.g., **TV**, **VCR**, **CBL**, **AUD**, **DSS**, or **CD**).
-  Press **POWER**.
- Repeat steps 4 and 5 one or more times for each component you want under master power on/off control.
-  Press and hold **SET** until the red light blinks twice, then release **SET**.

OPERATING YOUR REMOTE CONTROL

MCP Key (continued)

To Clear The MCP Key:

1.  On the remote control, press and hold **SET** until the red light blinks twice, then release **SET**.
2.  Enter **9-9-5**. The red light will blink twice.
3.  Press **MCP** once.
4.  Press and hold **SET** until the red light blinks twice, then release **SET**.

FC1 And FC2 Keys

The **FC1** and **FC2** keys can be setup to perform a number of functions with a single key press once the selection is programmed. Repetitive, time-consuming operations can be grouped for easy, convenient access through the press of one key.




The **FC** keys are ideal for home theater operations, setting a favorite channel, adding to multiple component uses, guide steps or other multiple functions you would like to control with one key press. On one key, you can define and program a sequence of events.




Moreover, each **FC** key can hold up to 15 key presses, allowing optimal individual customization. Below are a few examples to get you started.

Programming A Favorite Channel

With so many channels available through your cable system or satellite provider, a favorite channel can be programmed for easy, direct channel selection with one key press.

For example, let's assume your favorite programs are on channel 71. Use the following instructions to program the **FC1** or **FC2** key for this channel:






1.  On the remote control, press and hold **SET** until the red light blinks twice, then release **SET**.
2.  Enter **9-9-5**. The red light will blink twice.
3.  Press and release either **FC1** or **FC2**.

4.  On the remote control, press **TV**, **VCR**, **CBL**, or **DSS** once.
5.  Enter **7-1**.
NOTE: If you have access to over 100 channels, enter in 071.
6.  Press and hold **SET** until the red light blinks twice, then release **SET**.

Programming A Secondary MCP Key With Instant Channel Selection

Just like the **MCP** key, the **FC1** and **FC2** keys can be programmed to turn on and off your equipment. For instance, let's say you want your child to be able to easily turn on the equipment and select their favorite channel.

You can setup a sequence on the **FC1** or **FC2** key to turn on the TV and cable box, and then tune the cable box to a specific channel (e.g., 11) with the push of one key.

1.  On the remote control, press and hold **SET** until the red light blinks twice, then release **SET**.
2.  Enter **9-9-5**. The red light will blink twice.
3.  Press and release either **FC1** or **FC2**.
4.  Enter the following sequence:
CBL,
POWER,
TV,
POWER,
CBL, and
1-1 (or **0-1-1** if you have access to over 100 channels)
5.  Press and hold **SET** until the red light blinks twice, then release **SET**.

Now when you press the programmed **FC** key, the Cable box and TV will turn on and the Cable box will tune to channel 11.

ABOUT OTHER FEATURES




Volume Lock

The I-TV remote control is set at the factory to control the volume independently while in the TV, VCR, DSS, CBL, AUD, and CD modes.

To control the volume from one mode (e.g., TV) while in another mode (e.g., CBL, DSS, or VCR*), perform the instructions below to lock the volume setting. This procedure will not affect separate control of your audio component's volume in the AUD and CD modes*.

NOTE: By pressing **AUD or **CD** before entering the sequence below, the I-TV remote control will operate your stereo and home theater volume controls in all modes.*

Example – To Set Volume Lock To TV Mode:

1.  On the remote control, press **TV** once.
2.  Press and hold **SET** until the red light blinks twice, then release **SET**.
3.  Press **VOL+**. The red light will blink twice.

Punch Through

The VCR Transport Keys (i.e., **REW**, **PLAY**, **FFWD**, **REC**, **STOP**, and **PAUSE**) are set at the factory to control the VCR, even if **TV**, **CBL**, or **DSS** is the selected mode. In other words, VCR control “punches through” regardless of what mode is on. Moreover, you do not have to press VCR before pressing the mode key.

 
 
However, if **AUD** or **CD** is the selected mode, the VCR Transport Keys will not control the VCR unless you press **VCR** first. In these two modes, the VCR Transport Keys will operate the functions for the selected component.

QUICK FEATURES SETUP GUIDE

This guide is provided here for your convenience as a quick reference for performing remote control sequences.

If you need more details, reread the full instructions presented in earlier pages.

Component Setup



Turn on component (e.g., TV).

Press component key once (e.g., TV).

Press SET until Red Light blinks twice; release SET.

Enter 4-digit code for your brand; Red Light blinks twice after last #.

Press POWER once; if no response, repeat steps with next code.

①

 
 
 
②

③

④

⑤

Auto Scan



Turn on component (e.g., TV).

Press component key once (e.g., TV).

Press SET until Red Light blinks twice; release SET.

Aim I-TV at component; press SCAN once. When off, press any key* to stop.

Press SET until Red Light blinks twice; release SET to lock code.

* NOTE: Not VOL+, VOL-, EXIT, SCAN, or SET.

①

 
 
②

③

④

⑤

Code Verification



Press component key once (e.g., TV).

Press SET until Red Light blinks twice; release SET.

Enter 9-9-0; the Red Light will blink twice.

Press 1 once for 1st digit. Wait 3 sec. and count blinks. Number of blinks equals value of code digit. Repeat with 2, 3, and 4.

 
 
①

②

③

④

Volume Lock



Press component* key once (e.g., CBL).

Press SET until Red Light blinks twice; release SET.

Press VOL+ once. Volume now controlled through component selected in step 1.

* NOTE: Component must have volume capabilities.

 
①

②

③

QUICK FEATURES SETUP GUIDE (continued)

Device Re-Assignment (e.g., AUD Key Becomes Secondary VCR Key)



Press SET until Red Light blinks twice; release SET.

①



Enter 9-9-2; the Red Light will blink twice.

②



Press component key to be moved once (e.g., VCR).

 
③



Press component key to be reassigned once (e.g., AUD). Red Light will blink twice. Reassigned key is now ready for programming.

④

Programming The FC Keys (See Page 9 For Further Instructions)



Press SET until Red Light blinks twice; release SET.

①




Enter 9-9-5; the Red Light will blink twice.

②




Press FC1 or FC2 once.

 ③



Press component key that controls channels once (e.g., CBL). Then enter channel # (e.g. 7-1)*.

 ④



Press SET until Red Light blinks twice; release SET.

⑤

* NOTE: If over 100 channels, enter 0-7-1.

TROUBLESHOOTING

- PROBLEM:** Red Indicator Light does not blink when you press a key.
- SOLUTION:** Replace the batteries with four (4) new "AAA" alkaline batteries (see page 4).
-
- PROBLEM:** The **VOL+**, **VOL-**, and **MUTE** keys are not functional.
- SOLUTION:** Make sure the remote control is not in the I-TV mode, and that volume control is locked to a component that has volume capabilities and is programmed into the I-TV remote control.
-
- PROBLEM:** Red Indicator Light blinks when you press a key, but home entertainment component does not respond.
- SOLUTION:** Make sure you are aiming the I-TV remote control at your home entertainment component and that you are within 15 feet of the component you are trying to control.
-
- PROBLEM:** The remote control does not control home entertainment components or commands are not working properly.
- SOLUTION:** Try all listed codes for the component brand being set up. Make sure all components can be operated with an infrared remote control.
-
- PROBLEM:** TV/VCR Combo does not respond properly.
- SOLUTION:** Use the VCR codes for your brand. Some combo units may require both a TV code and a VCR code for full operation (see page 6).
-
- PROBLEM:** **CH+**, **CH-**, and **LAST** do not work for your RCA TV.
- SOLUTION:** Due to an RCA design (1983-1987), only the original remote control will operate these functions.
-
- PROBLEM:** Changing channels does not work properly.
- SOLUTION:** If original remote control required pressing **ENTER** to change channels, press **ENTER** on the I-TV after entering a channel number.
-
- PROBLEM:** Tried *Auto Scan* and still could not find a working code.
- SOLUTION:** Try *Auto Scan* again after clearing out the component key as follows: Press and hold **ENTER** until Red Light blinks twice, then release. Next enter **9 - 9 - 2**. Then press and release the component key to be cleared twice.
-
- PROBLEM:** Remote control does not turn on Sony or Sharp TV/VCR Combo.
- SOLUTION:** For power on, these products require programming TV codes into the I-TV remote control. For Sony, use TV code 0029 and VCR code 0061. For Sharp, use TV code 0112 and VCR code 0077.
-

MANUFACTURER'S CODES

Setup Codes for TVs:

A-Mark	0032
AOC	0032, 0048, 0059, 0081, 0214
Abex	0061
Admiral	0122, 0492
Adventura	0075
Aiko	0121
Akai	0059
Alaron	0208
Ambassador	0206
America Action	0209
Ampro	0780
Anam	0209
Anam National	0084
Archer	0032
Astro Text	0408
Audiovox	0032, 0121, 0209, 0480, 0652
Baysonic	0209
Belcor	0048
Bell & Howell	0045, 0183
Bradford	0209
Brockwood	0048
Broksonic	0032, 0265, 0492
CCE	0246
CXC	0209
Candle	0059, 0075, 0085, 0215
Carnivale	0059
Carver	0083
Celebrity	0209
Cineral	0121, 0480
Citizen	0059, 0068, 0075, 0085, 0089, 0121, 0215, 0309
Clairtone	0214
Concerto	0085
Contec	0186, 0187, 0209, 0214
Craig	0209
Crosley	0083
Crown	0068, 0209
Curtis Mathes	0045, 0059, 0068, 0076, 0080, 0083, 0085, 0089, 0122, 0174, 0183, 0195, 0480, 0495, 1176, 1376
Daewoo	0048, 0068, 0121, 0480, 0652, 0653
Daytron	0048
Denon	0174
Dumont	0046, 0048
Dwin	0749, 0803
Electroband	0029, 0214
Electrohome	0410, 0418
Emerson	0048, 0067, 0068, 0183, 0187, 0206, 0207, 0208, 0209, 0214, 0265, 0309, 0311, 0492, 0652, 0653
Envision	0059
Fisher	0183, 0188
Fujitsu	0208
Funai	0200, 0208, 0209
Futuretech	0209
GE	0050, 0056, 0058, 0076, 0080, 0084, 0122, 0164, 0207, 0308, 0311, 0480, 1176, 1376
Gibraltar	0046, 0048, 0059
GoldStar	0030, 0048, 0059, 0061, 0085, 0207
Gradiente	0082, 0085, 0421
Grumpy	0208, 0209
Hallmark	0207
Harley Davidson	0208
Harman/Kardon	0083, 0107
Harvard	0209
Hitachi	0061, 0067, 0085, 0174, 0180, 0308
Infinity	0083
Inteq	0046
JBL	0083
JCB	0029
JVC	0082
Janeil	0075
KEC	0209
KTV	0059, 0068, 0209, 0214, 0246, 0309
Kawasho	0187
Kaypani	0081
Kenwood	0048, 0059
Kloss	0053, 0075, 0107
LG	0085
LXI	0076, 0083, 0183, 0185, 0207
Logik	0045
Luxman	0085
MEI	0214
MGA	0048, 0059, 0179, 0207
MTC	0048, 0059, 0085, 0089, 0214
Magnavox	0049, 0053, 0057, 0059, 0083, 0125, 0208, 0215, 0216, 0415
Majestic	0045
Marantz	0059, 0083
Matsushita	0279
Megatron	0032, 0174, 0207
Memorex	0045, 0085, 0179, 0183, 0207, 0279, 0492
Midland	0046, 0061, 0068, 0076, 0080, 0164
Minutz	0050
Mitsubishi	0048, 0122, 0179, 0207
Motorola	0084, 0122
Multitech	0209, 0246
NAD	0185, 0195, 0207
NEC	0048, 0059, 0085, 0526
NTC	0121
Nikko	0059, 0121, 0207
Noblex	0459
Noshi	0047
Onwa	0209
Optimus	0183, 0195, 0279
Optonica	0122, 0194
Orion	0208, 0265, 0492
Panasonic	0080, 0084, 0279
Penney	0032, 0047, 0048, 0050, 0056, 0059, 0061, 0068, 0076, 0080, 0085, 0089, 0164, 0185, 0207, 1376
Philco	0048, 0049, 0057, 0059, 0083, 0125, 0174, 0492
Philips	0083
Pilot	0048, 0059, 0068
Pioneer	0067, 0195
Portland	0048, 0068, 0121
Prism	0080
Proscan	0076
Proton	0032, 0081, 0207, 0495
Pulsar	0046, 0048
Quasar	0080, 0084, 0194, 0279
RCA	0047, 0048, 0058, 0067, 0076, 0080, 0119, 0122, 0164, 1076, 1176, 1276, 1376, 1476
Radio Shack	0048, 0059, 0061, 0068, 0076, 0085, 0183, 0194, 0207, 0209
Realistic	0048, 0059, 0061, 0068, 0085, 0183, 0194, 0207, 0209
Rhapsody	0214
Runco	0046, 0059, 0526, 0632
SSS	0048, 0209
Sampo	0059, 0061, 0068, 0081
Samsung	0048, 0059, 0061, 0085, 0089, 0207
Samsux	0068
Sansei	0480
Sansui	0492
Sanyo	0175, 0183, 0188, 0513
Scimitsu	0048
Scotch	0207
Scott	0048, 0207, 0208, 0209, 0265
Sears	0076, 0083, 0085, 0175, 0183, 0185, 0188, 0200, 0207, 0208

MANUFACTURER'S CODES

Setup Codes for TVs (cont.):

Semivox	0209
Semp	0185
Sharp	0068, 0122, 0186, 0194, 0415
Shogun	0048
Signature	0045
Simpson	0215, 0216
Sony	0029, 0109, 0140
Soundesign	0207, 0208, 0209, 0215
Spectricon	0032
Squareview	0200
Starlite	0209
Supre-Macy	0075
Supreme	0029
Sylvania	0049, 0057, 0059, 0083, 0125, 0410
Symphonic	0200
TMK	0085, 0206, 0207
Tandy	0122
Tatung	0032, 0084
Technics	0080, 0279
Technol Ace	0208
Techwood	0032, 0080, 0085
Teknika	0045, 0048, 0068, 0083, 0085, 0089, 0121, 0179, 0208, 0209, 0215
Telefunken	0085
Toshiba	0089, 0183, 0185
Tosonic	0214
Totevision	0068
Trical	0186
Universal	0056
Vector Research	0059
Victor	0082
Vidikron	0083
Vidtech	0048, 0207
Viking	0075
Wards	0045, 0048, 0049, 0050, 0056, 0057, 0058, 0059, 0083, 0085, 0109, 0125, 0140, 0194, 0207, 0208
White Westinghouse	0492, 0652, 0653
Yamaha	0048, 0059
Zenith	0045, 0046, 0121, 0492
Zonda	0032

Setup Codes for VCRs:

Admiral	0077, 0238
Adventura	0029
Aiko	0307
Aiwa	0029, 0066, 0336
Akai	0070, 0078, 0082, 0090, 0135
America Action	0307
American High	0064
Asha	0269
Audiovox	0066
Beaumarck	0269
Bell & Howell	0133
Brocksonic	0238
Broksonic	0031, 0150, 0213, 0238, 0240, 0324, 0390, 0508
CCE	0101, 0307
Calix	0066
Canon	0064
Capehart	0049
Carver	0110
Cineral	0307
Citizen	0066, 0307
Colt	0101
Craig	0066, 0076, 0101, 0269, 0300
Curtis Mathes	0064, 0070, 0089, 0191
Cybernex	0080, 0269
Daewoo	0049, 0074, 0307, 0590

Daytron	0049
Denon	0071
Dynatech	0029
Electrohome	0066
Electrophonic	0066
Emerex	0061
Emerson	0029, 0031, 0065, 0066, 0072, 0090, 0097, 0117, 0150, 0213, 0237, 0238, 0240, 0241, 0307, 0323, 0324, 0390, 0508, 0590
Fisher	0076, 0083, 0095, 0133
Fuji	0062, 0064
Funai	0029
GE	0064, 0077, 0089, 0094, 0231, 0269
Garrard	0029
Go Video	0261, 0461, 0555
GoldStar	0066, 0067
Gradiente	0029, 0037
Grundig	0224
HI-Q	0076
Harley Davidson	0029
Harman/Kardon	0067, 0104, 0110
Harwood	0097, 0101
Headquarter	0075
Hitachi	0029, 0070, 0071, 0094, 0134
Hughes Network Sys.	0071
JVC	0037, 0070, 0096
Jensen	0070
KEC	0066, 0307
KLH	0101
Kenwood	0067, 0070, 0096
Kodak	0064, 0066
LXI	0066
Lloyd's	0029, 0237
Logik	0101
MEI	0064
MGA	0072, 0090, 0269
MGN Technology	0269
MTC	0029, 0269
Magnasonic	0307
Magnavox	0029, 0064, 0068, 0110, 0139, 0178, 0592
Magnin	0269
Marantz	0064, 0110
Marta	0066
Matsushita	0064, 0191, 0483
Memorex	0029, 0064, 0066, 0068, 0075, 0076, 0077, 0133, 0238, 0269, 0336, 1066, 1191, 1291
Minolta	0071, 0134
Mitsubishi	0072, 0077, 0090, 0096, 0104, 0202
Motorola	0064, 0077
Multitech	0029, 0101
NAD	0087
NEC	0067, 0069, 0070, 0096, 0133
Nikko	0066
Nikon	0063, 0282
Noblex	0269
Olympus	0064
Optimus	0066, 0077, 0087, 0133, 0191, 0461, 0483, 1077, 1091, 1191, 1291
Optonica	0091
Orion	0031, 0213, 0238, 0324, 0508
Panasonic	0064, 0106, 0191, 0254, 0483, 1191
Penney	0064, 0066, 0067, 0069, 0071, 0083, 0269
Pentax	0071, 0094, 0134
Philco	0064, 0238, 0508
Philips	0064, 0091, 0110, 0139
Pilot	0066
Pioneer	0087, 0096
Portland	0049
Profitronic	0269

continued on next page...

MANUFACTURER'S CODES

Setup Codes for VCRs (cont.):

Proscan	0089, 0231
Protec	0101
Pulsar	0068, 0080
Quarter	0075 Quartz 0075
Quasar	0064, 0106, 0191, 0483, 1191
RCA	0064, 0071, 0077, 0089, 0094, 0106, 0134, 0135, 0178, 0231, 0269
Radio Shack	0029, 1066
Radix	0066
Randex	0066
Realistic	0029, 0064, 0066, 0075, 0076, 0077, 0091, 0095, 0133
Ricoh	0063, 0282
Runco	0068
STS	0071
Salora	0104
Samsung	0074, 0080, 0082, 0269
Sanky	0068, 0077
Sansui	0029, 0070, 0096, 0238, 0300, 0508
Sanyo	0075, 0076, 0133, 0269
Scott	0072, 0074, 0150, 0213, 0239, 0240, 0241
Sears	0029, 0064, 0066, 0071, 0075, 0076, 0083, 0095, 0133, 0134
Semp	0074
Sharp	0077, 0091
Shintom	0101
Shogun	0080, 0269
Singer	0101
Sony	0029, 0061, 0062, 0063, 0064, 0282
Sunpak	0282
Sylvania	0029, 0064, 0072, 0110, 0139
Symphonic	0029
TMK	0065, 0237, 0269
Tatung	0070
Teac	0029, 0070
Technics	0064, 0191
Teknika	0029, 0064, 0066
Thomas	0029
Toshiba	0072, 0074, 0095, 0239, 0241, 0395
Totevision	0066, 0269
Unitech	0269
Vector	0074
Vector Research	0067, 0069
Video Concepts	0069, 0074, 0090
Videosonic	0269
Wards	0029, 0064, 0071, 0076, 0077, 0089, 0091, 0101, 0110, 0178, 0241, 0269
White Westinghouse	0238, 0307
XR-1000	0029, 0064, 0101
Yamaha	0067
Zenith	0029, 0062, 0063, 0068, 0238, 0508

Setup Codes for TV/VCR Combos:

American High	0064 (for TV use 0080)
Brocksonic	0031, 0323,
Colt	0101
Curtis Mathis	0064 (for TV use 0080)
Daewoo	0307
Emerson	0031, 0323, 0508
Funai	0029
GE	0064 (for TV use 0080), 0089 (for TV use 0076), 0077 (for TV use 0122), 0269
Hitachi	0064 (for TV use 0080), 0029
HQ	0029
Lloyds	0029
MGA	0269

Magnavox	0110 (for TV use 0083), 0064 (for TV use 0080), 0029
Magnin	0269
Memorex	0066, 0191 (for TV use 0279)
Mitsubishi	0077 (for TV use 0122)
Orion	0031, 0323, 0508
Panasonic	0064 (for TV use 0080), 0191 (for TV use 0279)
Penney	0064 (for TV use 0080), 0269, 0191 (for TV use 0279)
Quasar	0064 (for TV use 0080), 0191 (for TV use 0279)
RCA	0089 (for TV use 0076), 0064 (for TV use 0080), 0077 (for TV use 0122)
Sansui	0029, 0508
Sanyo	0269
Sears	0029, 0066
Sharp	0077 (for TV use 0122)
Sony	0061 (for TV use 0029)
Symphonic	0029
Zenith	0029

Setup Codes for Cable Converters:

ABC	0030, 0032, 0036, 0037, 0040, 0042, 0043, 0046
Allegro	0182, 0344
Antronix	0051, 0236
Archer	0051, 0182, 0236, 0826
BBT	0296
Belcor	0085
Bell & Howell	0043
Cable Star	0085
Cabletenna	0051
Cableview	0051
Century	0182
Citizen	0182, 0344
Colour Voice	0054, 0060
Comtronics	0069, 0089
Contec	0048
Digi	0666
Eastern	0031
Emerson	0826
Everquest	0044, 0069
Focus	0429
GC Electronics	0085, 0236
Garrard	0182
Gemini	0044, 0099, 0826
General Instrument	0040, 0305, 0505, 0839
GoldStar	0069, 0173
Goodmind	0826
Hamlin	0038, 0049, 0063, 0288, 0302
Hitachi	0040
Hytex	0036
Jasco	0044, 0182, 0344
Jerrold	0032, 0040, 0041, 0043, 0044, 0053, 0305, 0505, 0839
Linsay	0469
Magnavox	0043, 0056, 0571
Memorex	0029
Movie Time	0092, 0185
NAP	0036
NSC	0092, 0099, 0185
Novaplex	0647
Oak	0036, 0048
Optimus	0050
Panasonic	0029, 0050, 0136
Panther	0666
Paragon	0029
Philips	0054, 0056, 0060, 0182
Pioneer	0052, 0173, 0562

MANUFACTURER'S CODES

Setup Codes for Cable Converters (continued):

Popular Mechanics	0429
Prelude	0799
Proscan	0050
Pulsar	0029
Quasar	0029
RCA	0050
Radio Shack	0044, 0344, 0826, 0912
Realistic	0236
Recoton	0429
Regal	0049, 0288, 0302
Regency	0031
Rembrandt	0040, 0099
Runco	0029
SL Marx	0069
Samsung	0069, 0173
Scientific Atlanta	0035, 0037, 0046, 0506, 0906
Seam	0539
Signal	0044, 0069
Signature	0040
Sprucer	0050
StarSight	0451, 0571
Starcom	0032, 0044
Stargate	0044, 0069, 0799, 0826
Starquest	0044
Sylvania	0030
TFC	0339
TV86	0092
Tandy	0287
TeleCaption	0250
Televue	0069
Texscan	0030
Timeless	0447
Tocom	0041, 0042
Toshiba	0029
Tusa	0044
Unika	0051, 0182, 0236
United Artists	0036
Universal	0051, 0085, 0182, 0220, 0236
Viewstar	0056, 0089, 0092, 0287
Zenith	0029, 0037, 0044, 0083, 0236, 0554
Zentek	0429

Setup Codes for Satellite/DBS:

AlphaStar	0801
Echostar	0804
Expressvu	0804
General Instrument	0390, 0656, 0898
HTS	0804
Hitachi	0848
Hughes Network Sys.	0778
JVC	0804
Jerrold	0390, 0656
Magnavox	0751, 0753
Memorex	0753
Next Level	0898
Panasonic	0730
Philips	0751, 0753
Primestar	0390, 0656
RCA	0172, 0421, 0595, 0884
Radio Shack	0898
Sony	0668
Star Choice	0898
Toshiba	0819
Uniden	0751, 0753
Zenith	0885

Setup Codes for CD Players:

ADC	0047, 0062
Adcom	0184, 0263
Aiwa	0041, 0153, 0186
Akai	0185
Audio Alchemy	0223
Audio-Technica	0199
BSR	0223, 0274, 0395
Burmester	0449
California Audio Labs	0058
Carrera	0223
Carver	0186, 0208, 0328, 0466
Craig	0644
Crown	0151
Curtis Mathes	0058
DAK	0274
DBX	0283
DKK	0029
Denon	0032, 0063, 0902
Emerson	0184, 0193, 0334, 0498
Fisher	0117, 0203, 0208, 0371
GE	0038, 0363
Garrard	0274, 0309, 0422, 0449, 0454
Genexxa	0061, 0193, 0334
GoldStar	0446
Harman/Kardon	0137, 0186, 0202, 0455
Hitachi	0061, 0184
JVC	0101, 0684, 0685, 0686, 0687
Kenwood	0057, 0066, 0219, 0655, 0855, 0710
Kodak	0316
Koss	0763
Krell	0186
Kyocera	0047
LXI	0334
Linn	0186
Luxman	0122
MCS	0058, 0072
MGA	0112
MTC	0449
Magnavox	0067, 0158, 0186, 0254, 0334, 0555
Marantz	0058, 0067, 0186, 0209, 0464
McIntosh	0316
Mission	0186
Mitsubishi	0112
NAD	0048, 0328
NEC	0072, 0263
NSM	0186
Nakamichi	0176
Nikko	0193, 0198, 0199, 0203
Onkyo	0130, 0897
Optimus	0029, 0061, 0066, 0116, 0174, 0204, 0208, 0223, 0225, 0309, 0334, 0371, 0449, 0455, 0466, 0497
Panasonic	0058, 0332, 0396, 0781
Parasound	0223, 0449
Philco	0763
Philips	0186, 0303, 0316, 0655
Pioneer	0061, 0273, 0334, 0497
Proscan	0082
Proton	0186
QED	0186
Quasar	0058
RCA	0038, 0082, 0184, 0208, 0334, 0793
Realistic	0184, 0193, 0204, 0208, 0209, 0449
Rotel	0186, 0449
SAE	0186
STS	0047
Sansui	0186, 0231, 0334
Sanyo	0116, 0208
Scott	0184, 0193, 0334
Sears	0334

continued on next page..

MANUFACTURER'S CODES

Setup Codes for CD Players (continued):

Sharp	0066, 0209, 0890
Sherwood	0143, 0209, 0225, 0455
Shure	0072
Signature	0137
Sony	0029, 0214, 0519, 0633, 0634
Soundesign	0174, 0454
Sylvania	0254
Tascam	0449
Teac	0203, 0209, 0407, 0422, 0449
Technics	0058, 0236, 0332
Toshiba	0048, 0328
Vector Research	0062, 0223, 0446
Victor	0101
Wards	0082, 0137, 0186
Yamaha	0065, 0199, 0216, 0290
Yorx	0490
Zenith	0644

Setup Codes for DVD Players:

Harman/Kardon	0611
JVC	0587, 0652
Kenwood	0563
Magnavox	0532
Mitsubishi	0550
Onkyo	0532, 0656
Panasonic	0519
Philips	0532, 0568
Pioneer	0554, 0600
Proscan	0551
RCA	0551
Samsung	0602
Sony	0562
Technics	0519
Theta Digital	0600
Toshiba	0532
Yamaha	0519, 0574
Zenith	0532, 0620

Setup Codes for LD Players:

Aiwa	0232
Carver	0093, 0223, 0352
Denon	0088, 0201
Disco Vision	0052
Funai	0232
Harman/Kardon	0223
Hitachi	0052
Magnavox	0223, 0246
Marantz	0093, 0223
Mitsubishi	0088
NAD	0088
Panasonic	0233
Philips	0093, 0223
Pioneer	0052, 0088
Quasar	0233
Realistic	0232
Samsung	0352
Sega	0052
Sony	0222, 0230
Technics	0233
Theta Digital	0223
Yamaha	0246

Setup Codes for Tuners/Receivers:

ADC	0560
Adcom	0645
Aiwa	0150, 0187, 0218, 0434, 1118, 1434
Akai	0105, 0253
Capetronic	0560
Carver	0037, 0071, 0218, 0389, 1118, 1218
Casio	0224
Clarinette	0224
Curtis Mathes	0109
Denon	0033, 0302, 0800, 1133, 1189
Emerson	0284, 0453
Fisher	0071, 0248, 0389
Garrard	0175, 0310, 0453, 0492
Hafler	0175
Harman/Kardon	0139, 0218, 0920
Inkel	0091
JBL	0139
JVC	0103
Kenwood	0056, 0071, 0106, 0215, 0342, 0343, 1056, 1342, 1598
Koss	0284, 0453
LXI	0210
Linn	0218
Lloyd's	0224
MCS	0068, 0375
Magnavox	0157, 0218, 0224, 0251, 0420, 0560, 1118, 1218
Marantz	0068, 0157, 0218, 0229, 1118, 1218
Modulaire	0224
NAD	0349
NEC	0264
Nakamichi	0126, 0376
Onkyo	0129, 0148, 0164, 0409
Optimus	0071, 0206, 0210, 0215, 0248, 0560, 0699, 0767, 0830, 1052
Panasonic	0068, 0338, 0547
Penney	0224
Philips	0218, 0420, 1118, 1218
Pioneer	0043, 0109, 0179, 0318, 0560, 0659, 1052
Quasar	0068
RCA	0083, 0375, 0389, 0559, 0560
Realistic	0192, 0210, 0224
Sansui	0218, 0222, 0375, 1118
Sanyo	0248, 0830
Scott	0192, 0351
Semivox	0284
Sharp	0215
Sherwood	0091, 0520, 0531
Sonic	0310
Sony	0187, 0197, 0503, 1087, 1187, 1287
Soundesign	0699
Sylvania	0251
Teac	0192, 0416, 0492
Technics	0068, 0237, 0338, 0547, 1337, 1338, 1547
Techwood	0310
Thorens	1218
Victor	0103
Wards	0043, 0083, 0109, 0187, 0218
Yamaha	0111, 0205, 0215
Yorx	0224
Zenith	0310, 0886

MANUFACTURER'S CODES (continued)

Setup Codes for Audio Amplifiers:

Aiwa	0435
Carver	0298
Curtis Mathes	0329
Denon	0189
GE	0107
Harman/Kardon	0921
JVC	0360
Linn	0298
Luxman	0194
Magnavox	0298
Marantz	0298, 0350
Nakamichi	0350
Optimus	0424
Panasonic	0337
Philips	0298, 0921
Pioneer	0042, 0329
Realistic	0424
Sansui	0350
Sony	0249, 0718
Soundesign	0107
Technics	0337
Victor	0360
Wards	0042, 0107
Yamaha	0383

Setup Codes for DBS Audio:

Aiwa	0039, 0188, 0433
Fisher	0081
Harman/Kardon	0506
JBL	0506
JVC	0102
Jerrold	0488, 0549
Nikko	0405
Paramount Pictures	0346
RCA	0085
SSI	0346
Schneider	0405
Scientific Atlanta	0489
Sony	0039, 0188
Soundesign	0405
Starcom	0488
Yorx	0405

©1999

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>