

Philips
Universal remote control

Icon

SRU4105



Sticker icon model

Direct access to channels

Most popular remote. Allows you to sticker your favorite icons to the remote, next to a button. When you want to go to a favorite channel, just press the button next to your favorite icon sticker. Do not have to know channel.

Great convenience

- Ready for use with Philips equipment
- 10 channels programmed recognized by the channel Icon
- Sticker a icon to the remote for your favorite channel

Quick and easy set-up

- Automatically searches for your equipment brand

PHILIPS
sense and simplicity

Universal remote control
Icon

Specifications

Packaging dimensions

- **Packaging dimensions (W x H x D):**
11 x 27.5 x 3.7 cm
- **Nett weight:** .125 kg
- **Gross weight:** .18 kg
- **Tare weight:** .055 kg

Outer Carton

- **Outer carton (L x W x H):** 30 x 24.5 x 14 cm

- **Nett weight:** .75 kg
- **Gross weight:** 1.6 kg
- **Tare weight:** .85 kg

Inner Carton

- **Inner carton (L x W x H):** 27.5 x 11 x 3.7 cm
- **Nett weight:** .375 kg
- **Gross weight:** .408 kg
- **Tare weight:** .033 kg

SRU4105/27

Product highlights

Auto brand search

Getting your new remote control working is simply a case of having your remote automatically search for the most suitable code for your equipment.

Pre-programmed for Philips

If you have Philips equipment, you can use your universal remote control without programming it because all keys are pre-set for Philips.

10 pre set channels

Forget the channel number? By the time you entered 3 digits to change the channel, was the TV too fast and only picked up the first two numbers? Forget the channel numbers. Program the channels by channel icon, so to change channels all you have to do is recognize the icon for each channel. Some icon remotes offer 10 pre programmed channels, others 20, and the higher end LCD models, over 200.

Sticker channel recognition

Forget the channel number? By the time you entered 3 digits to change the channel, was the TV too fast and only picked up the first two numbers? Forget the channel numbers. Program the channels by channel icon, so to change channels all you have to do is recognize the icon for each channel. Some icon remotes offer 10 pre programmed channels, others 20. These models use stickers to apply to the remote to recognize the channel.



Issue date 2008-08-30

Version: 1.1.5

12 NC: 8670 000 40821
UPC: 6 09585 15691 3

© 2008 Koninklijke Philips Electronics N.V.
All Rights reserved.

Specifications are subject to change without notice.
Trademarks are the property of Koninklijke Philips
Electronics N.V. or their respective owners.

www.philips.com

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>