

Register your product  
and get support at  
[www.philips.com/welcome](http://www.philips.com/welcome)

SRU5110/86

 


EN User Manual

**PHILIPS**

# Table of contents

1	Your SRU5110 .....	3
2	Getting started .....	3-6
	2.1 Inserting the batteries .....	3
	2.2 Setting up the universal remote control .....	4-6
3	Using the universal remote control .....	6-8
	3.1 Buttons and functions .....	6-7
	3.2 Resetting a button to its original function .....	7-8
4	Service and support .....	8-10
	4.1 Frequently asked questions .....	8-9
	4.2 Need help? .....	10
	Helpline .....	11
	Brand list .....	12-21
	<b>Information to the consumer</b> .....	22
	Compliance with EMF .....	22
	Recycling and disposal .....	22
	Battery information .....	22

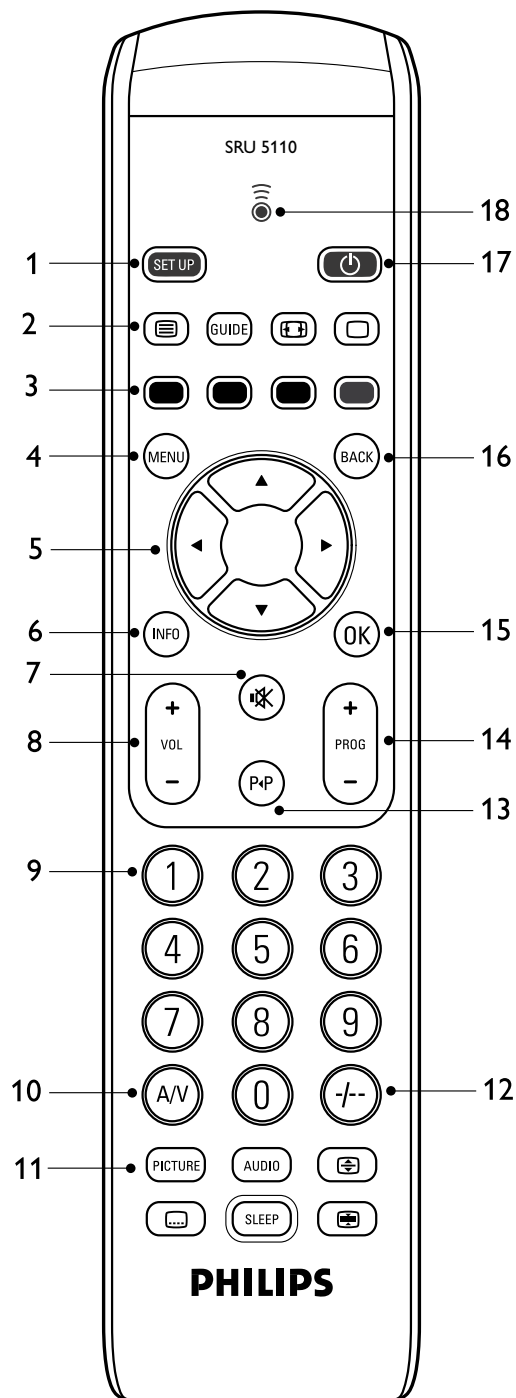

## 1 Your SRU5110


Congratulations on your purchase and welcome to Philips. To fully benefit from the support that Philips offers, register your product at [www.philips.com/welcome](http://www.philips.com/welcome). For quick, clean and easy setup go to: [www.philips.com/urc](http://www.philips.com/urc)

After installing the remote control it can operate the most-used functions of almost any brand of TV.

## 2 Getting started

### 2.1 Inserting the batteries

- 1 Press the cover inwards and slide it in the direction of the arrow.
- 2 Place two AAA type batteries into the battery compartment, as shown.
- 3 Replace the cover and click it firmly into place.

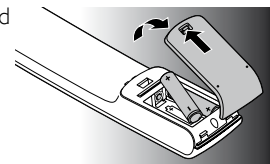

#### Note


When replacing the batteries, all user settings will be retained in the remote control memory for 5 minutes.

## 2.2 Setting up the universal remote control


This is only necessary if your TV does not respond to the SRU5110.

If that is the case, the SRU5110 does not recognize the brand and/or model of your TV and you need to program the remote control to do so.

**1** **Switch ON** the TV manually or use the original remote control for this. Tune to channel 1.

**2** **Press and hold** the **SETUP** button **for 5 seconds** until the green Setup light  lights up.

- The remote control is now in setup mode.

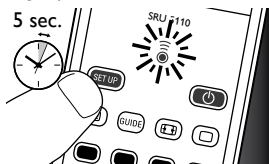


**3** Look up the 4-digit code for your brand in the brand list at the back of this user manual.

A four-digit code is shown for each brand.




Use the digit buttons to enter the code for your brand.

- If the green Setup light  turns off, an invalid code was entered. In this case, try again.




**4** Aim the remote control at the TV. **Press and hold** the **POWER** button. Release it **immediately** as soon as the TV switches off.

- This step normally takes between 5 and 60 seconds. In extreme circumstances this step can take up to 15 minutes.

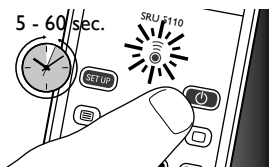

**5** **Switch ON** the TV. Try out the buttons that you need for operating it. Try, for example, if the **- PROG +** and digit buttons function properly.

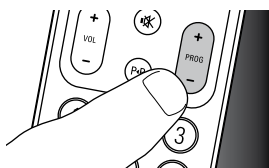

- If a button does not work as expected, **press and hold** that button. Release it **immediately** as soon as it works. For more information, see chapter 2.2.1.


**6** Press the **SETUP** button **twice** to finish setup.

- When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.



### ! Important

If you made a mistake:

- Press the **SETUP** button **twice** to exit setup. The green Setup light  turns off.
- Restart from the beginning.

- *If the device does not respond at all or not to all of the button commands or if you cannot find the code for your brand, enter '9, 9, 9, 9' in step 3 and continue with step 4. The remote control will now search its full database for a code that works with your TV. Full database search may take up to 15 minutes.*

### 2.2.1 Improving buttons

When correctly set up, the remote control should be able to operate your TV. However, when using the remote control for the first time it might occur that some buttons do not yet function as expected.

In this case you can have the remote control search for alternatives.


### ≡ Note


Improving buttons is not possible when the code was found during full database search (with code '9, 9, 9, 9').

### During initial setup

- 1 Make sure the TV is switched on.
- 2 Press the button that does not function, keep it pressed and **immediately** release it when the TV responds. Repeat this for every button that does not function.
  - If the button still does not function as expected, try pressing it again for a longer period of time.

### After initial setup

- 1 Make sure the TV is switched on.
- 2 Keep buttons ① and ④ **pressed simultaneously for 5 seconds.**
  - The green Setup light  lights up. The remote control is now in setup mode.
- 3 **Press and hold** the button that does not function and **immediately release** it when the TV responds.
  - If the button still does not function as expected, try pressing it again for a longer period of time.
- 4 Press the **SETUP** button **twice** to save your settings and exit setup mode.
  - When no button is pressed for 5 minutes or more, the remote control will exit setup mode, automatically saving all your settings.

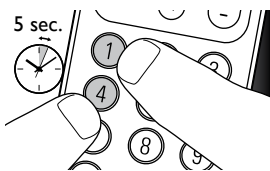

## 3 Using the universal remote control

### 3.1 Buttons and functions



The illustration on page 2 gives an overview of all buttons and their functions.


- 1 **SETUP** ..... enters setup mode.
- 2 **TEXT** ..... teletext on/off.  
**GUIDE** ..... Electronic Program Guide.  
**WIDE** ..... wide screen TV.  
**TEXT OFF** ..... teletext off.
- 3 **TELETEXT COLOR** ..... teletext color buttons. Used in text mode and in some on-screen menus.
- 4 **MENU** ..... turns the menu on and off.
- 5 **▲, ▼, ◀, ▶** ..... cursor buttons. Cursor up, down, left, right in a menu.
- 6 **INFO** ..... displays on-screen channel information.
- 7 **MUTE** ..... mutes the TV sound.

- 8 **VOL +/-** ..... mutes the TV sound.  
**VOLUME** ..... adjusts the TV volume.
- 9 **1-0** ..... digit buttons. Direct choice of channels and other functions.
- 10 **AV** ..... switches between external inputs of your equipment.
- 11 **PICTURE** ..... changes picture / screen settings.  
**AUDIO** ..... changes audio settings.  
**TEXT ON** ..... enlarges teletext picture.  
**TEXT OFF** ..... shows subtitle text.  
**SLEEP** ..... activates/deactivates sleep timer.  
**TEXT HOLD** ..... holds current teletext page.
- 12 **CH +/-** ..... selects between one- and two-figure channel numbers.
- 13 **PREV** ..... selects previous program/channel.
- 14 **PROG +/-** ..... selects a previous or following channel.
- 15 **OK** ..... confirms your selection.
- 16 **BACK** ..... jumps back one level in the menu or turns off the menu.
- 17 **POWER** ..... switches TV on or off.
- 18 **STATUS** .....
  - blinks in setup mode.
  - lights up when a remote control command is being sent.

### 3.2 Resetting a button to its original function



If an improved button (see chapter 2.2.1.) still does not function as expected, you can always reset the button to its original function.

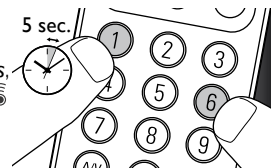
- 1 Keep digit buttons ① and ⑥ **pressed simultaneously for 5 seconds,** until the green Setup light  lights up.
  - The remote control is now in setup mode.
- 2 Press digit buttons ③, ⑨ and ⑥, in that order.
  - After each button press the green Setup light  blinks once.



3 Press the button that you wish to reset **twice**.

E.g. the ► button.

- After each button press the green Setup light  blinks once.
- The green Setup light  will blink one more time to confirm that the button was successfully reset to its original function.

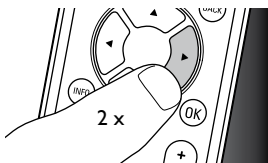

## 4 Service and support

### 4.1 Frequently asked questions

In this chapter you will find answers to the most frequently asked questions about your universal remote control.

#### 4.1.1 Setup

##### I cannot enter setup mode.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.  
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

##### The brand code for my TV is missing in the 'Shortlist of brands' in the Quick Start Guide.

The 'Shortlist of brands' only mentions the most common TV brands.

- You will find a complete brand list on page 12-21 of this user manual.
- Use '9999' as 4-digit code in case you cannot find your brand in the complete brand list. Note that using '9999' may result in a long setup (up to 15 minutes).

##### My TV turns OFF in step 4 but does not turn ON again in step 5.

TVs of some brands (e.g. Panasonic) only switch ON after a long press on one of the digit buttons. After a long button press in setup mode the remote control will start trying to improve the button (see chapter 2.2.1) instead of switching ON the TV.

- In this case, switch ON the TV manually or use the original remote control for this. Continue with step 6. After successfully completing setup, the remote control will switch ON the TV with a long button press on one of the digit buttons, just as your original remote control.

##### After setup, not all buttons work as expected.

- Try improving the button(s). See chapter 2.2.1.

### 4.1.2 Operation

##### The remote control does not wake up anymore.

Battery level too low or battery lifetime came to an end.

- Replace the batteries. See chapter 2.1.  
After replacing the batteries, test if the remote control still operates your TV. If it does not, you have to set up the remote control again. For this refer to chapter 2.2.

##### The TV does not respond at all/does not respond to all of the button commands.

- Check if the buttons you press are available on the original remote control.
- Try improving buttons. See chapter 2.2.1.


##### Wrong code selected during setup.

- Set up the remote control again. Always test if the TV responds, before leaving setup mode.

It may be that the buttons that you are trying to use have a different naming on the original remote control.

- Try out all buttons to find the one(s) you need.

##### The Teletext buttons do not work.

- Find out whether your TV is equipped with Teletext.
- Try improving the Teletext buttons. See chapter 2.2.1.
- Check whether you are using the correct button to switch on Teletext. For TV this is the  button.

### 4.1.3 Batteries

##### Will my settings be deleted when I replace the batteries?

No. All user settings will be retained in the remote control memory for 5 minutes.



#### Warning

The (included) batteries should not be exposed to excessive heat such as sunshine, fire or the like.

---

## 4.2 Need help?

We advise you to first read this user manual carefully. It is provided to help you set up and use the remote control.

If, however, you require extra information or have additional questions about setup, usage, spare parts, warranty, etc. of the SRU5110, you can always contact us.

When calling our helpline, make sure to have the SRU5110 at hand when you call, so that our operators can help you determine whether the SRU5110 is working properly.

You will find our contact details at the end of this user manual.

The model number of your Philips universal remote control is SRU5110/86.

Date of purchase: ...../ ...../ .....  
(day/month/year)

For **online support** go to:

[www.philips.com/welcome](http://www.philips.com/welcome)

- Click 'Support' and follow the on-screen instructions.

## Helpline

Country	Phone number	Tariff
Ireland	01 601 1158	pstn
United Kingdom	0800 331 6015	free

<b>A</b>	Aristona.....	0192	Boots.....	0405	Classic.....	0580	
4Kus.....	0005	Arthur Martin.....	0200	BPL.....	0413	Clatronic.....	0581
A.R. Systems.....	0012	ASA.....	0202	Brainwave.....	0415	CMS.....	0590
Acme.....	3521	Asberg.....	0205	Brandt.....	0416	CMS Hightec.....	0591
Acura.....	0036	Asono.....	0212	Brinkmann.....	0423	Coby.....	0597
ADA.....	0038	Astra.....	0221	Brionvega.....	0424	Concorde.....	0626
ADC.....	0040	Asuka.....	0227	Britannia.....	0425	Condor.....	0627
Addison.....	0043	ATACOM.....	0228	Bruns.....	0435	Conia.....	0628
Adelsound.....	0044	Atlantic.....	0233	BskyB.....	0436	Conrowa.....	0634
Admiral.....	0046	Atori.....	0237	BSR.....	0437	Contec.....	0635
Adyson.....	0058	Auchan.....	0240	BTC.....	0439	Continental Edison.....	0637
AEG.....	0059	Audiosonic.....	0264	Bush.....	0445	Cosmel.....	0647
Agashi.....	0063	Audioton.....	0266			Crosley.....	0655
Agazi.....	3522	AudioTon.....	0266	<b>C</b>		Crown.....	0658
AGB.....	0064	Ausind.....	0276	Caihong.....	0462	CS Electronics.....	0663
Aiko.....	0069	Autovox.....	0280	Cambridge Audio.....	0470	CTC.....	0664
Aim.....	0070	Avious.....	0291	Cameron.....	4032	CTC Clatronic.....	3527
Airis.....	0071	Awa.....	0296	Capsonic.....	0486	C-Tech.....	0449
Aiwa.....	0072	Ayomi.....	3525	Carad.....	0488	CVG.....	3996
Akai.....	0074			Carena.....	0489	CyberHome.....	0672
Akiba.....	0078	<b>B</b>		Carrefour.....	0492	Cybertron.....	0675
Akito.....	0082	Baird.....	0311	Cascade.....	0496		
Akura.....	0083	Bang & Olufsen.....	0314	Casio.....	0499	<b>D</b>	
Alaron.....	0085	BARON.....	3959	CAT.....	0500	Daenyx.....	0690
Alba.....	0086	Basic Line.....	0325	Catha.....	4094	Daewoo.....	0692
Alcyon.....	0093	Bastide.....	0327	Cathay.....	0501	Dainichi.....	0694
Alize.....	0100	Baur.....	0331	Catron.....	0502	Dansai.....	0699
Alkos.....	3523	Baze.....	0334	CCE.....	0504	Dantax.....	0702
Allorgan.....	0105	Bazin.....	0335	Celestial.....	0511	Datron.....	4201
Allstar.....	0108	BBK.....	0337	Centrex.....	0516	Datsura.....	0703
Ambassador.....	0120	Beijing.....	0345	Centrum.....	0519	Dawa.....	0707
Amitech.....	0130	Beko.....	0346	Centurion.....	0520	Daytek.....	0708
Amoi.....	0132	Bellagio.....	0354	Century.....	0521	Dayton.....	0709
AMOI.....	0132	BenQ.....	0359	CGE.....	0523	Daytron.....	0710
Amplivision.....	0138	Beon.....	0361	CGV.....	0524	De Graaf.....	0716
Amstrad.....	0140	Best.....	0364	Changcheng.....	0526	DEC.....	0717
AMW.....	0143	Best Buy.....	0365	Changfei.....	0527	Decca.....	0718
Anam.....	0146	Bestar.....	0368	Changhai.....	0529	Deitron.....	0722
Anam National.....	0147	Bestar-Daewoo.....	0369	Changhong.....	0530	Denko.....	0730
Anglo.....	0151	Binatone.....	0378	Chimei.....	3563	Denon.....	0731
Anitech.....	0154	Black Panther Line.....	4196	Chuangjia.....	4096	Denver.....	0733
Ansonic.....	0156	Black Star.....	0386	Chunfeng.....	0546	Denzel.....	0734
AOC.....	0165	Blacktron.....	3526	Chung Hsin.....	0547	Desay.....	0737
Apex.....	3691	Blackway.....	0388	Chunsun.....	0549	Desmet.....	0738
Apollo.....	0171	Blaupunkt.....	0390	Cimline.....	0552	Diamant.....	0746
Arc En Ciel.....	0178	Blue Sky.....	0395	Cinetec.....	0560	Diamond.....	0747
Arcam.....	0179	Blue Star.....	0396	CineVision.....	0562	Digatron.....	0751
Arcam Delta.....	3524	Boghe.....	0400	City.....	0569	Digiline.....	0759
Ardem.....	0184	Bondstec.....	0403	Clarivox.....	0576	Digitor.....	0781

Dixi.....	0807	Expert .....	0976	Goldline.....	1138	Huanghaimei.....	1288
DK Digital.....	0808	Exquisit.....	0978	GoldStar.....	1140	Huanghe.....	1289
Dmtech .....	0813	<b>F</b>		Goodmans.....	1142	Huanglong.....	1290
Dongda.....	0820	Fagor Life .....	4102	Gorenje.....	1144	Huangshan.....	1291
Donghai.....	0821	Feilang.....	0990	GPM.....	1149	Huanyu .....	1292
Drean.....	0832	Feilu .....	0991	Gradiente.....	1151	Huari.....	1294
DTS .....	0837	Feiyue .....	0993	Graetz .....	1152	Huijiban.....	4108
Dual.....	0838	Fenmenti.....	4103	Granada.....	1154	Humax.....	1298
Dual-Tec.....	3528	Fenner .....	0994	Grandin.....	1156	Hygashi .....	1308
Dumont.....	0840	Ferguson.....	0996	Great Wall.....	4105	Hyper.....	1309
Duongie.....	4101	Fidelity .....	0998	Gronic.....	1160	Hypson.....	1312
Dux.....	0843	Filsai .....	1000	Grundig.....	1162	Hyundai .....	1315
D-Vision.....	0684	Finlandia.....	1003	Grunkel.....	1164		
DVX.....	0847	Finlux.....	1004	GVG.....	1169	<b>I</b>	
Dynatron .....	0855	Fintec .....	1006			Iberia.....	1320
Dynex.....	3476	Firstline.....	1008	<b>H</b>		ICE.....	1324
<b>E</b>		Fisher.....	1009	H&B.....	3635	ICeS .....	1325
Easy Home.....	3700	Flint .....	1014	Haaz .....	1172	Impego.....	4207
Eclipse.....	0867	FNR .....	1016	Haier .....	1175	Imperial.....	1346
E-Dem.....	3624	Formenti .....	1023	Haihong.....	1176	Indesit.....	1349
Elbe.....	0880	Formenti/Phoenix.....	3532	Halifax.....	1179	Indiana.....	1350
Elbe-Sharp.....	3529	Formenti-Phoenix.....	1024	Hampton .....	1183	Ingelen.....	1354
Elcotech.....	0882	Fortress .....	1027	Hanseatic.....	1190	Ingersol.....	1355
Elcit.....	0883	Fraba .....	1030	Hantarex.....	1192	Inno Hit.....	1358
Electa.....	3530	Friac.....	1040	Hantor.....	1193	Innovation.....	1360
ELECTRO TECH.....	3531	Frontech.....	1042	Harman/Kardon.....	1198	Interactive.....	3534
Electrohome.....	0890	Fujitsu.....	1052	Harwood.....	1204	Interbuy.....	1376
Elektra .....	0896	Fujitsu General .....	1053	Hauppauge.....	1206	Interfunk.....	1377
Element .....	3477	Funai.....	1056	HCM.....	1210	Internal.....	1379
ELG.....	0900	<b>G</b>		Hema.....	1222	International.....	1380
Elin.....	0902	Galaxi.....	1068	Hemmermann.....	1223	Intervision.....	1386
Elite.....	0903	Galaxis.....	1069	Hifivox.....	1233	IR.....	4110
Elman.....	0907	GBC.....	1078	Higashi.....	1234	Irradio.....	1396
Elsay.....	0909	Geant Casino.....	1082	Highline.....	1236	Isukai.....	1402
Elta.....	0910	GEC.....	1083	Hikona.....	1237	ITC.....	1404
Emerson.....	0917	Geloso.....	1087	HiLine.....	3533	ITS.....	1405
Emperor.....	0921	General.....	1090	HiMAX.....	1241	ITT.....	1406
Enzer.....	0934	General Technic.....	1095	Hinari .....	1243	ITV.....	1408
Epson.....	0937	Genexxa .....	1097	Hisawa.....	1247		
Erres.....	0942	Gericom.....	1103	Hisense.....	1249	<b>J</b>	
ESC.....	0945	GFM.....	3820	Hitachi.....	1251	JEC.....	1426
Etron .....	0949	Giant.....	1113	Hitachi Fujian.....	1252	Jiahua.....	1435
Etzuko.....	4203	Giec .....	1115	Hitsu.....	1257	Jinhai .....	1439
Eurofeel.....	0954	Global Solutions.....	1120	Hoeher .....	1262	Jinxing.....	1442
EuroLine.....	0955	Global Sphere.....	1121	Home Tech Industries.....	1266	JVC.....	1464
Euroman.....	0956	Go Video.....	1126	Hongmei.....	1272		
Europa.....	0957	GoldHand.....	1136	Hornophon.....	1277		
Europhon.....	0959			Hoshai.....	1278		
				Huafa.....	1287		



<b>K</b>	Lesla.....1622	M-Electronic.....3541	Network.....1968
Kaisui.....1471	Leyco.....1627	Melvox.....1799	Neufunk.....1970
Kamosonic.....3535	LG.....1628	Memorex.....1800	Nevir.....1977
Kamp.....1475	LG/Goldstar.....3536	Memphis.....1802	New Tech.....1979
Kangchong.....1476	Liesenk.....3537	Mercury.....1804	New World.....1980
Kanghua.....1477	Liesenk & Tter.....1630	Metz.....1810	Next Base.....1983
Kangwei.....4115	Liesenkotter.....1631	MiCO.....1813	Nicamagic.....1994
Kansai.....1480	Life.....3538	Micromaxx.....1822	Nikkai.....1998
Kapsch.....1483	Lifetec.....1633	Micromedia.....1823	Noblex.....2013
Karcher.....1484	Limit.....1637	Micromega.....1824	Nobliko.....2014
Kawa.....1487	Liteon.....1645	Microstar.....1827	Nogomatic.....2016
Kawasho.....1489	Lloyds.....3539	Migros.....1832	Nokia.....2017
Kendo.....1500	Lloyd's.....1648	Minato.....1835	Nordic.....2021
Kennedy.....1504	Local India TV.....1653	Minerva.....1838	Nordmende.....2022
Kennex.....1505	Loewe.....1660	Minoka.....1840	Nordvision.....3543
Kenwood.....1507	Loewe Opta.....3540	Minowa.....1843	Normerel.....2024
KeyPlug.....3646	LogicLab.....3650	Mitsubishi.....1855	Novatronic.....2035
KIC.....1512	Logik.....1661	Mivar.....1857	NU-TEC.....2048
Kiiri.....1513	Luma.....1674	Mizuda.....1860	<b>O</b>
Kingavon.....1519	Lumatron.....1676	Monyka.....1873	Oceanic.....2061
Kingsley.....1520	Lux May.....1680	Morgans.....3970	Okana.....4122
Kiota.....1522	Luxor.....1683	Motion.....1877	Okano.....2065
Kiss.....1524	<b>M</b>	MTC.....1889	Omni.....2074
Kiton.....1525	M Electronic.....1688	MTEC.....1890	ONCEAS.....3544
Kneissel.....1535	Madison.....1698	MTlogic.....1892	Onida.....2081
Koda.....1539	Magnadyne.....1702	Mudan.....1896	Onimax.....2082
Kolin.....1541	Magnafon.....1703	Multi System.....3542	Onkyo.....2085
Kolster.....1543	Magnafon.....1703	Multistandard.....1904	Onwa.....2087
Konig.....1547	Magnavox.....1706	Multisystem.....4121	Oopla.....2088
Konka.....1548	Magnex.....1707	Multitec.....1906	Opera.....2090
Korpel.....1552	Magnum.....1709	Multitech.....1907	Optim.....2094
Korting.....1554	Majestic.....1713	Murphy.....1911	Orava.....2101
Kosmos.....1557	Mandor.....1717	Musikland.....1915	Orbit.....2103
Koyoda.....1561	Manesth.....1718	Mustek.....1916	Orion.....2111
KTV.....1572	Manhattan.....1719	Mx Onda.....1919	Oritron.....2112
Kuro.....1579	Marantz.....1724	Mystral.....1925	Orline.....2113
KXD.....1581	Marelli.....1729	<b>N</b>	Ormond.....2114
Kyoshu.....1583	Mark.....1731	NAD.....1926	Orson.....2115
Kyoto.....1585	Marquant.....1734	Naiko.....1930	Orsowe.....2116
<b>L</b>	Masuda.....1744	Nakamichi.....1932	Osaki.....2118
L&S Electronic.....1588	Matsui.....1750	Nakamura.....1933	Osio.....2121
Lafayette.....1591	Matsushita.....1751	Naonis.....1936	Oso.....2122
LaSAT.....1597	McMichael.....1768	National.....1942	Osume.....2123
Lawson.....1603	Mecotek.....1776	NEC.....1950	Otto Versand.....2126
Layco.....4117	Mediator.....1784	Neckermann.....1951	Oulin.....4123
Lecson.....1606	Mediencom.....1786	NEI.....1952	
Lenco.....1615	Medion.....1787	Nesco.....1960	
Lenoir.....1617	Medison.....1788	Netsat.....1966	
	Meletronic.....3654		

<b>P</b>	
P&B.....	2132
Pacific.....	2135
Pael.....	2140
Palladium.....	2145
Palsonic.....	2147
Panama.....	2149
Panasonic.....	2153
Panavision.....	2154
Panda.....	2155
Pathe Cinema.....	2168
Pathe Marconi.....	2169
Pausa.....	2171
peeKTON.....	2178
Pensonic.....	3778
Perdio.....	2185
Perfekt.....	2186
Philco.....	2192
Philharmonic.....	2194
Philips.....	2195
Philips Magnavox.....	3715
Phoenix.....	2199
Phonola.....	2201
Phonotrend.....	2202
Pioneer.....	2212
Pionier.....	2213
Plantron.....	2219
Playsonic.....	2224
Pointer.....	2229
Polaroid.....	2230
Poppy.....	2236
Portland.....	2238
Powerpoint.....	2241
Prandoni Prince.....	4125
Prandoni-Prince.....	2242
Precision.....	2244
Prima.....	2253
Prinz.....	2260
Profekt.....	4126
Profex.....	2269
Profilo.....	2272
Profitronic.....	2273
Profi-Tronic.....	3545
Proline.....	2274
Promax.....	2275
Prosonic.....	2282
Protech.....	2284
ProVision.....	2291
Provision.....	2291
Pye.....	2302
Pymi.....	2304
<b>Q</b>	
Quandra Vision.....	3546
Quasar.....	2320
Quelle.....	2322
Questa.....	2324
<b>R</b>	
Radialva.....	2329
Radio.....	4128
Radio Shack.....	3547
Radiola.....	2330
Radiomarelli.....	2331
Radionette.....	2332
RadioShack.....	2333
Radiotone.....	2334
Raite.....	2340
Rank.....	2345
RBM.....	2350
RCA.....	2351
REC.....	2357
Recor.....	2359
Rectiligne.....	2362
Rediffusion.....	2364
Redstar.....	2366
RedStar.....	2366
Reflex.....	2368
Reoc.....	2379
Revox.....	2383
Revoy.....	2384
Rex.....	2385
RFT.....	2386
Rhapsody.....	2387
Rimax.....	2391
R-Line.....	2327
Roadstar.....	2398
Robotron.....	2401
Ronin.....	2412
Rowa.....	2416
Rownsonic.....	2417
Royal.....	2419
Royal Lux.....	2420
RTF.....	3548

<b>S</b>	
Saba.....	2429
Sabaki.....	2430
Sagem.....	2434
Saisho.....	2437
Saivod.....	2439
Salora.....	2443
Sambers.....	2445
Sampo.....	2446
Samsung.....	2448
Samurai.....	2451
Sandra.....	2454
Sansui.....	2458
Sanwa.....	2461
Sanyo.....	2462
Sanyuan.....	2464
Saville.....	2491
SBR.....	2492
ScanMagic.....	2496
Schaub Lorenz.....	2500
Schneider.....	2501
Scientific Labs.....	2504
Scott.....	2508
Seeltech.....	2519
SEG.....	2522
SEL.....	2524
Sei-Sinudyne.....	2525
SEI-Sinudyne.....	2525
Seleco.....	2528
Sencora.....	2531
Sentra.....	2534
Sentron.....	4216
Serino.....	2539
Shanghai.....	2547
Shanshui.....	4133
Shaofeng.....	2549
Sharp.....	2550
Shencai.....	2553
ShengCai.....	4217
Shenyang.....	2555
Sherwood.....	2557
Shintom.....	2563
Shintoshi.....	2564
Shivaki.....	2567
Shorai.....	2569
Siam.....	2572
Siarem.....	2573
Siemens.....	2574
Siera.....	2576
Sierra.....	3549
Siesta.....	2577
Sigmathek.....	2580
Silva.....	2591
Silva Schneider.....	2592
Silver.....	2594
Singer.....	2599
Sinudyne.....	2601
Skantic.....	2605
SKY.....	2610
Skymaster.....	2621
Skyworth.....	2631
Slim Art.....	2636
SM Electronic.....	2639
Sogera.....	2649
Solavox.....	2654
Sonawa.....	2663
Songdian.....	4136
Soniko.....	2669
Sonitron.....	2671
Sonneclair.....	2673
Sonoko.....	2675
Sonolor.....	2676
Sontec.....	2677
Sontech.....	3435
Sony.....	2679
Sound & Vision.....	2680
Soundmaster.....	2685
Soundmax.....	2687
Soundwave.....	2689
Spectra.....	2697
Srypton.....	4138
Standard.....	2713
Star Cluster.....	3724
Starlight.....	2727
Starlite.....	2728
Starmedia.....	2730
Stenway.....	2739
Stern.....	2741
Strato.....	2745
Stylandia.....	2752
Sunkai.....	2762
Sunstar.....	2768
Suntronic.....	2770
Sunwood.....	2772
Superla.....	2782
Supersonic.....	2787
SuperTech.....	2789
Supervision.....	2791

Supra.....	2792	Tesmet.....	3550
Susumu .....	2797	Tevion .....	2962
Sutron.....	2798	Texet.....	2963
Sydney.....	2808	Thomson .....	2972
Sylvania .....	2809	Thorn.....	2974
Symphonic .....	2810	Tiankeban.....	4142
Synn.....	2813	Tobo.....	2999
Sysline.....	2815	Tokai.....	3001
Sytong.....	2820	Tokyo .....	3004

## T

T.D.E. Systems .....	2822	Tomashi .....	3006
Tactus.....	2825	Tonsai.....	4223
Taishan.....	2835	Top Suxess.....	3013
Taisho.....	2836	Toshiba.....	3021
Tandberg.....	2842	Towada .....	3028
Tandy.....	2843	Towika.....	4224
Tashiko .....	2850	Toyoda.....	3030
Tatung.....	2852	Trakton .....	3036
TCL.....	2856	Trans Continens .....	3037
TCM.....	2857	TRANS-continents.....	3039
Teac.....	2860	Transfec .....	4143
Teachimagen .....	4140	Transonic .....	3041
Tec.....	2861	Transtec.....	3042
Tech Line .....	2863	Trident.....	3054
Techica .....	2865	Trio.....	3056
Technema.....	2866	Tristar.....	3057
Technics.....	2869	Triumph.....	3058
Technika.....	2870	TruVision.....	3061
TechniSat.....	2873	TSM.....	3065
Tedex .....	2889	TVA.....	4225

## U

Teleavia .....	2901	Uher.....	3089
Telecor .....	2910	Ultravox.....	3095
Telefunken.....	2914	Umax.....	3098
Telefusion.....	2915	Unic Line.....	3100
Telegazi .....	2917	Union.....	3781
Telemeister .....	2924	United .....	3106
Telesonic .....	2930	United Quick Star .....	4226
Telestar.....	2931	Universal .....	3113
Teletech.....	2934	Universum .....	3115
Teleton .....	2935	Univox.....	3116
Televideon.....	2938		
Television .....	2939		
Televiso.....	2941		
Temco.....	2946		
Tennessee.....	2952		
Tenosal.....	2953		
Tensai.....	2954		
Tenson.....	2955		

## V

Vestel .....	3148
Vexa.....	3149
Vibrant.....	3154
Victor.....	3155
Videologic.....	3165
Videologique.....	3166
Videon.....	4227
Videosat .....	3170
VideoSystem.....	3172
Videotechnic.....	3173
Videoton .....	3174
Viewmaster .....	3182
Viewsonic.....	3186
Visiola.....	3197
Vision .....	3198
Vistar .....	3207
Vortec .....	3217
Voxson.....	3220

## W

Waitec.....	3227
Waltham .....	3230
Watson .....	3233
Watt Radio.....	3234
Wega.....	3238
Wegavox.....	3239
Welltech.....	3244
Weltblick.....	3245
Weston.....	3251
Wharfedale.....	3255
White Westinghouse.....	3258
Windstar.....	3266
Woxter.....	3286

## X

Xbox.....	3295
Xiahua.....	3299
Xiangyu.....	3302
Xingfu.....	3305
Xinghai .....	3306
Xinrisong.....	3308
Xlogic.....	3310
XMS.....	3312
Xoro.....	3315
Xrypton.....	3317
Xuelian.....	3320

## Y

Yakumo.....	3324
Yamada.....	3325
Yamaha .....	3326
Yamakawa .....	3327
Yamishi .....	3328
Yokan .....	3335
Yoko.....	3336
Yorx.....	3340
Yuhang.....	3345
Yukai .....	3346

## Z

Zanussi.....	3349
Zenith.....	3356
ZhuHai.....	3364

## EN Information to the consumer

### Compliance with EMF

Koninklijke Philips Electronics N.V. manufactures and sells many products targeted at consumers, which, like any electronic apparatus, in general have the ability to emit and receive electromagnetic signals.

One of Philips' leading Business Principles is to take all necessary health and safety measures for our products, to comply with all applicable legal requirements and to stay well within the EMF standards applicable at the time of producing the products.

Philips is committed to develop, produce and market products that cause no adverse health effects. Philips confirms that if its products are handled properly for their intended use, they are safe to use according to scientific evidence available today.

Philips plays an active role in the development of international EMF and safety standards, enabling Philips to anticipate further developments in standardization for early integration in its products.



### Recycling and disposal

Your product is designed and manufactured with high quality materials and components, which can be recycled and reused.



When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC:



Never dispose of your product with other household waste. Please inform yourself about the local separate collection system for electrical and electronic products. Please act according to your local rules and do not dispose of your old products with your normal household waste. The correct disposal of your old product will help prevent potential negative consequences for the environment and human health.

### Battery information

Your product operates on batteries covered by the European Directive 2006/66/EC, which cannot be disposed with normal household waste.

Please inform yourself about the local rules on separate collection of batteries because the correct disposal will help prevent negative consequences for the environmental and human health.

© 2010 Koninklijke Philips Electronics N.V.  
All rights reserved. Reproduction in whole or in part is prohibited without the prior written consent of the copyright owner.  
The information presented in this document does not form part of any quotation or contract, is believed to be accurate and reliable and may be changed without notice. No liability will be accepted by the publisher for any consequence of its use. Publication there of does not convey nor imply any license under patent- or other industrial or intellectual property rights.

Document order number: 3139 235 5255 2

November 2010

[www.philips.com](http://www.philips.com)

RTP/4510

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>