


## T374AH REMOTE CONTROL INSTRUCTIONS

### Channel Guide

This feature is activated with the Guest or Setup remote's CH GDE button. This feature uses the labels that are assigned by the channel labeling function described on page three. Once activated by pressing the CH GDE button, the TV lists the Channel Labels for channels with assigned labels. Channels that are not in the Favorite Station memory (see "ADD CHANNEL" on page four) will not be displayed. Each listing or "page" will show seven channel labels. Each press of the CH GDE button will show subsequent channel listing pages if they exist. The maximum number of labels that can be displayed is 32. If CH GDE is not pressed for seven seconds, the listing will timeout. If any other remote command is sent that requires the television on-screen display, the listing will be cleared, and that command invoked.

**IMPORTANT:** When programming is complete, press or depress the RECALL button to save the program changes in the TV memory.

To adjust the TV for either Hotel or Consumer mode, press the TV SETUP button on the remote, then enter the numerical sequence **02 49 95**, then press the SELECT button. Choose between Hotel or Consumer mode by pressing either the + or - button. Only a limited amount of features are available in Consumer mode.

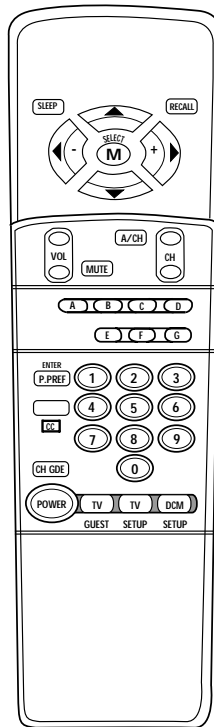


The T374AH remote control is used to perform setup and verification operations on Philips Consumer Electronics Company commercial chassis. This remote is fully backward compatible with previous commercial chassis setup remotes, but has added functionality. The three buttons at the bottom of the remote,

### TV Guest, TV Setup, and DCM Setup,

are called function buttons. They are used to select the desired function to be performed.

**TV Guest mode** will emulate the "Guest" remote commands. This provides the installer the ability to verify proper "Guest Remote" operation using only one remote. Only the commands supported on the "Guest" remote may be valid. To use this function, press the TV GUEST button, then press any button that corresponds to the "Guest Remote." The remote will remain in the TV Guest mode until another function button is pressed.

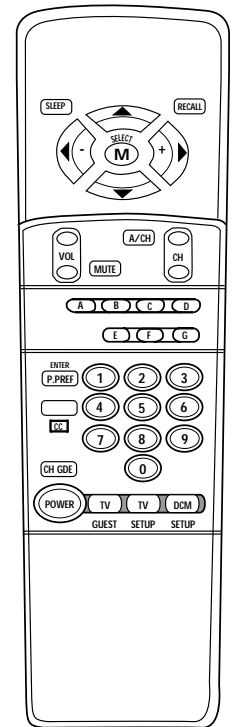

**TV Setup mode** is used to set all the TV control settings and commercial features. This function is completely backward compatible with previous setup transmitters but has additional buttons that are valid for newer TV control systems. The remote will remain in the TV Setup mode until another function button is pressed.

**DCM Setup (Data Communication Module) mode** is similar to the TV Guest Mode except the Select and Cursor keys send "Softkey" commands, allowing the DCM to have its own setup keys. The function of these keys will depend upon each DCM manufacturer. The remote will remain in the DCM Setup mode until another function button is pressed.

**Softkey** is defined as a command that is never acted upon by the TV control system. It is always passed through the "Smart Port" to the DCM. Each DCM manufacturer can make its own interpretation of the function of the key. The functional description of the TV controls and features are as follows: To set up the TV, press the TV Setup button to place the remote in TV Setup mode.

To begin programming, press the TV SETUP button on the remote control to put the remote into TV setup mode. Then press the POWER button to turn on the TV. Press the SELECT button for the display access functions to appear on the screen. Depending on the model and its features, some or all of the display functions and features described below will be valid.

**PICTURE**  
-.....+ Press the + or - button to adjust the picture to the desired level.

**BRIGHTNESS**  
-.....+ Press the + or - button to adjust the brightness to the desired level.

**COLOR**  
-.....+ Press the + or - button to adjust the color to the desired level.

**TINT**  
-.....+ Press the + or - button to adjust the tint to the desired level.

**SHARPNESS**  
-.....+ Press the + or - button to adjust the sharpness to the desired level.

**VOLUME LIMITER**  
-.....+ Press the + or - button to set the maximum volume available from the keyboard or the Guest transmitter.

**+ VOLUME FORCED MAX**  
**->STD VOL UP/DOWN** Press the + button to disable the normal functioning of the volume control. This forces the volume to the maximum level allowed by the volume limiter described in the next step. In this mode, the mute function is disabled. Press the (-) button for "standard volume up/down," allowing normal volume control operation.

**+ SET MAX VOL xx**  
**(VOL FORCED MAX)** Press the VOLUME UP or VOLUME DOWN button to set the maximum level available. The range is made up of 63 steps from minimum to maximum.

**++SET MAX VOLUME**  
**->SET ON VOL** Press the + or - button to choose between maximum volume or the "turn on" volume. Press the VOLUME UP or VOLUME DOWN button to set either the maximum volume level available, or the set's initial "turn on" volume level. There are 63 steps between minimum and maximum.

**+ CABLE TUNING**  
**-> BCST TUNING** Press the + button to have the TV receive cable channels 1-125, excluding channels 95, 96, and 97. Press the - button to have the TV receive the normal off-the-air channels 2-69.

**AUTO PROGRAMMING**  
**+ TO BEGIN** This function allows the TV to scan all the channels and automatically program in memory all active channels on the system. Press the + button to activate auto programming. Press the - button at any time to stop this function.

**+ CH GDE ENABLE**  
**-> CH GDE DISABLE** Press the + button to enable the Channel Guide feature. Press the - button to disable the function.

**+ ADD CHANNEL**  
**-> DELETE xx** This function allows individual channels to be added or deleted from memory. Tune the desired channel by using the CHANNEL UP/CHANNEL DOWN buttons or by random access, and then press the + or - button to either add or remove a channel from memory.

**LABEL xx**  
**+ MODIFY**  
**- DELETE** This function will give a name, up to eight characters, to a channel. Press the - button to delete any existing label. Press the + button to activate this function. Once in modification display, a cursor will point to the position on the label. The + and - buttons will scan through the available characters. The RESET button will move the cursor to the next position on the label. A total of 32 channels may be labeled.

**+ REMINDER ON**  
**-> REMINDER OFF** Press the + button to allow the continuous display of the current channel number. Press the - button and the channel number will appear for only a few seconds after the channel change. It will then disappear.

**+ FORCE TO CH xx**  
**->STD PWR ON CH** This function will determine what channel the TV will tune to at initial turn on. Tune any channel and press the + button. The TV will tune to that channel every time it is turned on. Press the - button and the TV will, at turn on, tune to the last channel tuned before turn off.

**+ PWR FORCED ON**  
**-> STD PWR ON/OFF** Press the + button for the "POWER FORCED ON" mode. This disables the normal on/off control; the receiver will be activated once AC power is applied. The "sleep timer" function is disabled; the set may not be turned off except by removing power. Press the - button for normal "POWER ON/OFF" control.

**+ NO DISPLAYS**  
**-> STD DISPLAYS** The "NO DISPLAYS" function disables any on-screen displays, except the sleep timer and mute. Press the + button to activate this function. Press the - button for standard displays.

**+ TIME LIMIT xx HR**  
**-> NO TIME LIMIT** The "TIME LIMIT" function will automatically turn off the set if it has been on continuously for the time duration shown. Press the + button to activate the function and set the time limit, up to 99 hours. Press the - button for normal TV operation.

**SMART SOUND**  
**ON/OFF** Press the + or - button to turn Smart Sound ON or OFF. Smart Sound allows you to preset a desired volume level that the TV sound will not exceed.

**LANGUAGE**  
**ENGLISH/ESPAÑOL/FRANÇAIS** Press the + or - button to select the language you prefer. You may choose English, Spanish (Español), or French (Français),

**AV MUTE**  
**ON/OFF** Press the + or - button to turn AV MUTE On or Off. When AV MUTE is active, the audio is muted and the screen will be solid black or solid blue if a clear signal is not received.

**EXIT**  
**NO/YES** Press the + or - button to select YES or NO. Select YES when you are ready to leave the on-screen menu system.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>