

Pioneer

Operation Manual

CD RDS RECEIVER

DEH-4400BT

Made for



iPod



iPhone



Bluetooth®

English

Before you start

Thank you for purchasing this PIONEER product

To ensure proper use, please read through this manual before using this product. It is especially important that you read and observe **WARNINGS** and **CAUTIONS** in this manual. *Please keep the manual in a safe and accessible place for future reference.*



If you want to dispose this product, do not mix it with general household waste. There is a separate collection system for used electronic products in accordance with legislation that requires proper treatment, recovery and recycling.

Private households in the member states of the EU, in Switzerland and Norway may return their used electronic products free of charge to designated collection facilities or to a retailer (if you purchase a similar new one).

For countries not mentioned above, please contact your local authorities for the correct method of disposal.

By doing so you will ensure that your disposed product undergoes the necessary treatment, recovery and recycling and thus prevent potential negative effects on the environment and human health.

About this unit

The tuner frequencies on this unit are allocated for use in Western Europe, Asia, the Middle East, Africa and Oceania. Use in other areas may result in poor reception. The RDS (radio data system) function only operates in areas with broadcasting RDS signals for FM stations.

CAUTION

This product is a class 1 laser product classified under the Safety of laser products, IEC 60825-1:2007, and contains a class 1M laser module. To ensure continued safety, do not remove any covers or attempt to gain access to the inside of the product. Refer all servicing to qualified personnel.

CLASS 1 LASER PRODUCT

CAUTION—CLASS 1M INVISIBLE LASER RADIATION WHEN OPEN, DO NOT VIEW DIRECTLY WITH OPTICAL INSTRUMENTS.

CAUTION

- Do not allow this unit to come into contact with liquids. Electrical shock could result. Also, damage to this unit, smoke, and overheating could result from contact with liquids.
- The Pioneer CarStereo-Pass is for use only in Germany.
- Always keep the volume low enough to hear outside sounds.
- Avoid exposure to moisture.
- If the battery is disconnected or discharged, any preset memory will be erased.

Note

Function setting operations are completed even if the menu is cancelled before the operations are confirmed.

About this manual


- In the following instructions, USB memories and USB audio players are collectively referred to as "USB storage device".
- In this manual, iPod and iPhone will be referred to as "iPod".

Before you start


Demo mode

Important


- Failure to connect the red lead (ACC) of this unit to a terminal coupled with ignition switch on/off operations may lead to battery drain.
- Remember that if the feature demo continues operating when the car engine is turned off, it may drain battery power.

The demo starts automatically if you do not operate this unit within about 30 seconds since the unit was last operated or if the ignition switch is set to ACC or ON while the unit is turned off. To cancel the demo mode, you need to display the initial settings. Select **DEMO** (*demo display setting*) and turn off the demo display. For details, refer to *Initial settings* on page 18. 

In case of trouble

Should this unit fail to operate properly, please contact your dealer or nearest authorized PIONEER Service Station. 

Head unit

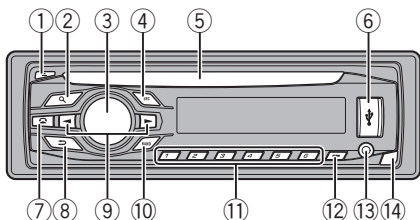

Part	Part
① ▲ (eject)	⑧ ↵ (back/display)
② 🔍 (list)	⑨ ⏪/⏩
③ MULTI-CONTROL (M.C.)	⑩ BAND/ (iPod control)
④ SRC/OFF	⑪ 1 to 6
⑤ Disc loading slot	⑫ PTY
⑥ USB port	⑬ AUX input jack (3.5 mm stereo jack)
⑦ 📞 (phone/on hook)	⑭ Detach button


⚠ CAUTION

- Use an optional Pioneer USB cable (CD-U50E) to connect the USB audio player/USB memory as any device connected directly to the unit will protrude out from the unit and may be dangerous.
- Do not use unauthorized products. ◻

Optional remote control

The remote control CD-SR110 is sold separately.


Operation is the same as when using the buttons on the head unit.

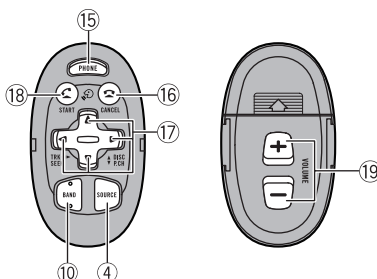







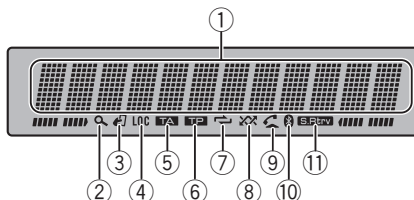


Part	Operation
⑮ PHONE	Press to display the phone menu. Press and hold to display the connection menu. Press to reject an incoming call or cancel making a call.
⑯ CAN-CEL	While operating the phone, press to end a call or reject an incoming call.
⑰ ▲/▼/⏪/⏩	Press to perform manual seek tuning, fast forward, reverse and track search controls. Also used for controlling functions.
⑱ START	Press to start talking on the phone while operating a phone. Press to switch between callers on hold.
⑲ VOLUME	Press to increase or decrease volume.



Display indication



Operating this unit

Indicator	State
①	Main display section <ul style="list-style-type: none"> • Tuner: band and frequency • RDS: program service name, PTY information and other literal information • Built-in CD, USB storage device and iPod: elapsed playback time and text information
②	 (list) The list function is being operated.
③	 (iPod control) This unit's iPod function is operated from your iPod.
④	LOC Local seek tuning is on.
⑤	 (TA) TA function is on.
⑥	 (TP) A TP station is tuned in.
⑦	 (repeat) Track or folder repeat is on.
⑧	 (random/shuffle) Random play is on. The iPod source is selected and the shuffle or shuffle all function is on.
⑨	 (auto answer) Shows when the automatic answering function is on.
⑩	 (Bluetooth indicator) Connected to a Bluetooth device. The line is on hold.
⑪	 (sound retriever) The sound retriever function is on.



Set up menu

When you turn the ignition switch to ON after installation, set up menu appears on the display.

You can set up the menu options below.

1 After installation of this unit, turn the ignition switch to ON.

SET UP appears.

2 Turn M.C. to switch to YES. Press M.C. to select.

- If you do not operate for 30 seconds, the set up menu will not be displayed.
- If you prefer not to set up at this time, turn **M.C.** to switch to **NO**. Press to select. If you select **NO**, you cannot set up in the set up menu.

3 Perform the following procedures to set the menu.

To proceed to the next menu option, you need to confirm your selection.

CLOCK SET (setting the clock)

- 1 Turn **M.C.** to adjust hour.
- 2 Press **M.C.** to select minute.
- 3 Turn **M.C.** to adjust minute.
- 4 Press **M.C.** to confirm the selection.

FM STEP (FM tuning step)

Normally, the FM tuning step employed by seek tuning is 50 kHz. When AF or TA is on, the tuning step automatically changes to 100 kHz. It may be preferable to set the tuning step to 50 kHz when AF is on.

- The tuning step remains at 50 kHz during manual tuning.
- 1 Turn **M.C.** to select the FM tuning step.
50 (50 kHz)—**100** (100 kHz)
 - 2 Press **M.C.** to confirm the selection.

DEMO (demo display setting)

- 1 Turn **M.C.** to set the demo display to on or off.
- 2 Press **M.C.** to confirm the selection.

TITLE (multi-language)

This unit can display the text information of a compressed audio file even if they are embedded in a Western European or Russian language.


- If the embedded language and the selected language setting are not the same, text information may not display properly.
 - Some characters may not be displayed properly.
- 1 Turn **M.C.** to select the desired setting.
EUR (European)—**RUS** (Russian)
 - 2 Press **M.C.** to confirm the selection.
QUIT appears.

Operating this unit

4 To finish your settings, turn **M.C.** to select **YES**. Press to select.

- If you prefer to change your setting again, turn **M.C.** to switch to **NO**. Press to select.

Notes

- You can set up the menu options in the initial settings. For details about the settings, refer to *Initial settings* on page 18.
- You can cancel set up menu by pressing **SRC/OFF**. 


Basic operations

Important

- Handle gently when removing or attaching the front panel.
- Avoid subjecting the front panel to excessive shock.
- Keep the front panel out of direct sunlight and high temperatures.
- To avoid damaging the device or vehicle interior, remove any cables and devices attached to the front panel before detaching it.

Removing the front panel to protect your unit from theft


- 1 Press the detach button to release the front panel.
- 2 Push the front panel upward (I) and then pull it toward (II) you.

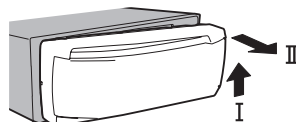

- 3 Always keep the detached front panel in a protection device such as a protection case.

Re-attaching the front panel

- 1 Slide the front panel to the left. Make sure to insert the tabs on the left side of the head unit into the slots on the front panel.

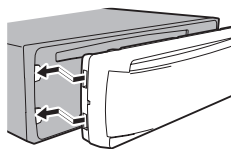

- 2 Press the right side of the front panel until it is firmly seated. If you cannot attach the front panel to the head unit successfully, make sure that you are placing the front panel onto the head unit correctly. Forcing the front panel into place may result in damage to the front panel or head unit.

Turning the unit on

- 1 Press **SRC/OFF** to turn the unit on.

Turning the unit off

- 1 Press and hold **SRC/OFF** until the unit turns off.

Selecting a source

- 1 Press **SRC/OFF** to cycle between:
TUNER (tuner)—**CD** (built-in CD player)—**USB** (USB)/**iPod** (iPod)—**AUX** (AUX)—**BT AUDIO** (Bluetooth audio)

Adjusting the volume


- 1 Turn **M.C.** to adjust the volume.

CAUTION

For safety reasons, park your vehicle when removing the front panel.

Operating this unit

Note

When this unit's blue/white lead is connected to the vehicle's auto-antenna relay control terminal, the vehicle's antenna extends when this unit's source is turned on. To retract the antenna, turn the source off. 

Using Bluetooth telephone

Important


- Since this unit is on standby to connect with your cellular phone via Bluetooth wireless technology, using it without the engine running can drain the battery power.
- Operations may vary depending on the kind of cellular phone.
- Advanced operations that require attention such as dialing numbers on the monitor, using the phone book, etc., are prohibited while driving. Park your vehicle in a safe place when using these advanced operations.

Setting up for hands-free phoning

Before you can use the hands-free phoning function you must set up the unit for use with your cellular phone.

- 1 Connection
Operate the Bluetooth telephone connection menu. Refer to *Connection menu operation* on page 14.
- 2 Function settings
Operate the Bluetooth telephone function menu. Refer to *Phone menu operation* on page 16.

Basic operations

- | |
|---|
| Making a phone call |
| 1 Refer to <i>Phone menu operation</i> on page 16. |
| Answering an incoming call |
| 1 When a call is received, press M.C. |
| Ending a call |
| 1 Press  . |

Rejecting an incoming call
1 When a call is received, press  .

Answering a call waiting
1 When a call is received, press M.C.

Switching between callers on hold
1 Press M.C.

Canceling call waiting
1 Press  .


Adjusting the other party's listening volume
1 Press  or  while talking on the phone.

- When private mode is on, this function is not available.


Turning private mode on or off
1 Press BAND/  while talking on the phone.


Switching the information display
1 Press  while talking on the phone.

Notes

- If private mode is selected on the cellular phone, hands-free phoning may not be available.
- The estimated call time appears in the display (this may differ slightly from the actual call time). 

Menu operations identical for set up menu/function settings/audio adjustments/initial settings/lists

Returning to the previous display
Returning to the previous list (the folder one level higher)
1 Press  .

Returning to the ordinary display
Canceling the initial setting menu/set up menu
1 Press BAND/  .


Returning to the ordinary display from the list
1 Press BAND/  .



Tuner

Basic operations

Selecting a band

- 1 Press **BAND**/ until the desired band (**FM1**, **FM2**, **FM3** for FM or **MW/LW**) is displayed.

Recalling preset stations

- 1 Press **◀** or **▶**.
 - If **MAN** (manual tuning) is selected in **SEEK**, you cannot recall preset stations. You need to select **PCH** (preset channel) in **SEEK**. For details about the settings, refer to **SEEK** (*left/right key setting*) on the next page.

Manual tuning (step by step)

- 1 Press **◀** or **▶**.
 - If **PCH** (preset channel) is selected in **SEEK**, you cannot tune up or down manually. You need to select **MAN** (manual tuning) in **SEEK**. For details about the settings, refer to **SEEK** (*left/right key setting*) on the next page.

Seeking

- 1 Press and hold **◀** or **▶**, and then release. You can cancel seek tuning by briefly pressing **◀** or **▶**. While pressing and holding **◀** or **▶**, you can skip stations. Seek tuning starts as soon as you release **◀** or **▶**.

Note

This unit's AF (alternative frequencies search) function can be turned on and off. AF should be off for normal tuning operation (refer to **AF** (*alternative frequencies search*) on the next page).

Storing and recalling stations for each band

Using preset tuning buttons

1 When you find a station that you want to store in memory, press one of the preset tuning buttons (1 to 6) and hold until the preset number stops flashing.

2 Press one of the preset tuning buttons (1 to 6) to select the desired station.

Switching the RDS display

- Press .

Program service name—PTY information—Entertainment—Frequency

- PTY information and the frequency appear on the display for eight seconds.
- Depending on the band, text information can be changed.

Using PTY functions

You can tune in to a station using PTY (program type) information.

Searching for an RDS station by PTY information

You can search for general types of broadcasting programs, such as those listed in the following section. Refer to this page.

- 1 Press **PTY**.
- 2 Turn **M.C.** to select a program type. **NEWS/INFO—POPULAR—CLASSICS—OTHERS**
- 3 Press **M.C.** to begin the search.

The unit searches for a station broadcasting that type of program. When a station is found, its program service name is displayed.

PTY (program type ID code) information is listed in the following section. Refer to this page.

- To cancel the search, press **M.C.** again.
- The program of some stations may differ from that indicated by the transmitted PTY.
- If no station is broadcasting the type of program you searched for, **NOT FOUND** is displayed for about two seconds and then the tuner returns to the original station.

PTY list

NEWS/INFO

NEWS (News), **AFFAIRS** (Current affairs), **INFO** (Information), **SPORT** (Sports), **WEATHER** (Weather), **FINANCE** (Finance)

POPULAR

POP MUS (Popular music), **ROCK MUS** (Rock music), **EASY MUS** (Easy listening), **OTH MUS** (Other music), **JAZZ** (Jazz), **COUNTRY** (Country music), **NAT MUS** (National music), **OLDIES** (Oldies music), **FOLK MUS** (Folk music)

CLASSICS

L. CLASS (Light classical), **CLASSIC** (Classical)

Operating this unit

OTHERS

EDUCATE (Education), **DRAMA** (Drama), **CULTURE** (Culture), **SCIENCE** (Science), **VARIED** (Varied), **CHILDREN** (Children's), **SOCIAL** (Social affairs), **RELIGION** (Religion), **PHONE IN** (Phone in), **TOURING** (Travel), **LEISURE** (Leisure), **DOCUMENT** (Documentaries)

Function settings

1 Press M.C. to display the main menu.

2 Turn M.C. to change the menu option and press to select FUNCTION.

3 Turn M.C. to select the function.

After selecting, perform the following procedures to set the function.

- If MW/LW band is selected, only **BSM**, **LOCAL** and **SEEK** are available.

BSM (best stations memory)

BSM (best stations memory) automatically stores the six strongest stations in the order of their signal strength.

- 1 Press **M.C.** to turn BSM on.
To cancel, press **M.C.** again.

REGION (regional)

When AF is used, the regional function limits the selection of stations to those broadcasting regional programs.

- 1 Press **M.C.** to turn the regional function on or off.

LOCAL (local seek tuning)

Local seek tuning lets you tune in to only those radio stations with sufficiently strong signals for good reception.

- 1 Press **M.C.** to select the desired setting.
FM: **OFF—LV1—LV2—LV3—LV4**
MW/LW: **OFF—LV1—LV2**
The highest level setting allows reception of only the strongest stations, while lower levels allow the reception of weaker stations.

PTY SEARCH (program type selection)

You can tune in to a station using PTY (program type) information.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select the desired setting.
NEWS/INFO—POPULAR—CLASSICS—OTHERS
- 3 Press **M.C.** to begin the search.
The unit searches for a station broadcasting that type of program. When a station is found, its program service name is displayed.
For PTY (program type ID code) information, refer to the previous page.
The program of some stations may differ from that indicated by the transmitted PTY.
If no station is broadcasting the type of program you searched for, **NOT FOUND** is displayed for about two seconds and then the tuner returns to the original station.

TA (traffic announcement standby)

- 1 Press **M.C.** to turn traffic announcement standby on or off.

AF (alternative frequencies search)

- 1 Press **M.C.** to turn AF on or off.

NEWS (news program interruption)

- 1 Press **M.C.** to turn the NEWS function on or off.

SEEK (left/right key setting)

You can assign a function to the left and right keys of the unit.

Select **MAN** (manual tuning) to tune up or down manually or select **PCH** (preset channel) to switch between preset channels.

- 1 Press **M.C.** to select **MAN** or **PCH**.



CD/CD-R/CD-RW and USB storage devices

Basic operations

Playing a CD/CD-R/CD-RW

- 1 Insert the disc into the disc loading slot with the label side up.

Ejecting a CD/CD-R/CD-RW

- 1 Press **▲**.

Operating this unit

Playing songs on a USB storage device

- 1 Open the USB port cover.
- 2 Plug in the USB storage device using a USB cable.
A song will be played automatically.

Stopping playback of files on a USB storage device

- 1 You may disconnect the USB storage device at any time.
The unit stops playback.

Selecting a folder

- 1 Press **1/▲** or **2/▼**.

Selecting a track

- 1 Press **◀** or **▶**.

Fast forwarding or reversing

- 1 Press and hold **◀** or **▶**.
 - When playing compressed audio, there is no sound during fast forward or reverse.

Returning to root folder

- 1 Press and hold **BAND/⏪**.

Switching between compressed audio and CD-DA

- 1 Press **BAND/⏪**.

Switching between playback memory devices

You can switch between playback memory devices on USB storage devices with more than one Mass Storage Device-compatible memory device.

- 1 Press **BAND/⏪**.
 - You can switch between up to 32 different memory devices.

Note

Disconnect USB storage devices from the unit when not in use.

Displaying text information

Selecting the desired text information

- 1 Press **↔**.
 - Depending on the version of iTunes used to write MP3 files to a disc or media file types, incompatible text stored within an audio file may be displayed incorrectly.
 - Text information items that can be changed depend on the media.

Selecting and playing files/tracks from the name list

1 Press **🔍** to switch to the file/track name list mode.

2 Use **M.C.** to select the desired file name (or folder name).

Changing the file or folder name

- 1 Turn **M.C.**

Playing

- 1 When a file or track is selected, press **M.C.**

Viewing a list of the files (or folders) in the selected folder

- 1 When a folder is selected, press **M.C.**

Playing a song in the selected folder

- 1 When a folder is selected, press and hold **M.C.**

Advanced operations using special buttons

Selecting a repeat play range

- 1 Press **6/↔** to cycle between the following:
 - CD/CD-R/CD-RW**
 - **ALL** – Repeat all tracks
 - **ONE** – Repeat the current track
 - **FLD** – Repeat the current folder
 - USB audio player/USB memory**
 - **ALL** – Repeat all files
 - **ONE** – Repeat the current file
 - **FLD** – Repeat the current folder

Playing tracks in random order

- 1 Press **5/⌘** to turn random play on or off.
Tracks in a selected repeat range are played in random order.
 - To change songs during random play, press **▶** to switch to the next track. Pressing **◀** restarts playback of the current track from the beginning of the song.

Pausing playback

- 1 Press **4/PAUSE** to pause or resume.

Enhancing compressed audio and restoring rich sound (sound retriever)

- 1 Press **3/S.Rtrv** to cycle between:
 - 1—2—OFF** (off)
 - 1** is effective for low compression rates, and **2** is effective for high compression rates.

Operating this unit

Function settings

1 Press M.C. to display the main menu.

2 Turn M.C. to change the menu option and press to select FUNCTION.

3 Turn M.C. to select the function.

After selecting, perform the following procedures to set the function.

REPEAT (repeat play)

- 1 Press **M.C.** to select a repeat play range.
For details, refer to *Selecting a repeat play range* on the previous page.

RANDOM (random play)

- 1 Press **M.C.** to turn random play on or off.

PAUSE (pause)

- 1 Press **M.C.** to pause or resume.

S.RTRV (sound retriever)

Automatically enhances compressed audio and restores rich sound.

- 1 Press **M.C.** to select the desired setting.
For details, refer to *Enhancing compressed audio and restoring rich sound (sound retriever)* on the previous page.



iPod

Basic operations

Playing songs on an iPod

- 1 Open the USB port cover.
2 Connect an iPod to the USB cable using an iPod Dock Connector.
A song will be played automatically.

Selecting a song (chapter)

- 1 Press ◀ or ▶.

Selecting an album

- 1 Press 1/∧ or 2/∨.
- The album may not be selected correctly if the iPod has more than one album with the same title on it. Select the album you want to listen to using list search. For details, refer to *Browsing for a song* on this page.

Fast forwarding or reversing

- 1 Press and hold ◀ or ▶.

Notes

- The iPod cannot be turned on or off when the control mode is set to **CTRL AUDIO**.
- Disconnect headphones from the iPod before connecting it to this unit.
- The iPod will turn off about two minutes after the ignition switch is set to OFF.

Displaying text information

Selecting the desired text information

- 1 Press ↵.

Browsing for a song

1 Press Q to switch to the top menu of list search.

2 Use M.C. to select a category/song.

Changing the name of the song or category

- 1 Turn **M.C.**
Playlists—artists—albums—songs—podcasts—
genres—composers—audiobooks

Playing

- 1 When a song is selected, press **M.C.**

Viewing a list of songs in the selected category

- 1 When a category is selected, press **M.C.**

Playing a song in the selected category

- 1 When a category is selected, press and hold **M.C.**

Searching the list by alphabet

- 1 When a list for the selected category is displayed, press Q to switch to alphabet search mode.
- You also can switch to alphabet search mode by turning **M.C.** twice.
- 2 Turn **M.C.** to select a letter.
3 Press **M.C.** to display the alphabetical list.
- To cancel searching, press ↵.

Operating this unit

Notes

- You can play playlists created with the PC application (MusicSphere). The application will be available on our website.
- Playlists that you created with the PC application (MusicSphere) are displayed in abbreviated form.

Advanced operations using special buttons

Selecting a repeat play range

- 1 Press **6/↔** to cycle between the following:
- OFF** – Repeat off
 - ONE** – Repeat the current song
 - ALL** – Repeat all songs in the selected list
- You cannot select **OFF** when **CTRL AUDIO** is selected. Refer to *Operating this unit's iPod function from your iPod* on this page.

Playing all songs in random order (shuffle all)

- 1 Press **5/⌘** to turn shuffle all on.
- When the control mode is set to **CTRL iPod/CTRL APP**, shuffle play is on.

Pausing playback

- 1 Press **4/PAUSE** to pause or resume.

Enhancing compressed audio and restoring rich sound (sound retriever)

- 1 Press **3/S.Rtrv** to cycle between:
- 1—2—OFF** (off)
- 1** is effective for low compression rates, and **2** is effective for high compression rates.

Playing songs related to the currently playing song

You can play songs from the following lists.

- Album list of the currently playing artist
- Song list of the currently playing album
- Album list of the currently playing genre

1 Press and hold M.C. to switch to link play mode.

2 Turn M.C. to change the mode; press to select.

- ARTIST** – Plays an album of the artist currently being played.

- ALBUM** – Plays a song from the album currently being played.
- GENRE** – Plays an album from the genre currently being played.

The selected song/album will be played after the currently playing song.

Notes

- The selected song/album may be canceled if you operate functions other than link search (e.g. fast forward and reverse).
- Depending on the song selected to play, the end of the currently playing song and the beginning of the selected song/album may be cut off.

Operating this unit's iPod function from your iPod

You can listen to the sound from your iPod applications using your car's speakers, when **CTRL APP** is selected.

- This function is not compatible with iPod nano 1st generation.

APP Mode is compatible with the following iPod models.

- iPhone 4 (software version 4.1 or later)
- iPhone 3GS (software version 3.0 or later)
- iPhone 3G (software version 3.0 or later)
- iPhone (software version 3.0 or later)
- iPod touch 4th generation (software version 4.1 or later)
- iPod touch 3rd generation (software version 3.0 or later)
- iPod touch 2nd generation (software version 3.0 or later)
- iPod touch 1st generation (software version 3.0 or later)

● Press BAND/⏮ to switch the control mode.

- CTRL iPod** – This unit's iPod function can be operated from the connected iPod.
- CTRL APP** – Play back the sound from your iPod applications.
- CTRL AUDIO** – This unit's iPod function can be operated from this unit.

Operating this unit

Notes

- Switching the control mode to **CTRL iPod/CTRL APP** pauses song playback. Operate the iPod to resume playback.
- The following functions are still accessible from the unit even if the control mode is set to **CTRL iPod/CTRL APP**.
 - Pausing
 - Fast forward/reverse
 - Selecting a song (chapter)
- When the control mode is set to **CTRL iPod**, operations are limited as follows:
 - The function settings are not available.
 - The browse function cannot be operated from this unit.

Function settings

1 Press M.C. to display the main menu.

2 Turn M.C. to change the menu option and press to select FUNCTION.

3 Turn M.C. to select the function.

After selecting, perform the following procedures to set the function.

- When the control mode is set to **CTRL iPod/CTRL APP**, only **PAUSE** or **S.RTRV** is available.

REPEAT (repeat play)

- Press **M.C.** to select a repeat play range.
For details, refer to *Selecting a repeat play range* on the previous page.

SHUFFLE (shuffle)

- Press **M.C.** to select your favorite setting.
 - SNG** – Play back songs in the selected list in random order.
 - ALB** – Play back songs from a randomly selected album in order.
 - OFF** – Cancel random play.

SHUFFLE ALL (shuffle all)

- Press **M.C.** to turn shuffle all on.
To turn off, set **SHUFFLE** in the **FUNCTION** menu to off.

LINK PLAY (link play)

- Press **M.C.** to display the setting mode.
- Turn **M.C.** to change the mode; press to select.
For details about the settings, refer to *Playing songs related to the currently playing song* on the previous page.

PAUSE (pause)

- Press **M.C.** to pause or resume.

AUDIO BOOK (audiobook speed)

- Press **M.C.** to display the setting mode.
- Turn **M.C.** to select your favorite setting.
 - FASTER** – Playback at a speed faster than normal
 - NORMAL** – Playback at normal speed
 - SLOWER** – Playback at a speed slower than normal
- Press **M.C.** to confirm the selection.

S.RTRV (sound retriever)

Automatically enhances compressed audio and restores rich sound.

- Press **M.C.** to select the desired setting.
For details, refer to *Enhancing compressed audio and restoring rich sound (sound retriever)* on the previous page.



Using Bluetooth wireless technology

Connection menu operation

Important

- Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation.
- Connected devices may not operate properly if more than one is connected at a time. Connecting one device at a time is recommended.

1 Press and hold to display the connection menu.

- You cannot operate this step during a call.

2 Turn **M.C.** to select the function.

After selecting, perform the following procedures to set the function.

- When the control mode is set to **CTRL iPod/CTRL APP**, only **PAUSE** or **S.RTRV** is available.

DEVICELIST (connecting or disconnecting a device from the device list)

- When no device is selected in the device list, this function is not available.
- 1 Press **M.C.** to display the setting mode.
 - 2 Turn **M.C.** to select the name of a device you want to connect/disconnect.
 - Press and hold **M.C.** to switch the Bluetooth device address and device name.
 - 3 Press **M.C.** to connect/disconnect the selected device.
If the connection is established, ***** is indicated on the device name.

DEL DEVICE (deleting a device from the device list)

- When no device is selected in the device list, this function is not available.
- 1 Press **M.C.** to display the setting mode.
 - 2 Turn **M.C.** to select the name of a device you want to delete.
 - Press and hold **M.C.** to switch the Bluetooth device address and device name.
 - 3 Press **M.C.** to display **DELETE YES**.
 - 4 Press **M.C.** to delete a device information from the device list.
- While this function is in use, do not turn off the engine.

ADD DEVICE (connecting a new device)

- 1 Press **M.C.** to start searching.
 - To cancel, press **M.C.** while searching.
- 2 Turn **M.C.** to select a device from the device list.
 - If the desired device is not displayed, select **RE-SEARCH**.
 - 6-digit number appears on the display of this unit. Once the connection is established, this number disappears.
 - Press and hold **M.C.** to switch the Bluetooth device address and device name.
- 3 Press **M.C.** to connect the selected device.
 - To complete the connection, check the device name (**DEH-4400BT**) and enter the PIN code on your device.
 - PIN code is set to **0000** as the default. You can change this code.
 - If you are unable to complete the connection using this unit, use the device to connect to the unit.
 - If 3 devices are already paired, **DEVICEFULL** is displayed and it is not possible to perform this operation. In this case, delete a paired device first.

SPCLDEVICE (setting a special device)

Bluetooth devices that are difficult to establish a connection with are called special devices. If your Bluetooth device is listed as a special device, select the appropriate one.

- 1 Press **M.C.** to display the setting mode.
 - If 3 devices are already paired, **DEVICEFULL** is displayed and it is not possible to perform this operation. In this case, delete a paired device first.
- 2 Turn **M.C.** to display a special device. Press to select.
- 3 Turn **M.C.** to display this unit's device name, Bluetooth device address and PIN code.
- 4 Use a device to connect to this unit.
 - To complete the connection, check the device name (**DEH-4400BT**) and enter the PIN code on your device.
 - PIN code is set to **0000** as the default. You can change this code.

A. CONN (connecting to a Bluetooth device automatically)

- 1 Press **M.C.** to turn automatic connection on or off.

VISIBLE (setting the visibility of this unit)

Operating this unit

To check the availability of this unit from other devices, Bluetooth visibility of this unit can be turned on.

- 1 Press **M.C.** to turn the visibility of this unit on or off.
 - While setting **SPCLDEVICE**, Bluetooth visibility of this unit is turned on temporarily.

PIN CODE (PIN code input)

To connect your device to this unit via Bluetooth wireless technology, you need to enter a PIN code on your device to verify the connection. The default code is **0000**, but you can change it with this function.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select a number.
- 3 Press **M.C.** to move the cursor to the next position.
- 4 After inputting PIN code, press and hold **M.C.**
 - After inputting, pressing **M.C.** returns you to the PIN code input display, and you can change the PIN code.

DEV. INFO (Bluetooth device address display)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** left to switch to the Bluetooth device address.
 - Turning **M.C.** right returns to the device name.

Bluetooth Audio

Important

- Depending on the Bluetooth audio player connected to this unit, the available operations will be limited to the following two levels:
 - A2DP profile (Advanced Audio Distribution Profile): You can only playback songs on your audio player.
 - AVRCP profile (Audio/Video Remote Control Profile): You can perform playback, pause playback, select songs, etc.
- Since there are a number of Bluetooth audio players available on the market, available operations will vary extensively. When operating your player with this unit, refer to the instruction manual that came with your Bluetooth audio player as well as this manual.
- Information related to a song (such as the elapsed playing time, song title, song index, etc.) cannot be displayed on this unit.
- As the signal from your cellular phone may cause noise, avoid using it when you are lis-

tening to songs on your Bluetooth audio player.

- When a call is in progress on the cellular phone connected to this unit via Bluetooth wireless technology, the sound of the Bluetooth audio player connected to this unit is muted.
- When the Bluetooth audio player is in use, you cannot connect to a Bluetooth telephone automatically.
- Playback continues even if you switch from your Bluetooth audio player to another source while listening to a song.

Even though your audio player does not contain a Bluetooth module, you can still control it from this unit via Bluetooth wireless technology using a Bluetooth adapter (sold separately).

Setting up for Bluetooth audio

Before you can use the Bluetooth audio function you must set up the unit for use with your Bluetooth audio player. This entails establishing a Bluetooth wireless connection between this unit and your Bluetooth audio player, and pairing your Bluetooth audio player with this unit.

Basic operations

Fast forwarding or reversing

- 1 Press and hold ◀ or ▶.

Selecting a track

- 1 Press ◀ or ▶.

Starting playback

- 1 Press **BAND**/⏏.

Function settings

- 1 Press **M.C.** to display the main menu.
- 2 Turn **M.C.** to change the menu option and press to select **FUNCTION**.
- 3 Turn **M.C.** to select the function.

After selecting, perform the following procedures to set the function.

Operating this unit

PLAY (play)

- 1 Press **M.C.** to start playback.

STOP (stop)

- 1 Press **M.C.** to stop the playback.

PAUSE (pause)

- 1 Press **M.C.** to turn pause on.

Phone menu operation

Important

Be sure to park your vehicle in a safe place and apply the parking brake when performing this operation.

1 Press to display the phone menu.

- When **PW SAVE** is on, you cannot display the phone menu. For details about the settings, refer to **PW SAVE** (*power saving*) on page 19.

2 Turn **M.C.** to select the function.

After selecting, perform the following procedures to set the function.

MISSED (missed call history)

DIALLED (dialed call history)

RECEIVED (received call history)

- 1 Press **M.C.** to display the phone number list.
- 2 Turn **M.C.** to select a name or phone number.
 - When you find a phone number that you want to store in memory, press and hold one of the preset tuning buttons (**1** to **6**).
 - Press one of preset buttons **1** to **6** to recall the desired preset number.
- 3 Press **M.C.** to make a call.

PHONE BOOK (phone book)

- The phone book in your cellular phone will be transferred automatically when the phone is connected to this unit.
- Depending on the cellular phone, the phone book may not be transferred automatically. In this case, operate your cellular phone to transfer the phone book. The visibility of this unit should be on. Refer to **VISIBLE** (*setting the visibility of this unit*) on page 14.

- 1 Press **M.C.** to display **SEARCH** (alphabetical list).

- 2 Turn **M.C.** to select the first letter of the name you are looking for.

- Press and hold **M.C.** to select the desired character type.

TOP (alphabet)–**OAA** (Greek alphabet)–**BCE** (Cyrillic alphabet)

- 3 Press **M.C.** to display a registered name list.

- 4 Turn **M.C.** to select the name you are looking for.

- 5 Press **M.C.** to display the phone number list.

- 6 Turn **M.C.** to select a phone number you want to call.

- When you find a phone number that you want to store in memory, press and hold one of the preset tuning buttons (**1** to **6**).
- Press one of preset buttons **1** to **6** to recall the desired preset number.

- 7 Press **M.C.** to make a call.

PRESET 1-6 (preset phone numbers)

- 1 Press **M.C.** to display the setting mode.

- 2 Use **M.C.** to select the desired preset number.

- Turn to change the menu option. Press to select.
 - You can also press one of the preset number buttons **1** to **6** to select a number.

- 3 Press **M.C.** to make a call.

PHONE FUNC (phone function)

You can set **A. ANSR** and **R.TONE** from this menu. For details, refer to *Function and operation* on this page.

Function and operation

1 Display PHONE FUNC.

Refer to **PHONE FUNC** (*phone function*) on this page.

2 Press **M.C.** to display the function menu.

3 Turn **M.C.** to select the function.

After selecting, perform the following procedures to set the function.

Operating this unit

A. ANSR (automatic answering)

- 1 Press **M.C.** to turn automatic answering on or off.

R.TONE (ring tone select)

- 1 Press **M.C.** to turn the ring tone on or off.

PB INVT (phone book name view)

- 1 Press **M.C.** to switch between the lists of names.



Audio adjustments

1 Press M.C. to display the main menu.

2 Turn M.C. to change the menu option and press to select AUDIO.

3 Turn M.C. to select the audio function.

After selecting, perform the following procedures to set the audio function.

FAD/BAL (fader/balance adjustment)

- 1 Press **M.C.** to display the setting mode.
- 2 Press **M.C.** to cycle between fader (front/rear) and balance (left/right).
- 3 Turn **M.C.** to adjust speaker balance.
 - When the rear output and RCA output setting are **SW**, you cannot adjust front/rear speaker balance. Refer to **REAR-SP** (rear output setting) on the next page. Refer to **PREOUT** (preout setting) on the next page.

PRESET EQ (equalizer recall)

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to select the equalizer.
DYNAMIC—VOCAL—NATURAL—CUSTOM—FLAT—POWERFUL
- 3 Press **M.C.** to confirm the selection.

TONE CTRL (equalizer adjustment)

- Adjusted equalizer curve settings are stored in **CUSTOM**.
- 1 Press **M.C.** to display the setting mode.
 - 2 Press **M.C.** to select **BASS** (bass)/**MID** (mid)/**TREBLE** (treble).
 - 3 Turn **M.C.** to adjust the level.
Adjustment range: **+6** to **-6**

LOUD (loudness)

Loudness compensates for deficiencies in the low-frequency and high-frequency ranges at low volume.

- 1 Press **M.C.** to select the desired setting.
OFF (off)—**LOW** (low)—**HI** (high)

SUB.W (subwoofer on/off setting)

This unit is equipped with a subwoofer output which can be turned on or off.

- 1 Press **M.C.** to select the desired setting.
NOR (normal phase)—**REV** (reverse phase)—**OFF** (subwoofer off)

SUB.W CTRL (subwoofer adjustment)

The cut-off frequency and output level can be adjusted when the subwoofer output is on.

Only frequencies lower than those in the selected range are outputted from the subwoofer.

- When you select **OFF** in **SUB.W**, you cannot select this function. For details, refer to **SUB.W** (subwoofer on/off setting) on this page.

- 1 Press **M.C.** to display the setting mode.
- 2 Press **M.C.** to cycle between the cut-off frequency and output level of the subwoofer.
Cut-off frequency (Cut-off frequency display flashes.)—Output level (Output level display flashes.)
- 3 Turn **M.C.** to select the desired setting.
Cut-off frequency: **50HZ—63HZ—80HZ—100HZ—125HZ**
Output level: **-24** to **+6**

SLA (source level adjustment)

SLA (Source level adjustment) lets you adjust the volume level of each source to prevent radical changes in volume when switching between sources.

- Settings are based on the FM volume level, which remains unchanged.
- The MW/LW volume level can also be adjusted with this function.
- When selecting FM as the source, you cannot switch to **SLA**.

- 1 Press **M.C.** to display the setting mode.
- 2 Turn **M.C.** to adjust the source volume.
Adjustment range: **+4** to **-4**
- 3 Press **M.C.** to confirm the selection.



Initial settings

Important

PW SAVE (power saving) is cancelled if the vehicle battery is disconnected and will need to be turned back on once the battery is reconnected. When **PW SAVE** (power saving) is off, depending on connection methods, the unit may continue to draw power from the battery if your vehicle's ignition doesn't have an ACC (accessory) position.

1 Press and hold SRC/OFF until the unit turns off.

2 Press SRC/OFF and hold until function name appears in the display.

3 Turn M.C. to select the initial setting.

After selecting, perform the following procedures to set the initial setting.

CLOCK SET (setting the clock)

- 1 Press **M.C.** to display the setting mode.
- 2 Press **M.C.** to select the segment of the clock display you wish to set.
Hour—Minute
- 3 Turn **M.C.** to adjust the clock.

CLOCK (clock display)

You can turn the clock display on or off. The clock display disappears temporarily when you perform other operations, but the clock display appears again after 25 seconds.

- 1 Press **M.C.** to turn the clock display on or off.

FM STEP (FM tuning step)

Normally, the FM tuning step employed by seek tuning is 50 kHz. When AF or TA is on, the tuning step automatically changes to 100 kHz. It may be preferable to set the tuning step to 50 kHz when AF is on.

- The tuning step remains at 50 kHz during manual tuning.
- 1 Press **M.C.** to select the FM tuning step.
50 (50 kHz)—**100** (100 kHz)

AUTO-PI (auto PI seek)

The unit can automatically search for a different station with the same programming, even during preset recall.

- 1 Press **M.C.** to turn Auto PI seek on or off.

AUX (auxiliary input)

Activate this setting when using an auxiliary device connected to this unit.

- 1 Press **M.C.** to turn **AUX** on or off.

USB PNP (plug and play)

This setting allows you to switch your source to **USB/iPod** automatically.

- 1 Press **M.C.** to turn the plug and play function on or off.
 - ON** – When a USB storage device/iPod is connected, depending on the type of device, the source is automatically switched to **USB/iPod** when you turn on the engine. If you disconnect your USB storage device/iPod, this unit's source is turned off.
 - OFF** – When a USB storage device/iPod is connected, the source is not switched to **USB/iPod** automatically. Please change the source to **USB/iPod** manually.

REAR-SP (rear output setting)

The rear speaker leads output can be used for full-range speaker or subwoofer connection. If you switch to **SW**, you can connect a rear speaker lead directly to a subwoofer without using an auxiliary amp.

Initially, **REAR-SP** is set for rear full-range speaker connection (**FUL**).

- 1 Press **M.C.** to select the desired setting.
FUL—SW
 - Even if you change this setting, there will be no output if you select **OFF** in **SUB.W** (Refer to **SUB.W** (*subwoofer on/off setting*) on the previous page).
 - If you change this setting, subwoofer output in the audio menu will return to the factory settings.

PREOUT (preout setting)

The RCA outputs can be used for rear speaker or subwoofer connection.

If you switch to **SW**, you can connect a rear speaker lead directly to a subwoofer without using an auxiliary amp.

Initially, **PREOUT** is set for rear full-range speaker connection (**SW**).

- 1 Press **M.C.** to select the desired setting.
SW—REA
 - Even if you change this setting, there will be no output if you select **OFF** in **SUB.W** (Refer to **SUB.W** (*subwoofer on/off setting*) on the previous page).
 - If you change this setting, subwoofer output in the audio menu will return to the factory settings.

DEMO (demo display setting)

Operating this unit

- 1 Press **M.C.** to turn the demo display on or off.
- If **PW SAVE** is on, **DEMO** cannot be selected.

SCROLL (scroll mode setting)

When ever scroll is set to **ON**, recorded text information scrolls continuously in the display. Set to **OFF** if you prefer the information to scroll just once.

- 1 Press **M.C.** to turn the ever scroll on or off.

BT AUDIO (Bluetooth audio activation)

You need to activate the **BT AUDIO** source in order to use a Bluetooth audio player.

- 1 Press **M.C.** to turn the **BT AUDIO** source on or off.

TITLE (multi-language)

This unit can display the text information of a compressed audio file even if they are embedded in a Western European or Russian language.

- If the embedded language and the selected language setting are not the same, text information may not display properly.
- Some characters may not be displayed properly.

- 1 Press **M.C.** to select the desired setting.

EUR (European)—**RUS** (Russian)

PW SAVE (power saving)

Switching this function on enables you to reduce the consumption of battery power.

- Turning on the source is the only operation allowed when this function is on.

- 1 Press **M.C.** to turn the power save on or off.

BT CLEAR (resetting the Bluetooth wireless technology module)

Bluetooth device data can be deleted. To protect personal information, we recommend deleting this data before transferring the unit to other persons. The following settings will be deleted.

- phone book entries on the Bluetooth telephone
- preset numbers on the Bluetooth telephone
- registration assignment of the Bluetooth telephone
- call history of the Bluetooth telephone
- information of the connected Bluetooth telephone
- PIN code of the Bluetooth device

- 1 Press **M.C.** to show the confirmation display.

YES is displayed. Clearing memory is now on standby.

If you do not want to reset phone memory, turn **M.C.** to display **CANCEL** and press to select.

- 2 Press **M.C.** to clear the memory.

CLEARED is displayed and the settings are deleted.

- While this function is in use, do not turn off the engine.

BT VERSION (Bluetooth version display)

You can display the system versions of this unit and of Bluetooth module.

- 1 Press **M.C.** to display the information.

S/W UPDATE (updating the software)

This function is used to update this unit with the latest software. For information on the software and updating, refer to our website.

- Never turn the unit off while the software is being updated.

- 1 Press **M.C.** to display the data transfer mode.

Follow the on-screen instructions to finish updating the software.



Switching the dimmer setting

You can adjust the brightness of illumination.

- Press and hold

Using an AUX source

1 Insert the stereo mini plug into the **AUX** input jack.

2 Press **SRC/OFF** to select **AUX** as the source.

Note

AUX cannot be selected unless the auxiliary setting is turned on. For more details, refer to **AUX** (*auxiliary input*) on the previous page.

Additional information

Troubleshooting

Symptom	Cause	Action
The display illumination turns on and off at random.	Demo mode is on.	Turn off the demo display setting.
The display automatically returns to the ordinary display.	You did not perform any operation within about 30 seconds.	Perform operation again.
The repeat play range changes unexpectedly.	Depending on the repeat play range, the selected range may change when another folder or track is being selected or during fast forwarding/reversing.	Select the repeat play range again.
A subfolder is not played back.	Subfolders cannot be played when FLD (folder repeat) is selected.	Select another repeat play range.
NO XXXX appears when a display is changed (NO TITLE , for example).	There is no embedded text information.	Switch the display or play another track/file.
The unit is malfunctioning. There is interference.	You are using a device, such as a cellular phone, that transmits electric waves near the unit.	Move electrical devices that may be causing the interference away from the unit.

Symptom	Cause	Action
The sound from the Bluetooth audio source is not played back.	There is a call in progress on a Bluetooth connected cellular phone. A Bluetooth-connected cellular phone is currently being operated.	The sound will be played back when the call is terminated. Do not operate the cellular phone at this time.
	A call was made with a Bluetooth-connected cellular phone and then immediately terminated. As a result, communication between this unit and the cellular phone was not terminated properly.	Reconnect the Bluetooth connection between this unit and the cellular phone.



Error messages

When you contact your dealer or your nearest Pioneer Service Center, be sure to note the error message.

Built-in CD Player

Message	Cause	Action
ERROR-07, 11, 12, 17, 30	The disc is dirty.	Clean the disc.
	The disc is scratched.	Replace the disc.
ERROR-07, 10, 11, 12, 15, 17, 30, A0	There is an electrical or mechanical error.	Turn the ignition switch OFF and back ON, or switch to a different source, then back to the CD player.
ERROR-15	The inserted disc is blank.	Replace the disc.
ERROR-23	Unsupported CD format.	Replace the disc.

Additional information

Message	Cause	Action
FRMT READ	Sometimes there is a delay between the start of playback and when you start to hear any sound.	Wait until the message disappears and you hear sound.
NO AUDIO	The inserted disc does not contain any playable files.	Replace the disc.
SKIPPED	The inserted disc contains DRM protected files.	Replace the disc.
PROTECT	All the files on the inserted disc are embedded with DRM.	Replace the disc.

USB storage device/iPod

Message	Cause	Action
NO DEVICE	When plug and play is off, no USB storage device or iPod is connected.	<ul style="list-style-type: none"> • Turn the plug and play on. • Connect a compatible USB storage device/iPod.
FRMT READ	Sometimes there is a delay between the start of playback and when you start to hear any sound.	Wait until the message disappears and you hear sound.
NO AUDIO	There are no songs.	Transfer the audio files to the USB storage device and connect.
	The connected USB storage device has security enabled.	Follow the USB storage device instructions to disable the security.
SKIPPED	The connected USB storage device contains files embedded with Windows Media™ DRM 9/10.	Play an audio file not embedded with Windows Media DRM 9/10.

Message	Cause	Action
PROTECT	All the files in the USB storage device are embedded with Windows Media DRM 9/10.	Transfer audio files not embedded with Windows Media DRM 9/10 to the USB storage device and connect.
N/A USB	The USB device connected to is not supported by this unit.	<ul style="list-style-type: none"> • Connect a USB Mass Storage Class compliant device. • Disconnect your device and replace it with a compatible USB storage device.
CHECK USB	The USB connector or USB cable has short-circuited.	Check that the USB connector or USB cable is not caught in something or damaged.
	The connected USB storage device consumes more than 500 mA (maximum allowable current).	Disconnect the USB storage device and do not use it. Turn the ignition switch to OFF, then to ACC or ON and then connect only compliant USB storage devices.
	The iPod operates correctly but does not charge.	Make sure the connection cable for the iPod has not shorted out (e.g., not caught in metal objects). After checking, turn the ignition switch OFF and back ON, or disconnect the iPod and reconnect.

Additional information

Message	Cause	Action
ERROR-19	Communication failed.	Perform one of the following operations. –Turn the ignition switch OFF and back ON. –Disconnect the USB storage device. –Change to a different source. Then, return to the USB source.
	iPod failure.	Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.
ERROR-23	USB storage device was not formatted with FAT12, FAT16 or FAT32.	USB storage device should be formatted with FAT12, FAT16 or FAT32.
ERROR-16	The iPod firmware version is old.	Update the iPod version.
	iPod failure.	Disconnect the cable from the iPod. Once the iPod's main menu is displayed, reconnect the iPod and reset it.
STOP	There are no songs in the current list.	Select a list that contains songs.
NOT FOUND	No related songs.	Transfer songs to the iPod.

Bluetooth device

Message	Cause	Action
ERROR-10	The power failed for the Bluetooth module of this unit.	Turn the ignition switch OFF and then to ACC or ON. If the error message is still displayed after performing the above action, please contact your dealer or an authorized Pioneer Service Station.



Handling guidelines

Discs and player

Use only discs that feature either of the following two logos.



Use 12-cm discs. Do not use 8-cm discs or an adapter for 8-cm discs.

Use only conventional, fully circular discs. Do not use shaped discs.



Do not insert anything other than a CD into the CD loading slot.

Do not use cracked, chipped, warped, or otherwise damaged discs as they may damage the player.

Unfinalized CD-R/RW discs cannot be played back.

Do not touch the recorded surface of the discs.

Store discs in their cases when not in use.

Do not attach labels, write on or apply chemicals to the surface of the discs.

Additional information

To clean a CD, wipe the disc with a soft cloth outward from the center.

Condensation may temporarily impair the player's performance. Let it rest for about one hour to adjust to a warmer temperature. Also, wipe any damp discs off with a soft cloth.

Playback of discs may not be possible because of disc characteristics, disc format, recorded application, playback environment, storage conditions, and so on.

Road shocks may interrupt disc playback.

When using discs that can be printed on label surfaces, check the instructions and the warnings of the discs. Depending on the discs, inserting and ejecting may not be possible. Using such discs may result in damage to this equipment.

Do not attach commercially available labels or other materials to the discs.

- The discs may warp making the disc unplayable.
- The labels may come off during playback and prevent ejection of the discs, which may result in damage to the equipment.

USB storage device

Connections via USB hub are not supported.

Do not connect anything other than a USB storage device.

Firmly secure the USB storage device when driving. Do not let the USB storage device fall onto the floor, where it may become jammed under the brake or accelerator pedal.

Depending on the USB storage device, the following problems may occur.

- Operations may vary.
- The storage device may not be recognized.
- Files may not be played back properly.
- The device may generate noise in the radio.

iPod

Do not leave the iPod in places with high temperatures.

To ensure proper operation, connect the dock connector cable from the iPod directly to this unit.

Firmly secure the iPod when driving. Do not let the iPod fall onto the floor, where it may become jammed under the brake or accelerator pedal.

About iPod settings

- When an iPod is connected, this unit changes the EQ (equalizer) setting of the iPod to off in order to optimize the acoustics. When you disconnect the iPod, the EQ returns to the original setting.
- You cannot set Repeat to off on the iPod when using this unit. Repeat is automatically changed to All when the iPod is connected to this unit.

Incompatible text saved on the iPod will not be displayed by the unit.

DualDiscs

DualDiscs are two-sided discs that have a recordable CD for audio on one side and a recordable DVD for video on the other.

Since the CD side of DualDiscs is not physically compatible with the general CD standard, it may not be possible to play the CD side with this unit.

Frequent loading and ejecting of a DualDisc may result in scratches on the disc. Serious scratches can lead to playback problems on this unit. In some cases, a DualDisc may become stuck in the disc loading slot and will not eject. To prevent this, we recommend you refrain from using DualDisc with this unit. Please refer to the information from the disc manufacturer for more detailed information about DualDiscs.



Compressed audio compatibility (disc, USB)

WMA

File extension: .wma

Bit rate: 48 kbps to 320 kbps (CBR), 48 kbps to 384 kbps (VBR)

Sampling frequency: 32 kHz, 44.1 kHz, 48 kHz

Windows Media Audio Professional, Lossless, Voice/DRM Stream/Stream with video: Not compatible

MP3

File extension: .mp3

Bit rate: 8 kbps to 320 kbps (CBR), VBR

Sampling frequency: 8 kHz to 48 kHz (32 kHz, 44.1 kHz, 48 kHz for emphasis)

Additional information

Compatible ID3 tag version: 1.0, 1.1, 2.2, 2.3, 2.4 (ID3 tag Version 2.x is given priority over Version 1.x.)

M3u playlist: Not compatible

MP3i (MP3 interactive), mp3 PRO: Not compatible

WAV

File extension: .wav

Quantization bits: 8 and 16 (LPCM), 4 (MS ADPCM)

Sampling frequency: 16 kHz to 48 kHz (LPCM), 22.05 kHz and 44.1 kHz (MS ADPCM)

Supplemental information

Only the first 32 characters can be displayed as a file name (including the file extension) or a folder name.

Russian text to be displayed on this unit should be encoded in one of the following character sets:

- Unicode (UTF-8, UTF-16)
- A character set other than Unicode that is used in a Windows environment and is set to Russian in the multi-language setting

This unit may not operate correctly depending on the application used to encode WMA files.

There may be a slight delay at the start of playback of audio files embedded with image data or audio files stored on a USB storage device that has numerous folder hierarchies.

Disc

Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers).

Playable folders: up to 99

Playable files: up to 999

File system: ISO 9660 Level 1 and 2, Romeo, Joliet

Multi-session playback: Compatible

Packet write data transfer: Not compatible

Regardless of the length of blank sections between the songs from the original recording, compressed audio discs play with a short pause between songs.

USB storage device

Playable folder hierarchy: up to eight tiers (A practical hierarchy is less than two tiers).

Playable folders: up to 500


Playable files: up to 15 000

Playback of copyright-protected files: Not compatible

Partitioned USB storage device: Only the first partition can be played.

There may be a slight delay when starting playback of audio files on a USB storage device with numerous folder hierarchies.

CAUTION

- Pioneer cannot guarantee compatibility with all USB mass storage devices and assumes no responsibility for any loss of data on media players, smart phones, or other devices while using this product.
- Do not leave discs or a USB storage device in any place that is subject to high temperatures. 

iPod compatibility

This unit supports only the following iPod models. Supported iPod software versions are shown below. Older versions may not be supported.

Made for

- iPhone 4 (software version 4.1)
- iPhone 3GS (software version 3.0.1)
- iPhone 3G (software version 2.0)
- iPhone (software version 1.1.1)
- iPod nano 6th generation (software version 1.0)
- iPod nano 5th generation (software version 1.0.1)
- iPod nano 4th generation (software version 1.0)
- iPod nano 3rd generation (software version 1.0)
- iPod nano 2nd generation (software version 1.1.2)
- iPod nano 1st generation (software version 1.2.0)
- iPod touch 4th generation (software version 4.1)
- iPod touch 3rd generation (software version 3.1.1)
- iPod touch 2nd generation (software version 2.1.1)
- iPod touch 1st generation (software version 1.1)
- iPod classic (software version 1.0)

Depending on the generation or version of the iPod, some functions may not be available.

Additional information

Operations may vary depending on the software version of iPod.


When using an iPod, an iPod Dock Connector to USB Cable is required.

A Pioneer CD-IU51 interface cable is also available. For details, consult your dealer.

About the file/format compatibility, refer to the iPod manuals.

Audiobook, Podcast: Compatible


CAUTION

Pioneer accepts no responsibility for data lost on the iPod, even if that data is lost while this unit is used. 

Sequence of audio files

The user cannot assign folder numbers and specify playback sequences with this unit.

Example of a hierarchy

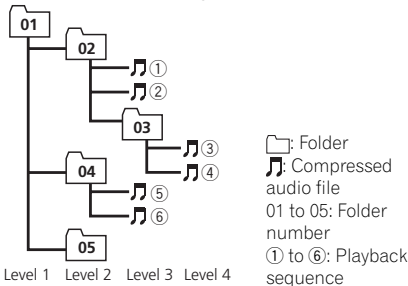

Disc

Folder selection sequence or other operation may differ depending on the encoding or writing software.


USB storage device

Playback sequence is the same as recorded sequence in the USB storage device. To specify the playback sequence, the following method is recommended.

- 1 Create a file name that includes numbers that specify the playback sequence (e.g., 001xxx.mp3 and 099yyy.mp3).


- 2 Put those files into a folder.
- 3 Save the folder containing files on the USB storage device.

However, depending on the system environment, you may not be able to specify the playback sequence.

For USB portable audio players, the sequence is different and depends on the player. 

Bluetooth profiles

In order to use Bluetooth wireless technology, devices must be able to interpret certain profiles. This unit is compatible with the following profiles.

- GAP (Generic Access Profile)
- SDP (Service Discovery Protocol)
- OPP (Object Push Profile)
- HFP (Hands Free Profile)
- HSP (Head Set Profile)
- PBAP (Phone Book Access Profile)
- A2DP (Advanced Audio Distribution Profile)
- AVP (Audio/Video Profile)
- AVRCP (Audio/Video Remote Control Profile) 1.0 

Copyright and trademark

Bluetooth

The *Bluetooth*[®] word mark and logos are registered trademarks owned by Bluetooth SIG, Inc. and any use of such marks by Pioneer Corporation is under license. Other trademarks and trade names are those of their respective owners.

iTunes

Apple and iTunes are trademarks of Apple Inc., registered in the U.S. and other countries.

Additional information

MP3

Supply of this product only conveys a license for private, non-commercial use and does not convey a license nor imply any right to use this product in any commercial (i.e. revenue-generating) real time broadcasting (terrestrial, satellite, cable and/or any other media), broadcasting/streaming via internet, intranets and/or other networks or in other electronic content distribution systems, such as pay-audio or audio-on-demand applications. An independent license for such use is required. For details, please visit <http://www.mp3licensing.com>.

WMA

Windows Media is either a registered trademark or trademark of Microsoft Corporation in the United States and/or other countries. This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from Microsoft Licensing, Inc.

iPod & iPhone

iPhone, iPod, iPod classic, iPod nano, and iPod touch are trademarks of Apple Inc., registered in the U.S. and other countries. "Made for iPod" and "Made for iPhone" mean that an electronic accessory has been designed to connect specifically to iPod or iPhone, respectively, and has been certified by the developer to meet Apple performance standards. Apple is not responsible for the operation of this device or its compliance with safety and regulatory standards. Please note that the use of this accessory with iPod or iPhone may affect wireless performance.

Specifications

General

Power source	14.4 V DC (10.8 V to 15.1 V allowable)
Grounding system	Negative type
Maximum current consumption	10.0 A
Dimensions (W × H × D):	
DIN	
Chassis	178 mm × 50 mm × 165 mm
Nose	188 mm × 58 mm × 16 mm
D	
Chassis	178 mm × 50 mm × 165 mm
Nose	170 mm × 46 mm × 16 mm
Weight	1.2 kg

Audio

Maximum power output	50 W × 4 70 W × 1/2 Ω (for subwoofer)
Continuous power output	22 W × 4 (50 Hz to 15 000 Hz, 5% THD, 4 Ω load, both channels driven)
Load impedance	4 Ω (4 Ω to 8 Ω allowable)
Preout maximum output level	2.0 V
Tone controls:	
Bass	
Frequency	100 Hz
Gain	±12 dB
Mid	
Frequency	1 kHz
Gain	±12 dB
Treble	
Frequency	10 kHz
Gain	±12 dB
Subwoofer (mono):	
Frequency	50 Hz/63 Hz/80 Hz/100 Hz/125 Hz
Slope	-18 dB/oct
Gain	+6 dB to -24 dB
Phase	Normal/Reverse

CD player

System	Compact disc audio system
Usable discs	Compact disc
Signal-to-noise ratio	94 dB (1 kHz) (IEC-A network)
Number of channels	2 (stereo)
MP3 decoding format	MPEG-1 & 2 Audio Layer 3

Additional information

WMA decoding format	Ver. 7, 7.1, 8, 9, 10, 11, 12 (2 ch audio) (Windows Media Player)
WAV signal format	Linear PCM & MS ADPCM (Non-compressed)

USB

USB standard specification	USB 2.0 full speed
Maximum current supply ...	1 A
USB Class	MSC (Mass Storage Class)
File system	FAT12, FAT16, FAT32
MP3 decoding format	MPEG-1 & 2 Audio Layer 3
WMA decoding format	Ver. 7, 7.1, 8, 9, 10, 11, 12 (2 ch audio) (Windows Media Player)
WAV signal format	Linear PCM & MS ADPCM (Non-compressed)

FM tuner

Frequency range	87.5 MHz to 108.0 MHz
Usable sensitivity	9 dBf (0.8 μ V/75 Ω mono, S/N: 30 dB)
Signal-to-noise ratio	72 dB (IEC-A network)

MW tuner

Frequency range	531 kHz to 1 602 kHz
Usable sensitivity	25 μ V (S/N: 20 dB)
Signal-to-noise ratio	62 dB (IEC-A network)

LW tuner

Frequency range	153 kHz to 281 kHz
Usable sensitivity	28 μ V (S/N: 20 dB)
Signal-to-noise ratio	62 dB (IEC-A network)

Bluetooth

Version	Bluetooth 3.0 certified
Output power	+4 dBm Maximum (Power class 2)

Note

Specifications and the design are subject to modifications without notice.

<http://www.pioneer.eu>

Visit www.pioneer.co.uk (or www.pioneer.eu) to register your product.

PIONEER CORPORATION

1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi,
Kanagawa 212-0031, JAPAN

PIONEER ELECTRONICS (USA) INC.

P.O. Box 1540, Long Beach, California 90801-1540, U.S.A.
TEL: (800) 421-1404

PIONEER EUROPE NV

Haven 1087, Keetberglaan 1, B-9120 Melsele, Belgium/Belgique
TEL: (0) 3/570.05.11

PIONEER ELECTRONICS ASIACENTRE PTE. LTD.

253 Alexandra Road, #04-01, Singapore 159936
TEL: 65-6472-7555

PIONEER ELECTRONICS AUSTRALIA PTY. LTD.

5 Arco Lane, Heatherton, Victoria, 3202 Australia
TEL: (03) 9586-6300

PIONEER ELECTRONICS OF CANADA, INC.

340 Ferrier Street, Unit 2, Markham, Ontario L3R 2Z5, Canada
TEL: 1-877-283-5901
TEL: 905-479-4411

PIONEER ELECTRONICS DE MEXICO, S.A. de C.V.

Blvd.Manuel Avila Camacho 138 10 piso
Col.Lomas de Chapultepec, Mexico, D.F. 11000
TEL: 55-9178-4270

先鋒股份有限公司

台北市內湖區瑞光路407號8樓
電話：(02) 2657-3588

先鋒電子（香港）有限公司

香港九龍長沙灣道909號5樓
電話：(0852) 2848-6488

© 2011 PIONEER CORPORATION. All rights reserved.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>