

DV-3022V/DV-3020V DV-2022/DV-2020

Operating Instructions



English on top side. Italiano sul lato opposto.

Thank you for buying this Pioneer product. Please read through these operating instructions so you will know how to operate your model properly.

Table of contents - Upper half: Before you start, Part names and functions, Convenient functions, Lower half: Changing the settings, Playable discs and files, Troubleshooting, Additional information.

- What's in the box: Remote Control, AAA batteries (R03) x 2, Warranty card, Operating instructions (This document).


Discover the benefits of registering your product online at http://www.pioneer.co.uk or http://www.pioneer.eu.

© 2011 PIONEER CORPORATION. All rights reserved.



PIONEER CORPORATION, 1-1, Shin-ogura, Saiwai-ku, Kawasaki-shi, Kanagawa 212-0031, Japan. PIONEER EUROPE NV, Haven 1087, Kesterbosdreef, B-9120 Mellebeke, Belgium. TEL: 033750.05.11

2 Part names and functions

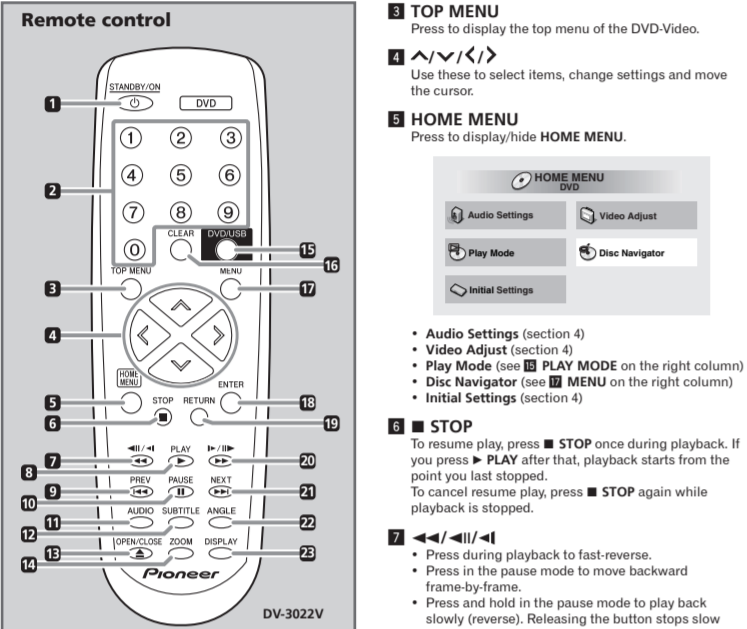

Note: The illustrations used in this operating instructions are DV-3022V.

1 STANDBY/ON: Press to turn the power on and off. 2 Number buttons (0 to 9): Use these to specify and play the title, chapter, track or file.

4 Changing the settings

Initial Settings parameters: The player's detailed settings can be changed here. Digital Audio Out settings: Select the audio signals to be output from the HDMI OUT terminal. Video output settings: Change the resolution of the video signals output from the HDMI OUT terminal.

Safety cautions

IMPORTANT: CAUTION RISK OF ELECTRIC SHOCK. Do not open. WARNING: This equipment is not waterproof. Do not place any liquid near this equipment. CLASS 1 LASER PRODUCT.

WARNING: To prevent a fire hazard, do not place any naked flame sources (such as a lighted candle) on the equipment. POWER-CORD CAUTION: Handle the power cord by the plug. Do not pull out the plug by tugging the cord.


OPERATING ENVIRONMENT: Use this unit in a room with a temperature between 5°C to 35°C. VENTILATION CAUTION: Do not install this unit in a poorly ventilated area.

Specifications

Table with columns for Power requirements, Dimensions, Weight, External dimensions, AV connector, Video output, Audio output, Digital audio output, and Additional information.

Before you start

Loading the batteries in the remote control. Notes: When inserting the batteries, be sure not to damage the springs. Do not use old or different types of batteries together.

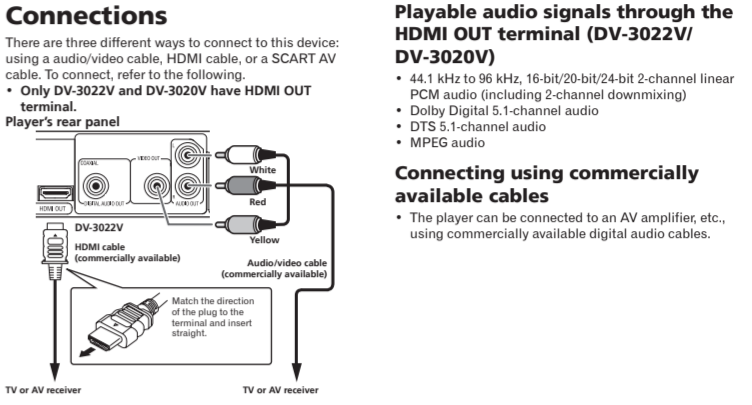

3 Convenient functions

Playing in the desired order (Programmed Play)

- 1 Display the Play Mode screen. 2 Select Program. 3 Select Create/Edit. 4 Select the title, chapter, track or file. 5 Start playback.

Playing files on USB devices

- 1 Switch to USB mode. 2 Connect the USB device. 3 Start playback.

Copying files on to USB devices

- 1 Display the Disc Navigator screen. 2 Select the file. 3 Start copying.

5 Playable discs and files

Playable discs: DVD-Video, DVD-R, DVD-RW, DVD-RAM, Video CDs, Audio CDs, DivX Video, DivX Video on Demand, DivX Video on Demand Plus, DivX Video on Demand Plus X, DivX Video on Demand Plus X2, DivX Video on Demand Plus X3, DivX Video on Demand Plus X4, DivX Video on Demand Plus X5, DivX Video on Demand Plus X6, DivX Video on Demand Plus X7, DivX Video on Demand Plus X8, DivX Video on Demand Plus X9, DivX Video on Demand Plus X10.

5 Playable discs and files

Discs that cannot be played, About region numbers, Playable discs, Discs that cannot be played, Playable files, Supported video file formats, Supported audio file formats, Supported image file formats, Supported subtitle file formats, Regard copy protected CDs, Playing discs created on computers or B/DVD recorders, Cleaning the lens, About trademarks, Handling discs, Storing, Cleaning discs, About specially shaped discs, About condensation on discs, Caution for when the unit is installed in a rack with a glass door, About condensation on discs.

6 Troubleshooting

Incorrect operation is often mistaken for trouble or malfunction. If there is something wrong with this player, check the symptoms below. When the player may not operate properly due to static electricity or other external influences, disconnect the power cord and plug it back in.

7 Additional information

Setting the TV system: If the picture of the disc being played is distorted, switch the TV system to the one used in your country or region. While the player is in the standby mode... Press STANDBY/ON while pressing X.

Country/Area Code Table: Table listing country codes and input codes for various regions. Includes Country/Area code, Input code, and Country/Area code.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>