

**DVD V7200 – Determine Firmware****CHECKING FIRMWARE VERSION:**

Please follow the instructions below to display the current firmware version on your DVD-V7200 player.

- 1) Power ON the player without placing a disc in the tray.
- 2) Press the MENU button on the remote control.
- 3) Highlight the word, **INITIAL** from the on-screen display.
- 4) Press the ENTER button on the remote control.
- 5) Highlight OSD SET from the on-screen display (do not press Enter).
- 6) Press the DISPLAY button on the remote control.
- 7) Check the firmware version listed in the lower right corner of the on-screen display.

*Firmware Version Chart*

Firmware	Date	Improvements
1.0 Initial	--	
2.010	Jan 99	1) Frame Accurate Searches 2) Video Text Retrieval 3) Upload and download Barcode Command Stacks
2.200	Apr 99	1) Cursor movement via RS-232 Serial commands 2) Changed the initial setting for the menu 3) Enabled Video Blackboard for multiple program chains (PGCs)
2.300	Jan 01	1) Improved performance reaction times

**FIRMWARE UPDATES:**

Only a Pioneer technician or authorized service center may update the DVD-V7200 firmware. Please contact Pioneer Service at **800/872-4259** and speak to a Customer Service Representative for more information on the firmware upgrade program.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>