

***Pioneer***

**ELITE**

**FILE-TYPE COMPACT DISC PLAYER**

**PD-F17**

**Operating Instructions**

Thank you for buying this Pioneer product. Please read through these operating instructions so you will know how to operate your model properly. After you have finished reading the instructions, put them away in a safe place for future reference.

**WARNING:** TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

## IMPORTANT NOTICE

The serial number for this equipment is located on the rear panel. Please write this serial number on your enclosed warranty card and keep it in a secure area. This is for your security.

# IMPORTANT SAFETY INSTRUCTIONS

**READ INSTRUCTIONS** — All the safety and operating instructions should be read before the product is operated.

**RETAIN INSTRUCTIONS** — The safety and operating instructions should be retained for future reference.

**HEED WARNINGS** — All warnings on the product and in the operating instructions should be adhered to.

**FOLLOW INSTRUCTIONS** — All operating and use instructions should be followed.

**CLEANING** — Unplug this product from the wall outlet before cleaning. The product should be cleaned only with a polishing cloth or a soft dry cloth. Never clean with furniture wax, benzine, insecticides or other volatile liquids since they may corrode the cabinet.

**ATTACHMENTS** — Do not use attachments not recommended by the product manufacturer as they may cause hazards.

**WATER AND MOISTURE** — Do not use this product near water — for example, near a bathtub, wash bowl, kitchen sink, or laundry tub; in a wet basement; or near a swimming pool; and the like.

**ACCESSORIES** — Do not place this product on an unstable cart, stand, tripod, bracket, or table. The product may fall, causing serious injury to a child or adult, and serious damage to the product. Use only with a cart, stand, tripod, bracket, or table recommended by the manufacturer, or sold with the product. Any mounting of the product should follow the manufacturer's instructions, and should use a mounting accessory recommended by the manufacturer.

**CART** — A product and cart combination should be moved with care. Quick stops, excessive force, and uneven surfaces may cause the product and cart combination to overturn.



**VENTILATION** — Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from overheating, and these openings must not be blocked or covered. The openings should never be blocked by placing the product on a bed, sofa, rug, or other similar surface. This product should not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instructions have been adhered to.

**POWER SOURCES** — This product should be operated only from the type of power source indicated on the marking label. If you are not sure of the type of power supply to your home, consult your product dealer or local power company.

**LOCATION** — The appliance should be installed in a stable location.

**NONUSE PERIODS** — The power cord of the appliance should be unplugged from the outlet when left unused for a long period of time.

## GROUNDING OR POLARIZATION

- If this product is equipped with a polarized alternating current line plug (a plug having one blade wider than the other), it will fit into the outlet only one way. This is a safety feature. If you are unable to insert the plug fully into the outlet, try reversing the plug. If the plug should still fail to fit, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the polarized plug.
- If this product is equipped with a three-wire grounding type plug, a plug having a third (grounding) pin, it will only fit into a grounding type power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician to replace your obsolete outlet. Do not defeat the safety purpose of the grounding type plug.

**POWER-CORD PROTECTION** — Power-supply cords should be routed so that they are not likely to be walked on or pinched by items placed upon or against them, paying particular attention to cords at plugs, convenience receptacles, and the point where they exit from the product.

**OUTDOOR ANTENNA GROUNDING** — If an outside antenna or cable system is connected to the product, be sure the antenna or cable system is grounded so as to provide some protection against voltage surges and built-up static charges. Article 810 of the National Electrical Code, ANSI/NFPA 70, provides information with regard to proper grounding of the mast and supporting structure, grounding of the lead-in wire to an antenna discharge unit, size of grounding conductors, location of antenna-discharge unit, connection to grounding electrodes, and requirements for the grounding electrode. See Figure A.

**LIGHTNING** — For added protection for this product during a lightning storm, or when it is left unattended and unused for long periods of time, unplug it from the wall outlet and disconnect the antenna or cable system. This will prevent damage to the product due to lightning and power-line surges.

**POWER LINES** — An outside antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can fall into such power lines or circuits. When installing an outside antenna system, extreme care should be taken to keep from touching such power lines or circuits as contact with them might be fatal.

**OVERLOADING** — Do not overload wall outlets, extension cords, or integral convenience receptacles as this can result in a risk of fire or electric shock.

**OBJECT AND LIQUID ENTRY** — Never push objects of any kind into this product through openings as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill liquid of any kind on the product.

**SERVICING** — Do not attempt to service this product yourself as opening or removing covers may expose you to dangerous voltage or other hazards. Refer all servicing to qualified service personnel.

**DAMAGE REQUIRING SERVICE** — Unplug this product from the wall outlet and refer servicing to qualified service personnel under the following conditions:

- When the power-supply cord or plug is damaged.
- If liquid has been spilled, or objects have fallen into the product.
- If the product has been exposed to rain or water.
- If the product does not operate normally by following the operating instructions. Adjust only those controls that are covered by the operating instructions as an improper adjustment of other controls may result in damage and will often require extensive work by a qualified technician to restore the product to its normal operation.
- If the product has been dropped or damaged in any way.
- When the product exhibits a distinct change in performance — this indicates a need for service.

**REPLACEMENT PARTS** — When replacement parts are required, be sure the service technician has used replacement parts specified by the manufacturer or have the same characteristics as the original part. Unauthorized substitutions may result in fire, electric shock, or other hazards.

**SAFETY CHECK** — Upon completion of any service or repairs to this product, ask the service technician to perform safety checks to determine that the product is in proper operating condition.

**WALL OR CEILING MOUNTING** — The product should not be mounted to a wall or ceiling.

**HEAT** — The product should be situated away from heat sources such as radiators, heat registers, stoves, or other products (including amplifiers) that produce heat.

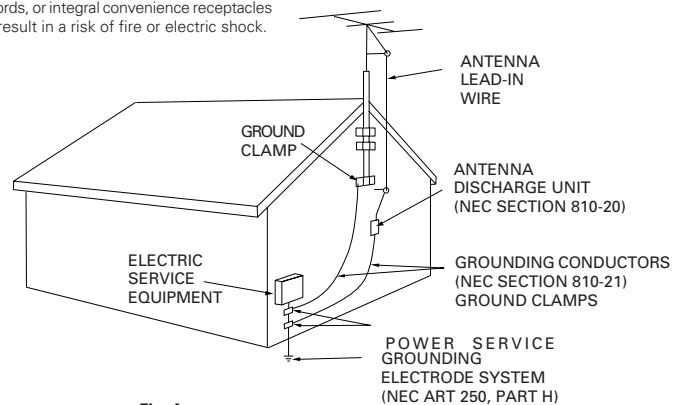


Fig. A

NEC — NATIONAL ELECTRICAL CODE

# IMPORTANT



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

## CAUTION

**RISK OF ELECTRIC SHOCK  
DO NOT OPEN**

**CAUTION:**  
TO PREVENT THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

### [For Canadian model]

**CAUTION:** TO PREVENT ELECTRIC SHOCK DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

### [Pour le modèle Canadien]

**ATTENTION:** POUR PREVENIR LES CHOCS ELECTRIQUES NE PAS UTILISER CETTE FICHE POLARISEE AVEC UN PROLONGATEUR, UNE PRISE DE COURANT OU UNE AUTRE SORTIE DE COURANT, SAUF SI LES LAMES PEUVENT ETRE INSEREES A FOND SANS EN LAISSER AUCUNE PARTIE A DECOUVERT.

This player is for consumer use. If the player is used in a business (for example, used for a long period at a restaurant), the player will not be covered under warranty. CD Video, VIDEO CD, CD graphics, DVD and CD-ROM discs can not be played with this player.

## CAUTION

- Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.
- The use of optical instruments with this product will increase eye hazard.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

## Information to User

Alteration or modifications carried out without appropriate authorization may invalidate the user's right to operate the equipment.

### [For Canadian model]

This Class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

### [Pour le modèle Canadien]

Cet appareil numérique de la Classe B respecte toutes les exigences du Règlement sur le matériel brouilleur du Canada.

## CAUTION

This product satisfies FCC regulations when shielded cables and connectors are used to connect the unit to other equipment. To prevent electromagnetic interference with electric appliances such as radios and televisions, use shielded cables and connectors for connections.

# CAUTIONS REGARDING HANDLING

## Location

**Install the player in a well-ventilated location where it will not be exposed to high temperatures or humidity.**

Do not install the player in a location which is exposed to direct rays of the sun, or near stoves or radiators. Excessive heat can adversely affect the cabinet and internal components. Installation of the player in a damp or dusty environment may also result in a malfunction or an accident. (Avoid installation near cookers etc., where the player may be exposed to oily smoke, steam or heat.) Do not install the player on a tottered stand nor in an unstable or inclined place.



## Precautions regarding installation

- Placing and using the compact disc player for long periods on heat-generating sources such as amplifiers will affect performance. Avoid placing the player on heat-generating sources.
- Install this compact disc player as far as possible from tuners and TV sets. A compact disc player installed in close proximity to such equipment may cause noise or degradation of the picture.
- Such noise may be particularly noticeable when an indoor antenna is used. In such cases, make use of an outdoor antenna, or turn off power to the compact disc player.
- **Please place this unit on a level surface.**



## Cleaning the player

To clean the PLAYER, wipe with a soft, dry cloth. For stubborn dirt, wet a soft cloth with a mild detergent solution made by diluting one part detergent to 5 or 6 parts water, wring well, then wipe off the dirt. Also use a dry cloth to wipe the surface dry. Do not use volatile liquids such as benzene and thinner which are harmful to the unit.

## Storing discs

- Discs are made of the same kinds of plastic used for conventional analog audio records. Be careful not to allow discs to warp; always store discs in their cases vertically, avoiding locations with high heat or humidity, or extremely low temperatures. Avoid leaving discs in cars, since the seat of a car in direct sunlight can become unbelievably hot.
- Always read and abide by the precautionary notes listed on disc labels.



## CD lens cleaner

The player's pickup lens should not become dirty in normal use, but if for some reason it should malfunction due to soiling, consult your nearest PIONEER authorized service center. Lens cleaners for CD players are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

## Condensation

When this unit is brought into a warm room from previously cold surroundings or when the room temperature rises sharply, condensation may form inside, and the unit may not be able to attain its full performance. If this occurs, allow the unit to stand for about an hour or raise the room temperature gradually.




## Cleaning and handling compact discs

- The presence of fingerprints or smudges on the surface of the disc will not directly affect the recorded signals, but depending on the degree of contamination, the brightness of the light reflected from the signal surfaces may be reduced, causing degradation of sound quality. Always keep your discs clean by wiping them gently with a soft cloth from the inner edge toward the outer periphery.



- If a disc becomes very dirty, dip a soft cloth in water, and after wringing it out well, wipe the dirt away gently, and then remove any water drops with another soft, dry cloth.
- Do not use record cleaning sprays or anti-static agents on discs. Also, never clean discs with benzene, thinner, or other volatile solvents, since damage to the disc surface may result.

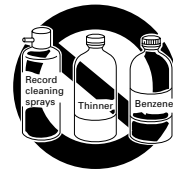


With this unit, use a Compact Disc carrying the mark shown below. Do not use other disc, for this may result in malfunction or damage.

- When holding discs, do not touch their signal surfaces. Hold by the edges, or by one edge and the center hole.
- Do not affix gummed labels or tape to the label surfaces. Also, do not scratch or damage the label.
- Discs rotate at high speed inside the player. Do not use damaged (cracked or warped) discs.

## CAUTION RE: USE OF SHAPED CD's

This product is designed for use with conventional, fully circular CD's only.

Use of shaped CD's is not recommended for this product. Pioneer disclaims all liability arising in connection with the use of shaped CD's.

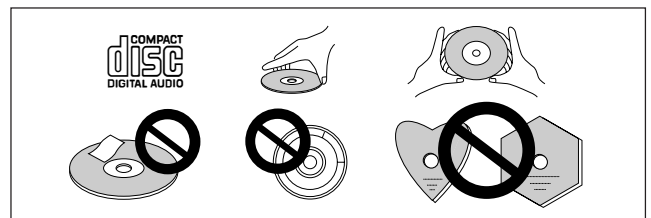

## Re-transporting

When re-transporting this unit in the future, remove all discs from the rack. Turn off the STANDBY/ON switch, wait for "OFF" to go out from the display, and unplug the power cord.

# BEFORE YOU USE THE PLAYER

## HERE'S WHAT YOU CAN DO!

### Up to 100 CDs can be registered by classifying them into 3 categories (CUSTOM). [page 12]

For example, if you register your own discs in CUSTOM I, your mother's discs in CUSTOM II and your father's discs in CUSTOM III or if you select three kinds of music genres or artists and register them in the three CUSTOM banks, you can play all of the discs classified under one of the three CUSTOM banks. Addition of discs to already-registered discs is also possible. Each of the three CUSTOM banks can register up to 100 discs.

### Single Loader slot is provided. [page 11]

If you have a disc borrowed from a friend, you can play only that disc by loading it in this special slot (Disc No. 0), without replacing discs stored in the rack.

### Immediately access and play your favorite tracks from among the 100 discs loaded in the player. [page 16]

The Best Selection Memory function lets you store and play favorite tracks with the touch of a single button (up to 20 tracks).

### Easy access to the disc(s) you've listened to recently. [page 16]

The Previous Disc Scan function recalls the last disc you played and then moves one by one through the previously played discs (auto-memory of last 20 discs played).

### Disc Title input [page 18]

The titles of up to 100 discs can be input, which is very convenient for disc management.

### CD TEXT compatibility [page 20]

The disc/track titles and performer names are displayed during playback of a CD TEXT disc.

### Hi-bit Legato Link Conversion

This results in more faithful reproduction of the original sound than ever before.

 
### Energy-saving design

This product is designed in such a way that power consumption is reduced when in the standby mode.


For the power consumption in the standby mode, refer to the specifications on page 23.

## CONFIRM SUPPLIED ACCESSORIES


Remote control unit x 1




Output cable x 1

 

Control cable x 1

 

Size AA/R6P dry cell batteries x 2

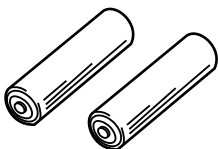

## CONTENTS


CAUTIONS REGARDING HANDLING .....	4
BEFORE YOU USE THE PLAYER .....	5
CONNECTIONS .....	6
NAMES OF PARTS .....	7
HOW TO LOAD THE DISCS .....	9
<hr/>	
BASIC OPERATIONS	
To listen in order from the first track .....	10
To select the disc and track .....	10
To select a play mode .....	10
Playing a disc in the Single Loader slot .....	11
The hood can be opened or closed during playback .....	11
<hr/>	
VARIOUS OPERATIONS	
To program and play only the discs you want to hear ...	12
To start playback from a specific disc .....	13
To play a track you want to hear .....	13
To repeat playback .....	13
To playback tracks/discs at random .....	14
To program tracks/discs in a desired order .....	15
To store your favorite tracks .....	16
To find out which discs you've listened to recently .....	16
To scan quickly through tracks on a disc .....	17
Disc Title Input .....	18
Disc Title Modification .....	19
To use the TIME button .....	21
CD TEXT Data Display	
(CD TEXT compatible data only) .....	20
To search a disc by the Disc title .....	20
<hr/>	
TROUBLESHOOTING .....	22
SPECIFICATIONS .....	23

BEFORE  
OPERATING

BASIC  
OPERATIONS

VARIOUS  
OPERATIONS

# CONNECTIONS

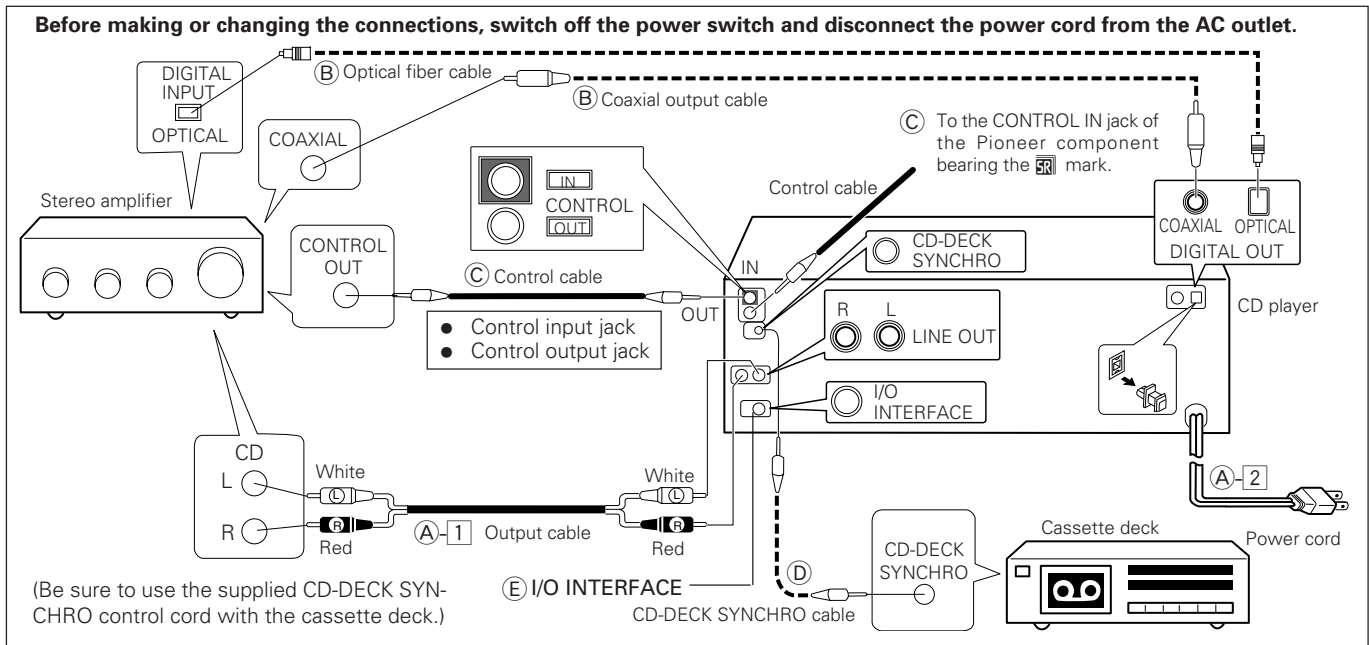

## A Making connections

- 1 Connect the **OUTPUT** jacks of this unit to the input jacks (CD or AUX) of the amplifier. Make sure that the white plugs are connected to the left (L) jacks and the red plugs to the right (R) jacks.
  - Be sure not to connect this unit to the amplifier's **PHONO** jacks, as sound will be distorted and normal playback will not be possible.
- 2 Connect the power cord to a household AC wall outlet.
  - Make sure plugs are inserted fully into the wall outlet.

### Note!!

Do not connect the power cord to an AC outlet on your amplifier. If you connect the power cord to a "SWITCHED" AC outlet on an amplifier, you will not be able to use this unit's memory function.

## B Connecting to the DIGITAL OUT JACK

This unit can be connected to an amplifier equipped with an optical digital jack or coaxial digital jack.

### Note!!

No sound may be produced if optical connection are made with an amplifier having different optical signal standard.

### When using the OPTICAL DIGITAL OUT jack:

1. Remove the protective dust cap from this unit's **DIGITAL OUT OPTICAL** jack.
2. Use an optical fiber cable to connect the **DIGITAL OUT OPTICAL** jack of this unit to the optical input jack of the amplifier.
  - Align the plug of the optical fiber cable with the optical digital jack and fully insert the plug to make a secure connection.

Use a separately sold optical fiber cable for the optical digital jack connections.


### Precautions concerning use of optical fiber cables

- Fully insert the optical fiber cable plugs all the way into the jacks.
- Be careful not to fold or crimp the cable. When coiling an optical fiber cable for storage, make sure the diameter of the coil is 15 cm (6 in.) or larger.
- Use an optical fiber cable with a length of 3 m (10 ft.) or less.
- Protect the optical fiber cable plugs from scratches and dust.
- When the unit is not connected using an optical fiber cable, be sure to keep the protective dust cap plugged into the optical digital output jack at all times.

### When using the COAXIAL DIGITAL OUT jack:

Use coaxial output cable to connect the **COAXIAL DIGITAL OUT** jack of this unit to the coaxial digital input jack of the amplifier.

## C System remote control with a Pioneer stereo amplifier that has the mark

When a Pioneer stereo amplifier bearing the  mark is used, connect the **CONTROL IN** jack on the rear panel of the CD player to the **CONTROL OUT** jack of the amplifier. This will enable the CD player to be controlled using the remote control unit supplied with the stereo amplifier. If you do not plan to use this feature, it is not necessary to connect the **CONTROL IN/OUT** jacks.

- The remote control unit supplied with the amplifier can be used to control Play, Stop, Pause, Track/Disc Search and Disc Change operations.
- For instructions regarding connections and operation, refer to the operating instructions provided with your stereo amplifier.

### Notes!!

- When a control cable is connected to the player's **CONTROL IN** jack, direct control of the player with the remote control unit is not possible. Operate the player with the remote control unit by aiming it at the amplifier.
- Be sure to connect both of the control cable's plugs securely to the **CONTROL IN** and **CONTROL OUT** jacks. Do not connect only one end of the cable.
- Be sure to turn off the power of the amplifier before connecting the power cord and output cable.
- When only the digital output is connected, the remote sensor of the amplifier does not function. To operate it, connect the output cable to the stereo amplifier as well as connecting the digital output.

## D CD-Deck synchro function

If you have a Pioneer cassette deck provided with the CD-Deck synchro function, connect the **CD-DECK SYNCHRO** jacks of the CD player and cassette deck. With this function, synchro recording can be carried out between the player and deck.

- For details on connections and operation, refer to the operating instructions supplied with the cassette deck.
- The CD-DECK SYNCHRO cable is not supplied with the CD player.
- When CD-Deck synchro recording is carried out on several discs, use the program playback function. (Refer to page 15 for details of program playback.)

### Note!!

 
In order to enable the CD-DECK SYNCHRO recording function, the Output cable must be connected to the stereo amplifier.


## E I/O INTERFACE (For PD-AP1 only)

Terminal for connecting the controller (optional). The PD-AP1 is capable of simultaneous control of up to 3 units of this model. When using the optional controller, use the I/O interface with the **CONTROL IN** jack. (Refer to 21 page)


# NAMES OF PARTS

## FRONT PANEL

The numbers in parenthesis  are reference pages.

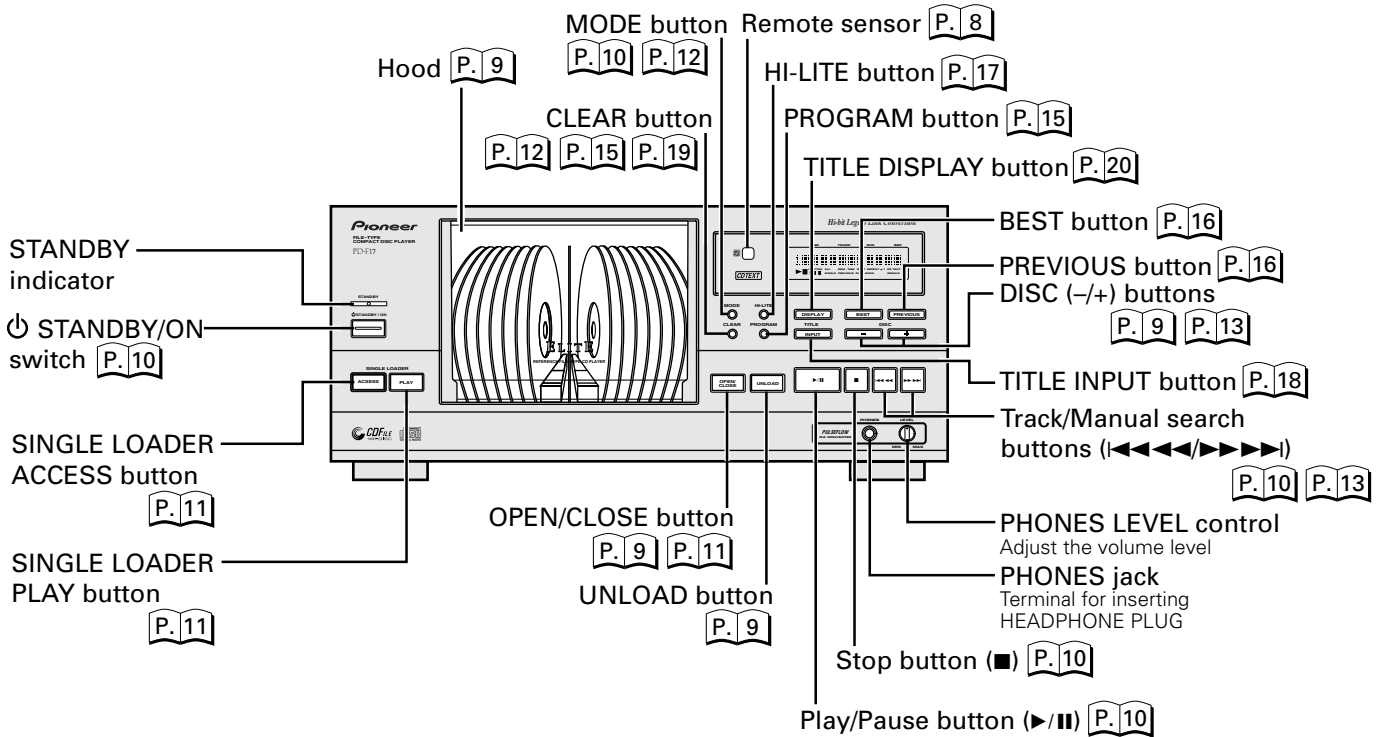

## DISPLAY

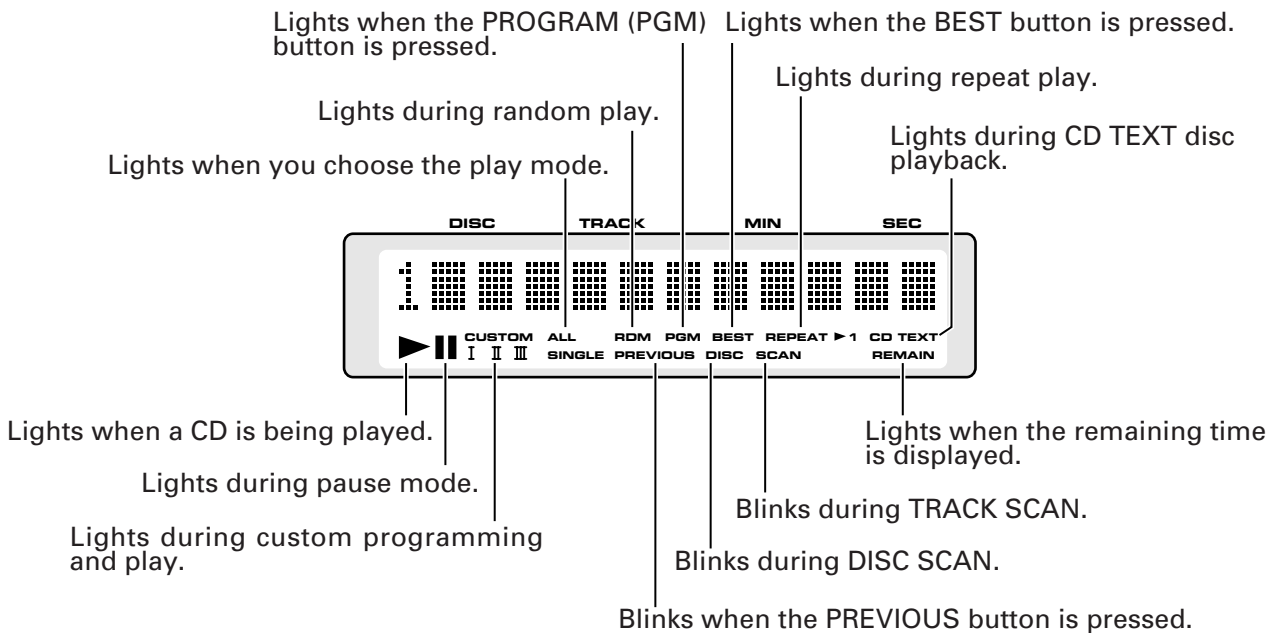


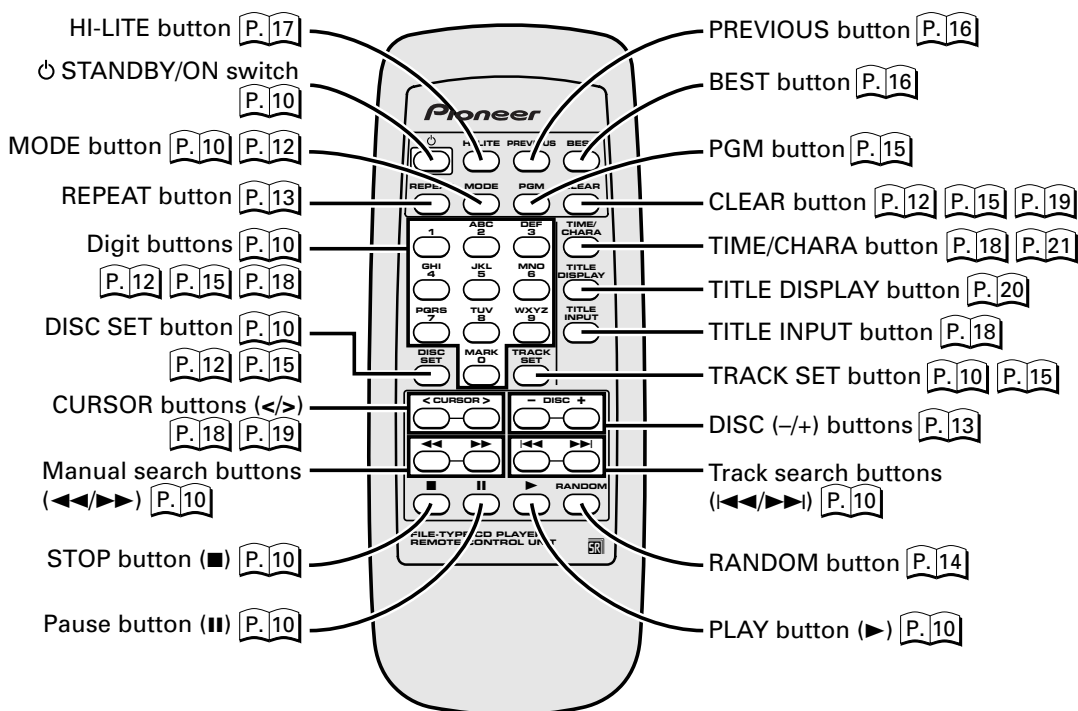
BEFORE OPERATING

BASIC OPERATIONS


VARIOUS OPERATIONS

## REMOTE CONTROL UNIT

- The numbers in parenthesis  are reference pages.



## REMOTE CONTROL OPERATIONS

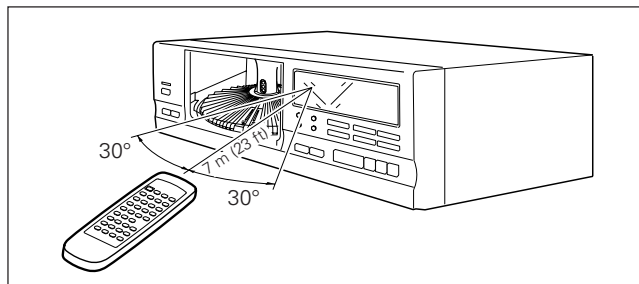


When operating the remote control unit, point the unit's infrared signal transmitter at the remote control receiver (Remote Sensor) on the front panel of the player. The remote control unit can be used within a range of about 7 meters (23 feet) from the remote sensor, and within angles of up to about 30 degrees.

### Note!!

If the remote control sensor window is in a position where it receives strong light such as sunlight or fluorescent light, control may not be possible.

## PUT BATTERIES INTO THE REMOTE CONTROL UNIT

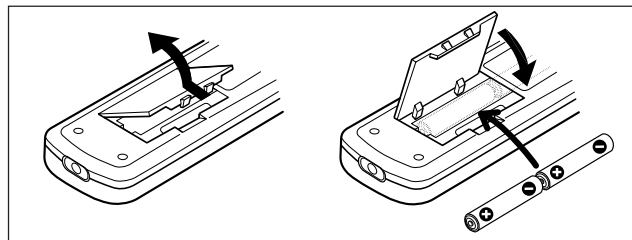

Open the lid of the battery compartment on the rear of the remote control unit, and insert the batteries, taking care to align the ⊕ and ⊖ polarities correctly.

### Notes!!

- In order to prevent battery leakage, remove the batteries when not using the remote control unit for an extended period (one month or more). If leakage occurs, carefully wipe away any battery fluid inside the compartment, and replace the batteries with new ones.
- Do not allow books or other objects to rest on top of the remote control unit, since the buttons may be depressed, causing faster exhaustion of the batteries.

Incorrect use of batteries may cause leakage or rupture. Always be sure to follow these guidelines:

- Always insert batteries into the battery compartment correctly matching the positive ⊕ and negative ⊖ polarities, as shown by the display inside the compartment.
- Never mix new and used batteries.
- Batteries of the same size may have different voltages, depending on brand. Do not mix different brands of batteries.



 
# HOW TO LOAD THE DISCS (Be sure to read this before operation)

## Loading discs into the rack

- You can load up to **100 discs** in the rack. The numbers marked on the rack are used as the disc numbers. These are marked in the clockwise order from **1** to **100**.
- The following procedure describes how to load discs from disc No. 1.

1

STANDBY / ON



### Press STANDBY/ON switch.

- Ensure that the disc No. shown on the display is "1".
- If the displayed disc No. is not "1", press **DISC(-/+)** to display "1".

2




### Press UNLOAD.




### The hood will open.

When **UNLOAD** is pressed, the hood opens to the disc corresponding to the disc No. displayed on the front of the unit. Therefore, if you want to load discs from No. 50, use **DISC (+/-)** on the unit to display "50", or enter "50" using the remote control unit, before pressing **UNLOAD**.

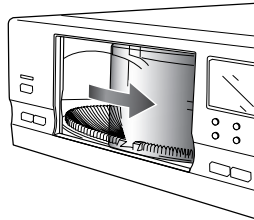

3

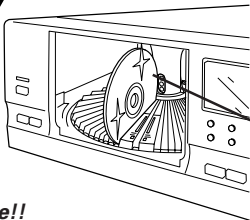


### Load the disc into the rack with the label side (printed surface) facing to the left.

Side to be played faces right (label side faces left)

#### Note!!

- Inserting more than one disc into the slot will damage the discs and cause the unit to malfunction.

 4



### Press DISC(+) to rotate the rack.

- The rack rotates in the direction of 1,2,3.... Pressing **DISC(-)** rotates the rack in the opposite direction.

5

### Load other discs into the rack by repeating steps 3 and 4 for each of them.

6



### Press OPEN/CLOSE.

- The hood will close.

#### Tip:

Difference between **OPEN/CLOSE** and **UNLOAD**

**OPEN/CLOSE:** The hood is simply opened or closed.

**UNLOAD:** The slot corresponding to the disc No. being displayed rotates to the center position then the hood is opened.


#### Notes!!

- Do not attempt to open the hood with your hand.**
- Be careful not to pinch your fingers when opening and closing the hood.
- If a disc is inserted with its label side facing to the right, it cannot be played back. Be sure to load all discs with their label sides facing to the left.



#### WARNING:

**Do not put your hand or any other object inside the rack, otherwise injury or part damage may result.**

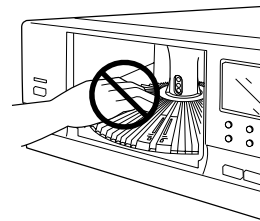

- Do not put anything other than CDs inside the rack.**
- Do not use adapters for 8-cm (3-in.) CDs.**
- Load only one disc into each disc slot.
- Inserting an 8-cm (3-in.) CDs in between two 12-cm (5-in.) CDs, will make it difficult to remove the 8-cm (3-in.) CD. We recommend inserting 12-cm (5-in.) CDs starting from Disc No. 1 (i.e., 1, 2, 3...) and 8-cm (3-in.) CDs starting from Disc No. 100 (i.e., 100, 99, 98...).
- The unit will not operate if the hood is opened during playback. Be sure to close the hood before attempting any operations.
- To load or remove a disc in or from the slot which is seen through the hood, press **OPEN/CLOSE**. The hood is opened, "**HOLD**" is displayed and the disc can be loaded in or ejected from the slot seen through the hood. Even while "**HOLD**" is being displayed, the rack can be rotated by pressing **DISC (-/+)**.
- Be sure to remove all discs from the rack, set the **STANDBY/ON** switch to off, and unplug the power cord before moving the unit.

BEFORE  
OPERATIONS

BASIC  
OPERATIONS

VARIOUS  
OPERATIONS

## To remove the discs...

1 Press **UNLOAD**.

2 Select the disc No. to be removed by pressing **DISC(-/+)**.

- The rack rotates until the selected disc comes in the front of the unit.



3 Remove from the rack.

4 Press **OPEN/CLOSE**.

- The hood will close.

# BASIC OPERATIONS

- You can also use the remote control.

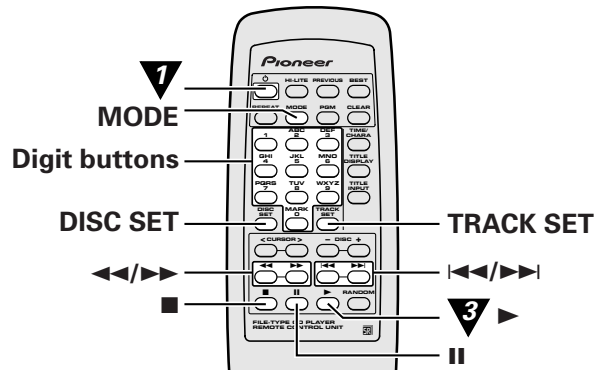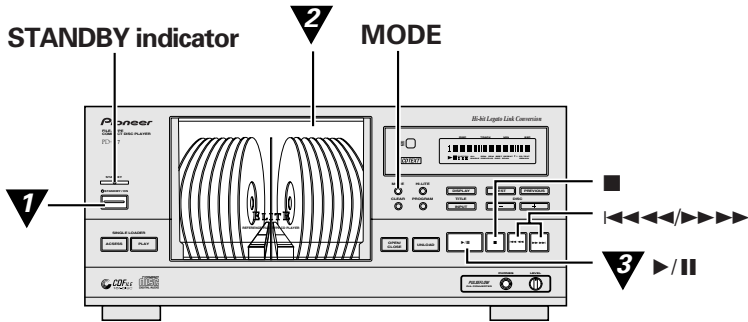

## To listen in order from the first track

**1** Press **STANDBY/ON**.  
 To turn the power off... Press **STANDBY/ON** again. **STANDBY** indicator lights.

**2** Load discs into the rack.  
 Press **OPEN/CLOSE**.  
 Side to be played faces right (label side faces left)

- Note!!**
- Inserting more than one disc into the slot will damage the discs and cause the unit to malfunction.

**3** Press **▶/II** (or **▶**).  
 The tracks are played in order starting from the first track on the disc with the lowest disc No.

- If you choose a play mode beforehand, the tracks/discs are played back according to the respective play mode.

**To stop play**  
 Press **■**.

**To pause play**  
 Press **▶/II** (or **II**).  
 To start playback again, press **▶/II**.

**To skip to another track**  
 Tap **◀◀◀/▶▶▶** (or **◀/▶**) on the remote control unit).

**To fast forward/reverse.**  
 Hold-down **◀◀◀/▶▶▶** (or **◀/▶**) on the remote control unit).

## To select the disc and track


**2** Use the digit buttons to select the disc, then press **DISC SET**.

**7** Use the digit buttons to select the track, and press **TRACK SET**.

## To select a play mode

Press **MODE** during play or stop mode.  
 Press a few times to choose the mode you desire.  
 Playback occurs according to the chosen mode.

- ALL:** All discs are played back.
- SINGLE:** One disc is played back.
- CUSTOM:** Only discs stored in the CUSTOM file are played back (I,II,III) (see page 12 to create a custom file).

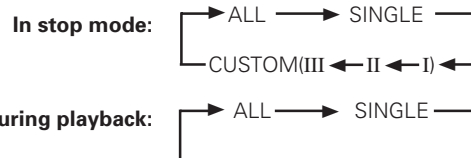


- When you select **SINGLE** during playback, only the current disc will be played.
- If you press **MODE** during program mode, the program contents will be erased.

**Notes!!**

- When you turn the power ON, playback starts according to the last selected play mode.
- If you did not select a play mode, playback starts in **ALL**.
- SINGLE** is selected automatically when playing the disc loaded in the Single Loader slot.

**<Last disc memory>**

When you press **■** or turn the power OFF (STANDBY), the unit memorizes the disc that was being played. The next time you press **▶/II**, playback will start from that same disc. (This feature is available except in the PROGRAM play, BEST play, PREVIOUS scan, HI-LITE scan and RANDOM play modes.)

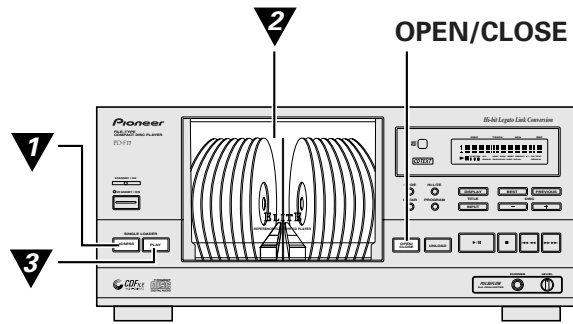

### Playing a disc in the Single Loader slot


1



Press **SINGLE LOADER ACCESS**.

- The hood will open with the single loader slot located in the front of the unit.

2

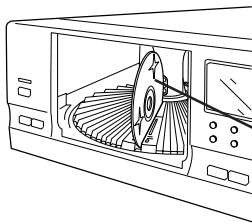

Loading the disc into the Single Loader slot with the label side (printed surface) facing to the left.

Side to be played faces right (label side faces left)

**Note!!**

- Inserting more than one disc into the slot will damage the discs and cause the unit to malfunction.

3



Press **SINGLE LOADER PLAY**.

- The play mode is set to SINGLE.

**Tips:**

- The disc loaded in the Single Loader slot can also be selected using **DISC(-/+)**. It is located after disc No. 100 when **DISC(+)** is used or disc No. 1 when **DISC(-)** is used. On the display, it is shown as "P0".
- If a disc has been loaded in the Single Loader slot, pressing **SINGLE LOADER PLAY** allows to play it anytime, even during playback of a disc stored in the rack.
- To play the disc in the Single Loader slot using the remote control unit, press "0" and **DISC SET**.

### The hood can be opened or closed during playback.

▼



Press and hold **OPEN/CLOSE** until "OPEN" is displayed.

- "HOLD" is displayed after the hood is opened.
- In this case, the rack does not rotate.
- When the playback of the current disc has completed, the unit enters stop mode. The next disc is played after the hood has been closed.

▼




To close the hood, press **OPEN/CLOSE** again.

**Note!!**


If the hood is opened during play, **UNLOAD**, **SINGLE LOADER ACCESS** and **DISC (-/+)** are defeated.

# VARIOUS OPERATIONS

- The remote control is the most convenient way to perform these operations.

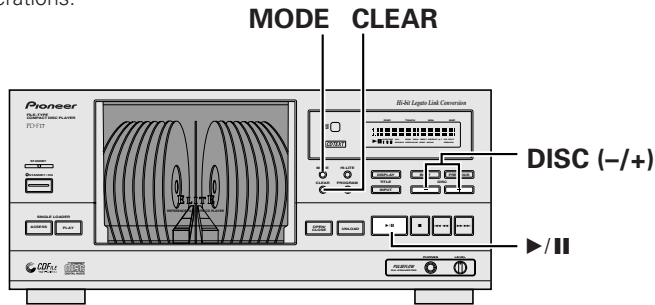

- The parenthesis ( ) show operations for the main unit.

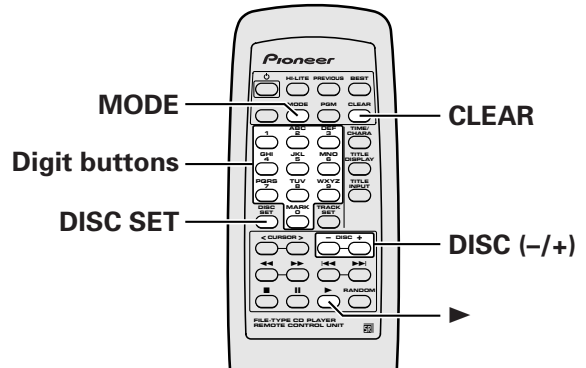

## To program and play only the discs you want to hear (CUSTOM play)

 
This unit lets you program up to 100 of your favorite discs. For example, you can store all the discs of your favorite artist, or some other group of personal selections, and play only those discs. You can even add other discs to the custom later on.

**Operation example:** Storing discs 3 and 12 in the CUSTOM II file.

1



During stop mode, press **MODE** so that the **CUSTOM II** indicator lights.




- If some disc number appears, press **CLEAR**.

2



 Use the digit buttons to select disc.



- If you use **DISC (-/+)** to select a disc, it will be programmed automatically after approximately 2 seconds.


3




Press **DISC SET**.




4

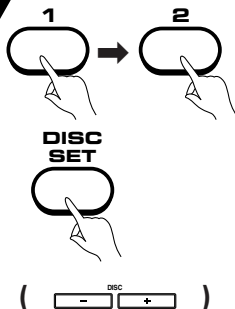

 Repeat steps 2 and 3 to store other discs.



## To start playback

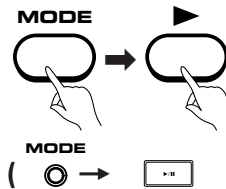

Press **MODE** to select **CUSTOM** and press **▶**.

Playback starts from the lowest disc No.

## Checking the numbers of the stored discs.

Press **TIME** repeatedly (3 times) during stop mode so that the display changes as shown below.

Press **DISC(-/+)**. Each time you press **DISC(-/+)**, a disc number stored in the CUSTOM file is displayed. When all the disc numbers have been displayed, the disc number changes to a blank.



- The disc title can be registered even during checking the discs in the custom file [Page 18] However, it is not possible to register the disc title if the disc number is blank.

## Erasing all the discs from the each CUSTOM file.



Press **MODE** to choose **CUSTOM**, then press the **CLEAR** button.

### Note!!


You cannot change the discs stored in the **CUSTOM** file. Likewise, you cannot erase just one disc from the **CUSTOM** file.

- Pressing **DISC (-/+)** during **CUSTOM** playback lets you choose among other discs stored in the **CUSTOM** file.
- If you use the **digit** buttons and **DISC SET** on the remote control during **CUSTOM** playback to choose a disc not stored in the **CUSTOM** file, "**\* \* NO DISC**" will be displayed for approximately 3 seconds.
- When a disc appointed to the **CUSTOM** file is not loaded in the rack, "**\* \* NO DISC**" is displayed for approximately 3 seconds, the disc is erased from memory, and **CUSTOM** searches for the next disc.
- The discs stored in the **CUSTOM** file will not be erased when you turn off the power.
- Items stored in memory are saved, even if the power cord is unplugged. (**Memory Back-Up Function**).
- While the hood is open, **DISC (-/+)** cannot be used for **CUSTOM** file entry.

- You can also use the remote control.

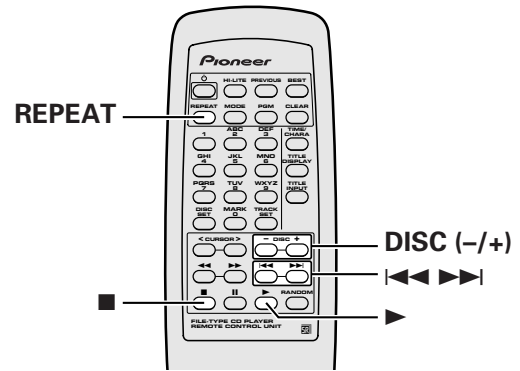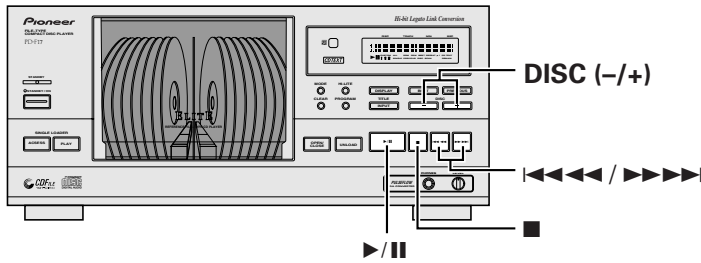


### To start playback from a specific disc

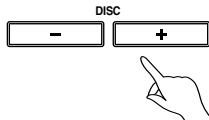

Press DISC (-/+) during play or pause to choose a disc number. During pause, press ►/II (► or II on the remote control unit) after choosing the disc.

- Playback starts from the first track of the chosen disc.

### To play a track you want to hear

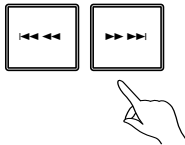

Press ◀◀◀◀/▶▶▶▶ during play or pause to choose the track number you desire (or press ◀◀/▶▶ on the remote control).

During pause, press ►/II after choosing the track.

### To repeat playback (REPEAT play)



Press the REPEAT button during playback. Each time you press the button, the repeat mode changes as follows.



 
#### One track



#### (One track repeat)

Repeats the current or a selected track in during other play operations than HI-LITE scan and PREVIOUS scan.

#### ALL



#### (ALL repeat)

Repeats in one of the following 3 ways according to the play mode .

 
#### SINGLE



**ALL:** Repeats all the tracks on all the discs (1 - 100).

**SINGLE:** Repeats all the tracks on the selected disc.

#### CUSTOM




**CUSTOM:** All of the discs classified under one of the three CUSTOM banks are played repeatedly.

#### (OFF)


Cancels repeat play and returns the unit to normal play mode.

- To stop repeat playback, press ■.
- When none of the ALL, SINGLE or CUSTOM play mode is displayed (i.e. during PROGRAM play, BEST play, PREVIOUS scan or HI-LITE scan), the tracks which would be played with these functions are played repeatedly.

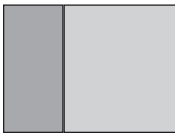


## VARIOUS OPERATIONS

- The remote control is the most convenient way to perform these operations.

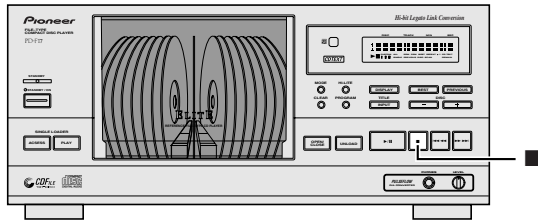

- The parenthesis ( ) show operations for the main unit.

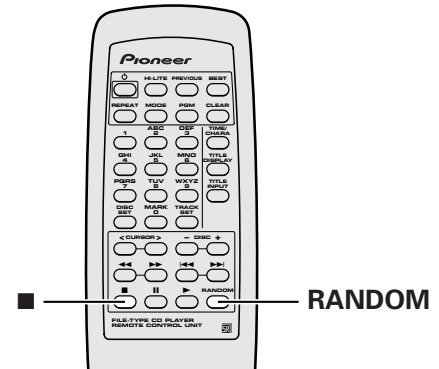

### To playback tracks/discs at random (RANDOM play)

 
RANDOM selects tracks at random from the disc(s) in the current play mode and plays each track once. The selected play mode stops after its contents are played back. (Refer to chart below)

Play mode selected	Play contents
<b>ALL</b>	Plays all tracks in all discs in a random order.
<b>SINGLE</b>	Plays all the tracks from a single disc at random.
<b>CUSTOM</b>	Plays all tracks in the discs stored in the CUSTOM file in a random order.

#### Notes!!

- Random play cannot be activated during the program mode. (If you press **RANDOM** during program play, the program contents will be erased and the unit will start to play tracks at random from all the discs.)
- In the ALL or CUSTOM (I,II or III) mode, if less than 100 discs are loaded, the same track may be played more than once.
- If you press **REPEAT** during random play, the contents of the random mode are repeated. (RANDOM REPEAT)
- If you press **DISC (-/+)** during random play, random play is canceled.
- If you press **MODE** during random play, random play is switched to the ALL or SINGLE play.
- If all discs contain 17 tracks or less, random play can play every track in the discs once.  
If any of the discs contain more than 17 tracks, random play plays the same number of tracks as the total number of tracks in the discs, but the tracks with track number 17 or more are not always played once.


#### RANDOM



#### Press RANDOM during either play or stop mode.

- The RANDOM indicator lights up and random play according to the current play mode starts.


#### To stop random play, press

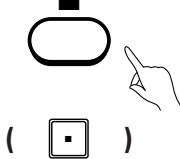



## To program tracks/discs in a desired order (PROGRAM play)

- The remote control is the most convenient way to perform these operations.
- You can program up to 36 steps.
- The parenthesis ( ) show operations for the main unit.

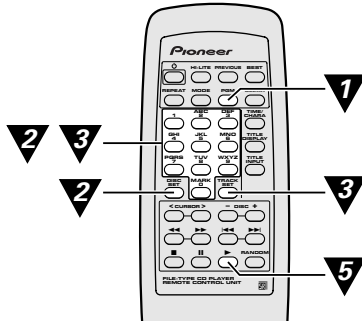

Operation example: Programming disc 2, track 7 as step 1, and disc 5, track 3 as step 2.

**1** Press **PGM (PROGRAM)** during stop mode.

**2** Use the digit buttons to select the disc, then press **DISC SET**.  
(Use **DISC (-/+)** to select the disc number, then press **PROGRAM**.)

The PGM indicator starts to blink.

**3** Use the digit buttons to select the track, and press **TRACK SET**.  
(Use **1<<<<<<>>>>>>2** to select the track number, then press **PROGRAM**.)

**4** Repeat steps 2 and 3 to program additional discs and tracks.

Once the track times have been added, the PGM indicator stops blinking and the following display appears (Total Time).

**5** Press **▶**.

The program play starts from the track that was programmed first.

- Items stored in memory are saved, even if the power cord is unplugged. (Memory Back-Up Function).

The following operations can only be performed during normal play, HI-LITE scan or PREVIOUS scan

### <Programming tracks during normal play>

#### (Direct program)

1. Press **PGM (PROGRAM)**.
  - Program mode is activated.
2. Press **PGM (PROGRAM)** during playback.
  - The current track is programmed.

### <Programming during normal playback (remote control only)> (Preprogramming)

You can program during normal playback.

(→ Operation example **1 2 3 4**)

- The player changes to program play when the current track finishes playing back.
- To change to program mode directly, press **▶**.

The following operations can only be performed during stop mode

### <Programming an entire disc as one step>

#### (Disc all program)

If you skip step **3** of the operation example, disc 2 is programmed as step 1.

### <Programming a pause (remote control only)> (Pause program)

If you press **II** at step **4**, you can program a pause. When you press **II**, "PA" appears in the display instead of the disc number.

- For example, when making a program for recording both sides of a cassette tape, press **II** to insert a pause after programming the tracks for one side. After turning the tape over, press **II** to resume recording.

#### Notes!!

- You cannot program a pause as the first step, or program two pauses in a row.
- When you program a pause, it counts as 1 step and reduces the total number of tracks you can program.

### • To erase a program...

Press **■** twice during playback (or once in stop mode). You can also erase the program by pressing **MODE**, **RANDOM**, **PREVIOUS**, or **SINGLE LOADER PLAY** in either play or stop mode (or by pressing **BEST** in stop mode).

### • To cancel a program step

In stop mode, each time you press **CLEAR**, the last step in the program is erased.

- If a programmed disc is missing or inserted backwards during program play, " \* \* NO DISC " appears in the display, the step is automatically erased, and playback proceeds to the next step.
- Program contents are stored in memory even when the power is turned off (STANDBY).



#### Notes!!

- If step **5** is carried out before the accumulated time is displayed, the program play starts and the time is not displayed.
- When **UNLOAD** is pressed while a program has been entered, the disc for the 1st program step comes on the center position and the hood opens.
- The display is not shown if the total time of the program is 100 minutes or more.



## VARIOUS OPERATIONS

- You can also use the remote control for these operations.
- These operations can not be performed on the CD inserted into the SINGLE LOADER SLOT.

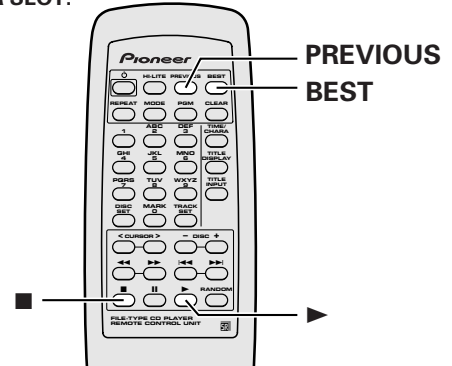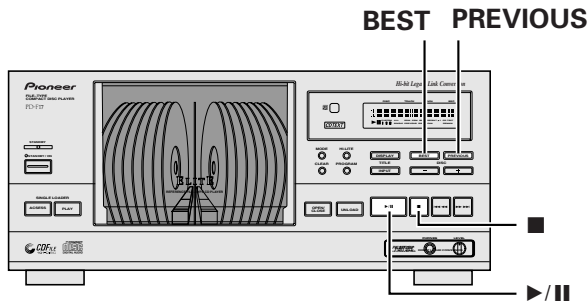

### To store your favorite tracks (BEST play)

To use the one-touch memory, just press the **BEST** button while playing a track you like. You can store up to 20 tracks.

**BEST**



**Press BEST while playing a track you like.**

The **BEST** indicator blinks and the disc and track number are stored in memory.

<To listen to the memorized tracks>

**BEST**



**Press BEST during stop mode.**

The **BEST** indicator lights and playback starts from the most recently memorized track.

- If you press **CLEAR** during Best playback, the current track is erased and the next track starts to play.
- You cannot memorize a track twice by pressing **BEST** during Best playback.
- If you press **BEST** to memorize a track when 20 tracks are already memorized, the oldest track is erased from memory and the new track is memorized.
- The memorized contents are stored, even when the power is turned off (STANDBY).
- Items stored in memory are saved, even if the power cord is unplugged.

**(Memory Back-Up Function).**

### To find out which discs you've listened to recently (PREVIOUS scan)

- This function scans the discs in reverse order, starting from the last disc you played.
- It can remember up to 20 discs. If the total number of discs exceeds 20, the oldest disc will be erased to make room for the new disc.

**Example:** If you played discs 1, 2, 9, 12 and 13 in order.

**PREVIOUS**



Blink

**Press the PREVIOUS button.**

- Approximately 10 seconds from one minute into the first track of each disc is played back, starting from the last disc you played: 13, 12, 9, 2, 1.

**▶/||**



**Press ▶/|| (or ▶ ) when you reach the disc you want to hear.**

- Previous disc scan is canceled and normal play resumes.



- To cancel the scanning, press ■.
  - Discs played during random, program, HI-LITE scan, Best and Single Loader playback are not included in the PREVIOUS scan.
  - If the first track is less than 1 minute long, about 10 seconds from the beginning will be played. If the first track is less than 10 seconds long, the entire track will be played.
  - Items stored in memory are saved, even if the power cord is unplugged.
- (Memory Back-Up Function).**





## VARIOUS OPERATIONS

- You can also use the remote control for these operations.

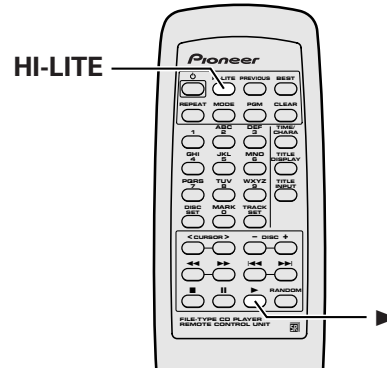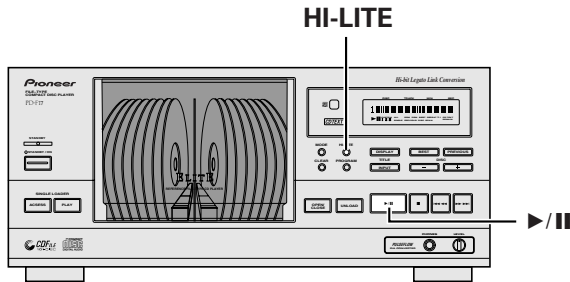

### To scan quickly through tracks on a disc (HI-LITE scan)

This function plays a 10 second portion located 1 minute from the start of each track on all the discs in the current play mode.

#### <Disc scan>

HI-LITE



Press once

#### Press HI-LITE during either play or stop mode.

- The unit plays a 10 second portion located 1 minute into the first track of each CD, starting from the first CD.

#### <To return to normal playback>



Press ►/|| (or ►) when you reach the track you want to hear.

**HI-LITE scan is canceled and normal playback resumes.**

- To cancel HI-LITE scan, press ■.

The "DISC" and "SCAN" indicator blinks.

#### <Track scan>

HI-LITE



Press twice

#### Press HI-LITE twice during either play or stop mode.

- The unit plays a 10 second portion located 1 minute into each track of each CD, starting from the first CD.

#### Notes!!

- You can use ◀◀/▶▶ to skip to another track during track scan.
- If the player is in ALL REPEAT mode, the HI-LITE scan will repeat.
- If the track is less than 1 minute long, about 10 seconds from the beginning of the track will be played. If the track is less than 10 seconds long, the entire track will be played.

The "SCAN" indicator blinks.

#### <Program scan>

HI-LITE



Press once

#### Press HI-LITE during program mode.

- The unit plays a 10 second portion located 1 minute into each track in the program.

The "SCAN" indicator blinks.

#### <Best selection memory scan>

HI-LITE




Press once

#### Press HI-LITE during best selection memory playback.



- The unit plays a 10 second portion located 1 minute into each track in the best selection memory.

The "SCAN" indicator blinks.

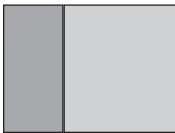

## VARIOUS OPERATIONS

- The parenthesis ( ) show operations for the main unit.

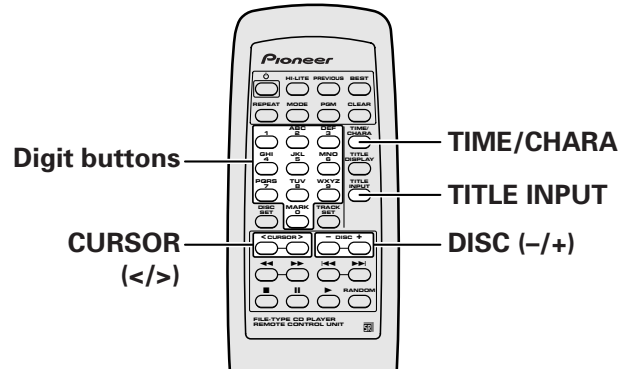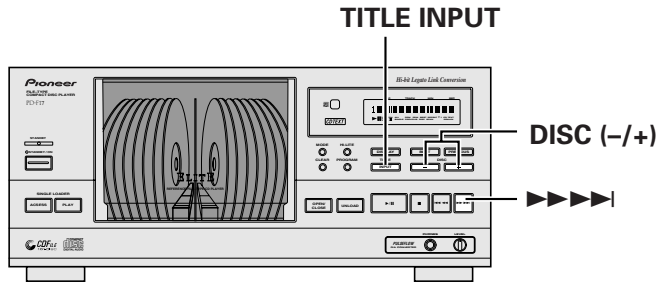


### Disc Title Input

A disc title can be assigned to a CD loaded in this unit using up to 8 characters. The assigned disc titles will be convenient when you want to find a desired disc later.

**1**

**TITLE INPUT**

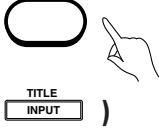


**Press the TITLE INPUT button.**

Cursor blinks.



**2**

**ABC**

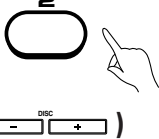

**Select each character to be entered by pressing a digit button.**

The character which can be entered varies every time the button is pressed.

Remote control




Main unit



On the main unit, each press of the **DISC (-) button** shows characters in a reverse cycle.

**3**

**CURSOR >**

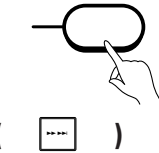

**Press the CURSOR (>) button.**

The cursor moves to the next character position.




- If the next character to be entered belongs to a different digit button from the previous character, it is not required to press the CURSOR (>) button.

**4**

**Repeat steps 2 and 3.**

**5**

**TITLE INPUT**

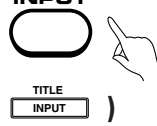

**Press the TITLE INPUT button at the end.**

The entered characters are registered as the title of the current disc.

[Example: To input "PIONEER"]

Operation	Title display
1 Press <b>TITLE INPUT</b> .	
2 Press <b>PQRS</b> twice.	
3 Press <b>GHI</b> 4 times.	
4 Press <b>MNO</b> 4 times.	
5 Press <b>CURSOR &gt;</b> .	
6 Press <b>MNO</b> 3 times.	
7 Press <b>DEF</b> 3 times.	
8 Press <b>CURSOR &gt;</b> .	
9 Press <b>DEF</b> 3 times.	
10 Press <b>PQRS</b> 4 times.	
11 Press <b>TITLE INPUT</b> .	

- Pressing the stop button (■) during the title input operation returns to the condition before the input operation 1.

**Symbols available with the MARK button ( MARK )**

(Space) ! " # \$ % & ' ( ) \* + , - . / : ; < = > ? @ [ \ ] ^ \_ ` { | } ~ ■

**TIME/CHARA button ( TIME/CHARA )** switches the uppercase and lowercase letters.


#### Notes!!

- A disc title cannot be entered for a single loader.
- It is not possible to perform the title input operation during playback of a CD TEXT disc.
- It is not possible to assign a title to the custom file itself.






## VARIOUS OPERATIONS

- The parenthesis ( ) show operations for the main unit.

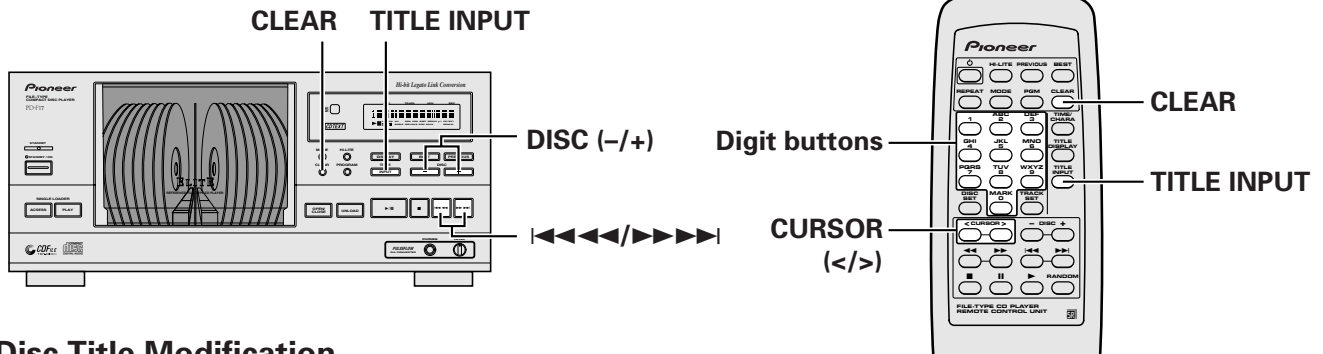

### Disc Title Modification

After input, the disc title can be modified any time later.  
To modify a registered character, first press the TITLE INPUT button.

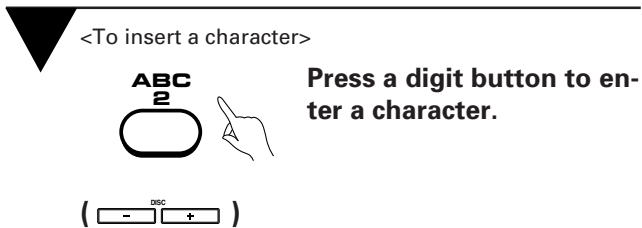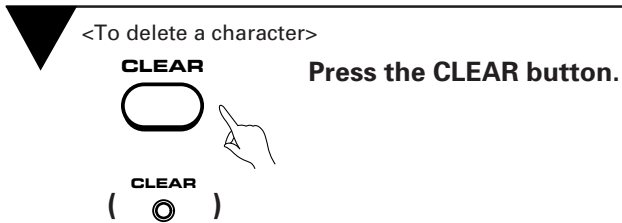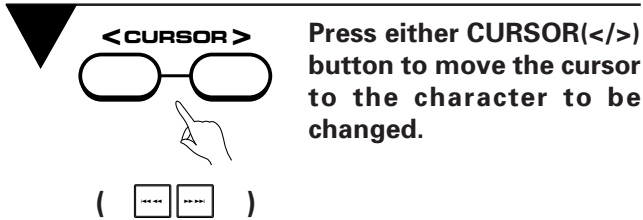

BEFORE OPERATING



BASIC OPERATIONS

VARIOUS OPERATIONS



## VARIOUS OPERATIONS


- The parenthesis ( ) show operations for the main unit.

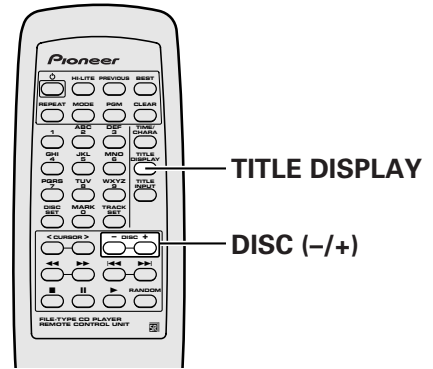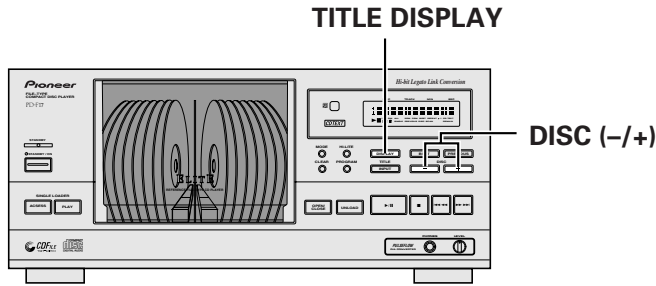

### CD TEXT Data Display (CD TEXT compatible data only)

The CD TEXT data including the disc title, track title and performer name in a CD can be displayed.  
The CD TEXT indicator lights up when a CD containing CD TEXT data is played.


**TITLE DISPLAY**

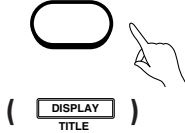

Press the **TITLE DISPLAY** button during playback.

Clock display  
↓  
Disc title  
↓  
Track title  
↓  
Performer name

 - Some discs may not have the performer name data.
- Even when a disc without the CD TEXT compatibility is played, the disc title is displayed provided that it has been input previously. When a disc played does not have a disc title input for it, the disc title display becomes as shown below.



#### Note!!

A very long title or performer name (more than about 1000 characters) may not be displayed completely.

#### <Title Memory>

Once the disc title of a CD TEXT disc is shown, the top 8 characters are automatically stored in memory. Even when another title has been stored, it is automatically overwritten by the new CD TEXT disc title.


#### Tip:

If the CD TEXT disc title begins with a space character, it will not be overwritten. Therefore, if you do not want a title to be overwritten, insert a space character as the first character. When you want to overwrite a title beginning with a space character, simply remove the space character.

### To search a disc by the Disc title

**1**

**TITLE DISPLAY**

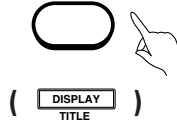

Press the **TITLE DISPLAY** button during playback to display the title.

**2**



Press the **DISC (-/+)** button.

- Each press of the DISC (-/+) button displays the title of the next disc.




The disc number blinks

#### Note!!

If the DISC (-/+) button is pressed while the title is scrolled immediately after the start of disc playback, the previous or next disc will be selected.


**3**

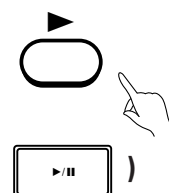

When the desired disc title is displayed, press the **PLAY (▶)** button.


The disc desired starts to be played.



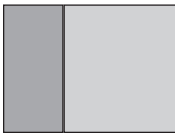

## VARIOUS OPERATIONS

- You can use the remote control.

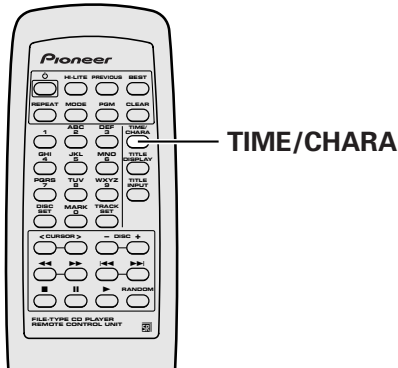


### To use the TIME button

**TIME/  
CHARA**





#### Press TIME during play-back.

Each time you press **TIME**, the display changes as follows.

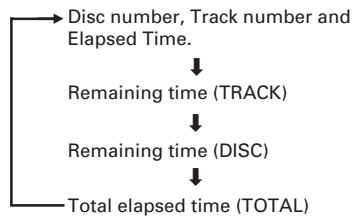

#### Notes!!

- Time remaining on the track may not be displayed for tracks numbered greater than 24.
- Time remaining on the disc is not displayed during **RANDOM**, **PROGRAM** or **BEST** play.
- During **PROGRAM** play
- During **BEST** play

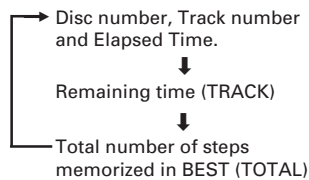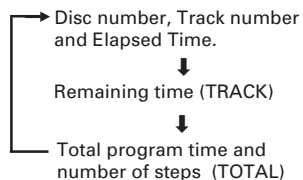

#### Caution in use of the optional PD-AP1 File-type CD Controller

- When the PD-AP1 is connected to the PD-F17, disc replacement should be done by using the PD-F17 **DISC (+/-)** after opening the hood. (The PD-F17 **DISC (+/-)** will not function when the hood is close.)

#### Note!!


The PD-F17 **DISC (+/-)** of the remote control unit cannot be used.

- The disc in the **SINGLE LOADER** slot can be played only when the PD-F17 is connected with the **PLAYER 1** section of the PD-AP1.

#### Note!!

If the PD-F17 is connected with the **PLAYER 2** or **3** section of the PD-AP1, the disc can be loaded in the **SINGLE LOADER** slot but cannot be played.

- When the PD-AP1 is connected to the PD-F17, the **BEST** play, **PREVIOUS** scan and **HI-LITE** scan functions of the PD-F17 cannot be used.
- When the PD-AP1 is connected to the PD-F17, the time display on the PD-F17 will read "-----".
- The **ADLC** button on the PD-AP1 is not used with the PD-F17.
- The PD-AP1 does not display the **CD TEXT** data and the disc titles input in the PD-F17.

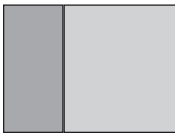

# TROUBLESHOOTING

Incorrect operations are often mistaken for trouble and malfunctions. If you think that there is something wrong with this component, check the points below. Sometimes the trouble may lie in another component. Investigate the other components and electrical appliances being used. If the trouble cannot be rectified even after exercising the checks listed below, ask your nearest PIONEER authorized service center or your dealer to carry out repair work.

Symptom	Cause	Remedy
No sound	<ul style="list-style-type: none"> <li>Output cables are connected incorrectly or loosely.</li> <li>Incorrect operation of stereo amplifier.</li> <li>Pin plugs and/or amplifier terminals are dirty.</li> <li>Player is in pause mode.</li> <li>The disc is loaded with the label side rightward.</li> </ul>	<ul style="list-style-type: none"> <li>Connect properly.</li> <li>Check the settings of amplifier switches and sound volume controls.</li> <li>Clean away dirt.</li> <li>Press ► or II.</li> <li>Reload the disc with the label side leftward.</li> </ul>
When playback is started, it stops immediately. Pauses or stops during playback.	<ul style="list-style-type: none"> <li>Disc is inserted in the wrong way.</li> <li>Smudges, etc., on the disc.</li> </ul>	<ul style="list-style-type: none"> <li>Insert the disc correctly with the label side leftward.</li> <li>Clean the smudges from the disc and then play it again.</li> </ul>
Remote control will not function.	<ul style="list-style-type: none"> <li>Dead batteries.</li> <li>Obstruction between player and remote control unit.</li> </ul>	<ul style="list-style-type: none"> <li>Replace batteries.</li> <li>Relocate remote control unit or remove obstruction.</li> </ul>

 
Abnormal functioning of this unit may be caused by static electricity, or other external interference. To restore normal operation, unplug the AC power cord and then plug it in again.

## SELF-DIAGNOSTICS FUNCTION

The unit incorporates a self-diagnostic function.

When an abnormality is detected during operation of the unit, an error message (service no.) appears on the unit's display automatically. Treat the error by following the instructions in "Countermeasures".

### Display on the unit



Service No.	Unit Status	Countermeasures
U1	The disc may not be loaded properly in the rack.	<ul style="list-style-type: none"> <li>Reload the discs properly. (Insert only one disc in a slot.)</li> <li>Check if there is a foreign object attached onto the disc.</li> <li>Check if there is a foreign object in the rack.</li> </ul>
U2	There is an operation error in the mechanical section.	<ul style="list-style-type: none"> <li>Check if there is a foreign object in the rack.</li> <li>Unplug the power cord then plug it in again.</li> </ul>
U3	There is an error related to the hood.	<ul style="list-style-type: none"> <li>Check if the hood is caught by anything.</li> <li>Unplug the power cord then plug it in again.</li> </ul>

If the same display appears again, there may be an error in the mechanical section. When requesting servicing, please also let us know the service number displayed on the unit.

## POWER-CORD CAUTION

Handle the power cord by the plug. Do not pull out the plug by tugging the cord and never touch the power cord when your hands are wet as this could cause a short circuit or an electric shock. Do not place the unit, a piece of furniture, etc., on the power cord, or pinch the cord. Never make a knot in the cord or tie it with other cords. The power cords should be routed such that they are not likely to be stepped on. A damaged power cord can cause a fire or give you an electrical shock. Check the power cord once in a while. When you find it damaged, ask your nearest PIONEER authorized service center or your dealer for a replacement.



# SPECIFICATIONS

## 1. General

Type ..... Compact disc digital audio system  
 Power requirements ..... AC 120V, 60 Hz  
 Power consumption ..... 14W  
 Power consumption in standby mode ..... 3W  
 Operating temperature ..... +5°C - +35°C  
 (+41°F - +95°F)  
 Weight ( without package ) ..... 6.5 kg (14 lb 5 oz.)  
 External dimensions ..... 420(W) X 402(D) X 193(H) mm  
 16-9/16(W) X 15-13/16(D) X 7-10/16(H) in.

## 2. Audio section

Frequency response ..... 2 Hz - 20 kHz  
 S/N ratio ..... 105 dB or more (EIAJ)  
 Dynamic range ..... 96 dB or more (EIAJ)  
 Channel separation ..... 100 dB or more (EIAJ)  
 Harmonic distortion ..... 0.003 % or less (EIAJ)  
 Level difference between channels ..... 1.0 dB or less (EIAJ)  
 Output voltage ..... 2 Vrms (EIAJ)  
 Wow and flutter ..... less than ±0.001 % (W.PEAK)  
 ( below measurable level ) (EIAJ)  
 Channels ..... 2-channel ( stereo )

## 3. Output terminal

Audio line output  
 Control input jack  
 Control output jack  
 CD-DECK SYNCHRO jack  
 Optical digital output jack  
 Coaxial digital output jack  
 I/O interface  
 Head phone jack with volume control

## 4. Accessories

- Remote control unit ..... 1
- Size AA/R6P dry cell batteries ..... 2
- Output cable ..... 1
- Control cable ..... 1
- Operating instructions ..... 1

### Note!!

*Specifications and design subject to possible modification without notice, due to improvements.*



## Dear Customer:

Selecting fine audio equipment such as the unit you've just purchased is only the start of your musical enjoyment. Now it's time to consider how you can maximize the fun and excitement your equipment offers. This manufacturer and the Electronic Industries Association's Consumer Electronics Group want you to get the most out of your equipment by playing it at a safe level. One that lets the sound come through loud and clear without annoying blaring or distortion-and, most importantly, without affecting your sensitive hearing.

Sound can be deceiving. Over time your hearing "comfort level" adapts to higher volumes of sound. So what sounds "normal" can actually be loud and harmful to your hearing. Guard against this by setting your equipment at a safe level BEFORE your hearing adapts.

### To establish a safe level:

- Start your volume control at a low setting.
- Slowly increase the sound until you can hear it comfortably and clearly, and without distortion.

### Once you have established a comfortable sound level:

- Set the dial and leave it there.

Taking a minute to do this now will help to prevent hearing damage or loss in the future. After all, we want you listening for a lifetime.

## We Want You Listening For A Lifetime

Used wisely, your new sound equipment will provide a lifetime of fun and enjoyment. Since hearing damage from loud noise is often undetectable until it is too late, this manufacturer and the Electronic Industries Association's Consumer Electronics Group recommend you avoid prolonged exposure to excessive noise. This list of sound levels is included for your protection.

### Decibel

Level	Example
30	Quiet library, soft whispers
40	Living room, refrigerator, bedroom away from traffic
50	Light traffic, normal conversation, quiet office
60	Air conditioner at 20 feet, sewing machine
70	Vacuum cleaner, hair dryer, noisy restaurant
80	Average city traffic, garbage disposals, alarm clock at two feet.

### THE FOLLOWING NOISES CAN BE DANGEROUS UNDER CONSTANT EXPOSURE

90	Subway, motorcycle, truck traffic, lawn mower
100	Garbage truck, chain saw, pneumatic drill
120	Rock band concert in front of speakers, thunderclap
140	Gunshot blast, jet plane
180	Rocket launching pad


Information courtesy of the Deafness Research Foundation.



BEFORE OPERATING

BASIC OPERATIONS

VARIOUS OPERATIONS

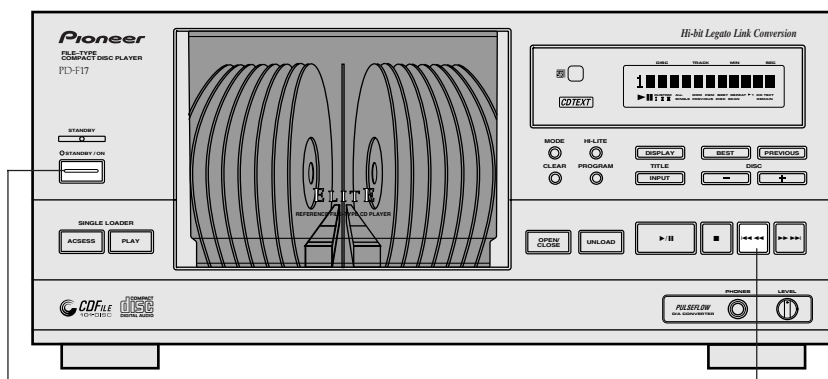

**POWER ON DEMO display**

POWER ON DEMO display mode allows you to see variations of the display. To enter the POWER ON DEMO display mode, press STANDBY/ON and then **◀◀** within 1 second after turning on the power.

To cancel the POWER ON DEMO display mode, press any button.

Should this product require service in the U.S.A. and you wish to locate the nearest Pioneer Authorized Independent Service Company, or if you wish to purchase replacement parts, operating instructions, service manuals, or accessories, please call the number shown below.

8 0 0 - 4 2 1 - 1 4 0 4

Please do not ship your product to Pioneer without first calling the Customer Service Department at the above listed number for assistance.

PIONEER ELECTRONICS SERVICE, INC.  
 CUSTOMER SERVICE DEPARTMENT  
 P.O. BOX 1760, LONG BEACH,  
 CA 90801-1760, U.S.A.

For warranty information please see the Limited Warranty sheet included with your product.

Published by Pioneer Electronic Corporation.  
 Copyright © 1999 Pioneer Electronic Corporation.  
 All rights reserved.

**PIONEER ELECTRONIC CORPORATION** 4-1, Meguro 1-Chome, Meguro-ku, Tokyo 153-8654, Japan  
**PIONEER ELECTRONICS [USA] INC.** P.O. BOX 1540, Long Beach, California 90801-1540  
**PIONEER ELECTRONICS OF CANADA, INC.** 300 Allstate Parkway, Markham, Ontario L3R 0P2, Canada  
**PIONEER ELECTRONIC [EUROPE] N.V.** Haven 1087, Keetberglaan 1, 9120 Melsele, Belgium TEL: 03/570.05.11  
**PIONEER ELECTRONICS AUSTRALIA PTY. LTD.** 178-184 Boundary Road, Braeside, Victoria 3195, Australia, TEL: [03] 9586-6300  
**PIONEER ELECTRONICS DE MEXICO S.A. DE C.V.** San Lorenzo Num 1009 3er Piso Desp. 302 Col. Del Valle, Mexico D.F. C.P.03100 TEL: 5-688-52-90



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>