

The **PIONEER BR-95** TV-CATV remote control unit controls the Pioneer converter as well as the "ON/OFF", "MUTE" and "VOLUME" functions of televisions that presently have remote control.

If your television does not have remote control, the "MUTE" and "VOLUME" can be controlled by the CATV converter if the converter is so equipped.

A. CATV CODE PROGRAM PROCEDURE

A1. To Program Remote for use with a TV equipped with remote control:

- 1.1 Enter "SET Mode" (See Note 1)

Note 1:
To enter the "SET Mode" perform the following procedure:

Depress **CATV** & **TV** Keys simultaneously until indicator lamp lights (approximately 3 seconds). If the indicator lamp lights immediately after pressing the **CATV** & **TV** Keys, release the keys and try again to depress the keys simultaneously. Release keys after lamp lights.

- 1.2 Press **CATV** Key momentarily

- 1.3 Press keys "0", "0", "2", "5"

(Indicator lamp should blink twice and turn off. If indicator lamp just turns off, the code has not been entered correctly and the procedure should be repeated beginning at Step A1.1.1.

- 1.4 Program TV Code as defined in the "TV Code Program Procedure"

A2. To Program CATV code for use with a TV NOT equipped with remote control:

- 2.1 Enter "SET Mode" (See Note 1)

- 2.2 Press **CATV** Key momentarily

- 2.3 Press keys "1", "0", "2", "5"

(Indicator lamp should blink twice and turn off. If indicator lamp just turns off, the code has not been entered correctly and the procedure should be repeated beginning at Step A2.2.1.

- 2.4 The remote is now ready to control your CATV converter box.

B. TV CODE PROGRAM PROCEDURE

- 1.1 Enter "SET Mode" (See Note 1)

- 1.2 Press the **TV** Key momentarily

- 1.3 Look up appropriate TV and enter the first code (for instance, for an NEC TV depress keys "0", "1", "0")

- 1.4 Aim the remote at the TV and depress the **TV** Key. If the TV turns on (or off) the code is correct and the remote is ready for use.

The remote is now ready for use.

If the TV does not respond, repeat the procedure beginning with Step B.1.1 and enter the next code for that model TV until the TV turns on (or off).

If the TV does not respond after all codes are tried, use the procedure "SCAN TV PROCEDURE".

SCAN TV PROCEDURE

- 1.1 Enter "SET Mode" (See Note 1)

- 1.2 Press **TV** Key


- 1.3 Press **▲VOL** SLOWLY and repeat pressing until TV turns on (or off). It may require more than 100 key depressions to find the proper code.

- 1.4 Press **TV** Key


BATTERIES

Use two (2) AAA batteries

NOTE: If new batteries are replaced within 5 minutes after the old are removed, the program should be retained and reprogramming will not be required.

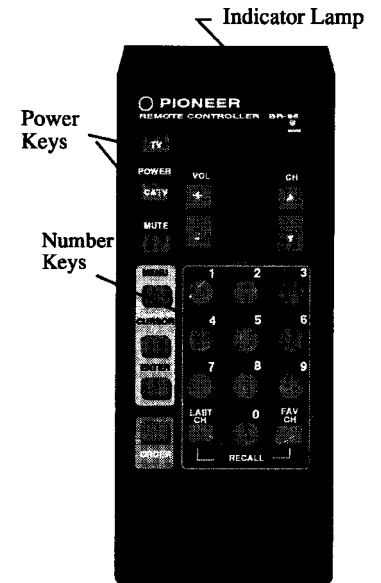

After determining the codes that operate your devices, write the codes in the spaces provided on the back overlay for easy reference.

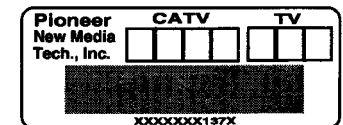

TV Codes (TABLE 1)	TV Codes	TV Codes
AMARK 000	LXI 055, 069, 073, 083	SOUNDESIGN 012, 017
ANAM 001, 002, 003, 062	MACYS 009	SPECTRICON 000
AOC 000, 005, 006, 048, 058	MAGNAVOX . . 012, 053, 054, 055, 056, 057, 058, 086, 100, 101	SYLVANIA 012, 053, 054, 055, 057, 058, 086
ARCHER 000	MARANTZ 055, 058	TMK 010, 017
CANDLE 009, 010, 012, 058	MEMOREX 073, 094	TANDY 058, 088
CAPEHART 004	MGA 017, 048, 050, 051, 058	TATUNG 062
CITIZEN 009, 010, 011, 012, 058, 085, 098	MITSUBISHI . . 017, 047, 048, 049, 050, 051, 052	TECHNICS 061
CONCERTO 010	MTC 010, 015, 048, 058, 085	TECHWOOD 010
CONTEC 007, 008, 074	NAD 065	TEKNIKA . . .009, 010, 011, 012, 048, 050, 059, 085, 090, 094, 098
CRAIG 003, 094	NEC 010, 048, 058, 059, 092	TERA 060
CURTIS MATHES 058, 085, 098	NOVABEAM 046	TOSHIBA 073, 083, 085, 092
DAEWOO 011, 013, 014, 015, 048, 098	OPONICA 096	TOSONIC 008
DAYTRON 098	PANASONIC 055, 061, 062, 064	TOTEVISION 098
ELECTROHOME 098	PHILCO 012, 048, 053, 054, 057, 058, 086	UNIVERSAL 027, 028
EMERSON 007, 008, 016, 017, 018, 019, 020, 022, 023, 024, 025, 098	PHILIPS 055	VECTOR RESEARCH 058
ENVISION 058	PIONEER 065, 066	VICTOR 042
FISHER 026, 073	PORTLAND 048, 098	VIDEO CONCEPT 049
FUNAI 018	PROTON 004, 017, 060, 098	VIDTECH 017, 048
GE 017, 027, 028, 061, 062, 069	PULSAR 097	WARDS 017, 018, 027, 028, 048, 053, 054, 056, 057, 058, 069, 094, 095, 096
GOLDSTAR . . . 010, 017, 029, 030, 048, 058, 098	QUASAR 061, 062	YAMAHA 048, 058
HALLMARK 017	RCA 033, 048, 067, 069, 070, 071	ZENITH 094, 097
HITACHI 010, 033, 034, 035, 037, 038, 039, 040, 098	RADIO SHACK 087, 096, 098	ZONDA 000
INFINITI 055	REALISTIC 073	
JCPENNY 027, 048, 058, 067, 069, 083, 085, 098	SSS 048	
JBL 055	SAMPO 004, 058	
JENSEN 041	SAMSUNG 010, 048, 058, 085, 087, 098	
JVC 042, 044, 045	SANYO 026, 072, 073, 075, 082	
KENWOOD 058	SCOTT 018, 098	
KLOSS 009, 046, 086	SEARS 010, 017, 018, 026, 069, 073, 082, 083, 102	
KTV 024, 098	SHARP 078, 096, 098	
LOGIK 094	SIGNATURE 094	
LUXMAN 010	SONY 080	

CATV Converter Code (TABLE 2)
For "Mute" and "Volume" via TV:
0025

For "Mute" and "Volume" via
CATV Converter:
1025

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>