


Installation Instructions


for the Integra™ N400 3-lb. Scale

1 Do not connect power until Step 10.

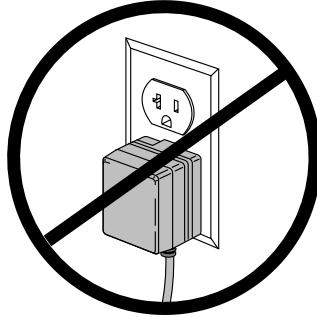


2 Make sure you have:

- ✓ Scale
- ✓ User Guide
- ✓ Power Cord (in its own box)
- ✓ Scale-Meter Interface Cable (if ordered, packed separately)

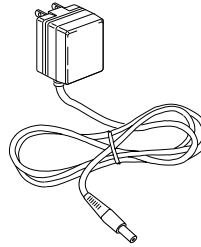


Power Cord

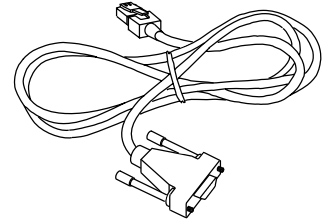

Scale-Meter Interface Cable
(if ordered, packed separately)




Scale

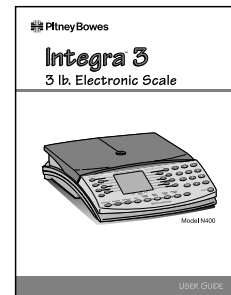

User Guide


3 Place your scale on a level surface.

Place the scale near a wall outlet and within cable reach of your postage meter (if you have one). **IMPORTANT:** Ensure the scale location is free of drafts and the scale is not touching objects that may affect the weight reading.

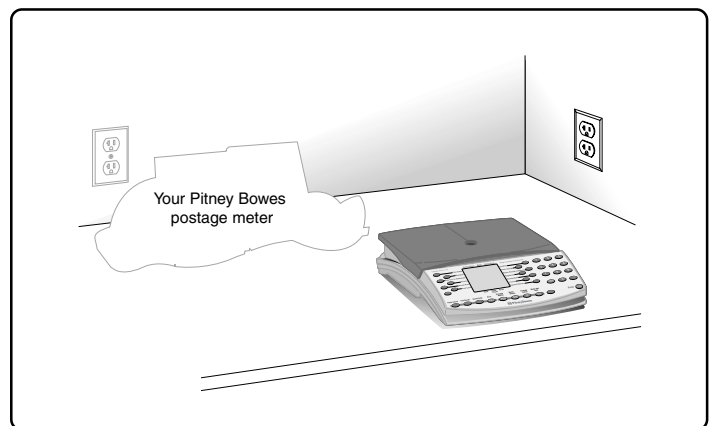

4 Remove packing.


Lift the platter, remove the packing material, and replace the platter on the scale.

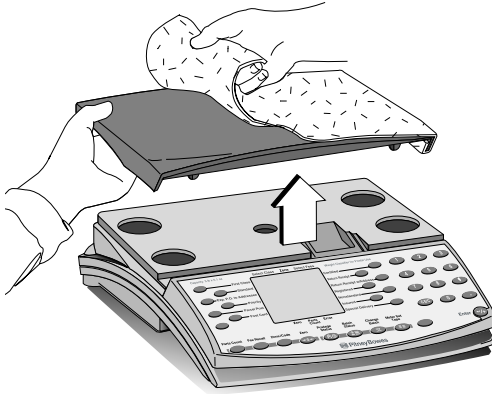

5 Level the scale.

Adjustable Feet (4)


Level the scale by turning the scale feet until the leveling bubble is centered and the scale does not wobble.

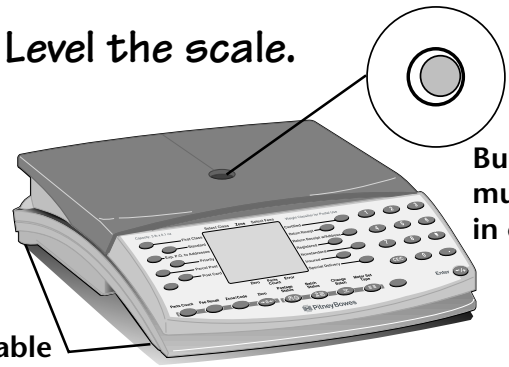

Bubble must be in center.


6 Locate the plug ports.

Locate the plug ports under the front of the scale and plug in the small end of the power cord.

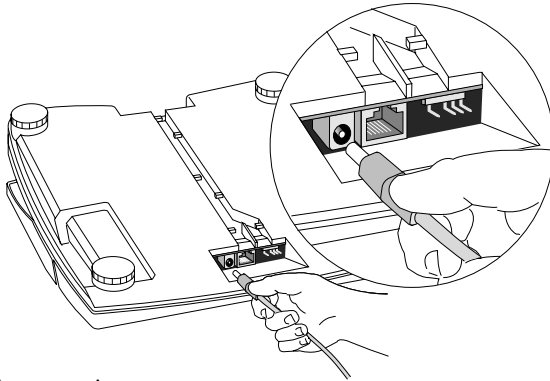


7 Connect scale-meter interface cable to scale.

If you're using a Pitney Bowes meter, plug the small end of the scale-meter interface cable into the scale port.

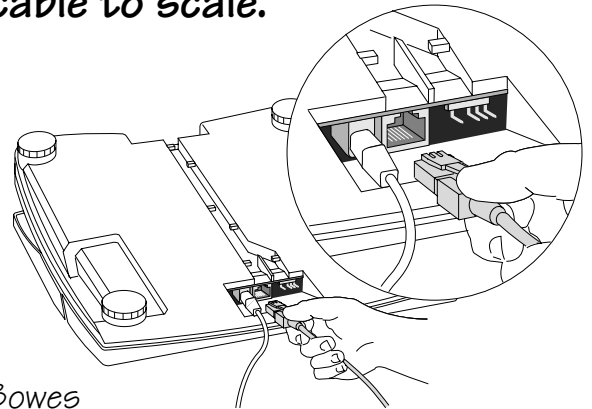


8 Tuck the cord(s) under the guides.

Tuck the cord(s) under the guides on the bottom of the scale.

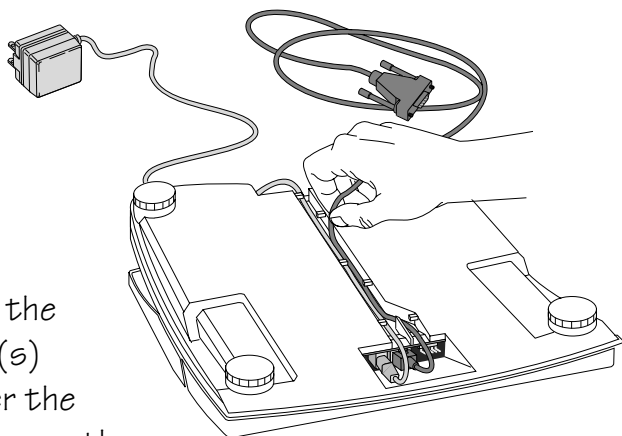


9 Connect scale-meter interface cable to meter.

If you're using a Pitney Bowes meter, connect the large end of the scale-meter interface cable to your meter's communications port. Tighten the thumbscrews securely. See the meter's operating guide for the location of the port.

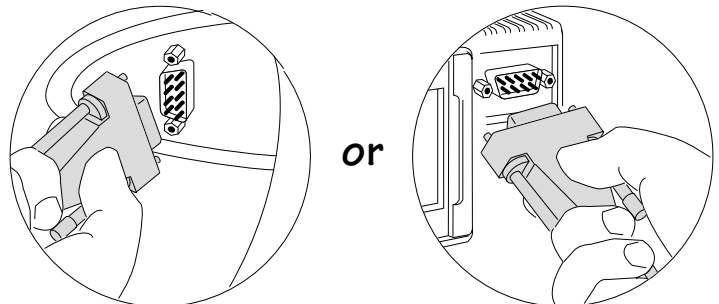


10 Plug power cord into outlet.

 

Result: The scale powers up and displays the LC (location code) prompt below.

Go to Step 11 to continue.

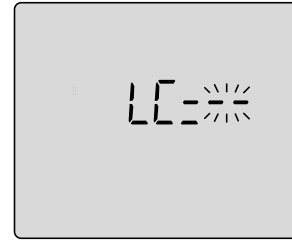


Note: If the scale does not power-up, check that the power cord is firmly attached. Also check that the wall outlet you are using has power by plugging in another device.

11 Enter your location code.

Note: Your scale will not work unless you perform this step.

- Find the number corresponding to your state in the chart at right.
- Enter the code on the numeric keys.
- Ensure that the code on the display matches your state's code.**
- Press **Enter**.

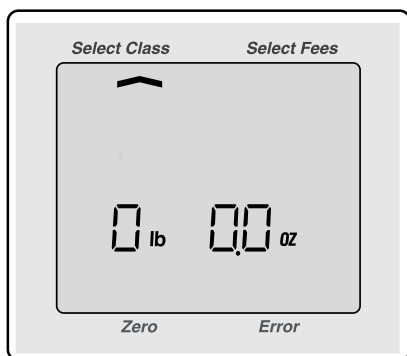

The scale displays 0 lb 0.0 oz and the Select Class arrow flashes. This is the ready mode.

Location Codes					
State	Code	State	Code	State	Code
Alabama	50	Louisiana	50	Ohio	72
Alaska	06	Maine	72	Oklahoma	61
Arizona	50	Maryland	72	Oregon	72
Arkansas	61	Massachusetts	72	Pennsylvania	72
California	61	Michigan	72	Rhode Island	72
Colorado	61	Minnesota	84	South Carolina	50
Connecticut	72	Mississippi	50	South Dakota	72
Delaware	72	Missouri	61	Tennessee	61
Florida	50	Montana	84	Texas	50
Georgia	50	Nebraska	72	Utah	61
Hawaii	43	Nevada	61	Vermont	72
Idaho	72	New Hampshire	72	Virginia	61
Illinois	72	New Jersey	72	Washington, DC	72
Indiana	72	New Mexico	50	Washington	84
Iowa	72	New York	72	West Virginia	61
Kansas	61	North Carolina	61	Wisconsin	72
Kentucky	61	North Dakota	84	Wyoming	72

Congratulations!

You have successfully installed your Pitney Bowes electronic scale.

If you have any questions about the initial setup,

BE NEAR YOUR SCALE

and call 1-800-537-2488 (menu option 1).

Or visit our website at www.pitneybowes.com/ms_service/support/integra

For information on using the scale, refer to the User Guide.



* S V 6 0 4 0 6 R E V . E *

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>