

SIP 2.0

VIP-254 Series

SIP IP Phone

Make High-Quality Low-Cost VoIP Calls



Quick Installation Guide

Speed Dial



Auto

Provision

HandFree



Caller ID



3 way



Conference

Full-duplex



SIP IP Phone

VIP-254T_254PT

Quick Installation Guide

Overview

This quick installation guide describes the objectives; organization and basic installation of the PLANET VIP-254T/VIP-254PT SIP IP Phone (“**IP Phone**” in the following term), and explains how to establish your first voice over IP communication via PLANET product. Also, this guide shows you how to find additional information on related products and services.

Respective model/descriptions are shown below:

VIP-254T: SIP IP Phone

VIP-254PT: 802.3af PoE SIP IP Phone

The VIP-254 series IP Phone integrate web-based graphical user interface that can cover most configurations and machine status monitoring. Via standard, web browser, you can configure and check machine status from anywhere around the world.

Table of Contents

Preparation before beginning administration on the IP Phone.....	5
Installation	5
Administration Interface	7
Web configuration access:	7
Network Interface quick configurations	8
Voice communication samples.....	10
Peer to peer (P2P) mode.....	10
SIP Proxy mode	10
Quick reference in CD-ROM guide	12

Document Objectives

This guide provides physical installation, network configurations, and Internet access establishment information for the PLANET IP Phones.

Document Organization

This guide is organized as follows:

- Preparation before beginning administration on PLANET IP Phone
- Administration interface
- Network Interface quick configurations
- Internet access setup guide


Preparation before beginning administration on the IP Phone

Installation


VIP-254T: SIP IP Phone (2 x RJ-45)


VIP-254PT: 802.3af PoE SIP IP Phone (2 x RJ-45, 1 x PoE for LAN interface)

Step 1: Connecting Handset

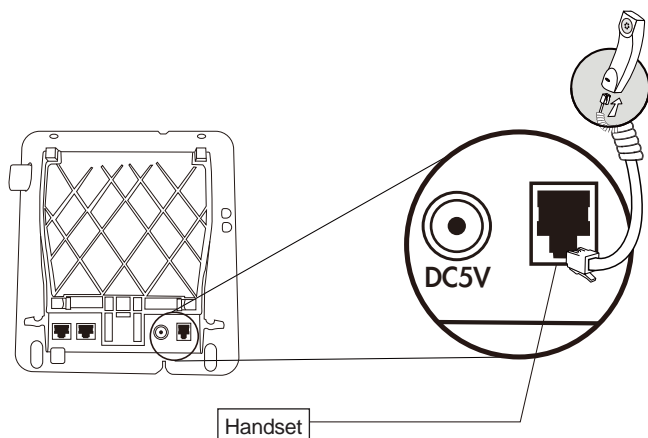


Step 2: Connecting Power AC Power and Network

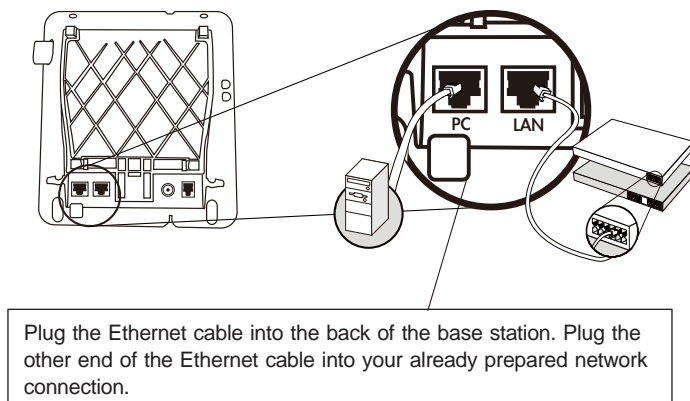

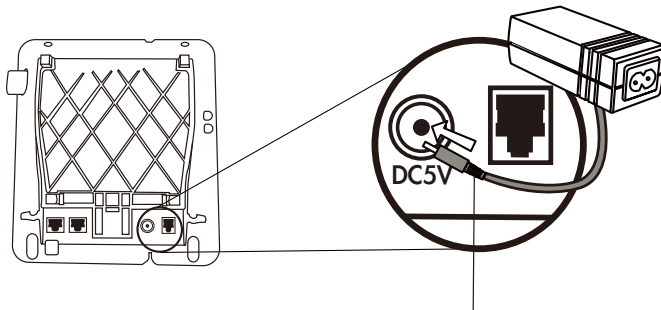

Power Adapter (5V DC)
 NOTE: Use only the power adapter shipped with the unit to ensure correct functionality.

Step 3: Adjust the stand angle.

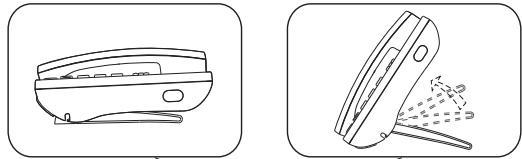

Press and hold the button of right side to change the stand mount angle.

1	PC	RJ-45 connector, to maintain the existing network structure, connected directly to the PC through straight CAT-5 cable
2	LAN	RJ-45 connector, for Internet access, connected directly to Switch/Hub through straight CAT-5 cable. The LAN interface also can be connected with 802.3af PoE switch or converter for power supply (VIP-254PT only)
3	5V DC	5V DC Power input outlet.
4	Handset	RJ-11 connector, connected directly to the Handset.



For VIP-254PT, either PoE or AC adapter can be deployed at one time

Administration Interface

The IP Phone provides GUI (Web based, Graphical User Interface) for machine management and administration. Key pad administration also available for simple configuration.

Web configuration access:

To start IP Phone web configuration, you must have one of these web browsers installed on computer for management

- Microsoft Internet Explorer 6.0.0 or higher with Java support

Default IP address of IP Phone is **192.168.0.1**. You may now open your web browser, and insert **http://192.168.0.1** in the address bar of your web browser to logon IP Phone web configuration page.

IP Phone will prompt for logon username/password, please enter: **root / null** (no password) to continue machine administration.

The screenshot shows a web form titled "Enter Network Password" with a blue header. Below the header, the text reads "Please type your user name and password" and "IP Phone Configuration". There are two input fields: "User Name" and "Password". Below the fields are two buttons: "Login" and "Clear". At the bottom, there is a checkbox labeled "Save this password in your password list".



In order to connect machine for administration, please locate your PC in the same network segment (192.168.0.x) of IP Phone. If you're not familiar with TCP/IP, please refer to related chapter on user's manual CD or consult your network administrator for proper network configurations.

Network Interface quick configurations

Execute your web browser, and insert the LAN IP address (default: **192.168.0.1**) of SIP IP Phone in the address bar. After logging on machine with username/ password (default: **root / no password**), browse to **“Network” --> “Network settings”** configuration menu:

Network Settings

You could configure your network settings in this page.

TCP/IP Configuration	
IP Type:	<input checked="" type="radio"/> Fixed IP <input type="radio"/> DHCP Client <input type="radio"/> PPPoE
IP:	<input type="text" value="192.168.0.1"/>
Mask:	<input type="text" value="255.255.255.0"/>
Gateway:	<input type="text" value="192.168.0.254"/>
DNS Server 1:	<input type="text" value="168.95.1.1"/>
DNS Server 2:	<input type="text" value="168.95.192.1"/>
MAC:	<input type="text" value="00304faabbcc"/>

Parameter Description

IP address	LAN IP address of the IP Phone Default: 192.168.0.1
Mask	LAN mask of the IP Phone Default: 255.255.255.0
Default Gateway	Gateway of the IP Phone Default: 192.168.0.254

Connection Type	Data required.
Fixed IP	The ISP will assign IP Address, and related information.
DHCP client	In most circumstances, it is no need to configure the DHCP settings.
PPPoE	The ISP will assign PPPoE username / password for Internet access.

After confirming the modification you've done, Please click on the Submit button to apply settings and browse to **“Save & Reboot”** menu to reboot the machine to make the settings effective.

Save Change to Flash Memory

Most of the IP Phone parameters will take effective after you modify, but it is just temporary stored on RAM only, it will disappear after your reboot or power off the IP Phone, to save the parameters into Flash ROM and let it take effective forever, please remember to press the **Save & Reboot** button after you modify the parameters.

Voice communication samples

There are several ways to make calls to desired destination in IP Phone. In this section, we'll lead you step by step to establish your first voice communication via keypad and web browsers operations.

Peer to peer (P2P) mode

STEP 1: Assuming there are two VIP-254T in the network the IP address are 192.168.0.1 and 192.168.0.2

VIP-254T-A

LAN IP Address

(192.168.0.1)



VIP-254T-B

LAN IP Address

(192.168.0.2)

STEP 2: Pick up handset or press "Hand Free" key from keypad of VIP-254T-A and dial "**192.168.0.2#**". Then the phone of VIP-254T-B should ring. You can do the same thing to the VIP-254T-B.



Hint

- If the IP address of the remote calling party is known, you may directly make calls by preset number via its IP address and end with an "#".
- If the IP phones are installed behind a NAT/firewall/ IP sharing device, please make sure the NAT device support SIP applications before making calls

SIP Proxy mode

VIP-254T-A

LAN IP Address

(192.168.0.1)

Number: 100



Number: 200



VIP-254T-B

LAN IP Address

(192.168.0.2)



SIP-50

WAN IP Address

(192.168.0.50)

STEP 1: Log in SIP-50 and create two testing accounts/password: **100 / 123** (for VIP-254T-A), and **200 / 123** (for VIP-254T-B) for the voice calls.

STEP 2: Please log in VIP-254T-A via web browser, browse to the **SIP setting** menu and select the **Domain Service** config menu. In the setting page, please insert the account/password information obtained from your service provider (in this sample, we're using PLANET SIP-50 as the SIP Proxy server for SIP account, call authentications), and then the sample configuration screen is shown below:

Service Domain Settings

You could set information of service domains in this page.

Realm 1 (Default)	
Active:	<input checked="" type="radio"/> On <input type="radio"/> Off
Display Name:	<input type="text" value="100"/>
Line Number:	<input type="text" value="100"/>
Register Name:	<input type="text" value="100"/>
Register Password:	<input type="password" value="..."/>
Domain Server:	<input type="text" value="192.168.0.50"/>
Proxy Server:	<input type="text" value="192.168.0.50"/>
Outbound Proxy:	<input type="text"/>
Status:	Registered

STEP 3: Repeat the same configuration steps on VIP-254T-B, and check the machine registration status, make sure the registrations are completed.

STEP 4: To verify the VoIP communication, please pick up the telephone. Dial the destination number to make call between SIP clients. For example, VIP-254T-A (with number 100) with keypad number 200 to VIP-254T-B, or reversely makes calls from SIP client (VIP-254T-B) to the number 100 (VIP-254T-A).

Quick reference in CD-ROM guide

This guide is used to help you startup your SIP IP Phone settings. It is also recommended to check the user manual CD-ROM for more details like the "LCD menu", "Web Setup", and how to set the device back to default value.

www.planet.com.tw



PLANET Technology Corp.

2341-D10290-000



Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>