

7" Portable DVD Player

PDV-0707N

Operation Manual



 

20041118



Contents

Important Safety Instructions	3
Characteristic Features	6
Parts Introduction	7
Remote Control	9
Connections	12
Playback Preparations.....	12
■ Usage of Remote Control.....	13
■ Disc Formats Supported by this player	14
■ Usage of Power Switching Adapter	15
Using a Car Adapter.....	15
Using Headphones.....	15
Play Operation	16
System Setup.....	18
Playback Functions.....	21
Care of Discs.....	24
Special Features of Revolving TFT LCD Screen	25
Car Bag	26
Troubleshooting	27
Specifications	28

Important Safety Instructions

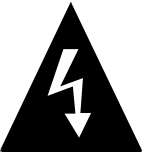	CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN!	
CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.		



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be sufficient to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.

POWER SUPPLY:

Connect the supplied adapter to the side of the player jack marked with “DC9.5V In” on the side of the player, then plug the two-prong end of the power cord to an AC100-240V outlet. If you have difficulty inserting the plug, turn it over and reinsert it. If the unit will not be used for a long time, disconnect the plug from the outlet.

NOTE:

Before plugging the power cord into an AC outlet, make sure that all the connections have been made.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer to service manual for servicing instructions.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use near water.
6. Clean only with dry cloth.
7. Do not block any ventilation

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user service-able parts inside the unit. Leave all servicing to qualified service personnel. This unit complies with FDA regulation for radiation control of laser products.

- openings. Maintain well ventilated conditions around the product. Do not put product on bed, sofa or anything that blocks ventilation. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized. A polarized plug has two blades with one wider than the other. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Copyright Protection

Unauthorized copying, broadcasting, public performance, and lending of disks are prohibited. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Precautions with Moisture

■ Under the following circumstances, moisture may appear on the lens of the product, which is the most sensitive part of the DVD player:

- The DVD player is suddenly moved from a cold place to a warm place.
- A room is heated while the DVD player starts operating, or the DVD is placed by an air-conditioner.
- In the hot summer season, the DVD player is moved from an air-conditioned room to a hot, damp place to be used.
- The DVD player is being operated in a damp place.

■ If moisture appears on the player, discontinue use.

If the player is operated under said conditions, or the disc is loaded, certain interior components could be damaged. Take disc out, plug power in, switch power button on the DVD player for two to three hours to dry.

Characteristic Features

1. EXCELLENT SOUND

Dolby Digital delivers great sound.

2. HIGH RESOLUTION

MPEG2 decoding format achieves more than 500 lines of horizontal resolution.

3. SPECIAL FUNCTIONS

Supports multi-angle, excessive language caption.

4. COMPATIBILITY

Plays DVD, CD, and PICTURE CDs.

5. PARTICULAR PERFORMANCE

Multi-speed, fast forward, fast backward, slow play and step playback, repeat playback and programming playback.

6. SEARCH BY TIME

Search for a certain time on a disc.

7. LAST MEMORY PLAYBACK

Memorizes and continues playing from place stopped.

8. ON-SCREEN DISPLAY

On-screen displays in your choice of English/Spanish/French.

9. AUDIO OUT

Audio output terminal for connection to audio amplifiers.

10. EARPHONE OUTPUT

Convenient for listening to movies or music in private.

11. SWITCHING POWER ADAPTER

Automatically adapts to voltage requirements in the U.S. and other countries.

 
12. REVOLVING TFT LCD SCREEN

Adjust the screen for custom viewing by revolving it horizontally about its axis, or lay it flat with the screen facing up.

DVD players and discs are coded by region. These regional codes must match the discs they play. If the codes don't match, the disc won't play. This player's code is region 1.

Parts Introduction

DVD Player

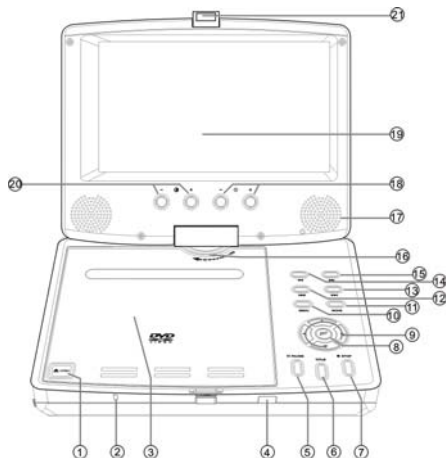

1. OPEN

Press to open the disc cover.

2. Power indicator

Lights green when the player is in playback mode.

Lights red when the player is in standby mode.

3. Disc cover

For disc to be put in.

4. Remote sensor

Receive the remote control signal for operation.

5. PAUSE

Press to pause playback.

6. TITLE

Press to display titles if present on the DVD disc.

7. STOP

Press to stop playback.

8. ENT

Press to confirm after selection.

9. Direction buttons

Press to select menu items or settings.

10. MENU

Press to display the disc menu on the LCD screen in Play mode.

11. MODE

The player is with TFT display mode: normal screen (4: 3) and wide screen (16: 9).

12. PREV ⏮

Press to skip to previous chapter/track.

13. NEXT ⏭

Press to skip to next chapter/track.

14. ⏪ REV

Press to search backward.

15. ⏩ FWD

Press to search forward.

16. TFT LCD Screen can be rotated in the degree of 180

Parts Introduction

DVD Player continued

17. Speakers

For enjoying high quality stereo Music.

18. Bright up/down

Used to adjust the picture brightness.

 
19. TFT Liquid Crystal Display

20. Color up/down

Used to adjust the picture color.

21. Latch hook

Right Side Of The Panel

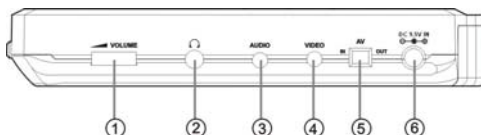

1. Earphone volume adjusting knob

Used to adjust the earphone and speaker volume.

2. Earphone jack

HI-FI earphone output, when connecting this jack, speaker volume is turned off.

3. Audio output/input jack

4. Video output/input jack

5. Switch position between AV 'IN' and AV 'OUT'

Switch to IN, then the player is in audio and video input mode.

Switch to OUT, and then the player is in normal playback mode.

6. Direct current 9.5V input jack

 
Left Side Of The Panel



1. Power switch

Used to turn on/off the power.

Remote Control

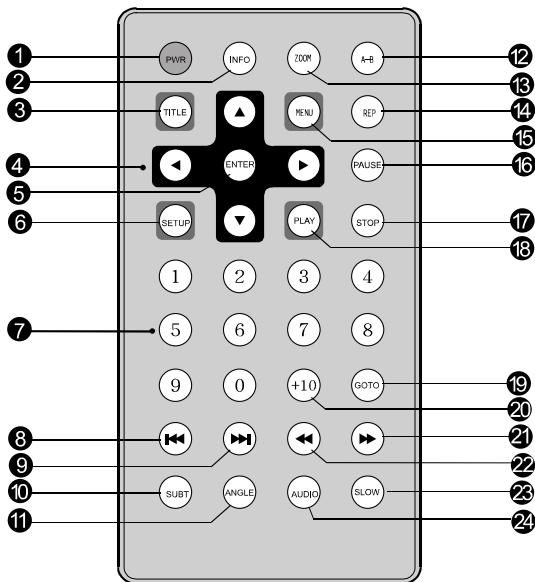

- 1. PWR button**
-Press to turn the player on or off.
- 2. INFO button**
-Press for detailed information on the disc playing.
-Press again to remove information from screen.
- 3. TITLE button**
-Press to display title menu if present on the disc.
-Press to select random play when playing a CD.
- 4. Direction buttons**
-Press to select menu items.
- 5. ENTER button**
-Press to confirm the items or setting.
- 6. SETUP button**
-Press to access the DVD player's setup menu.
- 7. 0-9 number buttons**
-Select numbers by pressing these buttons.
- 8. ⏮ PREV SKIP button**
-Press to go to beginning of current track. Press again quickly to go to beginning of previous track.
- 9. ⏭ NEXT SKIP button**
-Press to go to beginning of current track. Press again quickly to go to beginning of next track.
- 10. ⏪ REWIND button**
-Press to go to beginning of current track.
- 11. ⏩ FASTER button**
-Press to go to beginning of current track. Press again quickly to go to beginning of next track.
- 12. ZOOM button**
-Press to zoom in or out of the screen.
- 13. A-B button**
-Press to go to beginning of current track.
- 14. MENU button**
-Press to display menu.
- 15. REP button**
-Press to repeat the current track.
- 16. PAUSE button**
-Press to pause the current track.
- 17. PLAY button**
-Press to play the current track.
- 18. STOP button**
-Press to stop the current track.
- 19. GOTO button**
-Press to go to the beginning of the current track.
- 20. +10 button**
-Press to go to the beginning of the current track.
- 21. ⏮ REWIND button**
-Press to go to beginning of current track.
- 22. ⏭ FASTER button**
-Press to go to beginning of current track.
- 23. SUBT button**
-Press to toggle subtitles on or off.
- 24. AUDIO button**
-Press to toggle audio on or off.

Remote Control

 
9. **▶▶ NEXT SKIP button**
 - Press to go to next chapter.
10. **SUBT button**
 - When a DVD is playing, press to select a subtitle language or to turn subtitles off.
11. **ANGLE button**
 - Press to access various camera angles (if the DVD disc contains multiple camera angles).
12. **A-B button**
 - Press to mark a segment to repeat between A and B.
13. **ZOOM button**
 - Press to cycle through zoom function.
14. **REP button**
 - Press to repeat a chapter, track, title, or all content.
15. **MENU button**
 - Press to select the disc menu.
16. **PAUSE button**
 - Press to pause playback.
 - Press PLAY button to resume normal playback.
17. **STOP button**
 - Press once to stop playback and then press PLAY button to resume normal playback.
 - Press the button twice to stop playback completely.
18. **PLAY button**
 - Press to begin playback.
19. **GOTO button**
 - Press to select the desired disc starting time, track or title.
20. **+10 button**
 - Select numbers greater than 9 by pressing the (+10) button first, then press additional number buttons.
21. **▶▶ FWD SCAN button**
 - Press to search forward.
22. **◀◀ REV SCAN button**
 - Press to search backward.
23. **SLOW button**
 - Press to activate slow forward or slow rewind.
24. **AUDIO button**
 - Press to access various audio languages (if the DVD disc contains multiple audio languages).

Connections

Connecting to a TV


Audio/video connections

1. Always ensure that the DVD player, TV and any other electrical equipment you are connecting the DVD player to is switched off and unplugged from the power supply.
2. The easiest way to connect the DVD player to a television is via the supplied Audio/Video connections. Connect the audio/video cable from the DVD player to the TV's audio/video inputs:

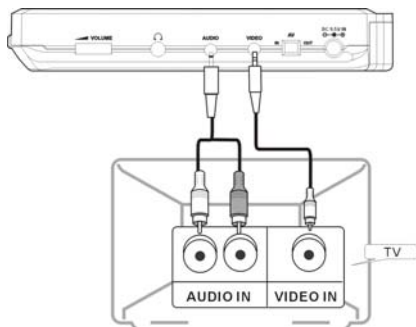


Connecting to an Amplifier with Dolby Digital Decoder

 The DVD player can be connected to an AV amplifier or Dolby digital decoder via the Digital Optical output. Please refer to your Audio equipment's manual before connecting:

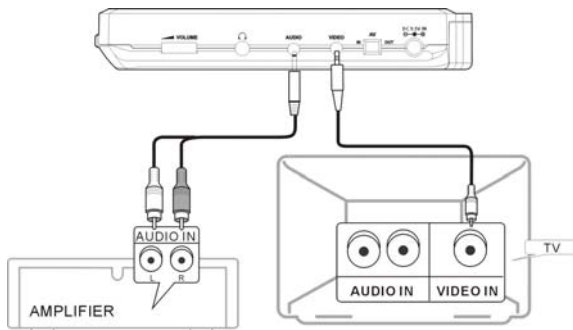

Playback Preparations

 Using the Remote Control

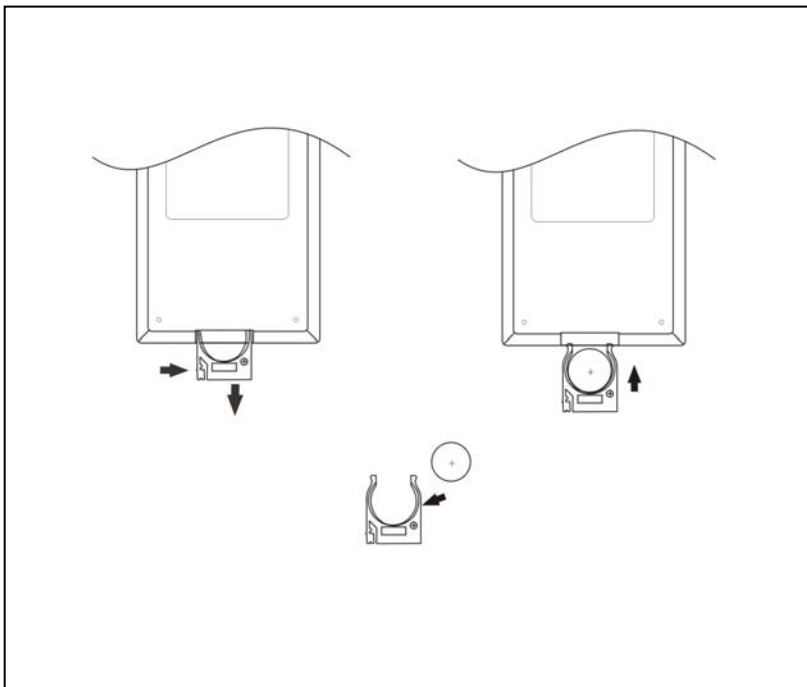



1. Referring to the drawing above, remove the empty battery receptacle.
2. Prior to shipping, a separating film was applied to the battery. Remove this film.
3. Press the battery into the receptacle and insert the receptacle into the remote.
4. For best results, aim the remote directly at the player's receiving window from a range no greater than 15 feet, and at angles no greater than 60 degrees.
5. Under normal use the battery will last for one year.
6. Remove battery during storage

Playback Preparations

Disc Formats Supported by this Player

The unit can play discs bearing any of the following logos:

	DISC LOGO	DIAMETER	PLAYBACK TIME/ PLAYABLE SIDES
DVD		12cm	133 min (SS-SL)
			242 min (SS-DL)
			266 min (DS-SL)
			484 min (DS-DL)
		8cm	41 min (SS-SL)
			75 min (SS-DL)
			82 min (DS-SL)
			150 min (DS-DL)
CD		12cm	74 min
		8cm	20 min

- The operating method of some DVD discs is specified by the software maker. Please refer to the instruction manual of the disc.

About Disc Terms

- Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

 
- Chapter

The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching. Some discs may not have a recording chapter.

- Track

A segment of picture or music on a CD. Each track is numbered for searching.

Playback Preparations

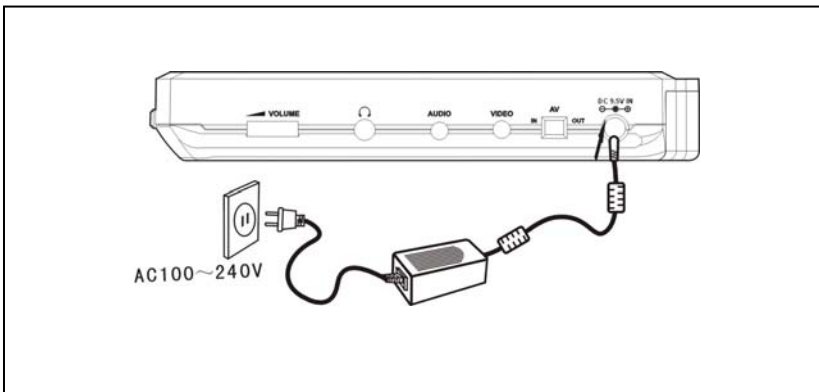

Usage of Switching Power Adapter

The player is supplied with a switching power adapter.

1. Connect AC adaptor to the side of the DVD player in the slot marked "Power In".
2. Plug the two-prong end of the power cord to a grounded electrical socket.

Note: Turn player's power off first and then unplug the power adaptor to prevent malfunction.

Pre-operation

1. Connect the power adaptor.
2. Lift the main cover up to open the player.
3. Switch "POWER" to the "ON" position.
4. Adjust the volume with the "VOLUME" adjust knob (also adjusts earphone volume).

 
Loading a disc

1. Press the OPEN button to open the disc cover.
2. Put disc into the tray with the printed side up.
3. Close the disc cover.

Using a Car Adapter

You can use Car Adapter while in a vehicle:

Connecting the Car Adapter Power Plug into the unit's Power Jack and the other end to the Vehicle Cigarette Lighter Socket:

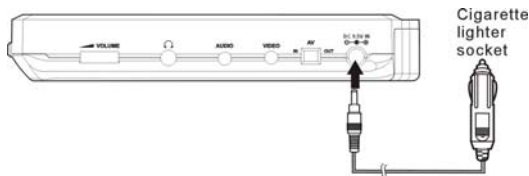


Quick Tips

- Do not operate the unit or view video software while driving a vehicle.
- Place the unit in a secure position for viewing.

Using Headphones

Using Headphones while you are in a quiet area:

 Connecting Headphone Connector into right side of the unit's Headphone Jack:



Quick Tips

- Excessive loud usage of headphones could damage your hearing
- Turn down the Volume before you connect the headphones, then raise the volume to suit your level
- Sound from the unit's external speaker will cease when headphones are connected

Play Operation

Please read these instructions carefully before using your player for the first time.

1. Turn on the player's power by switching the POWER switch on the side of the player to "ON".
2. Press OPEN button on front panel to open the disc cover.
3. Remove the lens cover.
4. Load disc with the label facing up to prevent damage to the player or disc.
5. Close the disc cover. The player will automatically search for the disc and when it finds it, play will begin.

Warning: Do not play poor quality discs to prevent damage to the lens.

Start Playback

1. Press the PLAY button on the remote control.
2. Press ◀ ▶ ▲ ▼ (direction button) or the number buttons to select a scene.
3. Press ENTER or PLAY.

Pause

Press the PAUSE button on remote to pause.
Press the PLAY button to resume normal playback.

Zoom

Press the ZOOM button on remote to cycle through to different zoom settings.
Normal - 2x - 3x - 4x - 1/2 - 1/3 - 1/4.
While in zoom mode use direction keys to pan around to different positions on the picture.

Play Operation

Stop

During playback, press the STOP button on the remote control to stop playing. Press the PLAY button again and the player will play from the point where it stopped.

Mode

During playback, press the mode button on the control panel to change the aspect ratio on the screen.

Title Menu

1. Press the TITLE button on the remote control during playback. The title menu will appear on the TFT screen.
2. Press ◀ ▶ ▲ ▼ (direction button) or the number buttons to select the title or disc option you wish to play.
3. Press the PLAY button to start playback.
4. NOTE: Title and Menu are only available for DVD discs.

Previous and Next

1. Press the PREV button on the remote control, and playback will start from the previous track.
2. Press the NEXT button on the remote control, and playback will start from the next track.

System Setup

GENERAL SET-UP

You can change the default settings to customize performance to your own preference.

1. Remove the disc from the DVD drive and press the 'SETUP' button on the remote control, the settings menu will appear. It includes General Setup, Speaker Setup, Dolby Digital Setup, Video Setup and Preference setup.
2. Press ◀ ▶ ▲ ▼ (direction buttons) on the remote control to select a category.
3. All the items in the category will appear on the TV screen. Press the 'ENTER' button to confirm your selection.

Category

1. When you enter a category all the items under this category will appear, and the items placed in the middle (or highlighted) will be the current set up.
2. Press ▶ (right direction button on the remote control to select the correct category.
3. Press the direction button to select your preference. The item you select will be highlighted.
4. Press the 'ENTER' button to confirm.
5. Press ◀ (left direction button) to enter the other setup menu.

General Setup

The general setup is shown as follows:

1. TV Display

Select NORAML/PS when a 4:3 TV is connected.

Display images with marking bars above and below the picture.

Select WIDE when a 16:9 wide screen TV is connected.

2. Angle Mark

If the scene was recorded from multiple angles, then you can easily change the camera angle of the scene you are watching.

ON/OFF

With this switched on you will be notified if alternative viewing angles are available.

System Setup

3. OSD Language

There are five kinds of different OSD languages for selection. You can select it according to your preference.

4. SPDIF Output

This item is used to set the format of digital audio. 'SPDIF OFF' turns off the digital audio; 'SPDIF/RAW' outputs the original. For example, if the disc being played is Dolby Digital, then the digital audio output is also Dolby Digital.

5. Captions

You can choose captions on or off on screen during playback.

6. Screen Saver

When activated the screen saver automatically works if there has been no operation for a period of time.

Speaker Setup

1. Down Mix

Select "LT/RT" in DOWNMIX, then the player will output mixed audio in a way prescribed by Dolby. Select "Stereo" and the player will output a stereo signal.

Dolby Digital Setup

1. Dual Mono

The function is used to set the output mode of channel left/right, stereo and mixed sound.

2. Dynamic

Use this item to adjust linear dynamic compression rate to get different signal compression effects.

Video Setup

1. Sharpness

Use this item to adjust sharpness setting.

System Setup

Video Setup

2. **Brightness**

Use this item to adjust brightness level.

3. **Contrast**

Use this item to adjust contrast level.

Preference Page

1. **Audio, Subtitle, Disc Menu**

This setting allows you to hear or read subtitles of a DVD in your choice of English, Spanish or French.

2. **Default Reset**

Use this function to reset all the settings.

3. **Version**

Displays software version information.

NOTE: this menu function is not available while a disc is playing.

Audio

DVD discs contain up to 8 audio bit streams. For Example: English, French, etc. To select the audio bit stream you prefer press the AUDIO button on the remote control during playback. The DVD player will play the next audio bit stream every time you press the AUDIO button in succession.

NOTE: This function is only available for discs that several audio bit streams have been recorded onto.

Playback Functions

Fast Forward & Rewind

Press the ◀◀ and ▶▶ buttons to fast forward or rewind.

Slow Forward & Rewind

Press the SLOW button to slow forward or rewind.

Repeat

1. Repeat a title, chapter or track. Press the REPEAT button on the remote control.

Pressing the REPEAT button repeatedly will display a menu as follows: **Chapter, Title and All.**

2. You can temporarily mark a section of a DVD that you would like to play repeatedly. Do this by marking the start and end of the section using the A/B button. During playback press the A-B button on the remote control at the beginning of the segment (point A) you wish to play repeatedly. Press the A-B button again at the end of the segment (point B).

The DVD player will automatically return to point A and repeat playback of the selected segment. (A-B). To resume normal playback press the A-B button again.

Subtitle

A DVD disc can be recorded with up to 32 subtitles.

Press the SUBTITLE button on the remote control and the mode of subtitles will cycle as follows: SUBTITLE 1/N: Subtitle 1 appears on the screen. SUBTITLE 2/N: Subtitle 2 appears on the screen.

SUBTITLE N/N: Subtitle N (N is the total number of subtitles that the current disc contains) appears on the screen. SUBTITLE OFF: No subtitle.

NOTE: This function is available on DVD disc that recorded with multi-subtitles.

Angle

If the scene was recorded from multiple angles, you can easily change the camera angle of the scene you are watching.

Press the ANGLE button on the remote control during playback. Playback will shift to another angle. If the disc menu gives the options of angles items, you can switch angles for viewing by pressing the number buttons on the remote control.

NOTE: This function is only available if a disc is a multi-angles recorded disc.

Playback Functions

Search by time

You can use the GOTO button to search by time, namely to play from a specific time.

During DVD playback, press the GOTO button once and TV screen will display the title or chapter, then you can use number buttons to select any one of them. Press the GOTO button twice, then you can use number buttons to input the time you desired (hour, minute, second), and the player will play from the inputted time.

NOTE: This function is only available for DVD discs.

Resume Playback

1. Press the STOP button to interrupt playback. The player memorizes the location where playback was stopped.
2. Press the PLAY button to resume normal playback. The player resumes playback from the location where playback was stopped. This function does not operate if the disc is removed.

Pressing the STOP button twice or opening the disc tray disables this function. Pressing the play button after this will resume play from the beginning of disc.

Playback Functions

Playing a JPEG

JPEG is a common picture format that requires very little storage per image with a low loss rate in resolution. Hundreds of pictures can be stored on a disc in this format. In order to create digital albums from film pictures, have your film developer make a "PICTURE CD", in JPEG format.

OPERATION

1. Normal Playback

Load a JPEG disc in. After reading the disc, OSD will display the menu (the left side is the main menu and the right side is its submenu). Use the direction buttons and ENTER button to choose items.

- Many discs have other items besides pictures.
- Use left/right button to move cursor to playback mode column, use the up/down button to confirm.

2. Picture Rotation

Pictures can be flipped and rotated while they are displayed. Once another picture is selected, rotating function will be turned off.

There are four rotational modes available. Use the direction buttons to choose:

- ▲UP Flip Vertical
- ▼DOWN Flip Horizontal
- ◀LEFT Rotate Counter Clockwise
- ▶RIGHT Rotate Clockwise

3. Zoom of Picture

ZOOM button is used to turn on/off zoom and move function.

 
When the zoom function is turned on, use the fast forward or reverse scan button to zoom in and out. Use the direction buttons to pan around on the image. Press the STOP button to activate preview mode. Press the MENU button to return to the root menu.

Note: Due to the various ways JPEG discs are made, some images can only be played normally with no rotate or zooming functions.

Care of Discs

How to hold discs

When loading or removing discs, do not touch their playing surfaces.

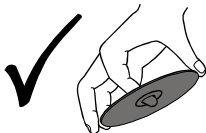

Cleaning

 
Fingerprints or other dirt on the disc may affect sound and picture quality.

To clean your discs, use a soft clean cloth to wipe them. If necessary, moisten a soft cloth with diluted neutral detergent to remove heavy dirt or fingerprints.



Do not wipe in a circular direction (Concentric scratches in the disc groove tend to cause noise.)

Gently wipe from the inside to the outer edge.

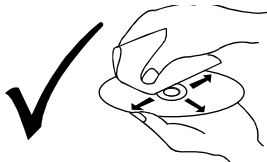

Cleaning Care



 
 

Use a soft, dry cloth for cleaning. For stubborn dirt, soak the cloth in a mild detergent solution. Use a dry cloth to wipe the disc dry. Do not use any volatile agents such as benzene or paint thinner, as they may damage the surface of the disc.

Lens cleaner

The player's pickup lens should not become dirty under normal use, but if for some reason it should malfunction due to dirt, contact your nearest authorized service center. Lens cleaners are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

Special Features of Revolving LCD Screen

The revolving TFT LCD screen is one of the outstanding features about this product. You are suggested to take the following steps for proper operation.
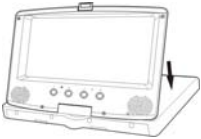
<p>Pos A</p> 	<p>1. Open the screen cover to position (A) as shown in left figure at which the screen is vertical to the operation panel.</p>
<p>Pos B</p> 	<p>2. Revolving the screen horizontally about its axis in the clockwise only. The maximum revolving degree is 180 (position C) at which you will hear a click and the screen faces backward. If you want to return to initial position (A) please revolve screen counter clockwise until it clicks.</p>
<p>Pos C</p> 	<p>3. You can rotate the screen vertically from position C to operation panel as indicated in left fig.</p>
<p>Pos D</p> 	<p>4. The final rotating position (position D) at which the screen facing upward and back to operation panel.</p>
	<p>5. Your Portable DVD Player includes a sturdy carrying bag/mount for the ultimate in portable convenience! The bag/mount is easy to attach on fits on nearly any car or truck headrest.</p>

Car Bag



Your Portable DVD Player includes a sturdy carrying bag/headrest mount for the ultimate in portable convenience! The bag/mount is easy to attach and fits on nearly any car or truck headrest (see photo above)

Troubleshooting

SYMPTOM	WHAT TO CHECK
The player cannot play.	<ul style="list-style-type: none"> -Make sure the disc cover is closed. -Make sure the AV IN/OUT switch on the side of the player is in the OUT position for standard play -Make sure a disc is loaded. -Make sure the disc isn't loaded upside down. -Disc should be clean, not dirty or warped. -Player's region code should be the same as region code of DVD disc. -Has water condensation has occurred? If it has, remove the disc and keep the player powered up for at least two hours.
There is no sound.	<ul style="list-style-type: none"> -Make sure system connection is correct. -Make sure the speakers are turned on. -Make sure the sound setup of DVD disc is correct. -Is your disc dirty or warped? Clean or replace disc
There is no picture.	<ul style="list-style-type: none"> -Make sure TV is on and in correct video mode. -Make sure your system connection is correct.
Poor AV performance.	<ul style="list-style-type: none"> -Is your disc dirty or warped? Clean or replace disc.
Cannot continue to play and play a section repeatedly.	<ul style="list-style-type: none"> -Make sure the player is not in A-B repeat status. -Press A-B button to cancel it A-B repeat status. -Is your disc dirty or warped? Clean or replace disc.
The remote control does not work.	<ul style="list-style-type: none"> -Make sure there aren't any obstructions between the remote control and the player. -Make sure you are pointing the remote control at the player. -Make sure battery is inserted correctly (check polarity). -Replace weak batteries.

Others possibilities:

Static or other external interference may cause the player to function abnormally. In this circumstance unplug the power-supply cord from the outlet and plug it in again to reset the player so that normal operation can resume. If you are still having problems, then please disconnect the power and consult your service center or a qualified technician.

Specifications

TFT screen size		7 inches
Laser Wavelength		Wavelength: 780/650nm
Video System		NTSC
Frequency Response		20Hz ~ 20kHz ± 2.5 dB
Audio Signal-to-noise Rate		≥ 85 dB
Audio distortion + noise		≤ -70 dB (1kHz)
Channel Separation		≥ 70 dB (1kHz)
Dynamic Range		≥ 80 dB (1kHz)
Audio Out	Analog Audio Out	Out Level: $2V \pm \begin{matrix} 0.2 \\ 1.0 \end{matrix}$, Load: $10k\Omega$
Video Out	Video Out	Out Level: $1V_{p,p} \pm 0.2$, Load: 75Ω Unbalanced Negative
Power	AC100-240V~50/60Hz	
Power Consumption	25W	
Dimension w/o battery	7.7" x 5.7" x 1.1"	
Weight	1.8 lbs	
Compliance with FCC, FDA - cUL listed E209155		

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Manufactured under license from Dolby Laboratories.
 "Dolby" and the double-D symbol are trademarks of Dolby Laboratories. Confidential unpublished works. ©1992 -1997 Dolby Laboratories.
 All rights reserved.

For service, support and warranty information, visit www.polaroidelectronics.com or in the US call 1-866-289-5168, in Canada call 1-866-301-7922 and in Mexico call 01-800-400-2443.

“Polaroid” is a registered trademark of Polaroid Corporation of Waltham, MA USA and licensed for use on the PDV-0707N to Petters Consumer Brands, LLC.

Add a battery to your portable DVD player for added flexibility and enjoyment.
This allows you to take your DVD player anywhere.

To order, call Polaroid Customer Care:

In the US: 1-866-289-5168

In Canada: 1-866-301-7922

In Mexico: 01-800-400-2443

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>