

7" Portable DVD Player PDV-0713B

Operation Manual



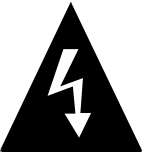 

20041210



Table of Contents

| | |
|------------------------------------|----|
| Important Safety Instructions..... | 3 |
| Precautions with Moisture | 5 |
| Function Features | 6 |
| Disc Formats Supported..... | 7 |
| Description | 8 |
| Connecting to a TV..... | 10 |
| Connecting to an Amplifier | 11 |
| Using the AC Adapter..... | 12 |
| Using the Battery Pack..... | 13 |
| Detaching the Battery Pack..... | 15 |
| Using a Car Adapter..... | 15 |
| Using Headphones..... | 16 |
| Disc Playback..... | 17 |
| Start to Playback | 17 |
| Pause | 17 |
| Zoom | 17 |
| Stop | 17 |
| Mode | 17 |
| Title Menu..... | 16 |
| Previous and Next..... | 18 |
| Fast Forward and Rewind | 18 |
| Slow Forward and Rewind | 18 |
| Repeat A-B | 18 |
| Resume Playback | 18 |
| Picture CD Playback | 19 |
| Playing an MP3 | 19 |
| System Setup..... | 20 |
| General Setup | 20 |
| Speaker Setup..... | 21 |
| Dolby Digital Setup..... | 21 |
| Video Setup..... | 21 |
| Preference Page | 22 |
| Care of Discs..... | 23 |
| About Rechargeable Battery | 24 |
| Carrying Case | 25 |
| Troubleshooting..... | 27 |
| Specifications | 28 |

Important Safety Instructions

| | | |
|--|--|---|
|  | CAUTION RISK OF ELECTRIC SHOCK DO NOT OPEN! |  |
| CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL. | | |



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be sufficient to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

| |
|---|
| WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. |
|---|

POWER SUPPLY:

Connect the supplied adapter to the side of the attached LCD display in the slot marked with “DC9.5V In”, then plug the two-prong end of the power cord into an AC100-240V outlet. If you have difficulty inserting the plug, turn it over and reinsert it. If the unit will not be used for a long time, disconnect the plug from the outlet.

NOTE:

Before plugging the power cord into an AC outlet, make sure that all the connections have been made.

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer to service manual for servicing instructions.

Important Safety Instructions

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use near water.
6. Clean only with dry cloth.
7. Do not block any ventilation

IMPORTANT FOR LASER PRODUCTS

1. CLASS 1 LASER PRODUCT
2. **DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.
3. **CAUTION:** Do not open the top cover. There are no user service-able parts inside the unit. Leave all servicing to qualified service personnel. This unit complies with FDA regulation for radiation control of laser products.

- openings. Maintain well ventilated conditions around the product. Do not put product on bed, sofa or anything that blocks ventilation. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized. A polarized plug has two blades with one wider than the other. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
13. Unplug this apparatus during lightning storms or when unused for long periods of time.
14. Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

Copyright Protection

Unauthorized copying, broadcasting, public performance, and lending of disks are prohibited. This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Precautions with Moisture

■ Under the following circumstances, moisture may appear on the lens of the product, which is the most sensitive part of the DVD player.

- The DVD player is suddenly moved from a cold place to a warm place.
- A room is heated while the DVD player starts operating, or the DVD is placed by an air-conditioner.
- In the hot summer season, the DVD player is moved from an air-conditioned room to a hot, damp place to be used.
- The DVD player is being operated in a damp place.

■ If moisture appears on the player, discontinue use.

If the player is operated under said conditions, or the disc is loaded, certain interior components could be damaged. Take disc out, plug power in, switch power button on the DVD player for two to three hours to dry.

Function Features

1. EXCELLENT SOUND

Dolby Digital delivers great sound.

2. HIGH RESOLUTION

MPEG2 decoding format achieves more than 500 lines of horizontal resolution.

3. SPECIAL FUNCTIONS

Supports excessive language caption and parental-lock.

4. COMPATIBILITY

Plays DVD, CD, and PICTURE CD discs.

5. PARTICULAR PERFORMANCE

Multi-speed, fast forward, fast backward, slow play and repeat playback.

6. LAST MEMORY PLAYBACK

Memorizes and continues playing from place stopped.

7. AUDIO OUT

Audio output terminal for connection to audio amplifiers.

8. EARPHONE OUTPUT

Convenient for listening to movies or music in private.

9. SWITCHING POWER ADAPTER



Automatically adapts to voltage requirements in the U.S. and other countries.

DVD players and discs are coded by region. These regional codes must match the discs they play. If the codes don't match, the disc won't play. This player's code is region 1.

This product incorporates copyright protection technology that is protected by method claims of certain U.S. patents and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

Disc Formats Supported by this Player

The unit can play discs bearing any of the following logos:

| | DISC LOGO | DIAMETER | PLAYBACK TIME/ PLAYABLE SIDES |
|-----|---|----------|----------------------------------|
| DVD |  | 12cm | 133 min (SS-SL) |
| | | | 242 min (SS-DL) |
| | | | 266 min (DS-SL) |
| | | | 484 min (DS-DL) |
| | | 8cm | 41 min (SS-SL) |
| | | | 75 min (SS-DL) |
| | | | 82 min (DS-SL) |
| | | | 150 min (DS-DL) |
| CD |  | 12cm | 74 min |
| | | 8cm | 20 min |

The operating method of some DVD discs is specified by the software maker. Please refer to the instruction manual of the disc.

The DVD Player will play most recordable (CD-R) or erasable (CD-RW) CDs, but playback of CD-R or CD-RW discs created on a computer requires proper formatting and finalization of the disc for audio playback. Some computers and/or software programs may not be capable of creating compatible discs.

About Disc Terms

Title

Generally, pictures or music compressed on a DVD are divided into several sections, "title".

Chapter

 
The smaller section unit of picture or music in a DVD under the title, usually one title is comprised of one or more chapters and each of them is numbered for easy searching. But some discs may not have a recording chapter.

Track

A segment of picture or music on a CD. Each track is numbered for searching.

Description - Front Panel

Front View

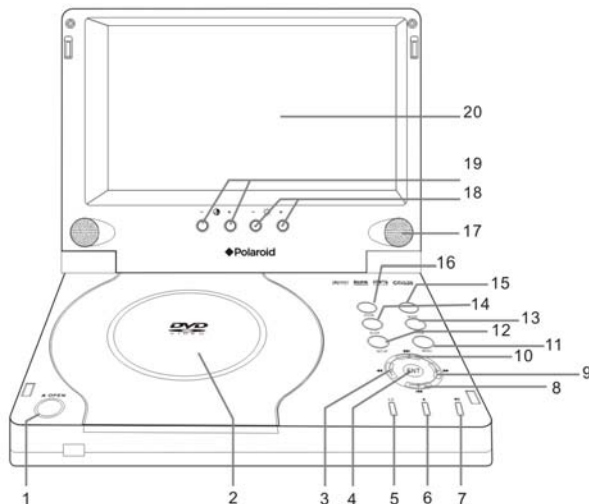

1. OPEN

Press to open the disc cover.

2. DISC COVER

3. ◀/◀◀

Press to select menu items.

During playback, press to search backward.

4. ENTER

Press to confirm the items or setting.

5. A-B

Press to mark a segment to repeat between A and B.

6. ■ STOP

Press once to stop playback and then press PLAY/PAUSE button to resume normal playback.

Press the button twice to stop playback completely.

7. ▶ || PLAY/PAUSE

Press to pause playback.

Press it again to resume normal playback.

8. ▼/◀◀

Press to select menu items.

Press to go to beginning of previous track.

9. ▶/▶▶

Press to select menu items.

Press to search forward.

10. ▲/▶▶▶

Press to select menu items.

Press to go to next chapter.

11. MENU

Press to select the disc menu.

12. SETUP

Press to access the DVD player's setup menu.

13. TITLE

Press to display titles if present on the disc.

14. SLOW

Press to activate slow forward or slow rewind.

15. MODE

During playback, press to change the aspect ratio on the screen.

16. ZOOM

Press to cycle through zoom function.

17. SPEAKER

 
18. BRIGHT UP/DOWN

19. COLOR UP/DOWN

20. LCD


Description

Right View

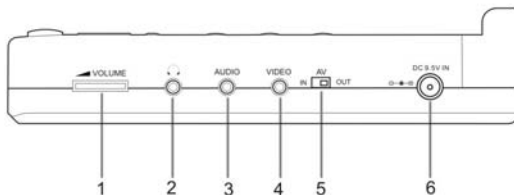

1. EARPHONE/SPEAKER VOLUME KNOB
2. EARPHONE JACK
3. AUDIO IN/OUT
4. VIDEO IN/OUT
5. AV IN/OUT SWITCH
6. DC 9.5V IN

 Left View

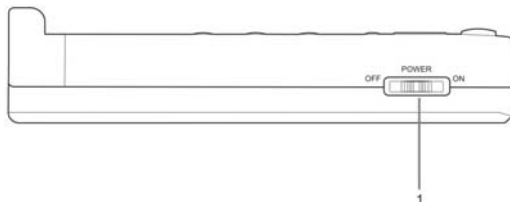


1. POWER SWITCH

Connecting to a TV

Audio/video connections

 1. Always ensure that the DVD player, TV and any other electrical equipment you are connecting the DVD player to is switched off and unplugged from the power supply.
2. The easiest way to connect the DVD player to a television is via the supplied Audio/Video connections. Connect the audio/video cable from the DVD player to the TV's audio/video inputs.

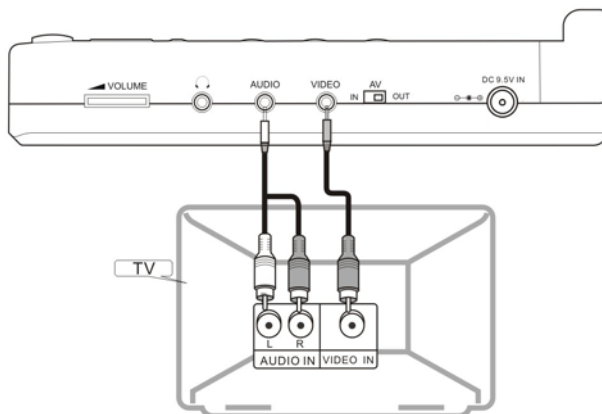


Note

If you wish to view video on your TV only, close the display panel of your DVD player. Playback will continue.

Connecting to an Amplifier

 
The DVD player can be connected to an AV amplifier. Please refer to your Audio equipment's manual before connecting.

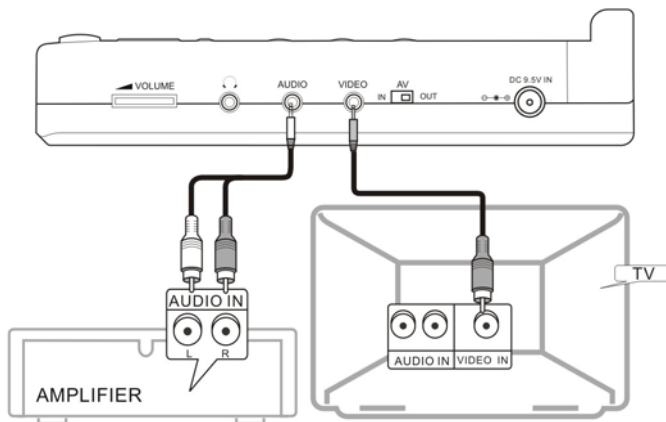

Note:

When connecting to an audio amplifier, set the “Dynamic” to “Off”.

 Using the AC adapter

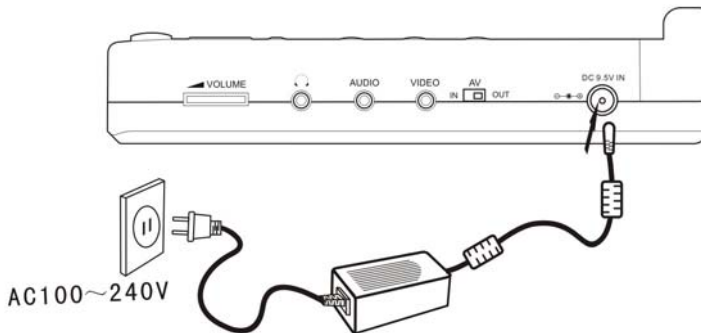

Usage of Adapter

The player is supplied with a switching power adapter.

1. Connect AC adaptor to the side of the DVD player in the slot marked "DC 9.5V IN".
2. Plug the two-prong end of the power cord to a grounded electrical socket.

Note: Please turn player's power off first and then unplug the power to prevent malfunction.

Pre-operation

1. Connecting to power.
2. Lift the main cover up to open the disc tray house.
3. Switch "POWER" to the "ON" position.
4. Adjust the volume with the "VOLUME" adjust knob (also adjusts earphone volume).

Loading a disc

1. Press the OPEN button to open the disc cover.
2. Put disc into the tray house with the printed side up.
3. Close the disc cover.

Using the Battery Pack


Using and Charging the Battery Pack

Charge the Battery Pack before using it the first time. Charging time is normally between 4-5 hours. Do not charge the Battery Pack more than 8 hours as it could reduce service life. Normally, the Battery Pack can be charged approximately 300 times. When fully charged, the Battery Pack delivers 3 hours of continuous power.

Battery Pack should be fully charged before initial use!


1. Attaching the Battery Pack

 Turn the player upside down on a smooth, clean surface. Direct the battery so that the battery contacts and the five plastic tabs are aligned with the matching contacts and tab recesses on the player.

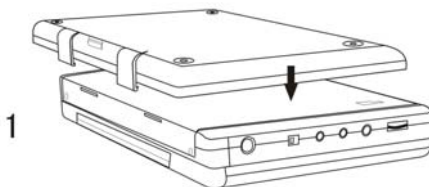

2. Lock the Battery Pack to the Player

 
With one hand on the player to prevent it from moving, push the battery pack on to the player then slide the Battery Pack toward the front of the Player until you hear it click and lock into place.

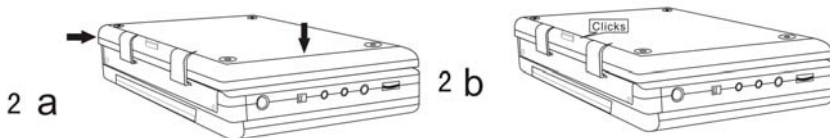

Using the Battery Pack

3. Charging the Battery Pack

 Plug the Power Adapter into the Player's DC 9.5V IN Jack (located on Right Side of Player). Plug the other end of the Power Cord into a household wall Power Outlet.

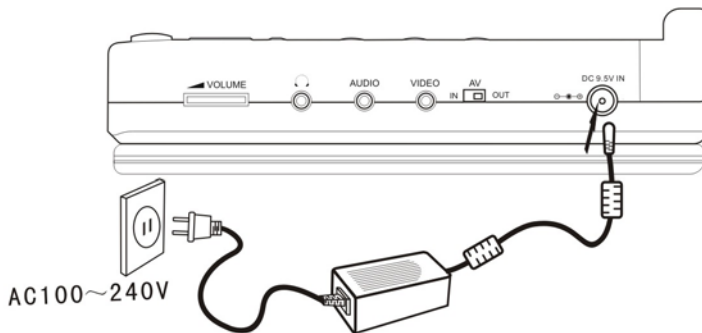

Recommended Recharging and Charging Times

Your new battery should be fully charged before it is used for the first time. Charging time is normally between 4-5 hours. A fully charged battery delivers 3 hours of use. Therefore, we recommend that you only charge the battery when the battery is down to its last hour of charge or completely out of power. Unnecessary charging of the Battery Pack will reduce service life. When the Battery Pack is being charged, the battery indicator will turn red. After charging is complete, the red light will turn green.

Detaching Battery Pack

Detaching Battery Pack from the unit:

 
If the player is not going to be used for a long period of time, we recommend that you detach the Battery Pack. Even if the unit is powered down, the unit is still consuming some power in STANDBY mode. This could lead to over discharging the battery. Make sure the power is turned off before detaching the Battery Pack. After detaching the battery pack, take care when handling the unit.

1. Slide and hold in position.

Press the tab towards the front of the unit. Hold the tab in the up position.

2. Taking off the Battery Pack


Gently slide the Battery Pack toward the back of the Unit. Carefully lift the Battery Pack from your player.

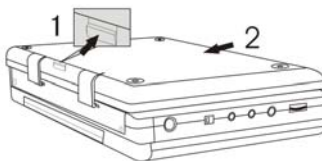

Using a Car Adapter

You can use Car Adapter while in a vehicle:

 Connecting the Car Adapter Power Plug into the unit's Power Jack and the other end to the Vehicle Cigarette Lighter Socket:

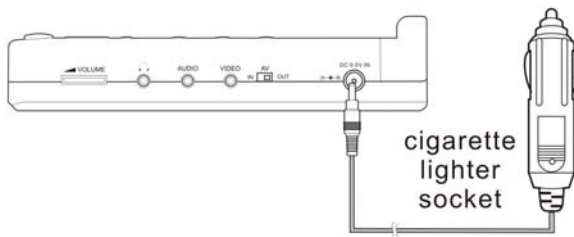


Quick Tips

- Do not operate the unit or view video software while driving a vehicle.
- Place the unit in a secure position for viewing.
- Do not leave battery attached when using car adaptor as power source.

Using Headphones

Using Headphones while you are in a quiet area:

 Connecting Headphone Connector into right side of the unit's Headphone Jack:

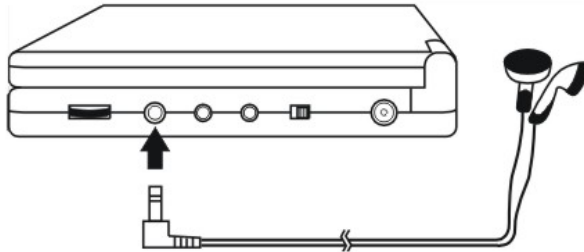

Quick Tips

- Excessive loud usage of headphones could damage your hearing.
- Turn down the Volume before you connect the headphones, then raise the volume to suit your level.
- Sound from the unit's external speaker will cease when headphones are connected.

Disc Playback

Please read these instructions carefully before using your DVD player first time.

1. Turn on the player's power by switching the POWER switch on the side of the player to "ON".
2. Press OPEN button on front panel to open the disc cover.
3. Load disc with the label facing up to prevent damage to the player or disc.
4. Close the disc cover. The player will automatically search for the disc and when it finds it, play will begin.

Warning: Do not play poor quality discs to prevent damage to the lens.

Start to Playback

1. Press the PLAY button on the control panel.
2. Press ◀ ▶ ▲ ▼ (direction buttons) or the number buttons to select a scene.
3. Press ENTER or PLAY.

Pause

Press the PLAY /PAUSE button on control panel to pause.

Press it again to resume normal playback.

Zoom

Press the ZOOM button on the control panel to cycle through to different zoom settings.

Normal – 2x – 3x – 4x – 1/2 – 1/3 – 1/4.

Stop

During playback, press the STOP button on the control panel to stop playing.

Press the ENTER or PLAY/PAUSE button, and then the player will play from the point where it stopped.

Mode

During playback, press the MODE button on the control panel to change the aspect ratio on the screen.

Title Menu

Press the TITLE button on the control panel during playback. The title menu will appear on the TFT screen.

Press ◀ ▶ ▲ ▼ (direction buttons) to select the title or disc option you wish to play.

Press the ENTER button to start playback.

NOTE: Title and Menu are only available for DVD discs.

Previous and Next

Press the ◀◀ button on the control panel, and playback will start from the previous track.

Press the ▶▶ button on the control panel, and playback will start from the next track.

Fast Forward & Rewind

Press the ◀◀ and ▶▶ buttons to fast forward or rewind.

Slow Forward & Rewind

Press the SLOW button to slow forward or rewind.

Repeat A-B

You can temporarily mark your own section of a DVD that you would like to play repeatedly. You do this by marking the start and end the section using the A/B button. During playback press the A-B button on the control panel at the beginning of the segment (point A) you wish to play repeatedly. Press the A-B button again at the end of the segment (point B).

The DVD player will automatically return to point A and repeat playback of the selected segment. (A-B). To resume normal playback, press the A-B button again.

Resume Playback

1. Press the STOP button at the location if you wish to interrupt playback. The player memorizes the location where playback was stopped.
2. Press the PLAY/PAUSE button to resume normal playback. The player resumes playback from the location where you stopped playback. This function does not operate if the disc is removed.

Press the STOP button twice or open the disc tray, playback will then be stop and when PLAY/PAUSE button is pressed, the play will resume at the beginning of disc.

Picture CD Playback

Previewing Contents Of A Folder

1. Open the disc tray, insert the JPEG disc and close the tray.
2. The disc contents are displayed (JPEG may be in a folder).
3. To preview a picture, use the direction button to move the highlight over a folder entry. The small preview window reveals the contents of a clip when the highlight is positioned over the clip title.
4. To see a full screen view of the selected clip, press the ENT button.
5. If you press the STOP button in full-screen review, the unit will display a menu of 12 thumbnail images.
6. Press the ◀◀ or ▶▶ button to review all the images. If you want to review one image in full-screen, use the direction button to highlight the image and then press the ENT button to confirm. The image you selected will show full-screen.

Zooming a JPEG

1. Select a JPEG for viewing.
2. Press the ZOOM button. The message **Zoom 100%** appears.
3. Press the ▶▶ button repeatedly; the view enlarges to 200%.
4. Use the direction button to pan up, down, left and right.
5. To resume normal enlargement, press the ZOOM button again.

Rotating or mirror a JPEG

1. Position the highlight over a desired JPEG.
2. Press the right direction button one time, the displayed picture rotates 90 degrees . To continue rotating the picture, keep pressing the direction button.
3. Press the left direction button one time to mirror the picture.

System Setup

GENERAL SET-UP

You can change the default settings to customize performance to your own preference.

1. Remove the disc from the DVD drive and press the SETUP button on the control panel, the settings menu will appear. It includes General Setup, Speaker Setup, Dolby Digital Setup, Video Setup and Preference Setup.
2. Press ◀ ▶ ▲ ▼ ▶ (direction buttons) on the remote control to select a category.
3. All the items in the category will appear on the TV screen. Press the ENTER button to confirm your selection.

Category

1. When you enter a category all the items under this category will appear, and the items placed in the middle (or highlighted) will be the current set up.
2. Press the ▶ (right direction button) on the control panel to select the correct category.
3. Press the direction button to select your preference. The item you select will be highlighted.
4. Press the ENTER button to confirm.
5. Press the ◀ (left direction button) to enter the other setup menu.

General Setup

The general setup is shown as follows:

1. TV Display

The program's screen format (e.g. Normal TV/Wide screen) is fixed by the DVD. Please note that this format might not necessarily match your TV's screen format. Then this will be helpful:

Normal/PS (PAN SCAN): Choose this mode when your TV set has 4:3 screen format. The picture will fill the screen but the right and left portion will be cut.

Normal/(LETTER BOX): Choose this mode when your TV set has 4:3 screen format. The picture will appear in its entire width but framed by black bars at the top and the bottom.

Wide (16:9): Choose this mode when using a 16: 9 wide screen TV set.

2. OSD Language

There are five kinds of different OSD languages for selection. You can select it according to your preference.

System Setup

3. Captions

You can choose captions on or off on screen during playback.

4. Screen Saver

When activated the screen saver automatically works if there has been no operation for a period of time.

Speaker Setup

1. Down Mix

Select "LT/RT" in DOWNMIX, then the player will output mixed audio in a way prescribed by Dolby. Select "Stereo", then the player will output a stereo signal.

Dolby Digital Setup

1. Dual Mono

The function is used to set the output mode of channel left/right, stereo and mixed sound.

2. Dynamic

Use this item to adjust linear dynamic compression rate to get different signal compression effects.

Video Setup

1. Sharpness

Use this item to adjust sharpness setting.

2. Brightness

Use this item to adjust brightness level.

Press the right direction to increase the level.

Press the left direction to decrease the level.

Press ENTER button to confirm your setting.

3. Contrast

Use this item to adjust contrast level.

Repeat the same way as adjusting the brightness to do the contrast setting.

System Setup

Preference Page

1. Audio, Subtitle, Disc Menu

This setting allows you to hear or read subtitles of a DVD in your choice of English, Spanish or French etc.

2. Parental Control

DVD discs equipped with the child lock function are rated according to their contents and settings vary from disc to disc. Depending on the disc, you can replace or lock out violent scenes, or lock out playback of the disc altogether. Access parental control on the sub-menu by pressing ◀ ▶ ▲ ▼ (direction buttons) on the control panel, and then press the ENTER button. An interactive menu will appear.

3. Password

Parental control features are password protected. Choose a password you will remember easily or write it down. The default password is 1369.

4. Default Reset

Use this function to reset all the settings.

5. Version

Displays software version information.

NOTE: This menu function is not available while a disc is playing.

Care of Discs

How to hold discs

When loading or removing discs, try not to touch their playing surfaces.



Cleaning

Fingerprints or other dirt on the disc may affect sound and picture quality.

To clean your discs, use a soft clean cloth to wipe them. If necessary, moisten a soft cloth with diluted neutral detergent to remove heavy dirt or fingerprints.

Do not wipe in a circular direction (Concentric scratches in the disc groove tend to cause noise.)

Gently wipe from the inside to the outer edge.



Cleaning Care

Use a soft, dry cloth for cleaning. For stubborn dirt, soak the cloth in a detergent solution; ring well first and wipe. Use a dry cloth to wipe it dry. Do not use any volatile agents such as benzine or paint thinner, as they may damage the surface of the player.

Lens cleaner

The player's pickup lens should not become dirty under normal use, but is for some reason it should malfunction due to soiling, contact your nearest WACA authorized service center. Lens cleaners are commercially available, but special care should be exercised in their use since some may cause damage to the lens.

About Rechargeable Battery

Your portable DVD player comes with a lithium ion rechargeable battery that attaches to the bottom of the player.

1. Under normal working conditions, the battery can be charged and discharged over 300 times.
2. The properties of the rechargeable battery are: 7.4 Volts, interior lithium ionic electric circuit protection for recharge and discharge.
3. If the battery is not used it will automatically discharge gradually within one month.
4. If you don't plan on using the battery for an extended period of time, discharge the battery and keep it in a dry and cool place.
5. If the battery loses power during play, stop playing the DVD, otherwise damage may occur.
6. A fully charged battery is able to play a DVD with the TFT on for about 3hours.

Note: Playing time varies from disc to disc.

7. Working conditions and precautions:

- New batteries should be fully charged before initial use.
- Battery should only be used and charged when temperatures are between 32-95F.
- Never put the battery in fire or water.
- Do not expose the battery to high temperatures or store in hot, sunny places. Maintain well-ventilated conditions around the product, avoiding heat. Don't put the product on bed, sofa or anything that may block ventilation to the product.
- Don't use metal to link positive pole to negative.
- Do not open the battery.
- Do not leave battery attached when using alternative power source.
- Never charge the battery for more than 8 hours. Detach battery immediately after charging is complete.
- Detach battery when not in use.

Carrying Case

INSTRUCTIONS FOR ATTACHING YOUR PORTABLE DVD PLAYER CASE IN A VEHICLE

Please read and follow these instructions carefully when attaching this case inside your vehicle. For ease of installation, do not place the DVD player into the case until after the case is attached inside the vehicle.

CAUTION

1. Do not use this DVD Player Case as a swing, car seat, or for any other purpose except to hold a DVD player and accessories.
2. The DVD Player Case is intended for viewing only from the rear seats. Do not install or use this product in the front seat of a vehicle.
3. To reduce the chance of injury in case of collision or a sudden stop:
 - Always keep the DVD player strapped securely inside its case while the vehicle is moving
 - Always keep the DVD player Case securely attached inside the vehicle while the vehicle is moving

Your DVD player can be securely attached in one of the following ways to view movies from the rear seats:

1. Directly behind either the driver or the passenger seat
2. Between two front bucket seats

CAUTION

Always position the plastic hooks and strap adjustment slider so that they do not contact the back of the head of the person in the front seat.

To attach the DVD Player Case to a seat back (Photos 1 & 2):

1. Unzip the main compartment that holds the player; locate the set of rings tucked inside the top edge of the case (A)
2. Locate the 2 straps with hooks on each end
3. Hook one end of each strap to the rings at the top of the case (A)
4. Criss-cross the straps around the front of the headrest (B) and hook the straps to a second set of rings on the lower part of the case (C)
5. Tighten up the straps until secured

Photo 1



Photo 2



To suspend the DVD Player Case between 2 bucket seats (Photo 3):

3):

1. Unzip the main compartment that holds the player; locate the set of rings tucked inside the top edge of the case (A)
2. Locate the 2 straps with hooks on each end
3. Hook one end of each strap to the rings at the top of the case (A)
4. Wrap each strap around the headrest or seat; hook the straps to a second set of rings on the lower part of the case (C); in some vehicles, the middle rings in the gusset might work best (D)
5. Tighten up the straps until secured

Photo 3



Troubleshooting

| SYMPTOM | WHAT TO CHECK |
|--|---|
| The player cannot play. | <ul style="list-style-type: none"> - make sure the disc cover is closed. - make sure a disc is loaded. - make sure the disc isn't loaded upside down. - disc should be clean, not dirty or warped. - player's region code should be the same as region code of DVD disc. - has water condensation occurred? If it has, remove the disc and keep the player powered up for at least two hours. |
| There is no sound. | <ul style="list-style-type: none"> - make sure system connection is correct. - make sure the speakers are turned on. - make sure the sound setup of DVD disc is correct. - is your disc dirty or warped? Clean or replace disc. |
| There is no picture. | <ul style="list-style-type: none"> - make sure TV is on and in correct video mode. - make sure your system connection is correct. |
| Poor AV performance. | <ul style="list-style-type: none"> - is your disc dirty or warped? Clean or replace disc. |
| Cannot continue to play and play a section repeatedly. | <ul style="list-style-type: none"> - make sure the player is not in A-B repeat status. - press A-B button to cancel it A-B repeat status. - is your disc dirty or warped? Clean or replace disc. |

WARNING: Do not touch any metal objects to the battery connectors, as it will put the battery in standby mode. To get out of standby mode please connect the battery and portable DVD player to AC or DC power.

Others possibilities:

Static or other external interference may cause the player to function abnormally. In this circumstance unplug the power-supply cord from the outlet and plug it in again to reset the player so that normal operation can resume. If you are still having problems, then please disconnect the power and consult your service center or a qualified technician.

Specifications

| | | |
|---|------------------------|--|
| TFT screen size | | 7 inches |
| Laser Wavelength | | Wavelength: 780/650nm |
| Video System | | NTSC |
| Frequency Response | | 20Hz~20kHz ±2.5dB |
| Audio Signal-to-noise Rate | | ≥ 85dB |
| Audio distortion + noise | | ≤ -70dB (1kHz) |
| Channel Separation | | ≥ 70dB (1kHz) |
| Dynamic Range | | ≥ 80dB (1kHz) |
| Audio Out | Analog Audio Out | Out Level: $2V_{p-p} \pm 0.2$, Load: 10kΩ |
| Video Out | Video Out | Out Level: $1V_{p-p} \pm 0.2$, Load: 75Ω Unbalanced Negative |
| Power | AC100-240V ~50/60Hz | |
| Power Consumption | <25W | |
| Dimension | 195.5mm x 143mm x 25mm | |
| Weight | 1.154kg | |
| Compliance with FCC, FDA - cUL listed E209155 | | |

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

Manufactured under license from Dolby Laboratories.
 “Dolby” and the double-D symbol are trademarks of Dolby Laboratories.
 Confidential unpublished works. ©1992 -1997 Dolby Laboratories.
 All rights reserved.

For service, support and warranty information, visit www.polaroidelectronics.com or in the US call 1-866-289-5168, in Canada call 1-866-301-7922 and in Mexico call 01-800-400-2443.

“Polaroid” is a registered trademark of Polaroid Corporation of Waltham, MA USA and licensed for use on the PDV-0713B to Petters Consumer Brands, LLC.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>