





www.polaroid.com



Questions? Need Help?
Contact Polaroid Customer Care Center
Toll Free at: 1-800-343-5000
8am - 6 pm EST Mon - Fri (USA only)

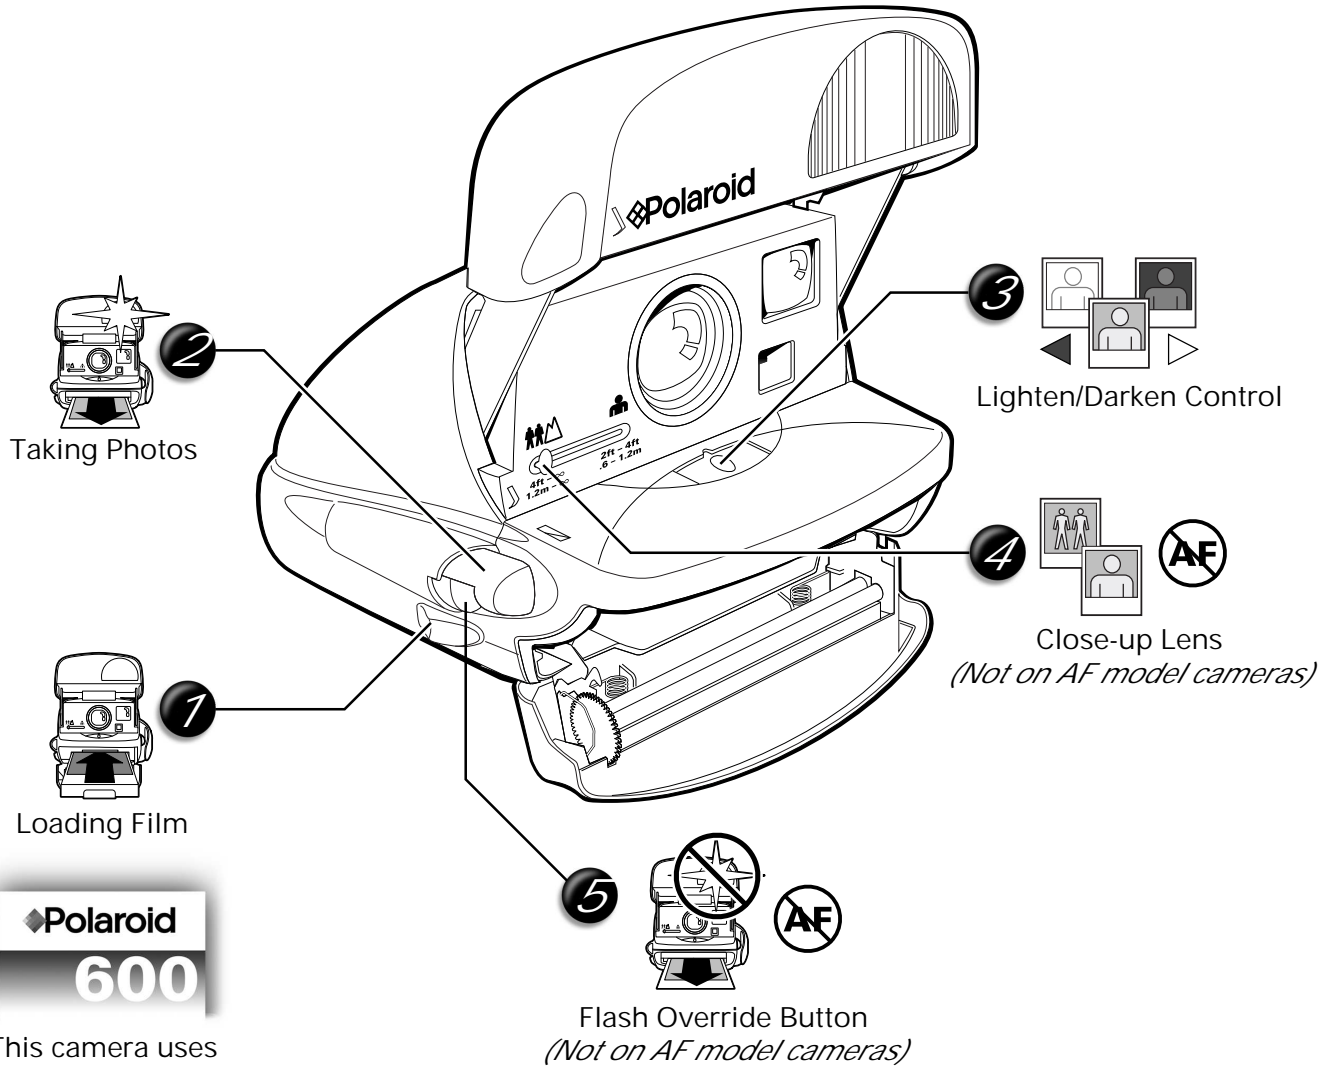



This camera uses Polaroid 600 series film. Each pack of film contains 10 photos.

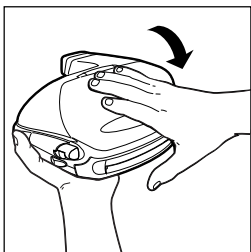


Snap the camera shut when not in use.

AF AF Model Cameras:	Non-AF Non-AF Model Cameras:
636 AF	637
OneStep AF	OneStep
OneStep AF SE	OneStep Express
600 AF	600 Extreme
	600 CL
	Cool Cam
	JobPro 2
	600 Business Edition 2


1 Loading Film

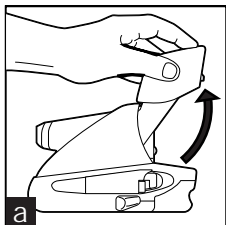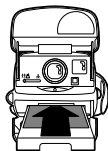


- a** Pull up the flash unit and snap it into place.

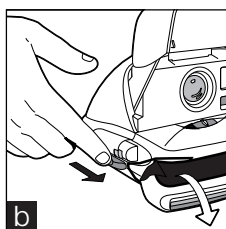


- b** Open the film door.

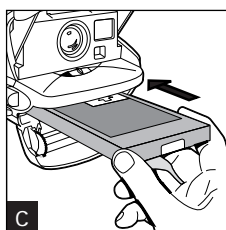


- c** Insert the film pack as shown. Hold the film pack by the edges. Push the film pack in until a "click" is heard.

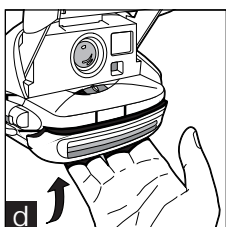

- d** Close the film door.

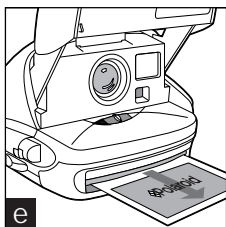


- e** The camera ejects the paper film cover.

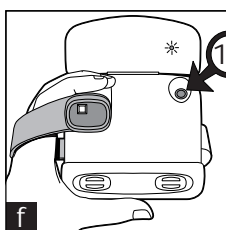


- f** Check the picture counter on the back of the camera. The number inside the window shows you how many photos are left in a film pack. A new pack of film contains 10 photos.


2 Taking a Photo

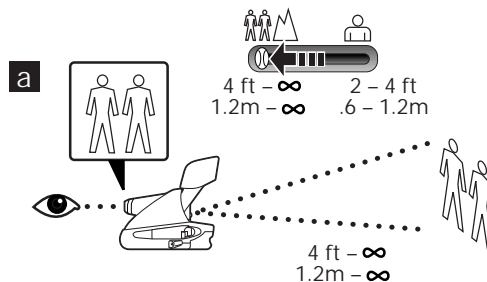

- a** Position your subject(s) 4-8 feet from the camera (normal lens setting). Frame your subject(s) in the viewfinder.

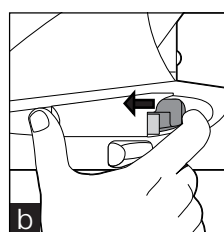

- b** Hold the camera still and press the shutter button.

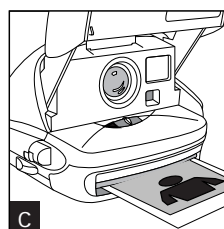


- c** The photo automatically ejects.


3 Lighten/Darken Control



Use this feature to retake a photo that was too light or too dark. Always return the control to the normal position after using.

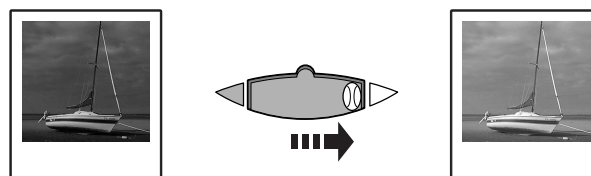


To lighten a photo that is too dark, slide the lighten/darken control to the right. Retake the photo.

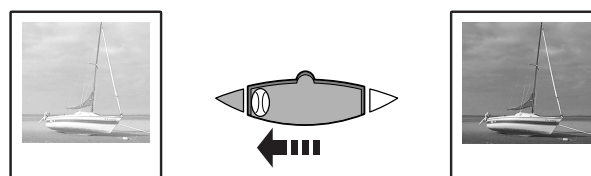


To darken a photo that is too light, slide the lighten/darken control to the left. Retake the photo.

4 Close-up Lens (Not on AF model cameras)

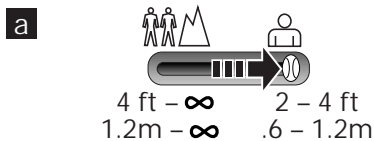

a To take a close-up photo, slide the close-up lens lever to the right.


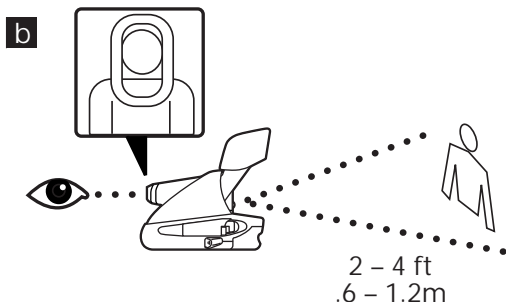


b Position your subject 2 - 4 feet from the camera. Frame your subject in the oval area of the viewfinder. Press the shutter button.


5 Flash Override Button (Not on AF model cameras)




The flash override button allows you to take a photo without the flash. Use this feature when shooting metallic or shiny surfaces, or when shooting a subject through glass.

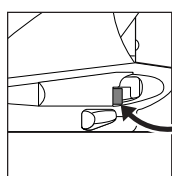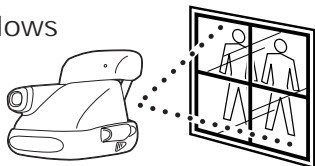

Flash Override Button

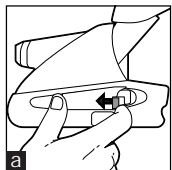


a Frame your subject. Hold the camera still and press the flash override button.

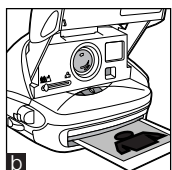


b The photo automatically ejects.

Developing Photos

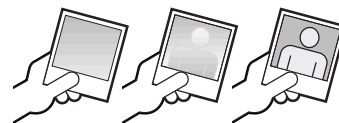


Developing photos are fragile.

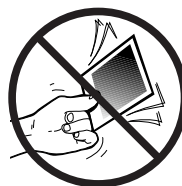

Do not shake





Do not bend

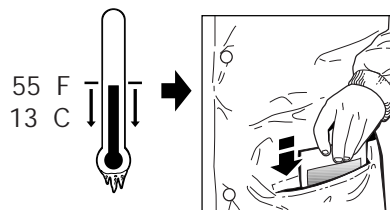


If the temperature is below 55 F (13 C) place the developing photo in a warm location, such as your pocket.


Camera Maintenance

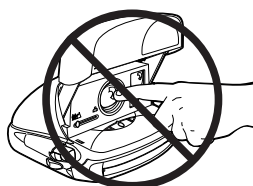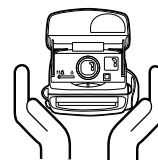



Do not touch the camera lens.

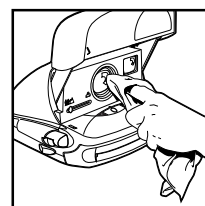

Clean the camera lens with a soft, lint-free cloth.

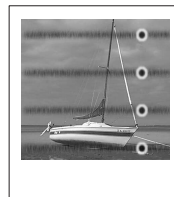

If spots or banding appears on photos, the camera may have dirty developer rollers.

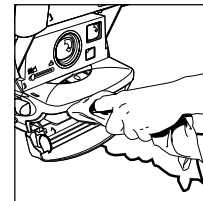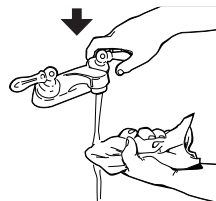

To clean the developer rollers, dampen a clean cloth with tap water. Open the film door and thoroughly clean the rollers. If film is in the camera, clean the rollers in a dimly-lit area.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>