

# 42" High-Definition Plasma Television PLA-4250A

## Operating Manual



20050316



# Contents

## Important Safeguards

Warnings and Precautions.....	3
Avoid Image Sticking.....	4

## Getting Started

Package Contents.....	5
Front View of the Product.....	6
Rear View of the Product.....	7
Remote Controls.....	9
Installation.....	11

## OSD Functions

PICTURE: Brightness / Contrast / Color / Tint / Sharpness / Color Temp. ....	16
AUDIO: Volume / Bass / Treble / Balance / Speaker Sel. / Speaker / Line Out / Subwoofer / BBE.....	17
SOURCE: Main Screen / Sub Screen / Audio From / Display Mode / Wide Mode : PIP Aspect / PIP H.POS / PIP V.POS / PIP Size .....	18
GRAPHIC: Auto Adjust / H.Position / V.Position / Phase / Clock / Resolution.....	19
TV: Input / Caption Mode / MTS / Auto Scan / Add/Del Channels / Parental Controls / Password Edit / TV Rating / MPAA Rating.....	21
CLOCK: Date / Time / Timer1 / Timer2 / Sleep Timer.....	23
SETUP: OSD H Posi. / OSD V Posi. / OSD Timeout / Language / Panel Protection / Orbit Range / Orbit Cycle / INFO / Reset / Ver.....	24


## Other Information


Specifications.....	25
Troubleshooting.....	26
Cleaning the Display.....	27
Safety Guidelines.....	28

# Important Safeguards



**Caution:** To reduce the risk of electric shock, do not remove cover (or back). No user serviceable parts inside. Refer servicing to qualified service personnel.

 This symbol indicates "dangerous voltage" inside the product that presents a risk of electric shock or personal injury.

 This symbol indicates important instructions accompanying the product.

## Warnings and Precautions

1. Do not place your hands, face, or objects close to the ventilation openings of your plasma TV. The top of your plasma TV gets very hot from exhaust air that is released through the ventilation holes. Burns or personal injuries may occur if any body parts are placed too close. Placing any object near the top of your plasma TV could result in heat related damages to the object and your plasma TV.
2. Disconnect all cables before moving your plasma TV. Moving your plasma TV with its cables attached may damage the cables and cause fire or electric shock danger.
3. To prevent damage which may result in a fire or shock hazard, do not expose your plasma TV to rain or moisture.
4. Keep your plasma TV away from excessive dust, high temperatures, moisture, or direct sunlight.
5. Use in a well-ventilated area and do not cover your plasma TV ventilation openings.
6. Unauthorized modification of this equipment or use of an unshielded power cord or video input source cable may cause excessive interference.
7. When your plasma TV is not in use for a long period of time, disconnect it from the electrical outlet.
8. If the picture displayed is in any way abnormal, turn off your plasma TV, then disconnect it from the electrical outlet. Make sure that your video input source cable is connected correctly, then reconnect your plasma TV to the electrical outlet.
9. Disconnect your plasma TV from the electrical outlet before cleaning or performing maintenance. Do not use liquid or aerosol cleaners. Use only a slightly damp cloth for cleaning.
10. Do not place your plasma TV on an unstable cart, stand, or table. Your plasma TV may fall, causing serious damage.
11. Do not place your plasma TV on a bed, sofa, rug, or other similar surfaces. Never place your plasma TV near or over a radiator or heat source. Do not install your plasma TV in an enclosed area unless correct ventilation is provided.
12. Your plasma TV should be operated from the type of power source indicated on the label. If the type of available power is unknown, consult your electrician or local power company.
13. Your plasma TV is equipped with a 3-pin grounded plug. The plug will only fit into a grounded power outlet. This is a safety feature. If you are unable to insert the plug into the outlet, contact your electrician. Do not alter the plug because this will defeat the safety feature.

14. Do not rest objects on the power cord and avoid placing the power cord near high traffic areas.
15. Do not overload wall outlets and extension cords because this can result in a risk of fire or electric shock.
16. Disconnect your plasma TV from the main power supply and refer servicing to qualified service personnel if:
  - The power cord or plug is damaged or frayed.
  - Liquid has been spilled into your plasma TV.
  - Your plasma TV has been exposed to water or moisture.
  - Your plasma TV does not operate normally when the operating instructions are followed. Adjust only those controls that are covered by the operating instructions. Incorrect adjustment of other controls may result in damage which often requires extensive work by a qualified technician to restore your plasma TV to normal operation.
  - Your plasma TV has been dropped or the cabinet has been damaged.

## Avoid Image Sticking

1. Displaying the same stationary patterns over extended periods of time, such as letterbox black bars, stock tickers, video games, or shopping channel logos and pricing displays, can leave an image permanently burned into the screen. Avoid this by mixing your viewing patterns. Do not show the same stationary image for more than 15% of your total TV viewing in any one week.
2. The warranty does **NOT** include PDP screen degradation.

## FCC Compliance Statement

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

### **FCC Warning**

To assure continued FCC compliance, the user must use grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. If a BNC cable is going to be used, use only a shielded BNC (5) cable. Also, any unauthorized changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate this device.

# Getting Started

Congratulations on your purchase of this high-definition plasma television.

**Important !** Save the original box and all packing material for future shipping needs.



## Package Contents

 
Your PDP TV package includes:

- PDP TV Display
- Remote Control (included battery)
- Power Cord
- RCA Cable
- User Guide


**NOTE:** Your product may also include various other accessories depending on region of purchase.

## Front View of the Product

Use the buttons on the front panel control (or included remote control) to display and adjust the On Screen Display (OSD). The OSD controls are explained at the top of the next page and are defined in "OSD Functions" on page 15.

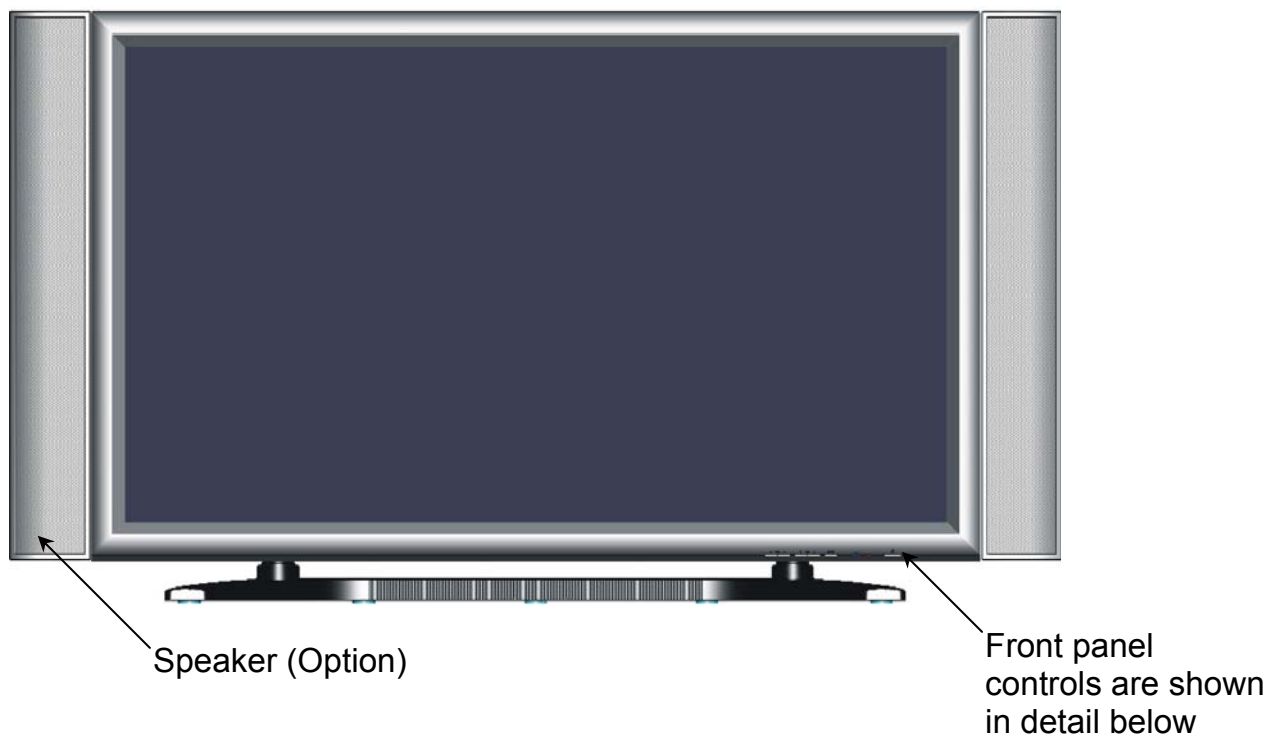

### Front Panel Control

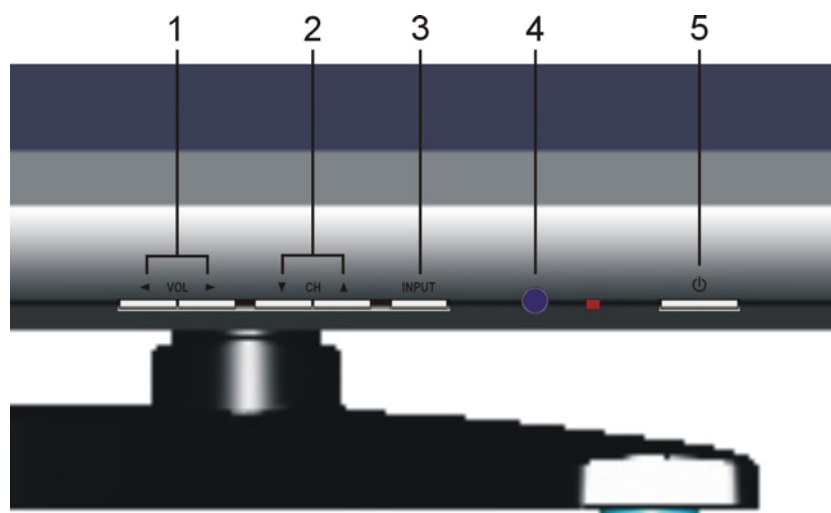 

1. Volume ◀ / ▶	Increase/Decrease sound volume or adjust a highlighted control while in OSD Menu.
2. Channel ▼ / ▲	Channel up/down when source is at TV or select a control while in OSD Menu.
3. Input	Toggle switch on Source Inputs
4. Remote Control Receiver	The Remote Control Receiver
5. Power Button	Power ON/OFF

## Rear View of the Product - 1



### Audio

- A. Speaker Jack**  
Connect the external speaker to this jack.

 
### PC

- B. DVI Input**  
Using the 20-pin DVI connecting to the DVI Out.
- C. DVI/RGB Audio In**  
Using cable provided connecting to the Audio out (Green) on your DVD or PC.
- D. RGB (VGA input)**  
Using the 15-pin VGA cable provided connecting to the RGB Out.  
NOTE: VGA out only outputs the data received on the RGB IN port.
- E. RGB (VGA output)**  
Using the 15-pin VGA connecting to the RGB Out.
- F. Factory Service Port**  
Using the 9-pin RS232 input to service customer.

### AC IN

- G. AC IN (Power)**  
Connect the power cord from AC IN to a power source.
- H. AC switch (Power)**  
Turn AC IN power on/off.

## Rear View of the Product - 2

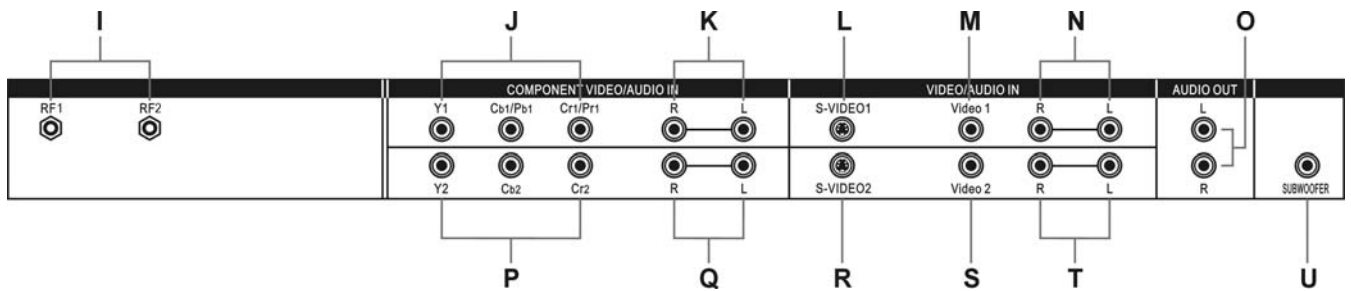

### TV

- I. TV input (RF1-input 1, RF2-input 2)  
Connect to the antenna or cable service

### COMPONENT-1

- J. Component (Y Pb Pr) input  
Connect the external video devices with component output to these jacks
- K. Audio input (Right / Left)  
Connect the external audio to this jack

### COMPONENT-2

- P. Component (Y Cb Cr) input  
Connect the external video devices with component output to these jacks
- Q. Audio input (Right / Left)  
Connect the external audio to this jack

### AV-1

- L. S-Video input  
Connect the S-Video to external video device such as VCR, DVD and Video game
- M. AV Video input  
Connect the Composite Video (Yellow) to external video device such as VCR, DVD and Video game
- N. Audio input (Right / Left)  
Connect the external audio to this jack; (Audio (R/L) inputs are supporting either S-Video or AV input.)

### AV-2

- R. S-Video input  
Connect the S-Video to external video device such as VCR, DVD and Video game
- S. AV Video input  
Connect the Composite Video (Yellow) to external video device such as VCR, DVD and Video game
- T. Audio input (Right / Left)  
Connect the external audio to this jack; (Audio (R/L) inputs are supporting either S-Video or AV input.)

### AUDIO OUTPUT

 
- O. Audio output (Right / Left)  
Provide the external audio output
- U. Subwoofer output  
Provide the external subwoofer output



# Remote Control

The Remote Control is compatible with the display from up to 5m distances.

- 1. POWER:**  
Switch the power On/Off
- 2. DISPLAY**  
Display the source and channel information
- 3. MUTE**  
Turn the Sound On/Off
- 4. CHANNEL NUMBER KEY**  
Set the channel
- 5. FAV +/-**  
Decrease/Increase the favorite channel
- 6. AN +/-**  
Adjust location of PIP window Sub Screen
- 7. RECALL**  
Switch to last chosen channel/input
- 8. AV3 (Option)**  
Source selected to AV3 mode
- 9. AV2**  
Source selected to AV2 mode
- 10. TV**  
Source selected to TV mode. Press to toggle between TV1 and TV2 inputs
- 11. AV1**  
Source selected to AV1 mode
- 12. YCbCr**  
Source selected to YCbCr mode
- 13. YPbPr**  
Source selected to YPbPr mode
- 14. S-VIDEO1**  
Source selected to S-video1 mode
- 15. S-VIDEO2**  
Source selected to S-video2 mode
- 16. PIP**  
Display Main & Sub picture
- 17. POP**  
Display Main & Sub picture
- 18. Enter**  
Execute a command
- 19. CHANNEL ▼ / ▲**  
TV Channel Up/Down adjustment
- 20. VOLUME ◀ / ▶**  
Volume Up/Down adjustment

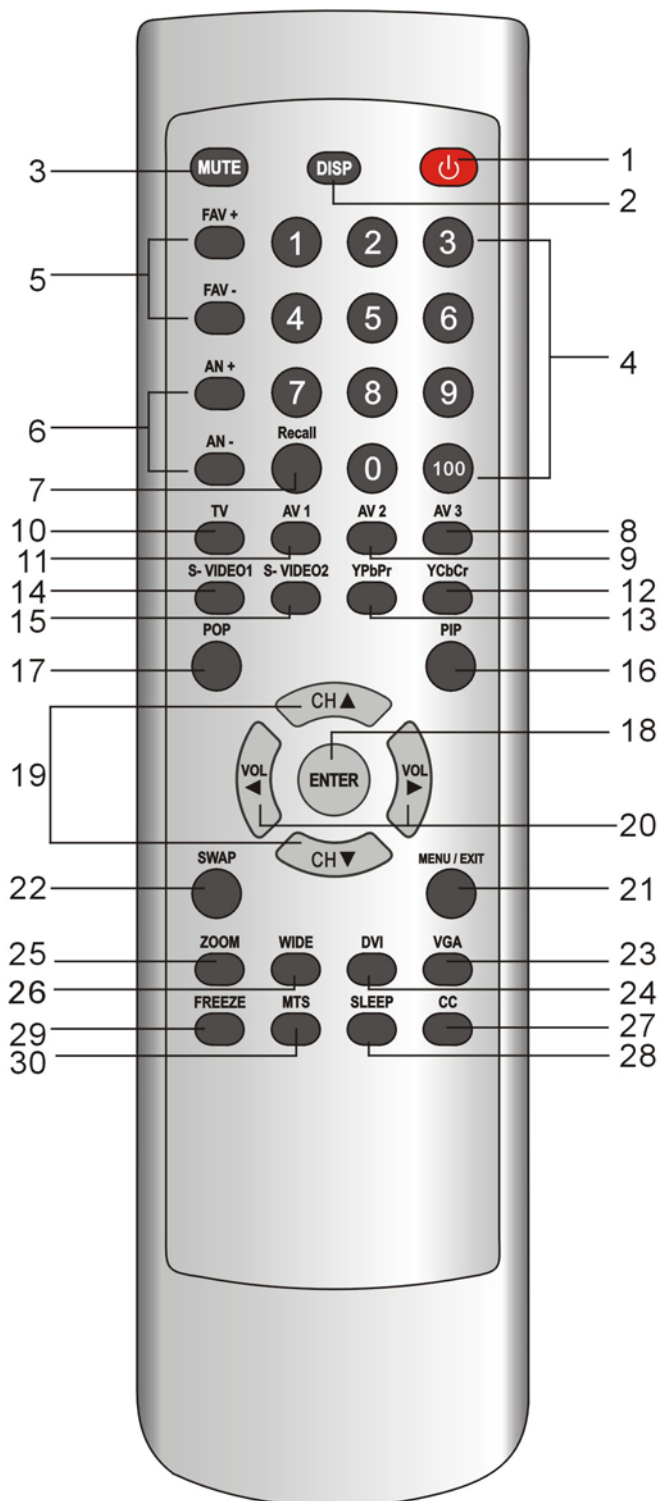

# Remote Controls

The Remote Control is compatible with the display from up to 5m distances.

## 21. MENU/EXIT

Turn OSD Menu On/Off

## 22. SWAP

Swap Main / Sub screen on PIP or POP

## 23. VGA

Source selected PC VGA mode

## 24. DVI

Source selected PC DVI mode

## 25. ZOOM

Normal->Zoom1->Zoom2

## 26. WIDE

Select Video Display format.

## 27. CC

Turn Close caption On/Off

## 28. SLEEP

 
Set time to timer Off the unit

## 29. FREEZE

Freeze main screen

## 30. MTS

Multi-sound selection: Mono/Stereo/SAP

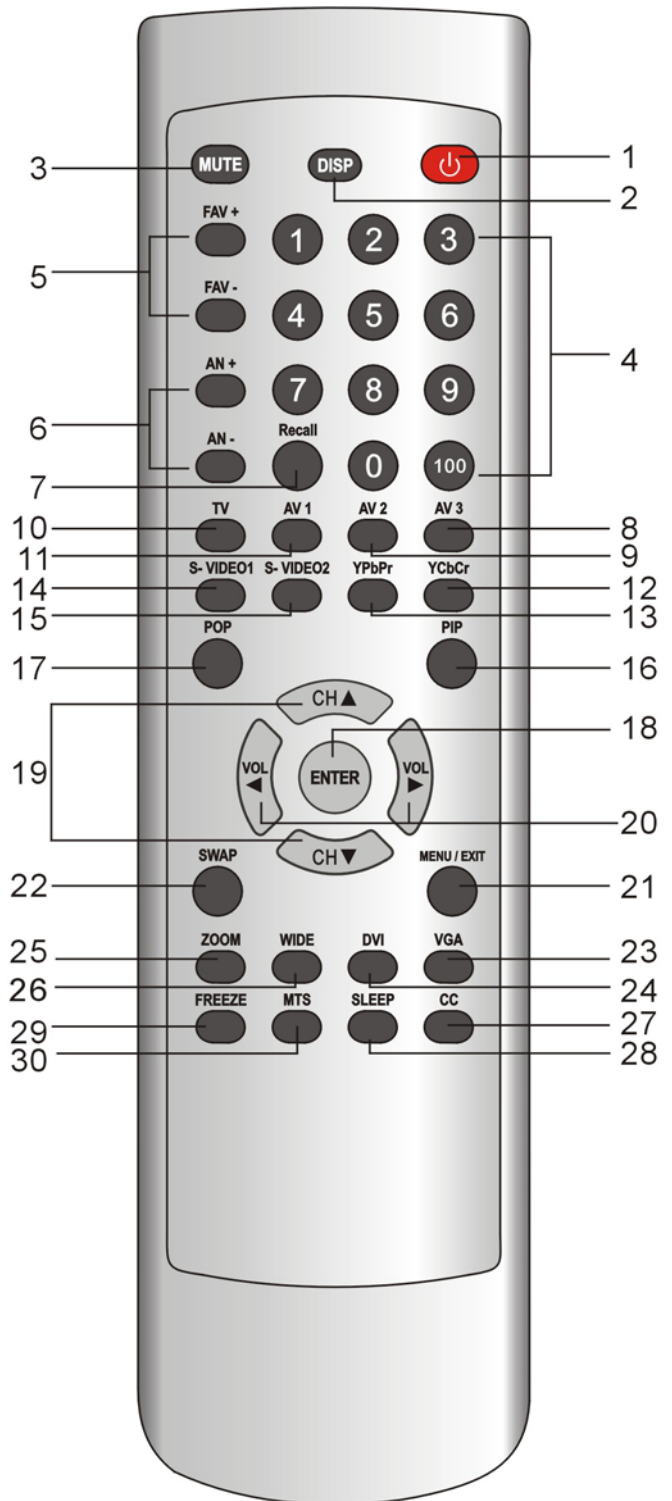

# Installation

## 1. Insert Remote Control Batteries

- 1) Remove the battery cover.
- 2) Insert the batteries, corresponding to the (+) and (-) markings on the battery compartment.



- 3) Re-attach the battery cover.

## CAUTION

- Only use the specified AAA batteries.
- Do not mix new and old batteries. This may result in cracking or leakage, which may pose a fire risk or lead to personal injury.
- Insert batteries according to (+) and (-) markings. Inserting the batteries incorrectly may result in cracking or leakage, which may pose a fire risk or lead to personal injury.
- Dispose of the battery in accordance with local laws and regulations.
- Keep the battery away from children and pets.
- When the remote control will not to be used for an extended period, remove the batteries.

## 2. Connect audio and video cables to PC

Connect one or all of the following into the back of the product

**IMPORTANT: Make sure all devices are off before you begin.**

**PC RGB CONNECTION:** Connect the supplied analog VGA cable from your PC VGA OUT port to the product RGB IN port.

 
 
 
 
**PC DVI CONNECTION:** Connect the supplied Digital DVI cable from your PC DVI OUT port to the product DVI IN port.

**AUDIO CONNECTION:** Connect the supplied stereo mini cable from the PC's AUDIO OUT port to the AUDIO IN port on the product.




### 3. Connect AV, Y Pb/Cb Pr/Cr, S-Video, Antenna/Cable to Video Devices

Connect Video/Audio cables from compatible devices to the back panel of product.

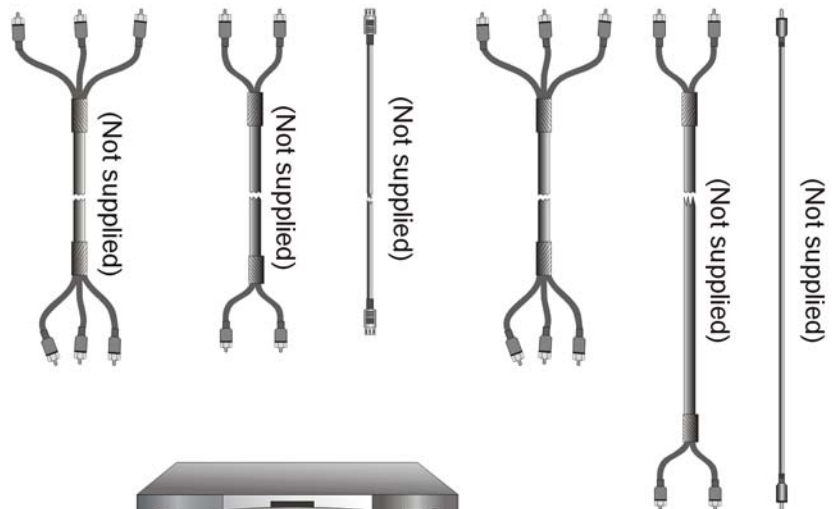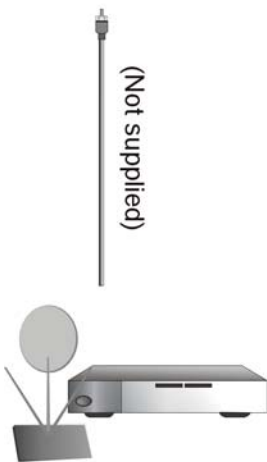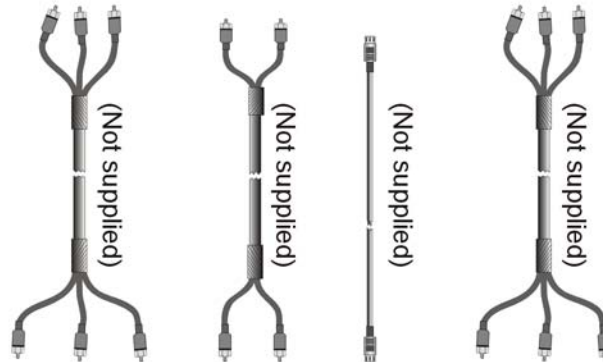

## 4. Connect power cables

 Connect the power cord to the product then to a properly grounded AC outlet.

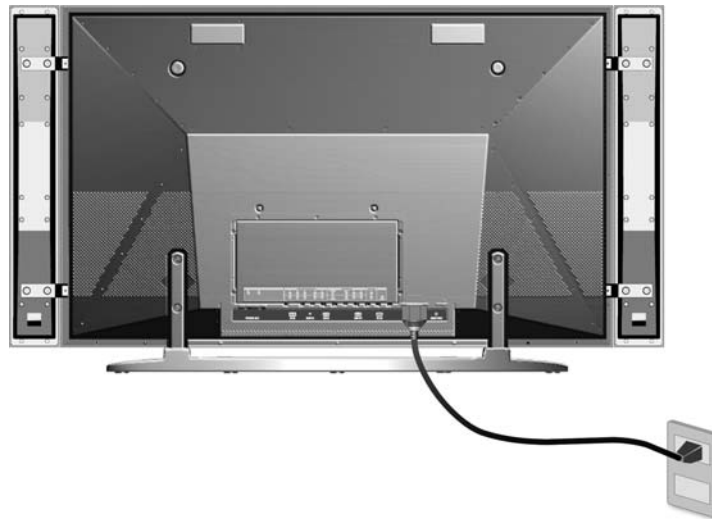

## 5. Turn Power On

Press the AC switch to "I". Then press the Power ON button on the front of the unit, or press the red Power ON button on the remote control.



## 6. Select Input Source

 
Select input source for your product, via either the OSD menu or remote control. If connecting to Antenna, Cable or other RF source on TV1 or TV2 Inputs, see next page to configure the inputs.

If connecting to a VGA PC computer input, go to page 20 for the configuration menu.

# OSD Functions

All the function settings for your PDP TV display are controlled either via the remote control or using the bottom control keys on the front panel.

To display the OSD main menu, press the MENU key on the remote control. Use ◀/▶ arrow keys to toggle the sub OSD menu display (PICTURE >> AUDIO >> SOURCE >> GRAPHIC >> TV >> CLOCK >> SETUP). Use ENTER to select each OSD Menu option.

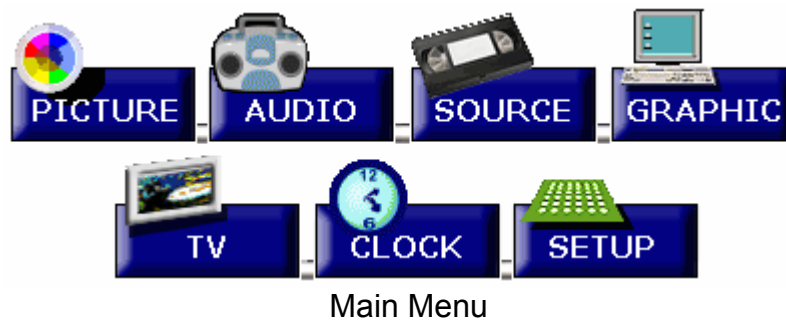

To open the Sub menu, press the INPUT button on the front panel or the ENTER key on the remote control.

# Sub Menus

## PICTURE



Function Name	Explanation
Brightness	Brightness Adjustment
Contrast	Contrast Adjustment
Color	Color Adjustment (The action of color should be block at pc mode)
Tint	Tint Adjustment (The action of Tint should be block at pc mode)
Sharpness	Sharpness Adjustment (The action of Sharpness should be block at pc mode)
Color Temp	Color Temp Adjustment ( Normal, User)



# Sub Menus

 
## AUDIO



Function Name	Explanation
Volume	Volume Adjustment
Bass	Bass Adjustment
Treble	Treble Adjustment
Balance	Balance Adjustment
Speaker Sel.	Select Internal speaker or External speaker
Speaker	Turn Speaker OFF or ON
Line Out	Sets Line Out Level to Variable: Sound level will change with Volume. Fixed: Sound level remains constant.
Subwoofer	Turn Subwoofer OFF or ON
BBE	Turn BBE OFF or ON

## Sub Menus


### SOURCE: Input Setup

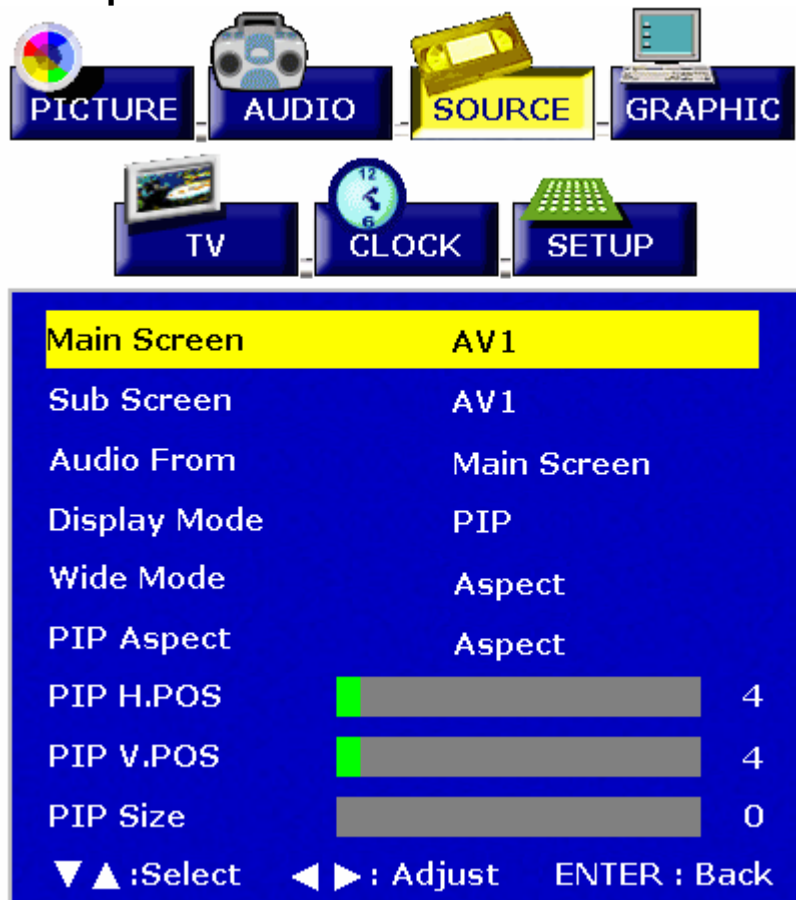

Function Name	Explanation
Main Screen	Select main screen sources (See PIP/POP settings below)
Sub Screen	Select sub screen sources (See PIP/POP settings below)
Audio From	Select main screen or sub-screen audio sources
Display Mode	Full --> PIP --> POP
Wide Mode	Aspect --> Wide-->1:1
PIP Aspect	Aspect --> Wide
PIP H.POS	Sub Screen display H-Position adjustment
PIP V.POS	Sub Screen display V-Position adjustment
PIP Size	Sub Screen display Size adjustment

# Sub Menus
 
## SOURCE: PIP / POP Setup

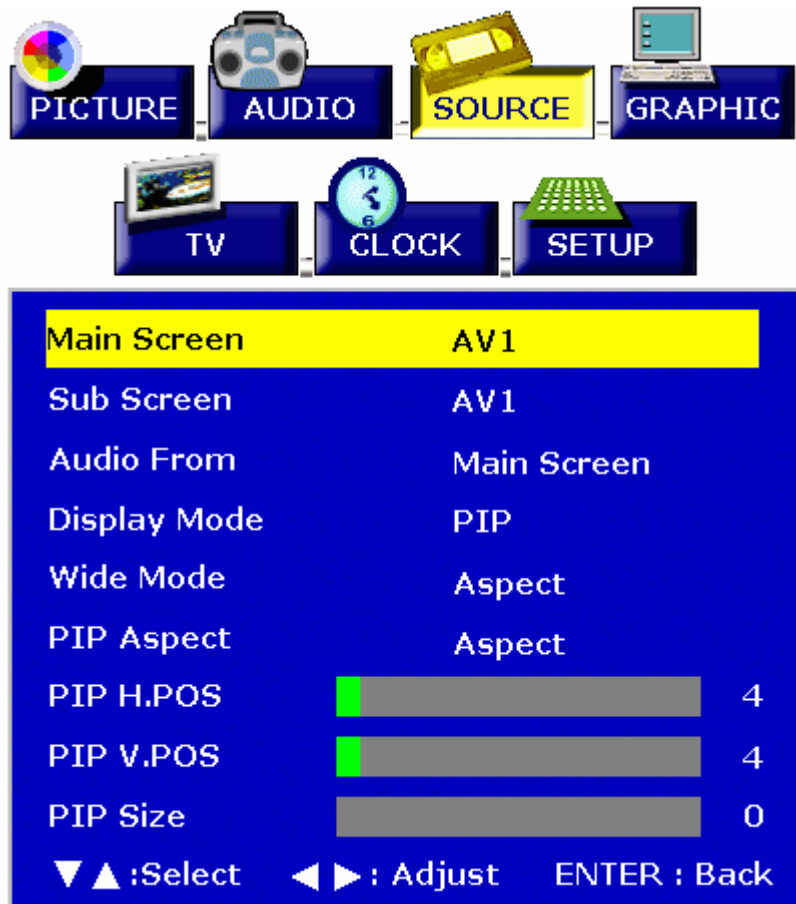

PIP/POP SPECIFICATION(Matrix on video and graphic)


		Main Screen Signal Source									
		TV 1	TV 2	CVBS 1	CVBS 2	S-Video 1	S-Video 2	YCbCr	YPbPr	RGB	DVI
Sub Screen Signal Source	TV 1	VV	VV	VV	VV	VV	VV	VV	VG	VG	VG
	TV 2	VV	VV	VV	VV	VV	VV	VV	VG	VG	VG
	CVBS 1	VV	VV	VV	VV	VV	VV	VV	VG	VG	VG
	CVBS 2	VV	VV	VV	VV	VV	VV	VV	VG	VG	VG
	S-Video 1	VV	VV	VV	VV	VV	VV	VV	VG	VG	VG
	S-Video 2	VV	VV	VV	VV	VV	VV	VV	VG	VG	VG
	YCbCr 2	VV	VV	VV	VV	VV	VV	N/A	VG	VG	VG
	YPbPr1	VG	VG	VG	VG	VG	VG	VG	N/A	N/A	N/A
	RGB (VGA)	VG	VG	VG	VG	VG	VG	VG	N/A	N/A	N/A
	DVI	VG	VG	VG	VG	VG	VG	VG	N/A	N/A	N/A

“VG” means Video on/in Graphic

“N/A” means no application

## Sub Menus
 
### GRAPHIC

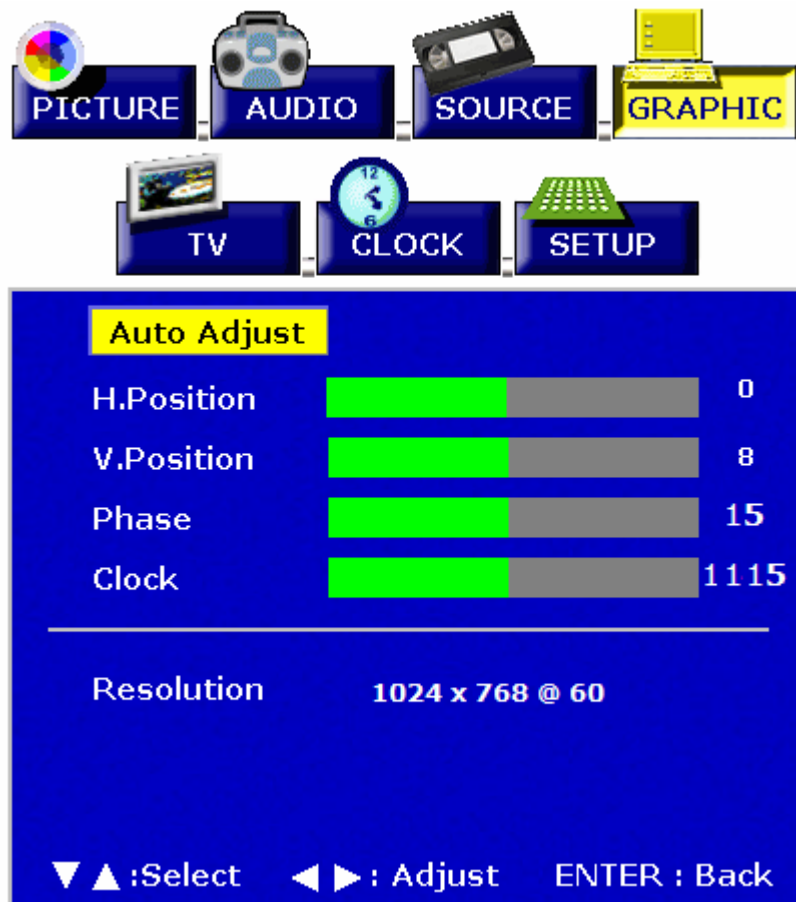

Function Name	Explanation
Auto Adjust	Auto Adjust the Horizontal Phase of the image
H. Position	Horizontal Position on the image adjustment
V. Position	Vertical Position on the image adjustment
Phase	Phase adjustment
Clock	Clock adjustment
Resolution	Display Source Resolution and Frequency

For the best picture quality set the TV's timing mode to VESA 852x480 (SD Type), VESA 1024x768 (HD Type).

Refer to the PC graphic card's user guide for questions on how to set the timing mode.

## Sub Menus

### TV: Input



 
Function Name	Explanation
Input	Select TV Source Type (ANT => Cable => HRC => IRC)
Caption Mode	Turn the Close Caption OFF or CC1, CC2, CC3, CC4, TT1, TT2, TT3, TT4
MTS	Multi-sound Selection (Mono => Stereo => SAP)
Auto Scan	Auto Scan on TV Channels
Add/Del Channels	Add / Delete the selected TV channel
Parental Controls	Adjust parental control settings

See next page for details on Parental Controls.



## Sub Menus

### CLOCK

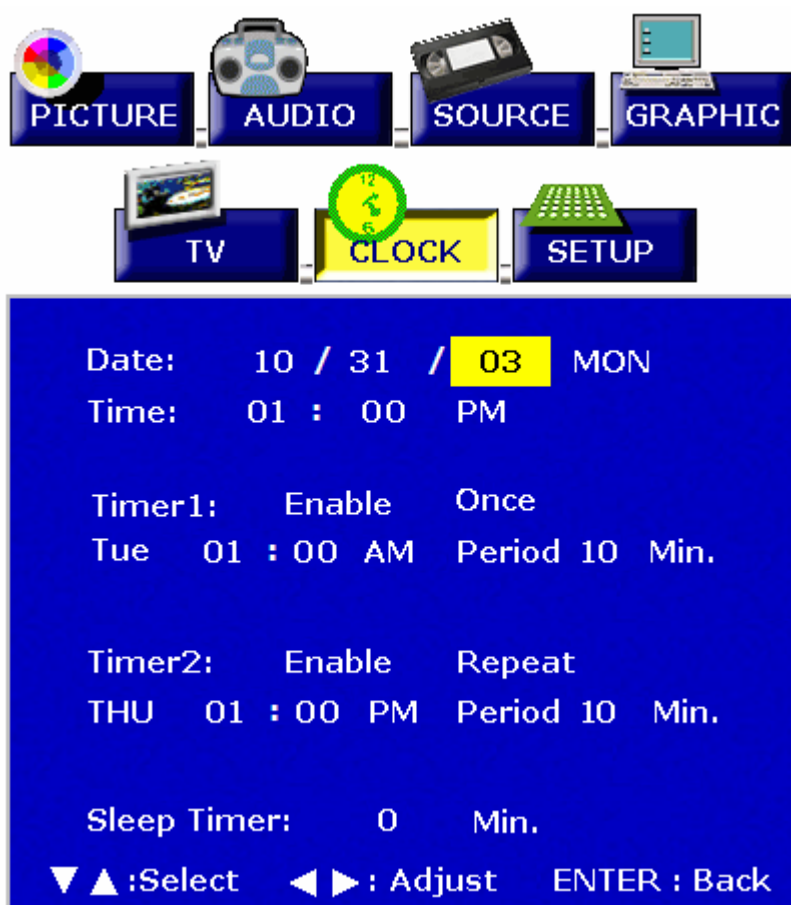

Function Name	Explanation
Date	Display present date in MM/DD/YY format
Time	Display present time
Timer1	Set the time and duration to automatically turn on.
Timer2	Set the time and duration to automatically turn on.
Sleep Timer	Set Time to turn OFF the unit (0-->5 min-->10 min-->15 min-->20 min-->25 min-->30 min-->35min --> 40 min-->45 min-->50 min-->55 min-->60min-->65min-->70min -->75 min-->80 min-->85 min-->90 min-->95 min-->100 min-->105 min-->110 min-->115 min-->120 min)

## Sub Menus

### SETUP



Function Name	Explanation
OSD H Posi.	OSD Horizontal Position
OSD V Posi.	OSD Vertical Position
OSD Timeout	OSD Close time
Language	Use Language
Panel Protection	Prevent image sticking
Orbit Range	Select image moving range
Orbit Cycle	Select image moving period range
INFO	Display Input Source, Type and Signal
Reset	Reset default value
Ver.	Software Version



# Other Information

## Specifications

<b>Panel</b>	Type	42-inch 16:9 color plasma display module with resolution of 1024(H) x 768(V) pixels (HD Type)
	Color	RGB closed type
<b>Viewing angles</b>		>170° (H) / 170° (V)
<b>Input signal</b>	Video/Audio	RGB Analog * 1 (75 ohms, 0.7 Vp-p)/Mini-Stereo *1 H/V separated (TTL) for PC DVI-D * 1 (HDCP support) fh:30-82 kHz, fv:50-75 Hz TV system antenna / NISTC *2 in US and TW Composite Video * 2 / RCA (L/R) Stereo * 2 S-Video * 2 Component Video * 2 (YCbCr / YPbPr) / RCA (L/R) Stereo * 2 RS232
<b>Output signal</b>		RGB Out * 1 Audio Out RCA (L/R) * 1 Subwoofer RCA * 1
<b>Compatibility</b>	PC	Up to 1280 x 1024 Non-interlaced
	Macintosh <sub>1</sub>	Power Macintosh up to 1280 x 1024
<b>Resolution</b>	Supported	1280 x 1024, 1024 x 768, 800 x 600, 640 x 480, 640 x 400 H: 30~82 KHz, V: 50~75 Hz
	Recommended	1024 x 768 @ 75 Hz
<b>Speaker Output</b>		Internal 5W * 2 or external 15W * 2 (Option)
<b>Power</b>	Voltage	100-240 VAC, 50/60 Hz (auto switch) , 5A
<b>Operating conditions</b>	Temperature	32° F to 95° F (0° C to 35° C)
	Humidity	20% to 80% (no condensation)
	Altitude	0 to 2000 m
<b>Storage conditions</b>	Temperature	(-20° C to + 60° C)
	Humidity	10% to 90% (no condensation)
	Altitude	0 to 3000 m
<b>Dimensions</b>	Physical	1039 mm (W) x 690 mm (H) x 132 mm (D) (without Base)
		1039 mm (W) x 690 mm (H) x 270 mm (D) (with Base)
		41" (W) x 27.2" (H) x 5.2" (D)
<b>Weight</b>	Net	74.8 lb (34kgs) - typical 103.4lbs (47kgs) - gross
<b>Regulations</b>		FCC-B, UL, c-UL
<b>Power saving modes</b>	On	440W (Green LED)
	Active Off	<5W (Orange LED)

**Preset Timing Mode** (Pre-adjusted to VESA 1024x768 at 75Hz)

**Warning:** Do not set the graphics card in your computer to exceed these refresh rates; doing so may result in permanent damage to the PDP display.

**Note:** Product Specifications are subject to change without notice.

# Troubleshooting

## No power

- Make sure AC power switch is ON, DC power button is ON (Green LED)
- Make sure AC power cord is securely connected to the AC socket
- Plug another electrical device (like a radio) to the power outlet to verify that the outlet is supplying the proper voltage

## System is “Locked” or Not Responding:

- In the unlikely occurrence, press the “Up” key + AC power on to reset the monitor.

## Parental Control password is “LOST”:

- In the unlikely occurrence, press the “Up” key + AC power on to reset the password.

## AUDIO Interconnection Issues:

- On AV1, AV2, and AV3; SVHS and Composite share the same Audio source.

## Power is ON but no screen image

- Make sure the video cable supplied with the PDP display is tightly secured to the video output port on the back of the computer. If the other end of the video cable is not attached firmly to the PDP display, tightly secure it to the PDP display
- Adjust brightness and contrast
- If you are using a Macintosh older than G3, you must use a Macintosh adapter
- Check Source settings

## Wrong or abnormal colors

- If a color (red, green, or blue) is missing, check the video cable to make sure it is securely connected. Loose or broken pins in the cable connector could cause an improper connection
- Connect the PDP display to another computer

## Control buttons do not work

- Press only one button at a time

## Static appears on screen

- Check your antenna connection
- Check TV / CATV selection

## No sound

- Check your audio connection
- Press MUTE on the remote control again, so that MUTE disappears from the screen
- Check your audio settings, your TV audio may be set to SAP or minimum
- Press the Volume + (Up) key on your remote control  
Make sure that headphones are not connected

## Remote Control does not work

- Make sure batteries are inserted correctly
- Batteries could be weak

### **Image Quality Issues:**

- TV: For Best Image Quality, "Standard Definition" TV should be viewed as 4:3.
- COMPONENT 480i: For Best Image Quality the "Y Cb Cr" Input should be used.

### **For High-Definition Users:**

- The PDP TV is an ideal platform for viewing High Definition Content.
- Best Image Quality will be achieved by the DVI Input, then "Y Pb Pr," then RGB.
- For 720p usage, there is a special "1:1" mode which allows the content to be displayed in its "TRUE" form as broadcast. However, due to variances in broadcast practices, it's possible some image distortions can occur. To use this mode while viewing 720p content, Press the "WIDE" key on the remote control and select "1:1".

### **For Letterbox Content Users:**

- Letterboxed (or "Widescreen") versions of DVD movies are most commonly formatted for standard 4:3 Televisions. The PDP TV has the capability of expanding this content so the entire screen is filled at the expense of image accuracy. To use this function, press the "ZOOM" key on the RCU and cycle among the available options.

### **Duplicate or "Ghost" channels located during scan:**

- Use the "Channel EDIT" function to "DELETE" duplicate or unwanted channels from the database of active channels.

### **No output from RGB Out port:**

The RGB out port may only be used with content using the Pep's RGB-IN Port.

## **Cleaning the Display**

- Make sure the product is turned off before cleaning
- Never spray or pour any liquid directly onto the product.
- Never immerse the product in any liquid

### **To clean the screen:**

1. Wipe the screen with a clean, soft, lint-free cloth. This removes dust and other particles.
2. If still not clean, apply a small amount of non-ammonia, non-alcohol based glass cleaner onto a clean, soft, lint-free cloth, and wipe the screen.

### **To clean the cabinet:**

1. Use a soft, dry cloth.
2. If still not clean, apply a small amount of non-ammonia, non-alcohol based, mild non-abrasive detergent onto a clean, soft, lint-free cloth, then wipe the surface.

# Safety Guidelines

 
**CAUTION:** The socket-outlet should be installed near the equipment and should be easily accessible.

**CAUTION:** Use a power cable that is properly grounded. Always use the appropriate AC cord that is certified for the individual country.

## IMPORTANT NOTICE CONCERNING POWER CORD SELECTION

The power cord set for this unit has been enclosed and has been selected according to the country of destination and must be used to prevent electric shock. Use the following guidelines if it is necessary to replace the original cord set, or if the cord set is not enclosed.

The female receptacle of the cord set must meet IEC-60320 requirements and may look like (Figure A1 below):



## For the United States and Canada

In the United States and Canada the male plug is a NEMA5-15 style (Figure A2), UL Listed, and CSA Labeled. For units which are mounted on a desk or table, type SVT or SJT cord sets may be used. For units which sit on the floor, only SJT type cord sets may be used. The cord set must be selected according to the current rating for your unit. Please consult the table below for the selection criteria for power cords used in the United States and Canada.

Cord Type	Size of Conductors in Cord	Maximum Current Rating of Unit
SJT	18 AWG	10 Amps
	16 AWG	12 Amps
	14 AWG	12 Amps
SVT	18 AWG	10 Amps
	17 AWG	12 Amps

For service, support and warranty information, visit [www.polaroidelectronics.com](http://www.polaroidelectronics.com) or in the US call 1-866-289-5168, in Canada call 1-866-301-7922 and in Mexico call 01-800-400-2443.

“Polaroid” is a registered trademark of Polaroid Corporation of Waltham, MA USA and licensed for use on the *MODEL #* to Petters Consumer Brands, LLC.

## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>