

7" Swivel Screen Portable DVD Player  
PDM-0743M




## Operation Manual



20060620

## Important Safety Instructions

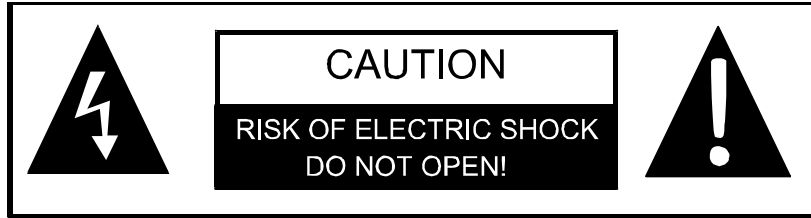

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

**WARNING:** TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OF MOISTURE.



**CAUTION:** Laser radiation when open. Do not stare into beam.

**CAUTION:** USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

### POWER SUPPLY:


Connect the supplied adapter to the side of the DVD player in the slot marked "Power In". Plug the two-prong end of the power cord to an AC100-240V outlet. If you have difficulty inserting the plug, turn it over and reinsert it, if the unit will not be used for a long time, disconnect the plug from the outlet.

### NOTE:

Before plugging the power cord into an AC outlet, make sure that all the connections have been made.

## Important Safety Instructions

**CAUTION:** These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so. Refer to service manual for servicing instructions.

- 1) Read these instructions.
- 2) Keep these instructions.
- 3) Heed all warnings.
- 4) Follow all instructions.
- 5) Do not use near water.
- 6) Clean only with dry cloth.
- 7) Do not block any ventilation openings. Maintain well ventilated conditions around the product, Do not put product on bed, sofa or anything that blocks ventilation. Install in accordance with the manufacturer's instructions.
- 8) Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- 9) Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- 10) Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and the point where they exit from the apparatus.
- 11) Only use attachments/accessories specified by the manufacturer.
- 12) Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over. 
- 13) Unplug this apparatus during lightning storms or when unused for long periods of time.
- 14) Refer all servicing to qualified service personnel. Servicing is required when the apparatus has been damaged in any way, such as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- 15) Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on the apparatus.

**Note:** Do not touch the color TFT LCD screen by hand directly.

## Important Safety Instructions

### Copyright Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

### **IMPORTANT FOR LASER PRODUCTS**

#### **1. CLASS 1 LASER PRODUCT**

**2. DANGER:** Visible laser radiation when open and interlock failed or defeated. Avoid direct exposure to beam.

**3. CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified service personnel.

### Region code information

DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, this product cannot play the disc. The region code of this unit is 4.

### **High-quality audio and video**

**Excellent sound:** Dolby Digital Decoder delivers great sound.

**AV input:** External Audio, Video input can be connected to most external AV sources.

**AV Output:** Analog audio output can be connected to external amplifier.

### **Advanced Playing Functions**

**Compatibility:** Compatible DVD, CD and JPEG discs, etc.

**On-Screen Display:** You can choose from multiple languages for the On-Screen Display language.

**Particular Performance:** Multi-speed, fast forward, fast backward, slow playback and repeated playback.

**Search by Time:** Search for a certain track of a disk by selected time.

**Last Memory Playback:** Memorizes the stopped playback track and continues playing the disk from this spot when the power is on. (Only available for DVD and CD disc).

**Special Functions:** Supports screen multi-angle viewing, zooming function and foul language filtering function.

### **Other Special Functions**

**High Resolution:** MPEG-2 decoding format achieves more than 500 lines of horizontal resolution.

**Power Adapter Switch:** Automatically adapts to voltage requirements in U.S and other countries.

## Accessories

### Accessories List

ITEM	NAME	QTY
	Remote Control (with battery)	1
	Power Supply Cord with AC Adapter	1
	Rechargeable Battery Pack	1
	DC Adapter (Car Adapter)	1
	Audio/Video Cable	1
	Earphone	1
	Bag	1
	Operation Manual	1

**NOTE:**

Accessories and their parts numbers are subject to change without prior notice.

<b>Important Safety Instructions</b>	.....2
<b>Features</b>	.....5
<b>Accessories</b>	.....6
<b>View of Front Panel</b>	.....8
<b>View of Side Panels</b>	.....10
<b>View of Bottom Panel</b>	.....11
<b>Revolving LCD Screen</b>	.....12
<b>Remote Control</b>	.....13
<b>System Connections</b>	.....16
<b>Power Supply Preparation</b>	.....18
<b>Rechargeable Battery</b>	.....19
<b>Notes on Discs</b>	.....22
<b>Playback Operation</b>	.....23
<b>DVD Playback</b>	.....24
<b>CD Playback</b>	.....27
<b>JPEG Playback</b>	.....28
<b>System Setup</b>	.....30
<b>Definition</b>	.....36
<b>Troubleshooting</b>	.....37
<b>Specifications</b>	.....39

## View of Front Panel





1. **LCD screen**
2. **▲/||/+ Button**
  - ▲ : Press to select different items.
  - || : Press to pause the playback.
  - +: Press the Mode button and then press this button to increase the level of brightness, contrast and color.
3. **▼/■/- Button**
  - ▼ : Press to select different items.
  - : Press to stop playback. Then press the ▶(PLAY) button to resume playback from the stopped spot. Press this button twice to stop playback completely.
  - : Press the Mode button and then press this button to decrease the level of brightness, contrast and color.
4. **◀/⏮/⏪ Button**
  - ◀ : Press to select different items.
  - ⏮: Press and hold it for several seconds to search backward fast.
  - ⏪: Press to return to the previous list/track/chapter.
5. **▶/⏭/⏩ Button**
  - ▶ : Press to select different items.
  - ⏭: Press and hold it for several seconds to search forward fast.
  - ⏩: Press to go to next list/track/chapter.
6. **ENT/▶ (PLAY) button**
  - ENT: Press to confirm selection.
  - ▶ (PLAY): Press to start playback.
7. **Speaker**
8. **Disc tray cover**

When the disc is loaded gently press the cover to close it.
9. **MENU Button**

Press to access the DVD disc menu during playback.
10. **SETUP Button**

Press to access or exit the system setup menu.
11. **MODE Button**

Press to enter the brightness, contrast or color adjusting mode.  
Press and hold for several seconds to change the aspect ratio among 16:9,4:3 16:9 overturn and 4:3 overturn.
12. **ZOOM button**

Press to realize various zoom functions.
13. **OPEN Switch**

Push to open the disc tray cover.
14. **SLOW button**


Press to activate slow playback function.
15. **A-B Repeat button**

Press to play a section of the disc from point A to point B.
16. **Remote Sensor**
17. **Charge Indicator**

Light is red when the battery is being charged; green when it is fully charged.

## View of Side Panels

### Right Side View

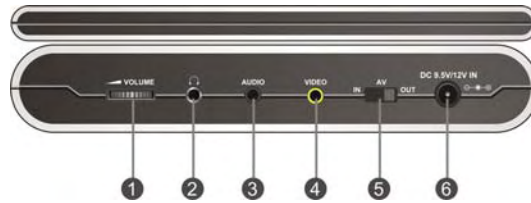


- 1. Volume Control knob**  
Used to adjust the volume of the headphone and speaker.
- 2. Headphone Jack**  
Used to connect to headphones for private listening. When headphone is plugged, the speakers will turn off automatically.
- 3. Audio Input/Output Jack**  
For connecting to an external amplifier or audio source.
- 4. Video Input/Output Jack**  
for connecting to an external monitor or video source.
- 5. AV IN/OUT Switch**  
Switch to "IN" to input external Audio/Video signal. Switch to "OUT" to play disc or output AV signal.
- 6. DC 9.5/12V Input Jack**  
Used to connect the DC 9.5/12V adaptor.

### Left Side View



- 1. HOLD button**  
Push the HOLD switch to lock the function of all the buttons on the front panel. (except the POWER and OPEN switches)
- 2. Power ON/OFF Switch**  
Switch the power on or off.

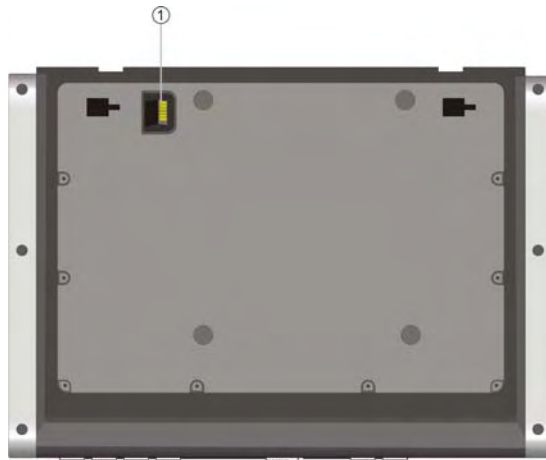






- 1. Rechargeable Battery Contacts**  
For connecting the rechargeable battery pack.

## Revolving LCD Screen

### Revolving Steps

The revolving LCD screen is one of the outstanding features about this product. We'd like to suggest you to take the following steps for proper operation.

<p>Pos. A</p> 	<p>1. Open the screen cover to position (A) as shown in left figure at which the screen is vertical to the operation panel.</p>
<p>Pos. B</p> 	<p>2. Revolving the screen horizontally about it's axis in the clockwise only. The maximum revolving degree is 180 (position C). If you want to return to initial position (A), please revolve screen counter clockwise until it clicks.</p>
<p>Pos. C</p> 	<p>3. You can rotate the screen vertically from position C to the operation panel as indicated in left fig.</p>
<p>Pos. D</p> 	<p>4. The final rotating position (position D) at which the screen facing upward and back to operation panel.</p>

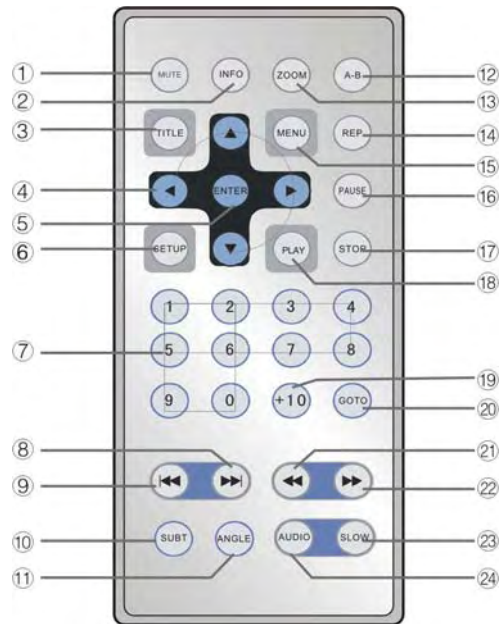


1. **MUTE button**  
Press to turn off or on the speaker output.
2. **INFO button**  
Press repeatedly to display or cancel the detailed information of the disc during playback.
3. **TITLE button**  
Press to display title menu if it exists in the disc.
4. **Direction button**  
Press to select different options.
5. **ENTER button**  
Press to access playback or confirm your selection.
6. **SETUP button**  
Press to enter the player's setup menu.

7. **0-9 number buttons**  
Select numbers by pressing these buttons.
8. **▶ NEXT button**  
Press to skip to the next list, track or chapter.
9. **◀ PREV button**  
Press to return to the previous list, track or chapter.
10. **SUBT button**  
When playing a DVD coded with multi-subtitles, press to select a subtitle language or to turn subtitles off.
11. **ANGLE button**  
Press to access various camera angles if the DVD disc contains multiple camera angles.
12. **A-B button**  
Press to play a section of the disc from point A to point B. Press once to select the starting point A, press again to select the end point B. During A-B repeat playback, press this button to stop the repeat.
13. **ZOOM button**  
Press to realize various zoom functions.
14. **REP button**  
Press to repeat a chapter, title or the entire disc.
15. **MENU button**  
Press to access the DVD disc menu during playback.
16. **PAUSE button**  
Press to pause playback. Press the PLAY button to resume normal playback.
17. **STOP button**  
Press to stop playback. Then press the PLAY button to resume playback from the stopped spot. Press this button twice to stop playback completely.
18. **PLAY button**  
Press to start playback.
19. **+10 button**  
select number greater than 9 by pressing the (+10) button first, and then additional number buttons as needed.
20. **GOTO button**  
Press to select the desired disc starting time, title or chapter.
21. **◀ REV SCAN button**  
Press to search backward fast during playback.
22. **▶ FWD SCAN button**  
Press to search forward fast during playback.
23. **SLOW button**  
Press to activate slow playback function.
24. **AUDIO button**  
Press to select different languages when a DVD disc with multiple audio languages is played. Press to select different audio track when a CD disc is played.

### **Preparation of Remote Control**

Follow the steps below to install the battery.

1. Pull the battery holder out from the remote control in the direction of the arrow.
2. Load a new battery properly with the (+) sided up.
3. Insert the battery holder back into the remote control.

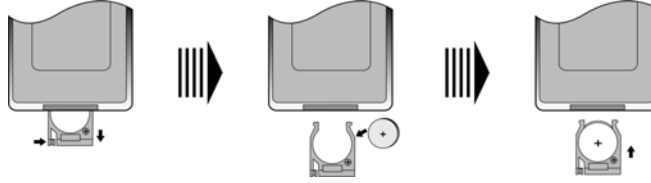

Battery type: CR2025 3V

Battery service life: approximately 1 year under normal use (at room temperature).

### **Use of Remote Control**

Point the remote control unit to the remote sensor within the range of 16 feet and angles of 60 degree, and without obstacles between remote control and remote sensor.

#### **Note**

- Improper use of the battery may cause overheating, explosion or ignition, which can result in an injury or a fire. Battery leakage may damage the remote control.
- Do not expose the remote control unit to direct sunlight.
- Do not recharge, disassemble, deform or heat the battery.
- Do not put the battery in fire or water.
- Immediately replace the exhausted battery.
- Take out battery when the remote is not in use for a long time.




## System Connections

- Always ensure that the DVD player, TV and any other electrical equipment to be connected with are switched off and unplugged from the power supply.
- Ensure that you observe the color coding when connecting audio and video cables.


### **Connecting to TV**

Follow the drawing below to connect the DVD player to TV's Audio/Video input with Audio/Video cable.

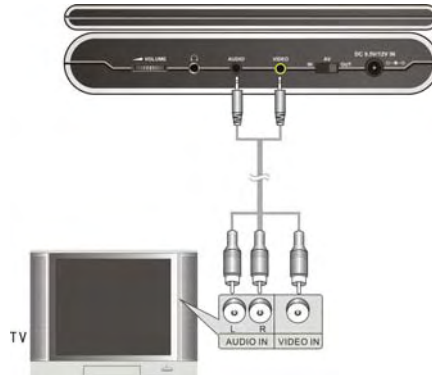

### **Connecting to An Amplifier**

Refer to your audio equipment's manual before connection.  
Follow the drawing below to connect the DVD player to AV amplifier.

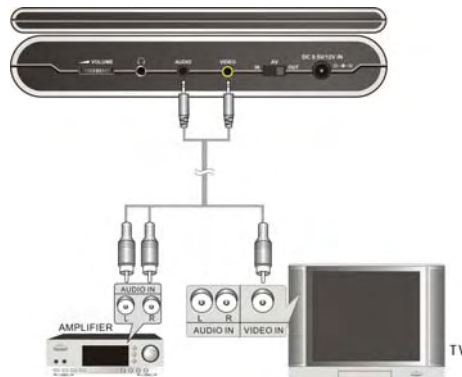




### **Connecting to External AV Source**


The player supports an AV signal input function. Use the audio/video cable to connect the unit to an external AV signal source such as a DVD, VCR etc. After connecting, switch the DVD/AV IN to AV IN.

NOTE: Noise may occur in speakers when there is an external audio signal input while playing a DVD disc. Unplug the audio cord to clear the noise.

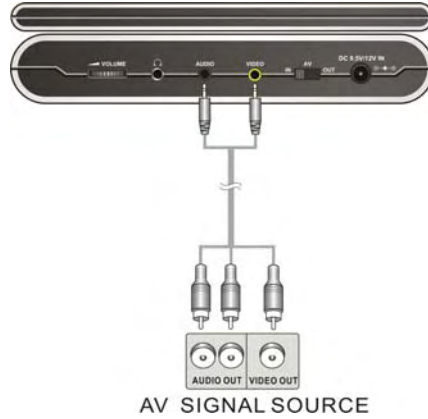

### **Connecting to the Headphones**

Connect the headphones to the headphone jack on either side of the player.

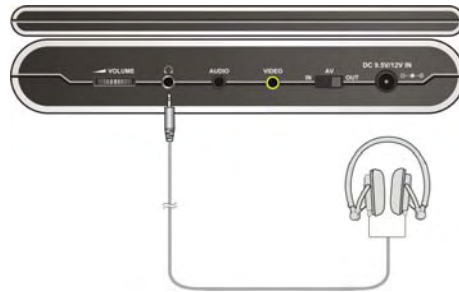

When headphone is connected, the speakers will automatically turn off.

## Power Supply Preparation

### Using the AC Adapter

The player is supplied with an AC adapter for powering the unit and charging the battery.

1. Connect AC adapter to the left side of the DVD player in the jack marked DC 9.5/12V IN as shown on the right.
2. Plug the two-prong end of the power cord into a grounded electrical outlet. The power indicator lights red.




- Note:** 1. Turn player's power off before unplugging.  
2. In the case of using the adapter, the LCD screen will be brighter than using the rechargeable battery.

### Using of Car Adapter

The player is supplied with a Car Adapter for powering the unit and charging the battery in a vehicle.

Connect the car adapter power plug to the unit's power jack and the other end to the vehicle's 12V accessory/cigarette lighter socket as the right figure.

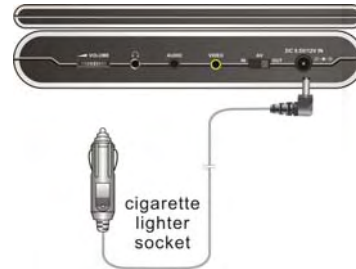

### Attention

- Do not operate the unit or view video software while driving a vehicle.
- Place the unit in a proper position for viewing.
- Detach battery pack when using the AC or car adapter as power source.
- Disconnect the player from the Car Adapter when starting the vehicle.

### **About Rechargeable Battery Pack**

Your portable DVD player comes with a lithium ion rechargeable battery that attaches to the bottom of the DVD player. Charge the battery fully before initial use. Charging time is normally about 5 hours. A fully charged battery delivers about 3 hours of use but playing time varies from disc to disc. If the battery will not be used for a long period of time, charge the battery fully before storage.

#### **Working conditions and precautions for the rechargeable battery**

- New battery should be fully charged before initial use.
- Battery should only be used and charged when temperature is between 32-100F.
- Never put the battery in fire or water.
- Do not expose the battery to high temperature or store in hot, sunny place.
- Maintain well-ventilated conditions around the product to avoid overheating. Don't put the product on a bed, sofa or anything that may block ventilation to the product.
- Do not short the battery terminals.
- Do not open the battery.
- Detach the battery after charging is complete. When charging the battery pack, the charge light will turn red, when the charging is complete, the light will turn green.
- Detach the battery when it is not in use.
- When the charge of the battery is weak, low power indicator will appear on the LCD screen. The player will turn off automatically several minutes later.

#### **Warning:**

Do not touch any metal object to the battery connectors, as it will put the battery in standby mode. To exit the standby mode, connect the battery and DVD player to AC or DC power.

## Rechargeable Battery

### **Attaching the Battery Pack**

Refer to the following steps for attaching the Battery Pack:

1. With one hand on the DVD Player to prevent it from moving, take the battery and align the plastic tabs on the battery pack with holes on the player, and push the battery pack into the DVD Player.
2. Slide the Battery Pack until you hear it click and lock into place.



Fig.1

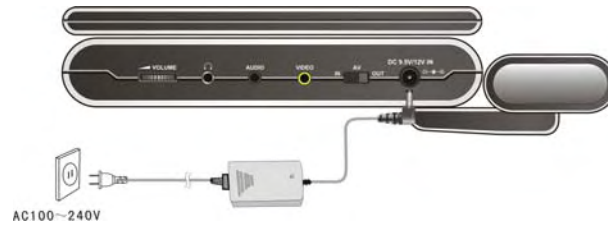


Fig.2

### **Charging the Battery Pack**

The battery pack must be attached to the DVD player to charge it by using the supplied AC Power Adapter.

1. Attach the battery pack to the DVD player.
2. Plug the supplied AC Power Adapter into the player's power jack marked with "DC 9.5/12V IN", which is located on right side of the DVD Player.
3. Plug the other end of the AC Power Adapter Cord into a household AC Outlet as shown below:



### **Detaching the Battery Pack**

When being turned off, the DVD Player still consumes some power in standby mode. This will eventually discharge the battery. If the DVD Player is not going to be used for long periods of time, the battery pack should be detached.

Make sure the power is turned off before detaching the Battery Pack.



1. Press and hold the Battery Release Tab in the direction of the arrow ① as shown in Fig.1 below.
2. Slide the Battery Pack gently towards the direction of the arrow ② as shown in Fig.1 below.
3. Carefully remove the Battery Pack from your player.



Fig.1

Fig.2

## Compatible Disc Formats

	DISC LOGO	DIAMETER	PLAYBACK TIME/ PLAYABLE SIDES
DVD		12cm	133 min (SS-SL)
			242 min (SS-DL)
			266 min (DS-SL)
			484 min (DS-DL)
		8cm	41 min (SS-SL)
			75 min (SS-DL)
82 min (DS-SL)			
150 min (DS-DL)			
CD		12cm	74 min
		8cm	20 min
JPEG		12cm	

Operation methods of some DVD discs are specified by the software manufacturer. Please follow the instructions of the disc.

## Care of Discs

### Holding Discs

When loading or removing discs, try not to touch their playing surfaces as the right figure.



### Cleaning

Fingerprints or stain on the disc may affect the quality of sound and picture. To clean your discs, use a soft clean cloth to wipe them. If necessary, moisten a soft cloth with diluted neutral detergent to remove heavy dirt or fingerprints.



Do not wipe in a circular direction as the figure in the right middle (concentric scratches on the disc groove tend to cause noise). Gently wipe from the center of the disc to the outer edge as the right figure.



## Playback Operation

PLEASE READ THE FOLLOWING INSTRUCTIONS CAREFULLY BEFORE USING YOUR DVD PLAYER FOR THE FIRST TIME.

**WARNING: Do not play poor quality discs to avoid damaging the lens.**



### Pre-operation

1. Connect the unit to power supply through the provided AC adaptor.
2. Switch "POWER ON/OFF" to "ON" to turn on the DVD player.
3. Push the OPEN switch on the unit to open the disc tray cover. Put a disc in the disc tray with printed side up. Close the disc cover. (See below)




4. The player will search disc and play it automatically.
5. Adjust the volume with the VOLUME control on the right panel to the desired level.
6. To turn the player off, switch the POWER ON/OFF on the left panel to OFF.

### Basic Operation

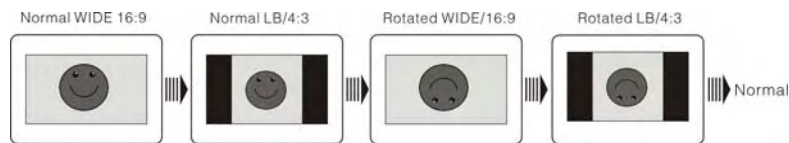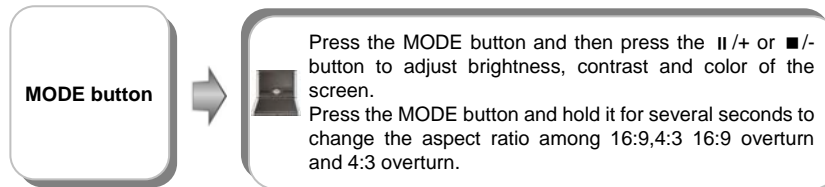


## Playback Operation

### DVD Playback

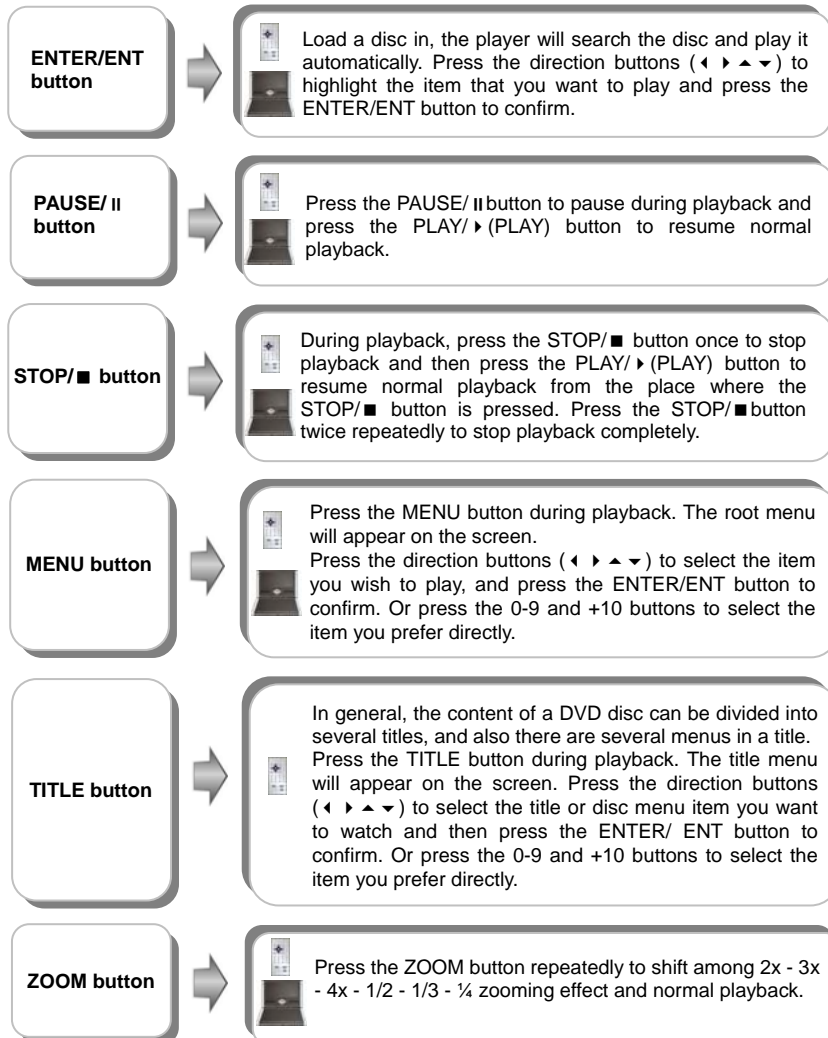




### DVD Playback (continued)

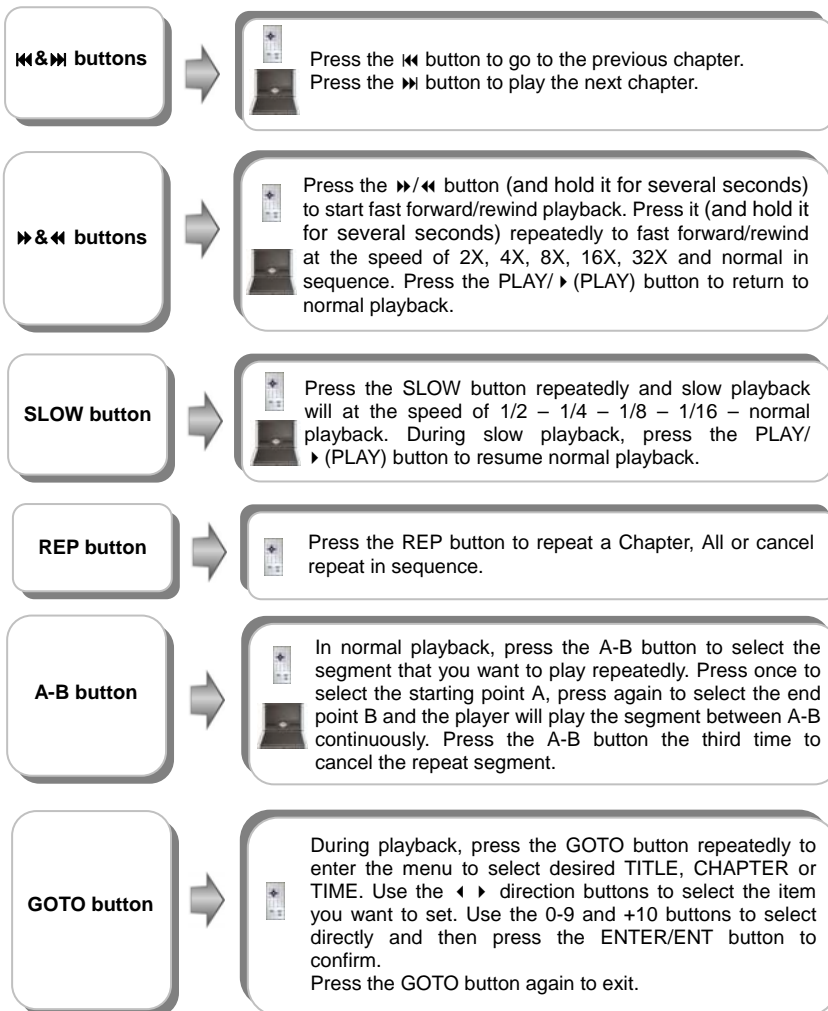





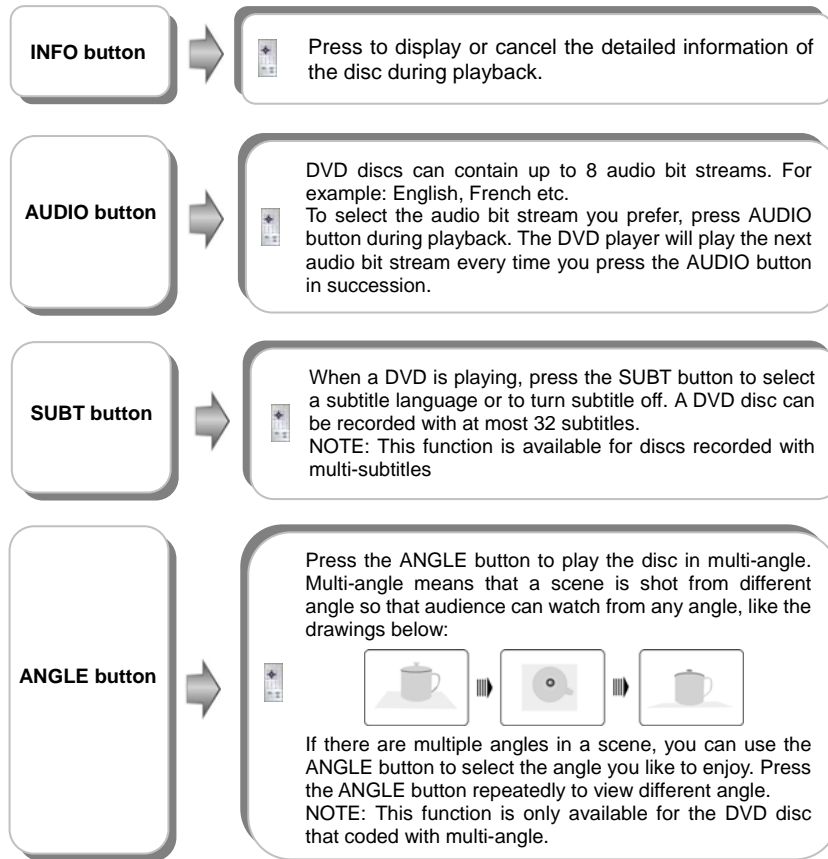



## Playback Operation

### DVD Playback (continued)



## CD Playback

<b>PAUSE/   button</b>	 <p>Press the PAUSE/   button to pause during playback. Press the PLAY/▶(PLAY) button to resume normal playback.</p>
<b>STOP/■ button</b>	 <p>During playback, press the STOP/■ button once to stop and then press the PLAY/▶(PLAY) button to resume normal playback from the place where the STOP/■ button is pressed. Press the STOP/■ button twice repeatedly to stop playback completely.</p>
<b>▶&amp;◀ buttons</b>	 <p>Press the ▶/◀ button (and hold it for several seconds) to play fast forward/rewind. Press it (and hold it for several seconds) repeatedly, the fast forward/rewind playback will be undergoing at the speed of 2X, 4X, 8X, 16X in sequence. Press the PLAY/▶(PLAY) button to return to normal playback.</p>
<b>◀&amp;▶ buttons</b>	 <p>Press the ◀ button to play the previous chapter. Press the ▶ button to play the next chapter.</p>
<b>GOTO button</b>	 <p>During playback, press the GOTO button repeatedly to enter the menu to select desired track, time track or disc time. Use the ◀ ▶ direction buttons to select the item you want to set. Use the 0-9 buttons to select directly and then press the ENTER/ENT button to confirm. Press the GOTO button again to exit.</p>
<b>INFO button</b>	 <p>Press the INFO button repeatedly to display or cancel detailed information during playback.</p>
<b>REP button</b>	 <p>Press the REP button repeated to repeat a Track, All or cancel repeat in sequence.</p>
<b>AUDIO button</b>	 <p>Press the AUDIO button to select desired sound effect. Press it repeatedly and the display will be as follows: <i>Left→Right→Stereo</i></p>

## Playback Operation


### **JPEG Playback**

#### **Pre-operation**

1. Load a JPEG in the disc tray, and the player will search and play disc automatically.
2. The screen displays the root folder with several subdirectories/subfolders. Use the  $\uparrow$ ,  $\downarrow$  buttons to select desired folder. Then press the ENTER/ENT or PLAY/▶ (PLAY) button to confirm your selection.
3. The screen enters the selected subfolder with several files. Use the  $\uparrow$ ,  $\downarrow$  buttons to select desired file. Then press the ENTER/ENT or PLAY/▶ (PLAY) button to confirm your selection.
4. Press the ◀ button to return to previous folder or directory.

Note: Many discs have other items besides pictures.

#### **Buttons Operation**

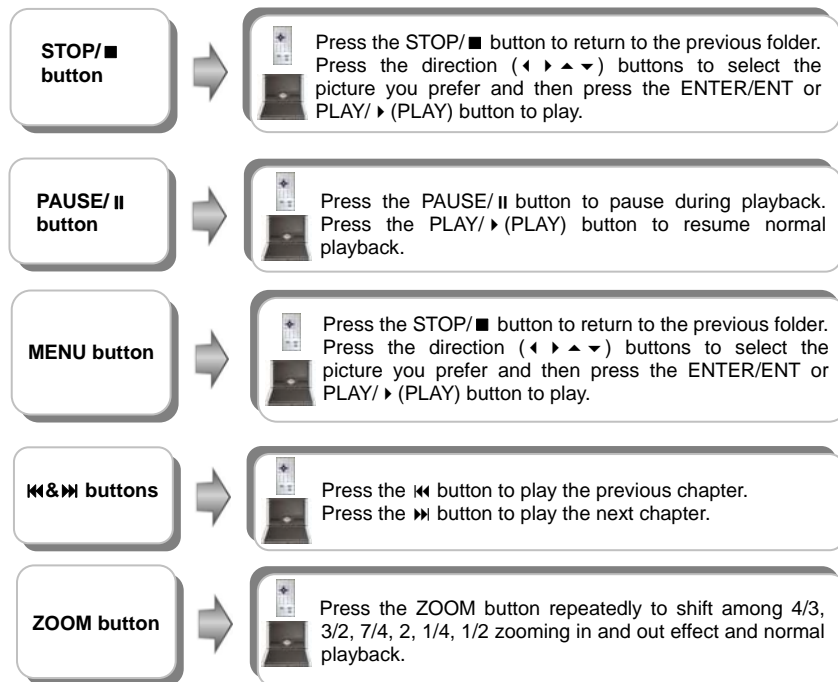

## JPEG Playback (continued)

 
**GOTO button** → During playback, press the GOTO button to select the desired file. Press the 0-9 buttons directly to select according to your preference.

**REPEAT Function** → Under folder status, press the ▶ button to enter REPEAT setup. Then press the ENTER/ENT button repeatedly to set the repeat mode and the screen will display as follows in sequence: *DISC* → *NORMAL* → *DISC* → *REPEAT* → *SHUFFLE* → *SINGLE TRACK* → *REPEAT TRACK* → *FOLDER NORMAL* → *FOLDER REPEAT*. Press the ◀ button to exit.


### Picture Rotate

While viewing a picture, use the direction buttons to rotate the picture.

Press the ▲ button to rotate the current picture clockwise:



Press the ▼ button to rotate the current picture anti-clockwise:



# System Setup


You can change the default settings of this unit to customize its performance to your own preference. Read this section to learn how to set up the system.

Note: the system should better be set up in the state that no disc is in the DVD drive or the unit is on the stop mode.


Follow the steps below to set up your system:

1. Press the SETUP button.
2. The setup menu will appear on the screen. It includes General Setup Page, Speaker setup page, Dolby digital setup, Video setup page and Preference page. You can exit the setup menu by pressing the SETUP button again at any time during setting.
3. Press the ◀ or ▶ (direction buttons) to select a sub-menu that you want to set up.
4. Press the ▲ or ▼ button to select the item that you want to set up in the sub-menu.

## General Setup Page

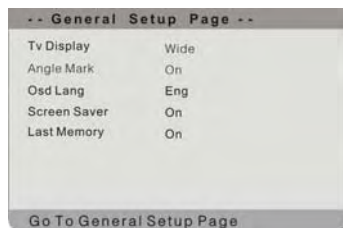

The items included in this sub-menu are shown as the left.

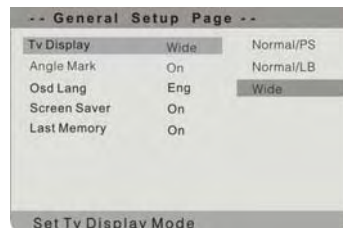


### **1.TV Display**

This item is used to set TV display mode. Press the ▲ or ▼ button to highlight this item. Press the ENT or ▶ button to enter the item. It includes Normal/PS, Normal/LB and Wide, Wide by default. Press the ▲ or ▼ button to choose the proper one. Press the ENT button to confirm your selection. Press the ◀ direction button to exit from this item.

Note: Select Normal/PS or Normal/LB when a 4:3 TV is connected.  
Select Wide when a 16:9 wide screen TV is connected.

# System Setup

## General Setup Page

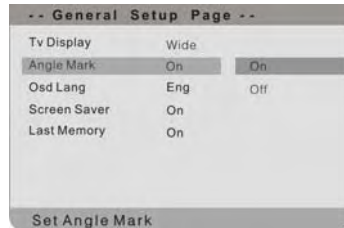


### 2.Angle Mark

This item is used to turn the Angle Mark on or off. Press the ▲ or ▼ button to highlight this item. Press the ENT or ► to enter the item. Press the ▲ or ▼ button to choose angle mark on or off. Press the ENT button to confirm your selection. Press the ◀ direction to exit this item.




### 3.OSD Language

This item is used to set the OSD (on-screen display) language. Press the ▲ or ▼ button to highlight this item. Press the ENT or ► to enter the setup of this item. It includes English, French, Spanish, German and Italian, English by Default. Press the ▲ or ▼ button to choose the proper one. Press the ENT button to confirm selection. Press the ◀ direction button to exit this item.

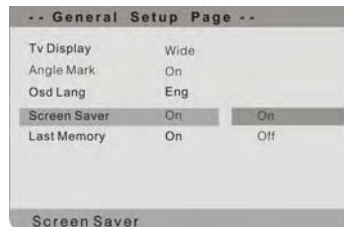

### 4.Screen Saver

This item is used to turn the screen saver on or off. Press the ▲ or ▼ button to highlight this item. Press the ENT or ► to enter the setup of this item. The default setting of this item is on. Press the ▲ or ▼ button to choose on or off. Press the ENT button to confirm selection. Press the ◀ direction button to exit this item.

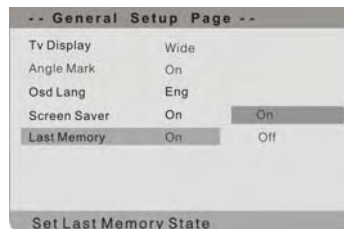


### 5. Last Memory


This item is used to set last memory state. Note: The last memory refers to resume playback from the point that you stopped last time. Press the ▲ or ▼ button to highlight this item. Press the ENT or ► to enter the item. The default setting of this item is on. Press the ▲ or ▼ button to choose on or off. Press the ENT button to confirm selection. Press the ◀ direction button to exit this item.

# System Setup

## Speaker Setup Page

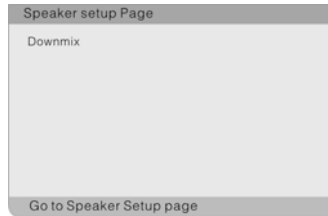


The item included in this sub-menu is shown as the left.

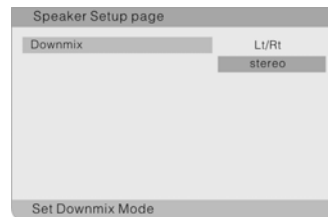


### **1. Downmix**

This item is used to set downmix mode. Press the  $\blacktriangle$  or  $\blacktriangledown$  button to highlight this item. Press the ENT or  $\blacktriangleright$  to enter the item. It includes Lt/Rt and stereo, stereo by default. Note: The function of Lt/Rt is to output mixed audio in the format provided by Dolby. The function of stereo is to output stereo signal. Press the  $\blacktriangle$  or  $\blacktriangledown$  button to choose the proper one. Press the ENT button to confirm your selection. Press the  $\blacktriangleleft$  direction button to exit this item.

## Dolby Digital Setup

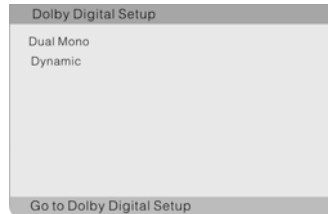

The items included in this sub-menu are shown as the left.

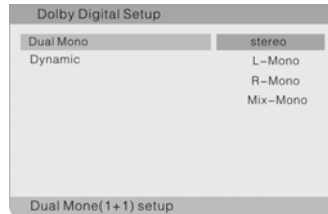


### **1. Dual Mono**

This item is used to set the channel output mode. Press the  $\blacktriangle$  or  $\blacktriangledown$  button to highlight this item. Press the ENT or  $\blacktriangleright$  to enter the item. It includes stereo, L-Mono, R-Mono and Mix-Mono, Stereo by default. Press the  $\blacktriangle$  or  $\blacktriangledown$  button to choose the proper one. Press the ENT button to confirm your selection. Press the  $\blacktriangleleft$  direction button to exit this item.



# System Setup

## Dolby Digital Setup

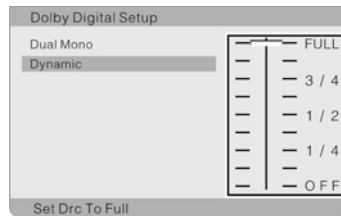

### **2.Dynamic**

This item is used to adjust linear dynamic compression rate to get different signal compression Effects.

Press the ▲ or ▼ button to highlight this item.

Press the ENT or ► button to enter the setup of this item. Then the item will show as the left.

Press the ▲ or ▼ to choose the proper level.

Press the ENT button to confirm your selection.

Press the ◀ direction button to exit this item.

## Video Setup Page



The items included in this sub-menu are shown as the left.



### **1.Sharpness**

This item is used to adjust the sharpness of the Screen.

Press the ▲ or ▼ button to highlight this item.

Press the ENT or ► button to enter the item.

It included High, Medium and Low, Low by default.

Press ▲ or ▼ button to choose the proper one.

Press ENT button to confirm your selection.

Press ◀ direction button to exit this item.



### **2. Brightness**

This item is used to adjust brightness level of the Screen.

Press the ▲ or ▼ button to highlight this item.

Press the ENT or ► button to enter the item.

Press the ◀ or ► button to adjust to desired level.

The default level is 00.

Press the ENT button to confirm your selection.

# System Setup

## Video Setup Page



### **3. Contrast**

This item is used to adjust contrast level of the Screen.

Press the ▲ or ▼ button to highlight this item.


Press the ENT or ► to enter the item.

Press the ◀ or ▶ button to adjust to desired level.

The default level is 00.


Press the ENT button to confirm your selection.

## Preference Page

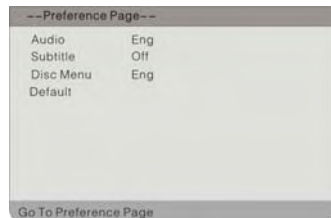

The items included in this sub-menu are shown as the left.

*NOTE: This sub-title can only appear in the state that no disc is in the DVD player.*

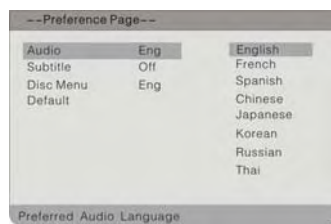

### **1. Audio**

This item is used to set the audio output language.

Press the ▲ or ▼ button to highlight this item.

Press the ENTER or ► button to enter the setup of this item.


The available languages are English, French, Spanish, etc.

Press the ▲ or ▼ button to choose the preferred Language.

Press the ENTER button to confirm your selection.

Press the ◀ button to exit from this item.

# System Setup

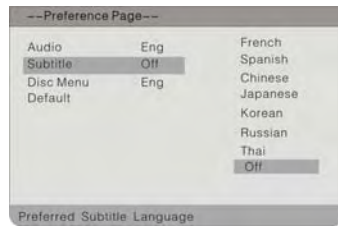


## 2. Subtitle

This item is used to set the language of subtitle. Press the ▲ or ▼ button to highlight this item. Press the ENTER or ► button to enter the setup of this item.

The available languages are French, Spanish, etc.

Press the ▲ or ▼ button to choose the preferred Language.

Press the ENTER button to confirm your selection.

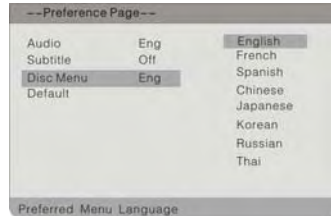

## 3. Disc Menu


This item is used to set the language of disc menu. Press the ▲ or ▼ button to highlight this item.

Press the ENTER or ► button to enter the setup of this item.

The available languages are English, French, Spanish, etc.

Press the ▲ or ▼ button to choose the preferred Language.

Press the ENTER button to confirm your selection. Press the ◀ button to exit from this item.

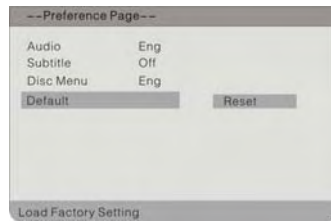

## 4. Default

This item is used to reset the unit.

Press the ▲ or ▼ button to highlight this item.

Press the ENTER button to reset.

Then all the settings of your unit are back to the original state.

# Definitions

## **Letterbox screen**

This refers to a screen on which the playback picture of wide-screen DVDs appears with black bands running along the top and bottom.

## **Pan & Scan screen**

This refers to a screen on which the playback picture of wide-screen DVDs is cut off at the left and right sides.

## **Title, Chapter (DVD)**

DVDs are divided into some large sections (titles) or some small sections (chapters). Each section is numbered: these numbers are called Title number or Chapter number.

Title 1	Title 2
Chapter1	Chapter 1
Chapter2	
.....	.....


## **Track (CD)**

CDs are divided into some sections (tracks). Each section is numbered; these numbers are called Track number.

Track 1	Track 2	Track 3	.....
---------	---------	---------	-------

## **JPEG**

JPEG is a common picture format that has small file size and low quality loss rate of picture. Hundreds of pictures can be stored in a disc in this format. In order to utilize real digital album, use film to make a Picture CD in JPEG format.

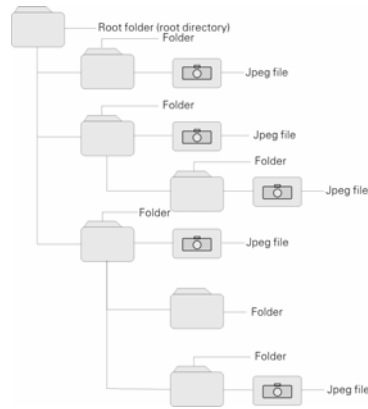

## Troubleshooting

If you suspect there is something wrong with the DVD player, immediately turn the power off. Disconnect the power connector and check that there is no smoke or excessive heat coming from the unit.

Never open or try to repair the unit yourself. There are no user serviceable parts inside.

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
The player cannot play.	The disc cover may not be closed.	Close the disc cover.
	There may be no discs in the DVD drive.	Put a disc in to the DVD drive.
	The disc may not be put in in the right way.	Put the disc in with the label side up.
	The disc may be dirty or warped.	Clean or change the disc.
	The player's region code may not as the same as the region code of DVD disc.	Make sure the player's region code is the same as the region code of DVD disc.
	There may be water on the lens.	Remove the disc and keep the player being powered off for at least two hours.
There is no sound .	The system connection may be not correct.	Connect the system correctly.
	The speakers may be turned down.	Turn on the speaker.
	The sound setup of the DVD disc may be not correct.	Setup the sound of the DVD correctly.
	The disc may be dirty or warped.	Clean or change the disc.

# Troubleshooting

PROBLEM	POSSIBLE CAUSE	POSSIBLE SOLUTION
There is no picture.	The LCD may be not in correct video mode.	Choose the correct video mode.
	The system connection may be not correct.	Connect the system correctly.
	The unit may be not in AV out mode.	Switch AV IN/OUT on the right panel to OUT.
Poor AV performance.	The disc may be dirty or warped.	Clean or change the disc.
The remote control does not work	There may be some obstructions between the remote control and the player.	Remove the obstruction between the remote control and the player.
	The remote control may not be pointed at the player.	Point the remote control at the player directly.
	The batteries of remote control may not be inserted correctly.	Make sure the polarity of each battery is correct.
	The batteries of remote control may be out of power or weak.	Replace the batteries.

**Other possibilities:**

Static or other external interference may cause the player function abnormally. In order to recover normal status, please unplug the power-supply cord and then plug it into the outlet again to reset the player. If the problems still exist, please cut off the power supply and consult your service center or the qualified technician.

## Specifications

TFT screen size	7 inches (16: 9)
Screen resolution	480x234
Laser Wavelength	780/650nm
Video System	NTSC
Frequency Response	20Hz-20kHz $\pm 2.5$ dB
Audio Signal-to-noise Rate	$\geq 85$ dB
Audio distortion + noise	$\leq -70$ dB (1kHz)
Channel Separation	$\geq 70$ dB (1kHz)
Dynamic Range	$\geq 80$ dB (1kHz)
Audio Out	Out Level $2V_{\pm 1.0}^{0.2}$ , Load $10k\Omega$
Video Out	Out Level $1V_{P-P} \pm 0.2$ , Load $75\Omega$ Unbalanced Negative
Power	AC100~240V (50/60Hz)
Dimensions	202mm x 150mm x 40mm
Weight	Approximate 0.75 Kg

**DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE**

Manufactured under license from Dolby Laboratories.  
“Dolby” and the double-D symbol are trademarks of Dolby Laboratories.  
Confidential unpublished works. © 1992 -1997 Dolby Laboratories, Inc.  
All rights reserved.

For service, support and warranty information, visit [www.polaroid.com](http://www.polaroid.com) or in the US call 1-866-289-5168 or in Canada call 1-866-301-7922.

"Polaroid" and "Polaroid and Pixel" are trademarks of Polaroid Corporation, Waltham, MA, USA.



## Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>