

7" Portable DVD Player: Extra Screen PDU-2729





User's Manual



Important Safety Instructions



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USE-SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

	The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated “dangerous voltage” within the product’s enclosure that may be of sufficient magnitude to constitute a risk of electrical shock.
	The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.



Caution: Laser radiation when open. Do not stare into beam.

CAUTION: USE OF ANY CONTROLS, ADJUSTMENTS, OR PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.

Power Supply:

Connect the supplied power adapter to the side of the DVD player in the slot marked “Power In”. Plug the two-prong end of the power cord to an AC100-240V outlet. If you have difficulty inserting the plug, turn it over and reinsert it; if the unit will not be used for a long time, disconnect the power from the outlet.

Note: before plugging in the power cord to an AC outlet, make sure that all the connections have been made.

Important Safety Instructions

CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.

Refer to service manual for servicing instructions.

1. Read these instructions.
2. Keep these instructions.
3. Heed all warnings.
4. Follow all instructions.
5. Do not use near water.
6. Clean only with dry cloth.
7. Do not block any ventilation openings. Maintain well-ventilated conditions around the product. Do not place on bed, sofa, or anything that blocks ventilation. Install in accordance with the manufacturer's instructions.
8. Do not install near any heat sources such as radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
9. Do not defeat the safety purpose of the polarized or grounding-type plug. A polarized plug has two blades with one wider than the other. A grounding-type plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit in your outlet, consult an electrician for replacement of the obsolete outlet.
10. Protect the power cord from being walked on or pinched particularly at plugs, convenience receptacles, and at the point where they exit the apparatus.
11. Only use attachments/accessories specified by the manufacturer.
12. Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer or sold with the apparatus. When a cart is used, use caution when moving the car/apparatus to avoid injury from tip-over.
13. Unplug this apparatus during lightening storms or when unused for long periods of time.
14. Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, which as power-supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
15. Apparatus shall not be exposed to dripping or splashing and no objects filled with liquids such as vases, shall be placed on the apparatus.



Note: Do not touch the color TFT LCD screen by hand directly.

Important Safety Instructions

Copyright Protection

This product incorporates copyright protection technology that is protected by U.S. patents and other intellectual property rights. Use of this copyright protection technology must be authorized by Macrovision, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision. Reverse engineering or disassembly is prohibited.

IMPORTANT FOR LASER PRODUCTS

- 1. CLASS 1 LASER PRODUCT**
- 2. DANGER:** Visible laser radiation when open and interlock failed or defected. Avoid direct exposure to beam.
- 3. CAUTION:** Do not open the top cover. There are no user serviceable parts inside the unit. Leave all servicing to qualified personnel.

Region Code Information

DVD players and discs are coded by region. If the region number described on the DVD disc does not correspond to the region number of this product, this product cannot play the disc.

The region code of this unit is 2.

WEEE

 
This product contains electrical or electronic materials. The presence of these materials may, if not disposed of properly, have potential adverse effects on the environment and human health. Presence of this label on the product means it should not be disposed of as unsorted waste and must be collected separately. As a consumer, you are responsible for ensuring that this product is disposed of properly. To find out how to properly dispose of this product, please go to **www.polaroid.com** and click on “**Company**” or call the customer service number for your country listed in the instruction manual.



Contents


Important Safety Instructions	2
View of Front Panel	6
View of Side Panel	7
System Connections	8
Power Supply	9
Troubleshooting	10
Specifications	11

View of Front Panel

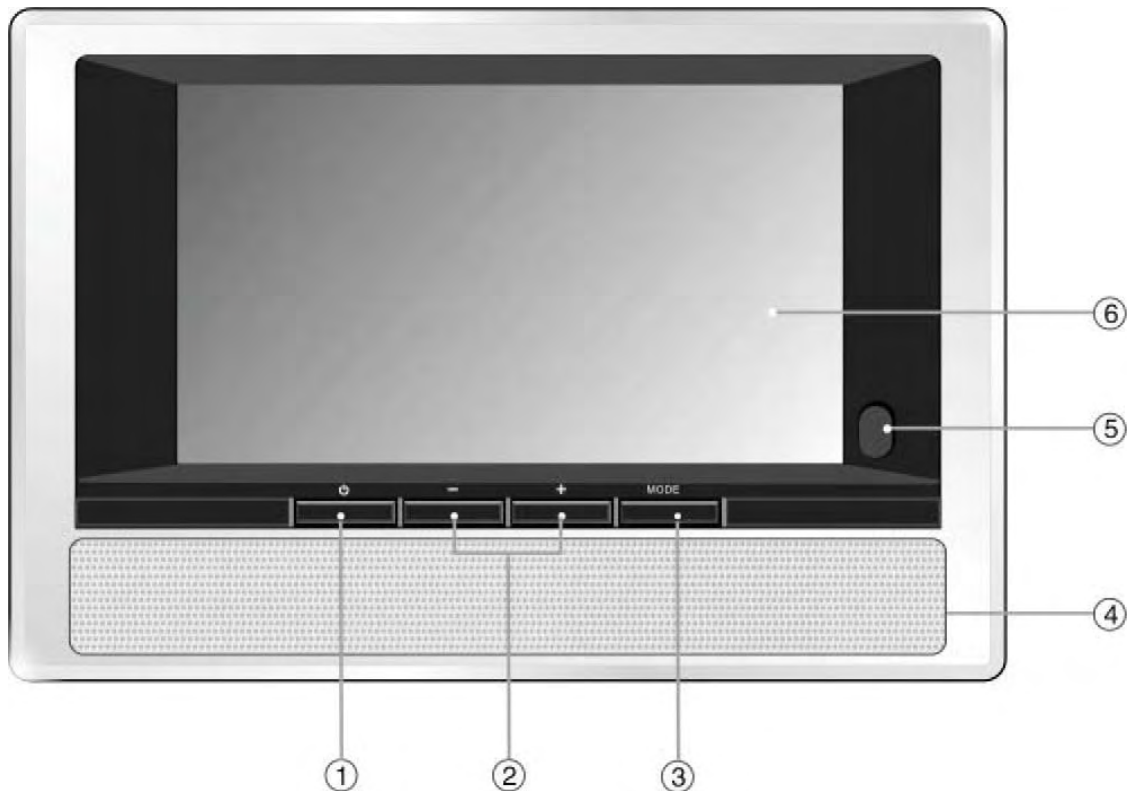

1. **POWER button:** press to access or to exit the standby mode
2. **+/- button:** press to adjust the value of brightness and color
3. **MODE button:** press to change the brightness and color level; press and hold 1-2 seconds to change the aspect ratio
4. **Speaker**
5. **Power indicator:** turns red when in standby mode, does not light when powered on
6. **LCD screen**

 View of Side Panel

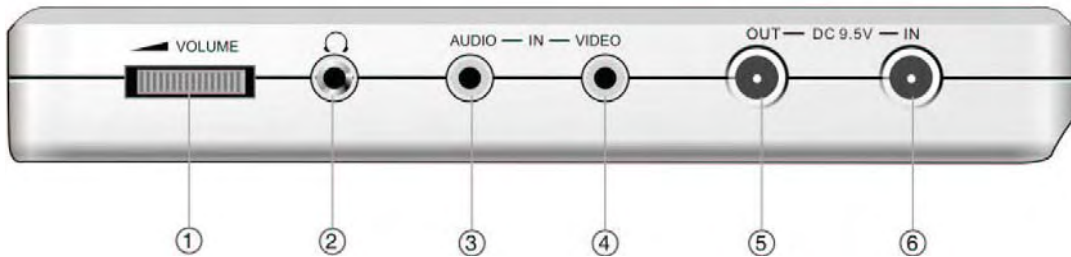


- 1. Volume control:** used to adjust the volume of the headphones and speaker
- 2. Headphone jack:** used to connect headphones for private listening. When the headphones are connected to this jack, the unit speaker automatically turn off.
- 3. Audio input jack:** used for audio input
- 4. Video input jack:** used for audio output
- 5. DC 9.5V output jack:** used for output power to the master DVD player
- 6. DC 9.5V input jack :** used to connect the power and car adapters

System Connections

Connecting to the Master Unit

 
1. Make sure that the master DVD player, extra screen, and any other electrical equipment are off before connecting.
2. Connect the AC adapter to the extra screen and connect the extra LCD screen with the master DVD player using the power supply cord to supply power to the master screen.
3. Use the AV cables to connect the extra screen with the master screen so that the master screen can input audio and video to the extra screen.

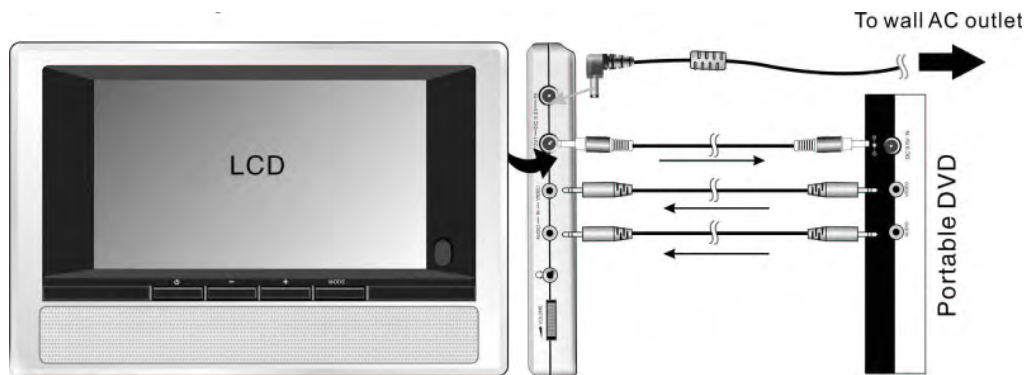

Note: the AC adapter must connect to the extra screen or it will not have power.

Connecting the Headphones

 
- Connect the headphones to the right side of the player for private listening.
- When the headphones are connected, the speakers will automatically turn off.

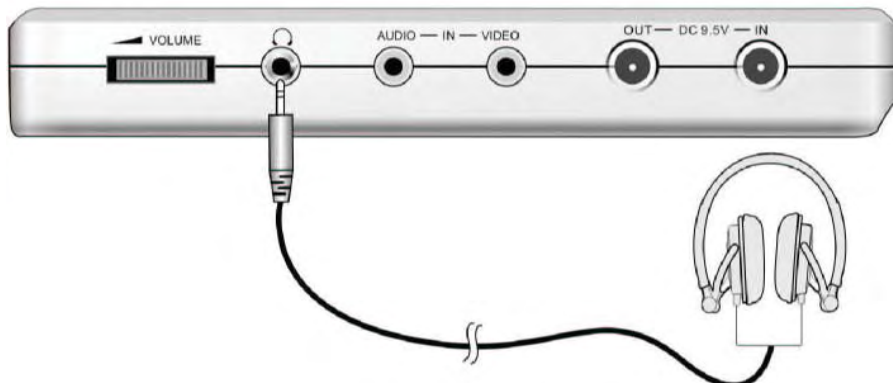

Power Supply

Using the AC Adapter

 1. Connect the AC adapter to the jack marked DC 9.5 IN on the right side of the extra screen.
2. Plug the two-prong end of the power cord into a grounded electrical outlet.

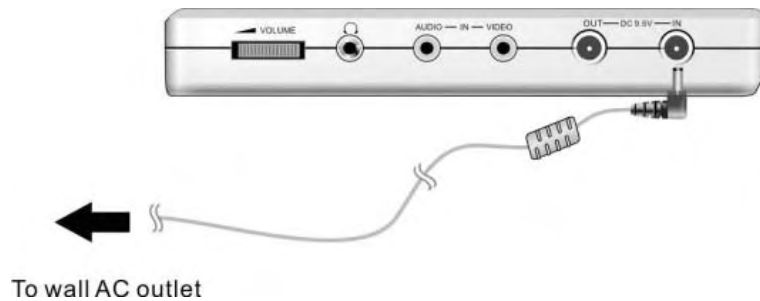


Notes:

- Turn the player's power off before unplugging.

Using the Car Adapter

The player is supplied with a car adapter for powering the unit and charging the battery in a vehicle.

 Connect the car adapter power plug to the unit's power jack and the other end to the vehicle's 12V accessory/cigarette lighter socket.

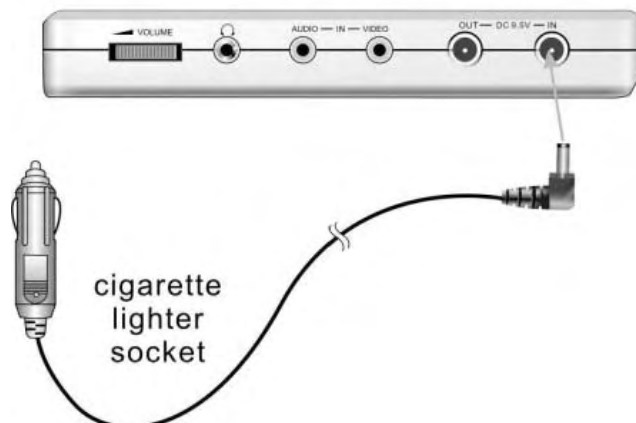

Attention:

- Do not operate the unit or view video software while driving a vehicle.
- Place the unit in a proper viewing position.
- Disconnect the player from the car adapter when starting the vehicle.

Troubleshooting

If you suspect there is something wrong with the DVD player, immediately turn off the power. Disconnect the power connector and check that there is no smoke or excessive heat coming from the unit.

Never open or try to repair the unit yourself. There are no user serviceable parts inside.

SYMPTOM	HOW TO CHECK
There is no sound	<ul style="list-style-type: none">• Make sure the system connections are correct.• Make sure the speakers are turned on.• Make sure the audio source is correct.
There is no picture	<ul style="list-style-type: none">• Make sure the LCD screen is on and in correct video mode.• Make sure the system connections are correct.• Make sure the video source is correct.

Other possibilities: Static or external interference may cause the player to function abnormally. In order to recover normal status, please unplug the power-supply cord and then plug it into the outlet again to reset the player. If the problems still exist, please cut off the power supply and consult your service center or qualified technician.

Specifications

TFT Screen Size	7 inches
Video System	PAL
Frequency Response	20Hz-20kHz \pm 2.5dB
Power	AC 100~240V (50Hz)
Power Consumption	<25W
Dimensions	205mm x 153mm x 41mm
Weight	Approximately 1.12kg

DESIGN AND SPECIFICATIONS ARE SUBJECT TO CHANGE WITHOUT NOTICE

For service, support and warranty information, visit www.polaroid.com.

“Polaroid” and “Polaroid and Pixel” are trademarks of Polaroid Corporation, Waltham, MA, USA.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>