



User Guide

www.polaroid.com

Polaroid and Polaroid & Pixel are trademarks of PLR IP Holdings, LLC, used under license. PLR IP Holdings, LLC does not manufacture this product or provide any Manufacturer's Warranty or support.

Included



Digital TV



Remote Control



Antenna



A/V Cables



 
AC Adaptor



DC Car Charger





2 - (AAA) Batteries

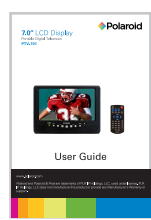

User Guide

Location of controls

  
1. LCD screen
2. Dual speakers
3. [Standby/Power] indicator
4. [MENU] button
5. [CH-] button
6. [CH+] button
7. [AUTO/OK] button
8. [VOL-] button
9. [VOL+] button
10. [MODE] button
11. Remote sensor
12. RF IN antenna jack
13. VIDEO IN jack
14. AUDIO IN L jack
15. AUDIO IN R jack
16. Headphone jack
17. Power [ON/OFF] switch
18. DC 9-12V IN jack
19. TV stand (pull)
20. Battery compartment

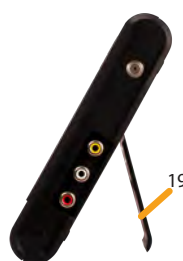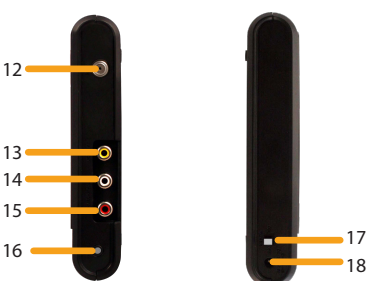


Installing the batteries

1. [MUTE] button
2. [PICTURE] button
3. [MENU] button
4. [SLEEP] button
5. [◀] left button
6. Numeric buttons
7. [↶] previous channel button
8. [VOL-] volume down button
9. [POWER] button
10. [MTS] sound field mode button
11. [ZOOM] display mode button
12. [EXIT] button
13. [EPG] program guide button
14. [▲] up button
15. [▶] right button
16. [ENTER] button
17. [▼] down button
18. [TV/AV] source button
19. [INFO] program information button
20. [CH+] channel up button
21. [CH-] channel down button
22. [] channel program button
23. [VOL+] volume up button

 Remote control

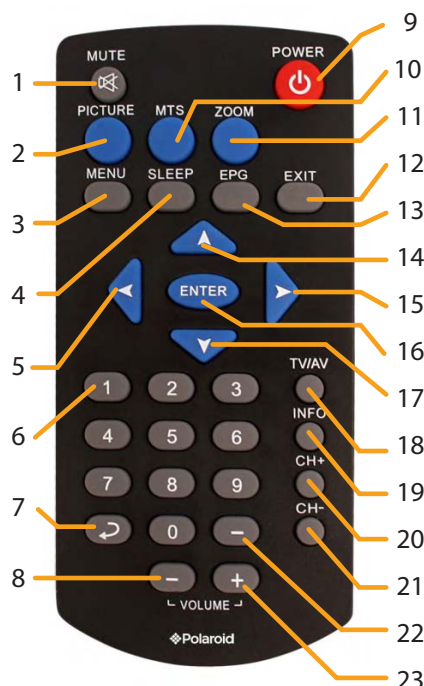

 1. Open the battery cover.
2. Place the 2 (AAA) batteries (included) into the compartment. Be sure the positive and negative terminals are positioned correctly as shown.
3. Close the battery cover.

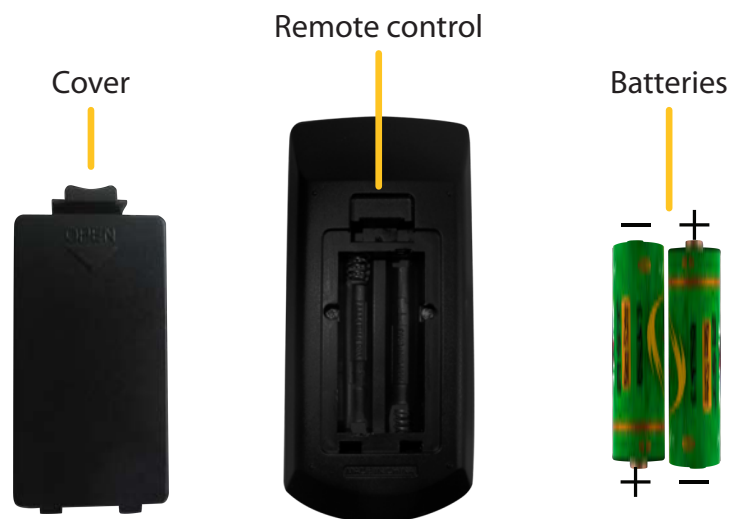

Getting started

Charging

This television contains a built-in rechargeable battery. You may power the television by charging its internal battery or you may power the television by using the included AC adaptor. Follow the instructions below to charge the television properly.

1. Connect the AC adaptor to the **DC 9-12V IN** jack on the TV and plug it into a wall receptacle.
2. Charging time depends on whether the TV is ON during charging or in standby mode.
 - If the TV is ON – the charge time is approximately 6 hours.
 - If the TV is in standby mode – the charge time is approximately 4 hours.
3. When battery strength is low, the TV will display the following icon on the screen: , this means it is time to recharge the battery.
4. The [Standby/Power] indicator light on the front of the TV turns green when:
 - The power cord is connected, and the TV is fully charged.
 - The TV is running on battery power.

Note: Use the included car charger to charge the TV in a car or boat.

Connecting the antenna

1. With the antenna in the down position, screw it into the **RF IN** antenna jack on the TV.
2. For the best reception, stretch the antenna out to its fullest length before scanning for channels.



Note: The antenna must be connected to receive the highest amount of channels available during channel scanning.

Scanning for channels

The first time the television is turned on you must scan for available channels. You should also scan for available channels whenever you are in a new area, or when reception is bad.

1. Make sure that the antenna is connected to the TV and slide the power [ON/OFF] switch to the **ON** position.
2. When you turn on the TV for the first time, the following screen will be displayed:
3. If this screen does not appear, then press the [AUTO/OK] button on the TV.
4. Press the [VOL+] button to select "Yes" and press [AUTO/OK] button to confirm.
5. The TV will start scanning for available channels and store them into memory.

Note: Do not move or unplug the TV while scanning for channels/programs as this will interrupt the scanning process and you will not receive all possible channels/subchannels.

Scanning by remote control

1. Press the [MENU] button on the remote and press the [▶] button to select:
2. Press the [▼] button to select "Antenna".
3. Press the [▶] button to select "Air" or "CATV" (cable TV), depending on the type of connection.
4. Press the [▼] button to scroll to "Auto Scan" and press the [▶] button twice. The TV will start scanning for available channels and store them into memory.

Note: Do not move or unplug the TV while scanning for channels/subchannels.

Note: This television is not meant to be used in a moving vehicle. ATSC Digital tuners are not capable of receiving a signal when in motion.

Basic operation

Adjusting the volume

The volume can be adjusted from 0-100.

 
1. Press the **[VOL+]** button on the TV or the remote to raise the volume.
2. Press the **[VOL-]** button on the TV or the remote to lower the volume.
3. Press the **[MUTE]** button on the remote to mute the TV sound. Press the **[MUTE]** button again to restore sound.

Choosing picture mode

1. Press the **[PICTURE]** button on the remote to enter the picture mode options.
2. Keep pressing the **[PICTURE]** button to choose between the following picture modes: **Standard, Dynamic, Soft** or **Personal**.

Choosing picture size

1. Press the **[ZOOM]** button on the remote to enter the zoom mode options.
2. Keep pressing the **[ZOOM]** button to choose between **WIDE** and **NORMAL** zoom modes.

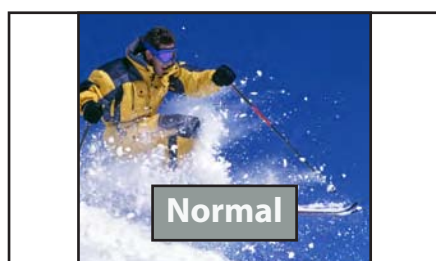

3

Channel selection

Note: The TV's receiver stores up to 69 channels, and each channel can store up to 8 subchannels.

1. Press the **[CH+]** button to play the next channel/subchannel.
2. Press the **[CH-]** button to play the previous channel/subchannel.
3. To select a specific channel using the remote, use the numeric keypad.



Note: If a channel has more than one subchannel associated with it (for example channel 16.4), press the **[1]** button then press the **[6]** button then press the **[-]** button then press the **[4]** button.

Sleep timer

1. Press the **[SLEEP]** button on the remote to enter the sleep timer mode options.
2. Keep pressing the **[SLEEP]** button to choose between the following sleep timer options:

OFF / 15 / 30 / 60 / 90 / 120 / 180 / 240 minutes

 
3. The TV will go into standby mode after the chosen time allotment. Choose **"OFF"** to disable the sleep timer and return to normal viewing.

Changing the TV settings

You can change the settings on the TV by entering the different settings menus and using the following procedure to navigate them:

1. Press the **[MENU]** button.
2. Use the **[<]** or **[>]** button on the remote or the **[VOL-]** or **[VOL+]** button on the TV to scroll left or right to select the preferred settings menu.
3. Press the **[▲]** or **[▼]** button on the remote or the **[CH+]** or **[CH-]** button on the TV to scroll up or down on the menus to select the desired settings.
4. Press the **[<]** or **[>]** button on the remote or the **[VOL+]** or **[VOL-]** button on the TV to scroll left or right to change to the desired settings.
5. Press the **[MENU]** button to confirm the new settings and return to the menu options.
6. Press the **[EXIT]** button to close the settings menu.

There are 5 different settings menus

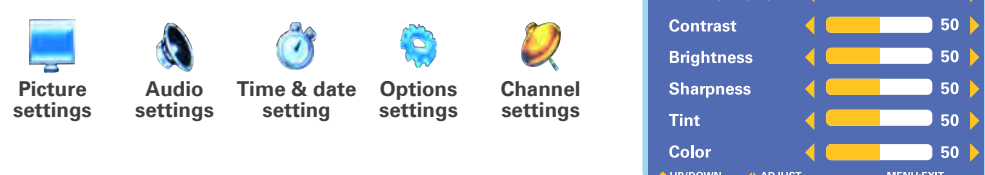


The TV will remember the settings until they are changed, even if the player is set to standby mode. To restore the settings to factory default, scroll right to the **"Options Settings"** menu, then scroll down to **"Restore Default"**, and scroll right to open the options menu and select **"Yes"** to confirm (you will have to scan for channels again after restoring default settings).

Information Guide

You can access the information guide to display current, past and future programming information.

 1. Press the **[INFO]** button on the remote to bring up the current program information:
2. Press the **[EPG]** button on the remote to bring up the Electronic Program Guide to view information on past, current or future programming on the selected channel/program.
3. Use the **[<]** or **[>]** button to scroll through past or future program information.
4. Use the **[▲]** or **[▼]** button to scroll through different channel information.

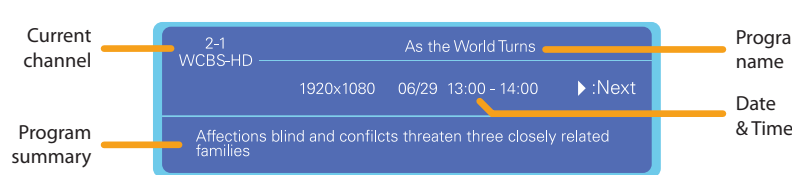

Note: Program information and/or availability may vary by area depending on local service providers.

4

External connections

Cable TV

 
1. Disconnect the external antenna from the unit and attach the coaxial cable antenna to the **RF IN** antenna jack.




2. Press the **[AUTO/OK]** button on the TV to enter the channel scanning screen.
3. Press the **[VOL+]** button to select **"Yes"** and press the **[AUTO/OK]** button to confirm. The TV will start scanning for available cable channels and store them into memory.
4. To scan for channels with the remote, connect the cable antenna to the **RF IN** jack and refer to **"Scanning by remote control"**.

External DVD or VCR

1. Using the supplied A/V Cable, plug the Yellow (Video), Red (Audio R), and White (Audio L) plugs into the corresponding **"OUT"** jacks on the external source.
2. Plug the other ends into the corresponding **"AV IN"** jacks on the side of the TV.

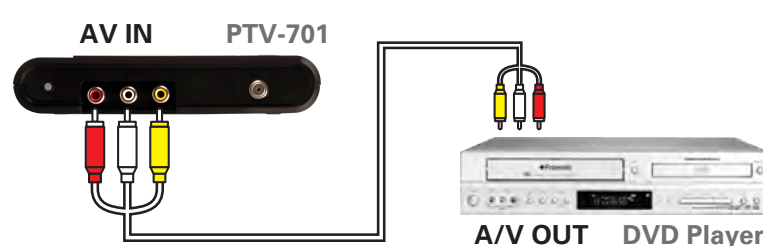

 3. Press the **[TV/AV]** button on the remote or the **[MODE]** button on the TV to switch the input to **"AV IN"**.

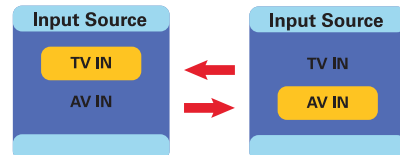

Troubleshooting

- **No picture and sound** – Check that the AC adaptor is properly attached and plugged in, and check that the battery is charged. Make sure that the TV input is set to TV.
- **No picture** – The TV reception signal might be weak. Try scanning for channels again or move the TV to a different location and scan for channels.
- **No sound** – Check that the volume is turned up and the mute function is not on and that headphones are not plugged into the TV. Also, the signal might be weak, try moving the TV to a new location and scanning for channels again.
- **Poor reception** – Try adjusting the antenna or scanning for channels again.
- **Dark or blurred picture** – Try adjusting the brightness and contrast in the picture settings menu, also check that the battery is charged enough.
- **Unclear or unstable picture** - Try adjusting the antenna or scanning for channels again.
- **Snow in picture** – Most likely a power interference issue such as radio frequency, power lines, etc. is interfering with the reception. Try adjusting the antenna or moving the TV to a different location and scanning for channels again.

 
5

Safety precautions

WARNING

TO PREVENT FIRE OR SHOCK HAZARD, DO NOT USE THE PLUG WITH AN EXTENSION CORD, RECEPTACLE OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. TO PREVENT ELECTRICAL SHOCK, MATCH WIDE BLADE PLUG TO WIDE SLOT, FULLY INSERT.

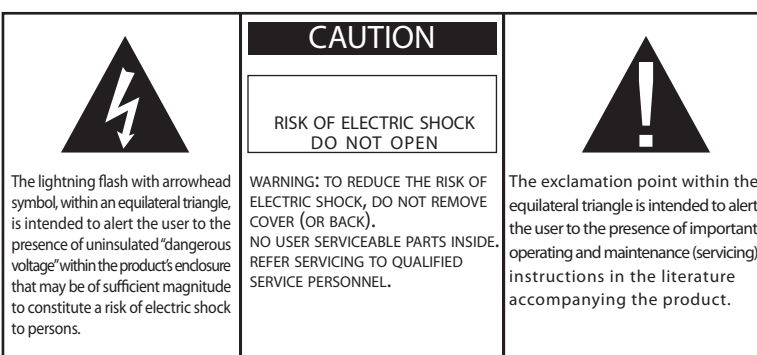

CAUTION

**RISK OF ELECTRIC SHOCK
DO NOT OPEN**

WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

The exclamation point within the equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

FCC Part 15:

This equipment has been tested and found to comply with the requirements for a Class B digital device under Part 15 of the Federal Communications Commission (FCC) rules. These requirements are intended to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Re-orient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

Do not attempt to repair or modify this equipment.

Warning: Changes or modifications to this equipment not expressly approved by the party responsible for compliance could void the user's authority to operate the equipment.

"This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) this device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation."

PLR IP Holdings, LLC, its licensees and affiliates, fully supports all electronic waste initiatives. As responsible stewards of the environment, and to avoid violating established laws, you should properly dispose of this product in compliance with all applicable regulations, directives or other governance in the area where you reside. Please check with local authorities or the retailer where you purchased this product to determine a location where you can appropriately dispose of the product.

You may also go to [HYPERLINK "http://www.polaroid.com"](http://www.polaroid.com) www.polaroid.com and reference About / Electronic Recycling to learn more about the specific laws in your area and to locate a collection facility near your home.

If your electronic device has internal memory on which personal or other confidential data may be stored, you may want to perform a data sanitization process before you dispose of your device to assure another party cannot access your personal data. Data sanitization varies by the type of product and its software, and you may want to research the best sanitization process for your device before disposal. You may also check with your local recycling facility to determine their data sanitization procedures during the recycling process.

Limited Warranty

This Product is supplied and distributed new by AIT, Inc. ("AIT") to the original consumer purchaser and is warranted by AIT against defects in material and workmanship for a period of one year from your date of purchase ("Warranty"). In the unlikely event that this product is defective, or does not perform properly, you may within one year from your original date of purchase return it to the authorized service center for repair or exchange.

TO OBTAIN WARRANTY SERVICE:

- Provide proof of the date of purchase within the package (Dated bill of sale)
- Prepay all shipping costs to the authorized service center, and remember to insure your return.
- Include a return shipping address (no P.O. Boxes), a telephone contact number, and the defective unit within the package.
- Describe the defect or reason you are returning the product. Your product will be repaired or replaced, at our option, for the same or similar model of equal value if examination by the service center determines this product is defective. Products received damaged as a result of shipping, will require you to file a claim with the carrier.

The shipping address of the authorized service center is:

AIT, Inc.
ATTN: Returns Department
14-C 53rd Street
Brooklyn, NY 11232

IN NO EVENT WILL AIT, ITS MANUFACTURERS, DISTRIBUTORS OR PLR IP HOLDINGS, LLC BE LIABLE FOR ANY INCIDENTAL, DIRECT, INDIRECT, SPECIAL, PUNITIVE OR CONSEQUENTIAL DAMAGES (SUCH AS, BUT NOT LIMITED TO, DAMAGES FOR LOSS OF PROFITS, BUSINESS, SAVINGS, DATA OR RECORDS) RELATED TO THIS PRODUCT. EXCEPT AS STATED HEREIN, NO OTHER WARRANTIES SHALL APPLY.

Should you have any questions or problems concerning this product, please contact our customer service department at:

Customer Support:
☎ 1-877-768-8483 (Toll Free)
✉ polaroidsupport@southern telecom.com

Monday - Thursday: 9AM - 5PM (EST)
Friday: 9AM - 3PM (EST)

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>