

Location of controls

1 Microphone
2 Headphone Jack
3 DC Input
4 Micro USB port
5 Micro SD Slot
6 TV Out

Basic operation

Charging the battery:

Connect the tablet to a wall outlet using the included AC adapter.

Turning on the tablet

1. Insert the card as shown below, into the card slot until it clicks and locks into place.
2. Press and hold the Q button until the startup screen appears.

Unlock (enter) the tablet

Slide the "Lock icon" to the right.

Lock (standby) the tablet

To lock or unlock the tablet, briefly press the Q button (Lock the device to conserve the battery).

Turning off the tablet

For quick power-off, you can select the "Power" button on the Polaroid Settings widget to turn off the tablet.

Conserving Internal Memory

It is strongly recommended to purchase and install a Micro SD card before transferring or downloading media files.

Inserting a Micro SD card

To install a Micro SD card into the tablet:

1. Insert the card as shown below, into the card slot until it clicks and locks into place.
2. Once the card is mounted, the card icon appears on the Status Bar.
3. To access the Micro SD card, select "File Manager" from the Apps screen.

Tip: Transfer and store media files such as music, pictures and video on to a Micro SD card and avoid placing these types of files in the internal memory of the tablet; this will conserve the internal memory and allow you to download more apps.

Note: A card can only be inserted one way; do not use force when inserting the card.
* Make sure to unmount the card before taking it out of the tablet.

Connecting the tablet to a PC or Mac

1. Connect the included USB cable to the "USB" port of the tablet and USB port of the computer.

2. The "USB connected" screen appears; select "Turn on USB storage" screen, then select "OK".

3. The "Removable Disk" window appears if a Micro SD card is inserted.

Minimum system requirements:
• Windows: 2000, XP, Vista, 7
• Mac OS X: 10.5 or later (with USB connector)

Conserving Internal Memory!

Transfer media files to "Removable Disk" (Micro SD card)

Tip: Organize your media (pictures, videos and music) by creating folders such as "Pictures", "Videos" and "Music" on the Micro SD card as shown below.

File Manager: To view, open, copy or delete files on the internal memory of the tablet or inserted Micro SD card, select "File Manager" on the Apps screen.

Copy, move or delete a file or folder:
1. Press and hold a file or folder until the options window appears, then select an option from the options window.
2. Select a file or folder.
3. If you select "Copy" or "Move", press and hold on a folder and select "Paste into folder" to copy the file there.

Connect your tablet with a Bluetooth device
1. Open the Settings application.
2. Select Bluetooth.
3. If the device you want to pair with isn't in the list, make it discoverable (see the documentation that came with your device to learn how to make it discoverable).
4. Select Search for devices (If your tablet stops scanning before you make the other device discoverable, select Search for devices again).
5. Select the device you are trying to connect to. If you're prompted to enter a passcode, try entering 0000 or 1234 (the most common passcodes, or consult your device's documentation).

Unpair a Bluetooth device

You can use the Bluetooth in your tablet to connect to various Bluetooth devices such as speakers and headphones.

Turn Bluetooth on or off
1. Open the Settings application.
2. Toggle to turn Bluetooth ON or OFF.

Home screen

On the Home screen, you can place app shortcuts and widgets.

Home screen (left) Polaroid Media widget

Home screen (center) Polaroid Home widget

Swipe the screen left or right to access other Home screens.

Home screen (right) Polaroid Settings widget

Access apps & widgets screen

Press **Home** to access the Apps & widgets screens.

Placing apps & widgets on the Home screen

Press & hold an app or widget to place it on one of the Home screens.

Removing shortcuts or widgets

Press and hold the app or widget and slide it as shown below.

You can always bring the widgets back from the Widgets screen.

Conserving Internal Memory!

Transfer media files to "Removable Disk" (Micro SD card)

File Manager: To view, open, copy or delete files on the internal memory of the tablet or inserted Micro SD card, select "File Manager" on the Apps screen.

Copy, move or delete a file or folder:
1. Press and hold a file or folder until the options window appears, then select an option from the options window.
2. Select a file or folder.
3. If you select "Copy" or "Move", press and hold on a folder and select "Paste into folder" to copy the file there.

Connect your tablet with a Bluetooth device
1. Open the Settings application.
2. Select Bluetooth.
3. If the device you want to pair with isn't in the list, make it discoverable (see the documentation that came with your device to learn how to make it discoverable).
4. Select Search for devices (If your tablet stops scanning before you make the other device discoverable, select Search for devices again).
5. Select the device you are trying to connect to. If you're prompted to enter a passcode, try entering 0000 or 1234 (the most common passcodes, or consult your device's documentation).

Unpair a Bluetooth device
You can use the Bluetooth in your tablet to connect to various Bluetooth devices such as speakers and headphones.

Turn Bluetooth on or off
1. Open the Settings application.
2. Toggle to turn Bluetooth ON or OFF.

Connecting to Wi-Fi

Setting up Wi-Fi

To browse web sites, use email and download apps, you must first connect the tablet to the internet.

To set up Wi-Fi, use the "Polaroid Settings" widget on the Home screen.

1. Swipe the Home screen to the left to access the Polaroid Settings widget.
2. Select "Wi-Fi Setup".
3. Select a network.
4. If required, enter the correct password and select "Connect".
5. When the tablet is connected to a network, the Wi-Fi icon will appear on the Status Bar and "Connected" will appear under the selected network.

To conserve battery life, turn off Wi-Fi when not connected to a network.

Download and installing apps

After downloading the selected app store, it is possible to download and install apps directly to the tablet - these apps will appear on the Apps screen.

Note: Apps compatibility / games:
There are many apps available on the various app stores, but unfortunately not all will be compatible with the tablet. This is because some of the apps are designed for mobile phones and require features or specifications that are not supported by the tablet. We recommend always searching for the free or "Lite" version of an app and testing it before purchasing the paid app.
*Avoid apps that require rear cameras or GPS as these apps will not be supported by the tablet.
The tablet supports many games apps - however we recommend always testing the free version (if available) before purchasing.

Note: Polaroid and the manufacturer of this tablet are not affiliated with, connected to or sponsored by Amazon or the Amazon app store.

TV Out

You can connect the tablet to an HD display with a Mini HDMI to HDMI cable (not included).

To connect an HDMI cable:

1. Connect the Mini end of the HDMI cable to the "TV Out" port of the tablet.
2. Connect the other end of the HDMI cable to the "HDMI port" of the TV or Display.
3. The tablet display is now shown on your TV or Display.

Exclusions and Limitations
The Warranty covers manufacturing defects in materials and workmanship encountered in the normal, non-commercial use of the Product, and does not cover consumer instruction, delivery installation, software issues, self-adjustments, component damage or damage due to acts of nature, accident, misuse, abuse, negligence, consequential use or modification of, or to any part of the Product. In addition, this Warranty does not cover engines "burnt" into the screen.

Downloading apps

To access a large library of free apps and games, you need to download an app store. We have provided links to several app stores that can be easily accessed by selecting the "Download App Stores" option on the Settings widget.

1. After successfully connecting the tablet to Wi-Fi, select "Download App Stores" on the Polaroid Settings widget.
2. Select an app store, and follow the instructions to download and install it on the tablet.
3. Click here.
4. Select the downloaded app store (apk file) from the Pop-up window.
5. Select "Install" to install the app.
6. The app store appears on the Apps screen.

Camera and video chat

Front & rear camera

Select **Camera** on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in, front or rear facing camera.

Video chat

Use the built-in, front facing camera to video chat with friends and family. There are many different services that offer video chat, which are available on the app stores.

Sharing pictures with Bluetooth, Facebook or Twitter

To utilize the feature you must have a Facebook or Twitter account and be logged in.

Camera and video chat

Front & rear camera

Select **Camera** on the apps screen to go to camera mode. It is possible to take pictures or videos with the built-in, front or rear facing camera.

Video chat

Use the built-in, front facing camera to video chat with friends and family. There are many different services that offer video chat, which are available on the app stores.

Sharing pictures with Bluetooth, Facebook or Twitter

To utilize the feature you must have a Facebook or Twitter account and be logged in.

Free Manuals Download Website

<http://myh66.com>

<http://usermanuals.us>

<http://www.somanuals.com>

<http://www.4manuals.cc>

<http://www.manual-lib.com>

<http://www.404manual.com>

<http://www.luxmanual.com>

<http://aubethermostatmanual.com>

Golf course search by state

<http://golfingnear.com>

Email search by domain

<http://emailbydomain.com>

Auto manuals search

<http://auto.somanuals.com>

TV manuals search

<http://tv.somanuals.com>